




TURBOCLEAN POWERBRUSH MODEL 2889F

What's in the Box? 3
Assembly 3
Cleaning Formulas 4
Filling the Clean Water Tank..... 5
Cleaning Your Carpet..... 6
Emptying the Dirty Water Tank..... 7
After-Cleaning Care..... 8
Replacing the Belt & Brush Roll..... 9
Storing Your Machine..... 9
Troubleshooting..... 10

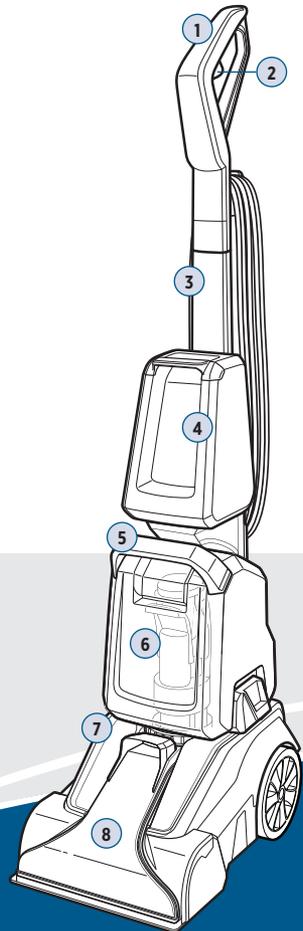

Product Overview

- | | |
|----------------------------|---------------------|
| 1. Upper Handle | 6. Dirty Water Tank |
| 2. Spray Trigger | 7. Lower Body |
| 3. Middle Handle | 8. Nozzle |
| 4. Clean Water Tank | |
| 5. Dirty Water Tank Handle | |



This guide has everything you need to get ready for first use, including setting up, using and maintaining your machine, but online you'll find additional resources like tips and troubleshooting, parts, and more. Go to **BISSELL.com**.

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- » This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- » Children should be supervised to ensure that they do not play with the appliance.
- » Unplug from electrical socket when not in use, before cleaning, maintaining, or servicing the appliance, and if your appliance has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- » Do not immerse in water or liquid.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- » If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- » Do not run appliance over cable.
- » Do not use with damaged cable or plug.
- » Do not pull or carry by cable, use cable as a handle, close door on cable, or pull cable around sharp edges or corners.
- » If the appliance has a handheld accessory like pet brush, motor driven head, etc., the user shall avoid entrapment.
- » Keep cable away from heated surfaces.
- » Use only the type and amount of liquids specified under the operations section of this guide.
- » Do not leave appliance when plugged in.
- » Liquid must not be directed towards equipment containing electrical components.
 - » Always connect to a properly earthed electrical socket. Do not modify earthed plug.
 - » Always install float before any wet pick-up operation.
 - » To unplug, grasp the plug, not the cable.
 - » Do not handle plug or appliance with wet hands.
 - » Turn OFF all controls before unplugging.
 - » Use indoors only.
 - » Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
 - » Use only as described in this user guide.
 - » Use only manufacturer's recommended attachments.
 - » If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorised service center.
 - » Do not put any object into openings.
 - » Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
 - » Use extra care when cleaning on stairs.
 - » Do not use to pick up flammable or combustible liquids, such as petroleum, or use in areas where they may be present.
 - » Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
 - » Do not use appliance in an enclosed space filled with vapours given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapours.
 - » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
 - » Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
 - » Do not use without filters in place.
 - » Floor slippery when wet.

SAVE THESE INSTRUCTIONS

ORIGINAL INSTRUCTIONS. FOR OPERATION ON A 220-240 VOLT A.C. 50-60 HZ POWER SUPPLY ONLY. THIS MODEL IS FOR HOUSEHOLD USE ONLY.

IMPORTANT INFORMATION


- » Keep appliance on a level surface.
- » If your appliance has a motorised Brush Roll, do not leave machine running in the same spot without the handle fully upright.
- » To reduce the risk of a leaking condition, do not store machine where freezing may occur. Damage to internal components may result.
- » Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.

What's in the Box?

				
Upper Handle	Middle Handle	Dirty Water Tank and Lower Body	Clean Water Tank	Trial-Size Formula

Assembly

		
1. Slide Middle Handle onto Lower Body until it “clicks” into place.	2. Slide Upper Handle into Middle Handle until it “clicks” into place.	3. Place Clean Water Tank on handle and push down until it “clicks” into place.

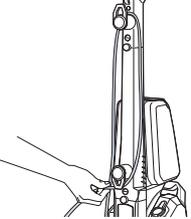
4. Wrap up power cable.

Cleaning Formulas

View our family of cleaning formulas for your family of mess makers at BISSELL.com.

Keep plenty of BISSELL® formulas on hand so you can clean whenever it fits your schedule. Always use genuine BISSELL formulas in your machine. Other formulas may harm the machine and void the guarantee. Do not use Wash & Shine Hard Floor Formula on area rugs or carpet.

Carpet Cleaning Formulas

Wash & Protect			Wash & Refresh
			
Pro Stain & Odour Professional strength to remove extra tough stains and odours.	Pet Stain & Odour Removes tough pet stains and odours.	Stain & Odour Removes tough stains and odours.	Ambipur Blossom & Breeze Powerful cleaning with a refreshing spring scent.

Wash & Remove	
	
Pro Pet Urine Eliminator + Oxy Permanently remove stains and remove odours at the source with the power of Oxy.	Allergen Helps remove pet dander, pollen and dust mite waste allergens.

Pretreat

Pretreat spots and stains to improve carpet cleaning performance.

	
Stain Pretreat Loosens set-in stains & odours before carpet washing.	Pet Stain Pretreat Loosens tough pet stains & odours before carpet washing.

Boost

Add Boost carpet cleaning formula enhancers to any formula to increase its effectiveness.


Oxy Boost Add to formula for permanent stain removal.

Certain trademarks used under license from The Procter & Gamble Company or its affiliates.

⚠️ WARNING To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL formula intended for use with this machine. Use of cleaning formulas that contain eucalyptus, lemon or pine oil may damage this appliance and void the guarantee. Chemical spot cleaners or solvent-based soil removers should not be used. These products may react with the plastic materials used in your carpet washer causing cracking or pitting.

Filling the Clean Water Tank



1. Remove the Clean Water Tank by lifting straight up and away from the machine.



2. Unscrew the cap at the bottom of the tank.



3. Fill with warm (140°F/60°C MAX) tap water to the WATER line. **Do not use boiling water. Do not heat water and/or tank in the microwave.**



4. Add BISSELL formula to the FORMULA line.



5. Replace and tighten the cap.





6. Replace the tank on the machine until it “clicks” into place.

Cleaning Your Carpet

Tips Before Cleaning


- If cleaning an entire room, consider moving your furniture to another area.
- Vacuum to remove loose dirt and impediments before cleaning.
- Pretreat stains with BISSELL® Pretreat to improve carpet cleaning.

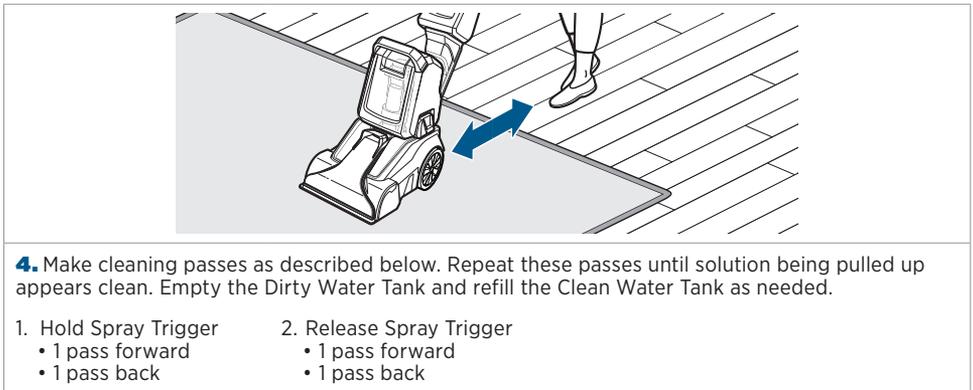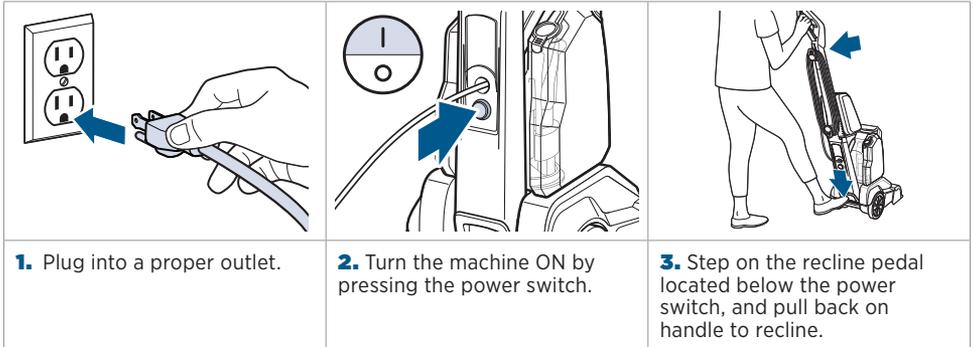


IMPORTANT

- » Please check manufacturer's tag before cleaning area rugs for any specialized cleaning instructions. We do not recommend cleaning delicates, silk, delicate wool, antique, or area rugs without a manufacturer's tag that approves carpet washing.
- » Do not overwet carpet. Be careful not to run over loose objects or edges of area rugs. Stalling the brush may result in premature belt failure.

Emptying the Dirty Water Tank

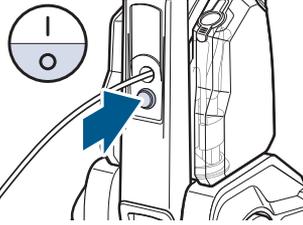


1. Turn OFF and unplug your machine.

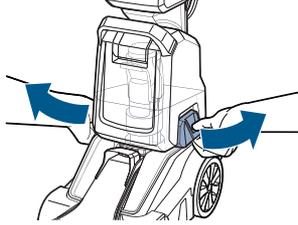

2. Release Dirty Water Tank by pulling out and up on the latches on the side.




3. Carefully remove tank by lifting up on the Dirty Water Tank Handle.

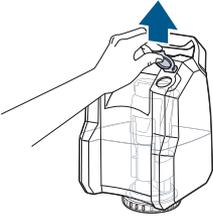

4. Lift tab on the top of the tank.




5. To empty, pour out dirty water using opening at back of tank. Rinse the tank thoroughly. Reinsert tab into tank.

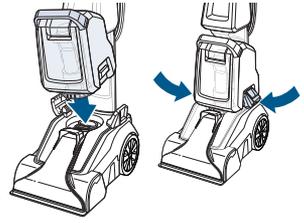


6. To continue cleaning, align the bottom of the tank to the base and secure into place with latches.


After-Cleaning Care

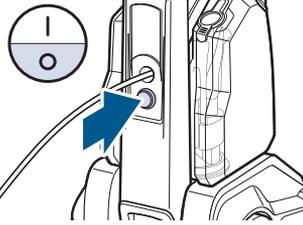


1. Turn OFF and unplug your machine. Follow steps 2 & 3 in the section above to remove the Dirty Water Tank.

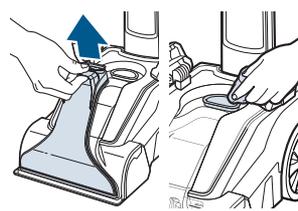


2. Grab the top of the Nozzle and pull it up and away from the machine. Rinse or wipe it clean. Use a cloth to wipe debris from the red filter.

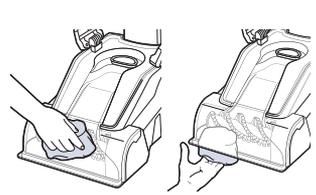


3. Use cloth to wipe brush roll cover clean.

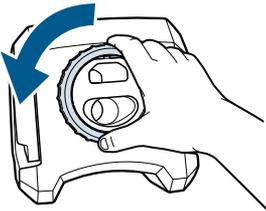


4. Ensure the Dirty Water Tank is empty by gently removing the float stack and unscrewing the ring at the bottom of the tank.

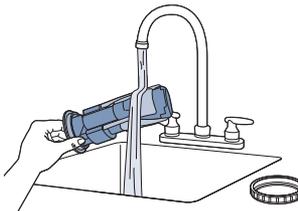


5. Clean and rinse debris from the float. Keeping the float clean prevents your Dirty Water Tank from overflowing and ensures the seal stays intact.

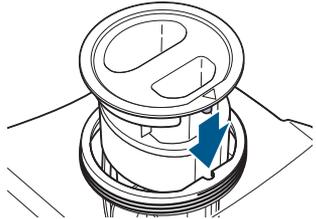


6. Once clean, assemble by aligning the arrow on the float with the notch on the tank. Then, return the ring and twist to lock. Make sure it's fully aligned, so water doesn't leak.

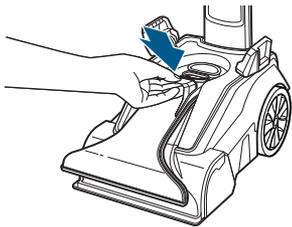

7. To replace the Nozzle, align top into channel in front of red filter and press in place.

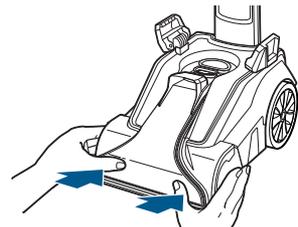

8. Use both hands to push the bottom portion of Nozzle into place.

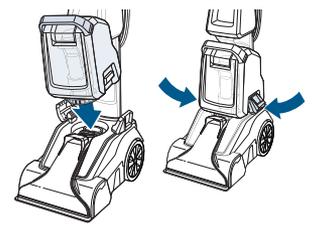


9. Once Dirty Water Tank is dry align the bottom of the tank to the base and secure into place with latches.


ATTENTION If you experience no suction, remove the Dirty Water Tank and ensure the Nozzle is secured and latched appropriately. Return Dirty Water Tank to the machine and try cleaning again.

⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.


Replacing the Belt & Brush Roll

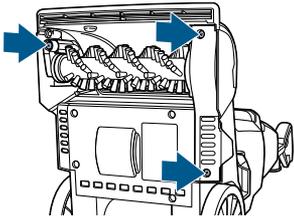


1. Turn OFF and unplug your machine. Use a Phillips-head screwdriver to remove the 3 screws.

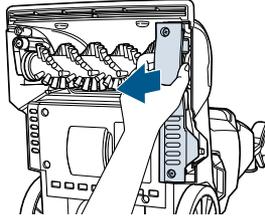


2. Remove belt cover.

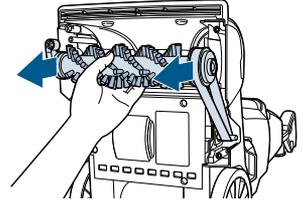


3. Pull Brush Roll out and remove belt from track.

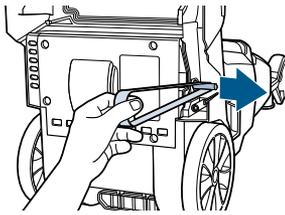


4. Pull belt off of motor shaft.

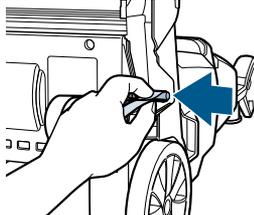


5. Wrap new belt around motor shaft.

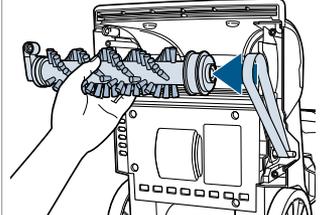


6. Put the belt on the Brush Roll track. Put the Brush Roll back into position.

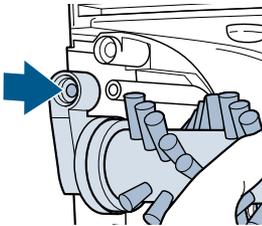

7. Align Brush Roll mount to screw post.

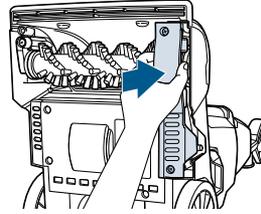

8. Reposition belt cover.

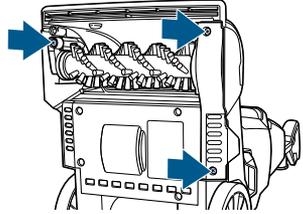

9. Reinstall 3 screws.

Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.

Storing Your Machine

Store your machine in a protected, dry area. When finished using the product, wrap cable around cable wrap for storage.

NOTICE: To reduce the risk of a leaking condition, do not store machine where freezing may occur. Damage to internal components may result.

⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

Troubleshooting

This guide has everything you need to get ready for first use, including setting up, using and maintaining your machine, but online you'll find additional resources.

Guarantee

This guarantee gives you specific legal rights, in addition to rights you may have under the *Australian Consumer Law*. If you need additional instruction regarding this guarantee or have questions regarding what it may cover, please contact your local BISSELL Consumer Care on the details set out below.

It may be necessary to obtain some of your personal information, such as a mailing address, to fulfill terms of this guarantee. Any personal data will be handled pursuant to BISSELL's Privacy Policy, which can be found at global.BISSELL.com/privacy-policy.

BISSELL® Two Year Guarantee

Subject to the *conditions identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for two years any defective or malfunctioning part due to manufacturer defect. This guarantee applies to product used for personal purposes, and not commercial or rental service. This guarantee does not apply to fans or routine maintenance or consumable components such as filters, belts, brush rolls, etc., damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the user guide. BISSELL recommends that the original packaging be kept for the duration of the guarantee period in case such need arises within the guarantee period that the item needs repacking and transportation.

***Conditions of Guarantee**

Subject to whether such loss is reasonably foreseeable, BISSELL and its in-country distributors are not liable for incidental or consequential damages of any nature associated with the use of this product.

For Australian Consumers Only: Our goods come with guarantees that cannot be excluded under the *Australian Consumer Law*. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This guarantee is in addition to other rights or remedies under law. Nothing in this guarantee excludes, limits or modifies any liability of BISSELL which is imposed by law, or limits or modifies any remedy available to the consumer which is granted by law. To make a claim under this guarantee contact BISSELL Australia PTY LTD (details below). Contact BISSELL prior to returning any goods. Where agreed, BISSELL will reimburse reasonable postage / handling costs (if any) for returning goods to BISSELL. To claim expenses incurred in making a claim under this guarantee please provide BISSELL with a copy of the receipt of the expenses by email or post.

Consumer Care

Australia

Telephone: 1300 247 735

Website: www.BISSELL.com.au

New Zealand

Telephone: 0800 247 735

Website: www.BISSELL.co.nz



©2020 BISSELL Inc. All rights reserved.
Part Number 1621790 05/20 RevA