

PowerFresh Deluxe

1979F

Leaking or Leaving too much water

Possible Issues:

[Water Tank](#)

[Position](#)

[Setting](#)

[Saturated Pad](#)

Is the water tank cracked?

To check, inspect the water tank, looking for a cracks around the clear tank area.

If YES:

External Support: Contact BISSELL / Repair or replace part/product



If NO: Check to see if the cap is properly closing.

- If it isn't, a new cap can be ordered.
- If it properly closes, continue troubleshooting.

Is it being used upside-down or horizontally?

- There is an air vent in the water tank lid that, when tipped upside-down or horizontally, will leak from down the front of the tank once turned back upright. This is normal function, and we recommend not using it horizontally or upside-down.



[b](#)

Is the high steam setting selected?

If YES:

- The upper “high” steam setting will emit more steam and can saturate the pad and leave excess water on the floor quicker.



If NO: Continue Troubleshooting

Is the pad on the foot very wet?

Once the foot cools down,

If YES:

- The upper “high” steam setting will emit more steam and can saturate the pad and leave excess water on the floor quicker.



If NO: If all steps have been followed and machine is still leaking or leaving too much water,

External Support: Contact BISSELL

[back to top](#)