


My ProHeat 2X® Revolution® Pet Pro Carpet Cleaner is not spraying to the hose | Support

Note: In Express mode much less water is applied, switch to DeepClean mode for more water/formula

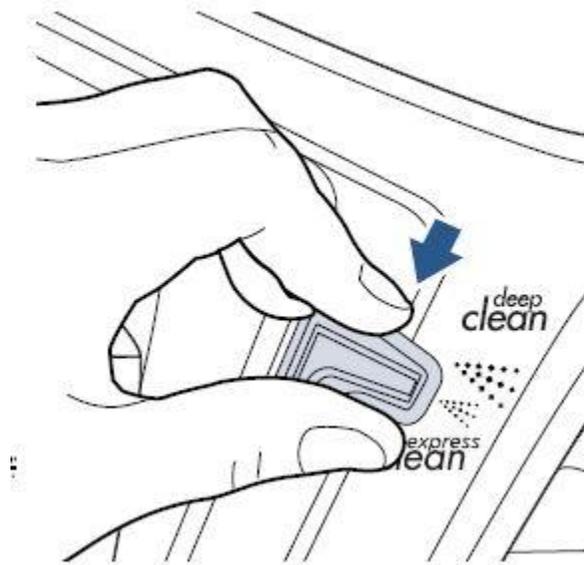


- Make sure Clean Water Tank is full
- With tank still removed, inspect for cracks or damage
 - If damage is found or tank is deformed, a new tank needs to be ordered
- To Test:
 - Over a sink, push up on red valve
 - It should leak water
 - If no water comes out, a replacement tank should be ordered
- To Reinsert:
 - Remove tank and firmly push it back into place leaving no gaps

*Note: Using heated water can deform tank/cause it to sit improperly - if tank is deformed, a new tank needs to be ordered
- Priming allows fluid to flow through the system:
 - Turn off and unplug machine and place in upright position
 - Fill clean water tank

- Remove the front nozzle by lifting under the hose access door



- To Prime, use a standard ball point pen to press into the small circular opening until water comes out
- Place the pen in the black cylinder next to the screw
- When water bubbles up, remove the pen
- Reassemble the nozzle before cleaning again
- Replace the front nozzle by lining up tabs on front edges of foot
- Push on nozzle until it clicks into place
- Keeping the hose below the upper tank, lay hose flat on the floor with the tool removed
- With the machine off and reclined, press the CleanShot foot pedal and let it drain for a few seconds

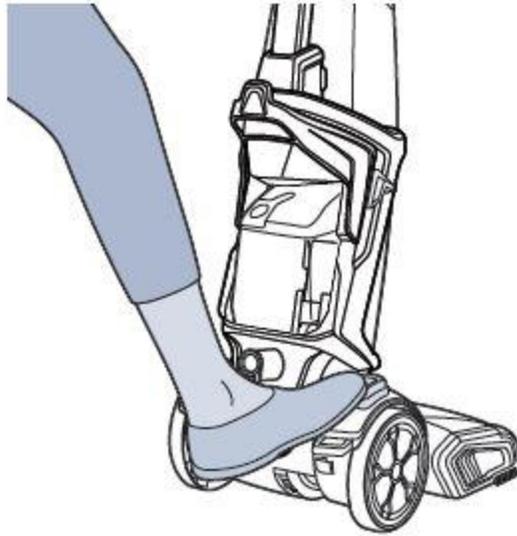

- Turn machine on
- Retry, pressing hose trigger for up to 20 seconds while machine is on
- It may blow out pockets of air
- If it still doesn't spray, unplug and check brush for any obstructions
- Follow steps here: [Brush not turning](#)
- If still having issues, contact us
-