


# CrossWave® Cordless Max cleaning the dirty water tank | Support


## Dirty Water Tank, Filter, & Float Indicator Maintenance

Note: If orange dirty water tank is full light is illuminated but the dirty water tank is not full, follow the steps below


- Turn off machine and remove from docking station
- Remove dirty water tank by pressing down on recessed button on top of tank

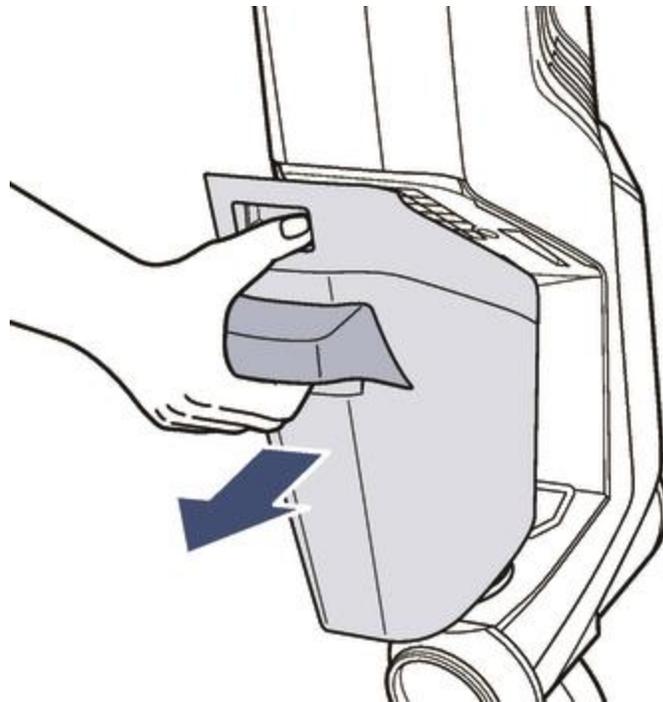


- Grasp top of tank from sides and pull up to remove
- Remove filter by grasping sides and pulling up

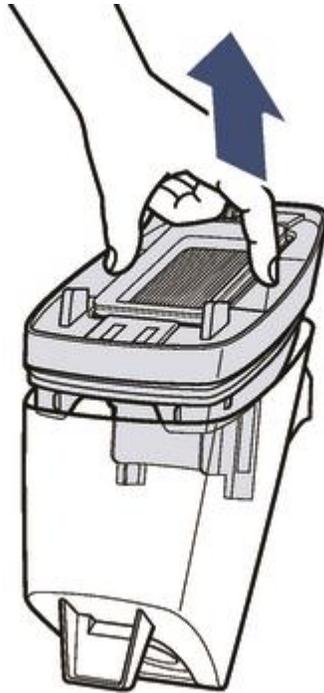


- Hand wash filter & screen with warm water, remove debris

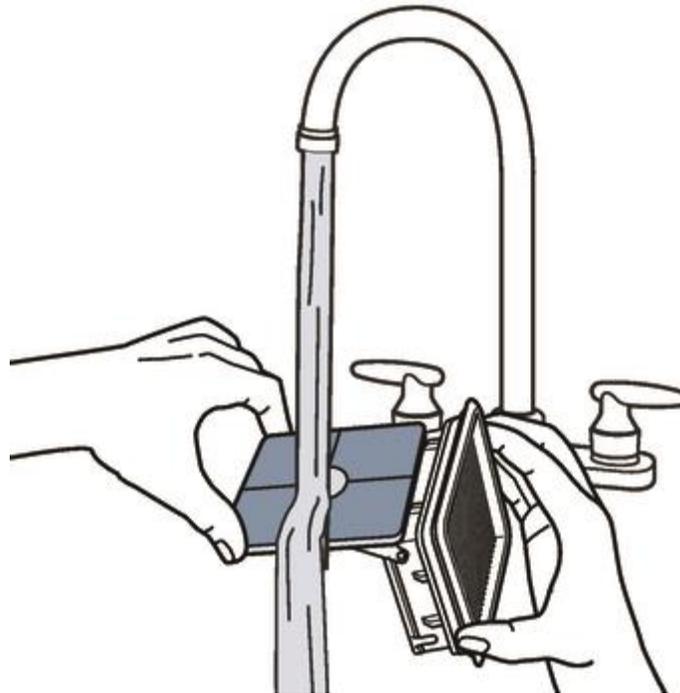


- Clean float sensors on the bottom of the dirty water tank lid with a damp cloth or napkin
  - Remove all visible debris and let completely dry in order for the sensors to work

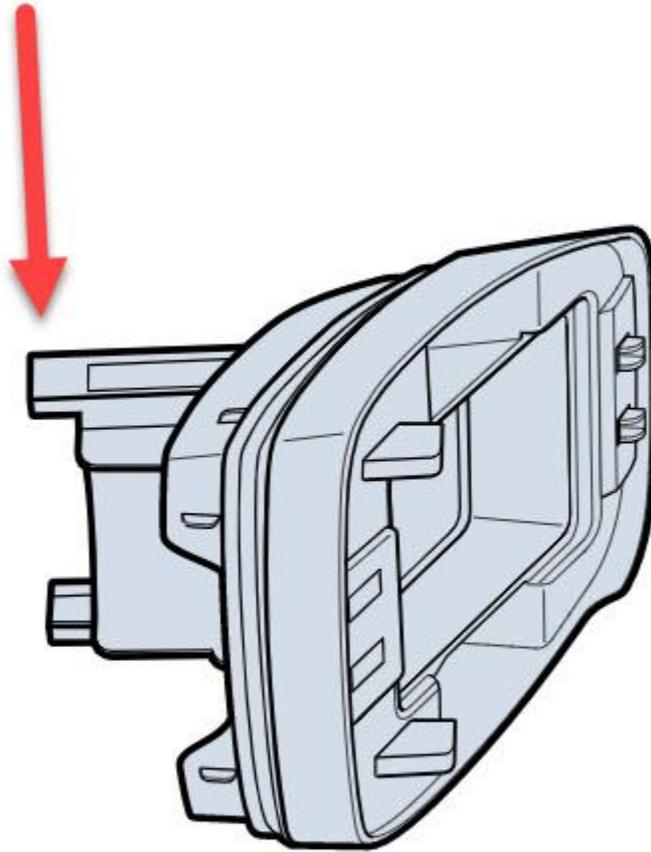

- Wipe gold sensors on top of dirty water tank lid below the filter with a dry tissue

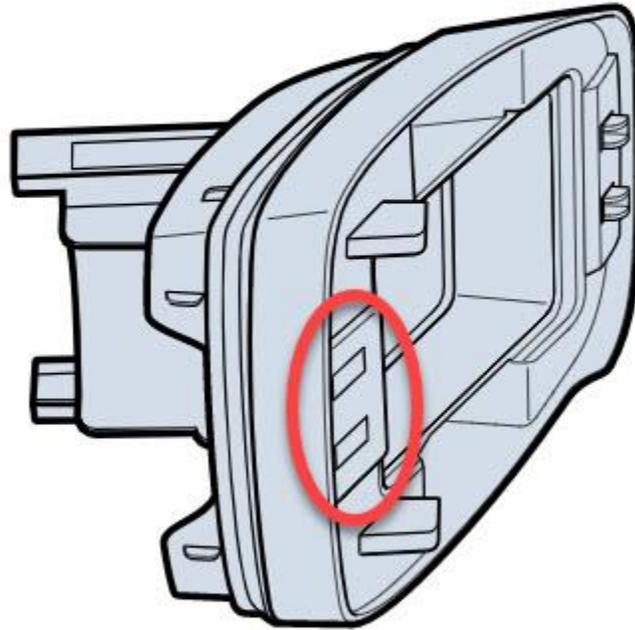

- Remove strainer from tank, discard debris & rinse
- Rinse entire tank

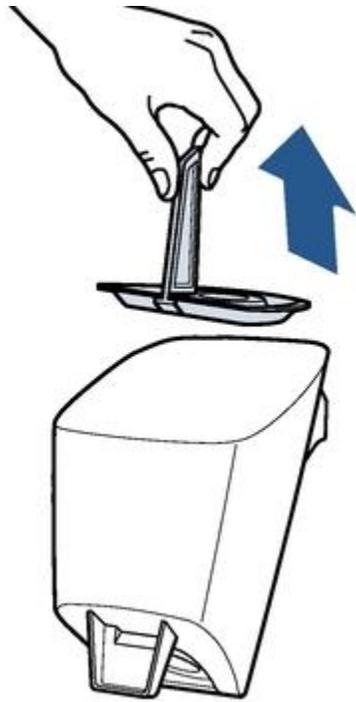

- Filter should be completely dry before reassembling
- Once dry, insert filter making sure edges are smooth and not folded over



- Place top piece including screen, and filter back into dirty water tank

- Angle tank back into body of machine with bottom edge first - push tank in until it clicks into place
- Tank should not be loose and there should be no gaps