

# Cleanview Turbo 1994U

## Low or No Suction

- 1) Detach hose from base of canister by pushing on release tab and pulling out.



- 2) Detach hose from extension wand by grasping each piece and pulling them apart. Do the same to detach the foot.



- 3) Remove dirt tank by pressing release button and lifting tank away from machine.



- 4) With all pieces detached, inspect all dirt flow openings for clogs.
- 5) Insert broomstick through wand and hose to clear debris.
- 6) Also, inspect hose section by section for holes or cracks. If a hole or crack is found,

**BISSELL Consumer Care:** please refer to product changeover guide.

**External Support:** Contact BISSELL

- 7) Reattach pieces by inserting them into their corresponding parts.
- 8) If still no suction, inspect dirt cup and filters.
- 9) With dirt tank still removed, over a trash bin, press empty latch on back of tank to empty debris. Snap shut bottom lid.

- 10) Separate top handle from bottom tank by grasping carry handle and base of dirt tank. Twist the carry handle counterclockwise.



- 11) Grasp filter handle and lift it out of dirt tank.
- 12) To separate filter pieces, twist filter handle counterclockwise while grasping base of outer cyclone.
- 13) Next, twist filter handle counterclockwise while grasping base of inner cyclone. Clear away any debris build up. Wash pieces if necessary.

**NOTE:** DO NOT wash filter. To clean, tap on side of trash bin.



- 14) To reassemble, align tabs on filter piece with their mating slots on the inner cyclone and twist clockwise.

- 15) Do the same to connect inner and outer cyclone pieces. Reinsert pieces into dirt tank. Filter should sit level.



**NOTE:** filter will not sit level if tabs on front are not aligned



- 16) Reattach top lid to dirt tank by aligning clear notch with slot on top lid. Clear notch should point towards unlocked. Twist clockwise to lock.



17) Reattach dirt tank to canister and turn on.

If the machine still has no or low suction,

**BISSELL Consumer Care:** please refer to product changeover guide.

**External Support:** Contact BISSELL