

Lift-Off Deep Cleaner

27F6, 35K3, 73H5, 94Y2 Series

No Power

- 1) Unplug the machine and check entire length of power cord for damage. If damaged, please contact one of our Authorized Service Centers to have a quality technician inspect your unit._
- 2) **Make sure the Heater Indicator Light is illuminated to verify the pod is seated correctly on the base of the unit.** If the pod is not seated properly, the heater light will not illuminate.
- 3) Make sure to try plugging the unit into multiple working outlets.
- 4) If still no power, please contact one of our Authorized Service Centers to have a quality technician inspect your unit.