

ProHeat 25A3, 57G7 Series

No Heat

- 1) Check that the pump belt is intact, if not a new belt will need to be ordered.
- 2) Check to make sure both switches are turned on.
- 3) Allow the heater at least 1 minute to heat up.
- 4) If still no heat, please contact one of our Authorized Service Centers to have a quality technician inspect your unit.