


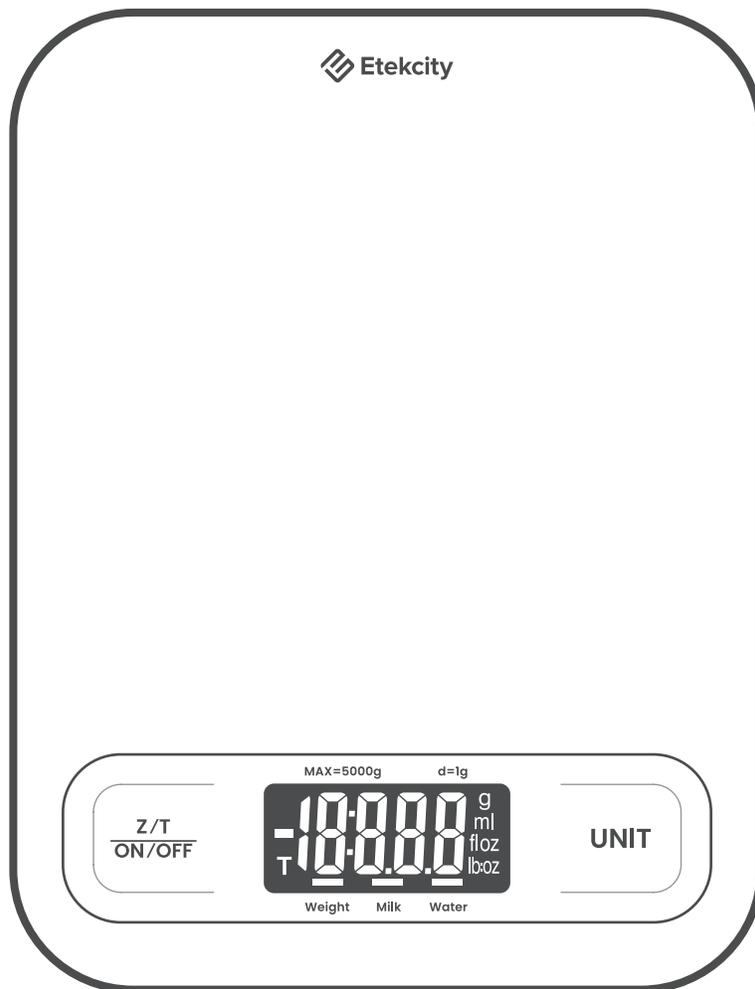

Digital Kitchen Scale

Models: EKS-C302-WUS, EKS-C302-KUS, EKS-C302-GUS

User Manual



Questions or Concerns?

Mon-Fri, 9:00 am-5:00 pm PST/PDT
support@etekcity.com • (855) 686-3835

Thank you for purchasing the Digital Kitchen Scale by Etekcitey.

If you have any questions or concerns, please reach out to our helpful Customer Support Team at **support@etekcity.com**.
We hope you enjoy your new kitchen scale!

Table of Contents

Package Contents	3
Specifications	4
Important Safety Information	5
Function Diagram	7
Set-Up	8
Operation	9
Battery Replacement	11
Troubleshooting	12
Warranty Information	14
Customer Support	16

Package Contents

- 1 x Digital Kitchen Scale
- 3 x 1.5V AAA batteries (Pre-Installed)
- 1 x Quick Start Guide

Specifications

Weight Capacity	176 oz / 11 lb / 5,000 g / 5,000 mL
Units	oz / lb:oz / fl'oz (water/milk) / g / mL (water/milk)
Increments	0.05 oz / 1 g / 1 mL
Auto-Off	180 seconds
Battery	3 x1.5V AAA batteries
Dimensions	8.0 x 6.1 x 0.7 in / 203 x 155.5 x 17.5mm



READ AND SAVE THESE INSTRUCTIONS

Important Safety Information

To avoid damage to this scale, please read and follow all instructions and safety guidelines in this manual.

Scale

- **DO NOT** exceed the 11 lb / 5,000 g weight capacity, as this will damage the scale. An error indicator will appear on the LCD display if the limit is exceeded.
- **DO NOT** immerse the scale in water or any liquid. If liquid is spilled on the digital display or buttons, immediately wipe the scale clean with a soft cloth to avoid internal damage.
- Handle with care. This scale is not intended for commercial or heavy-duty use.
- Keep the scale in a cool, dry place. Avoid exposure to damp environments or extreme temperatures.
- Household use **only**.




Batteries

- **DO NOT** mix new and old batteries.
- If the low battery indicator (“**Lo**”) appears on the display, replace the batteries.
- If the scale is not in use for an extended period of time, remove the batteries to conserve battery life and extend the lifetime of the scale.



Function Diagram

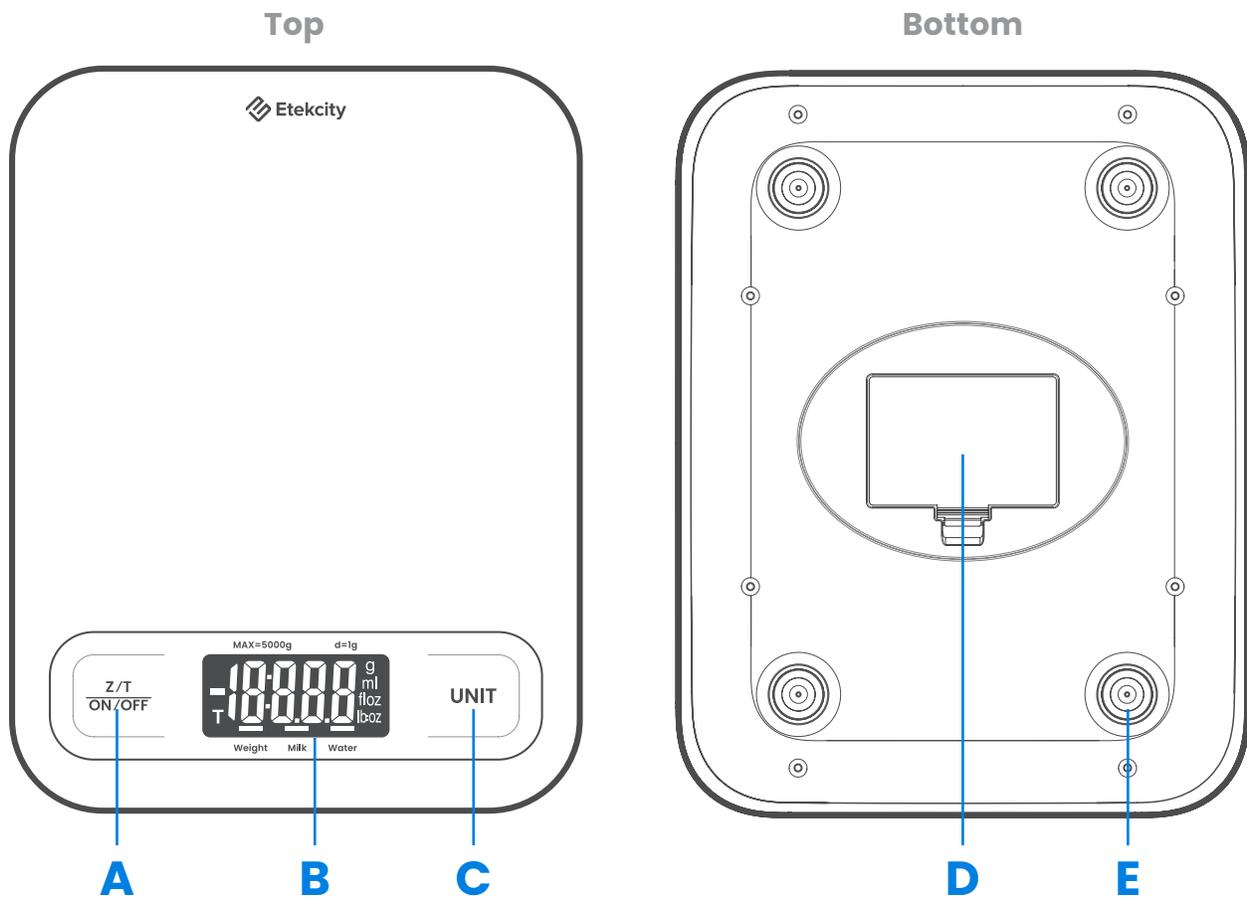

- A.** On/Off or Zero/Tare
- B.** LCD Display
- C.** Unit Selection



- D.** Battery Compartment
- E.** Anti-Skid Pads



Set-Up

The included AAA batteries are pre-installed in the scale.

1. Open the battery compartment on the underside of the scale.
[Figure 1.1]
2. Remove the plastic strip from the battery compartment.
[Figure 1.2]
3. Reapply the battery compartment cover.
4. Tap **Z/T/ON/OFF** to turn on the scale.

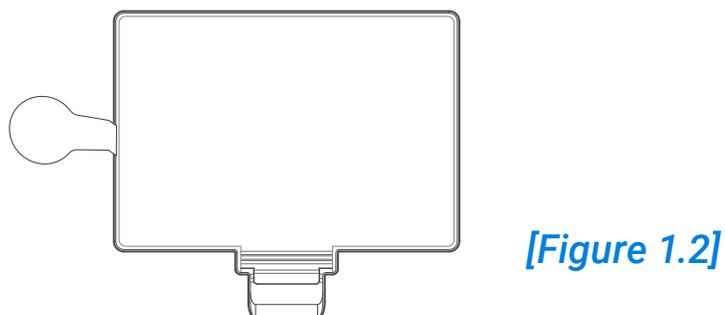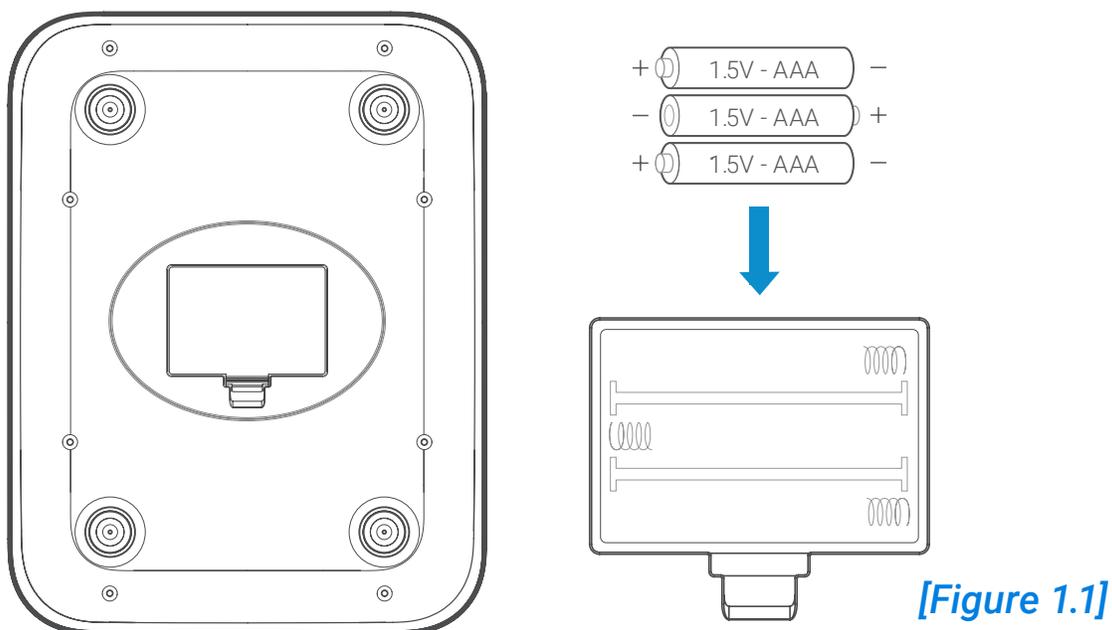


Operation

Note:

- For accurate results, **always** place the scale on a hard, dry, flat surface, and keep the scale away from dirt, dust, vibrations, wind, air currents, and electromagnetic interference.
- When you turn on the scale, choose units, or use the Tare function, wait for the scale to read “0.00” again before measuring.

General Operation

1. Place the scale on a hard, dry, flat surface.
2. Tap **Z/T/ON/OFF** to turn on the scale. Make sure the display shows “0.00”. **[Figure 1.3]**
3. Tap **UNIT** to select your desired measuring unit, which will show on the right of the display.
4. Place your item on the scale.
5. Wait for the reading on the display to stabilize. **[Figure 1.4]**
6. Press and hold **Z/T/ON/OFF** for 2 seconds to turn off the scale.

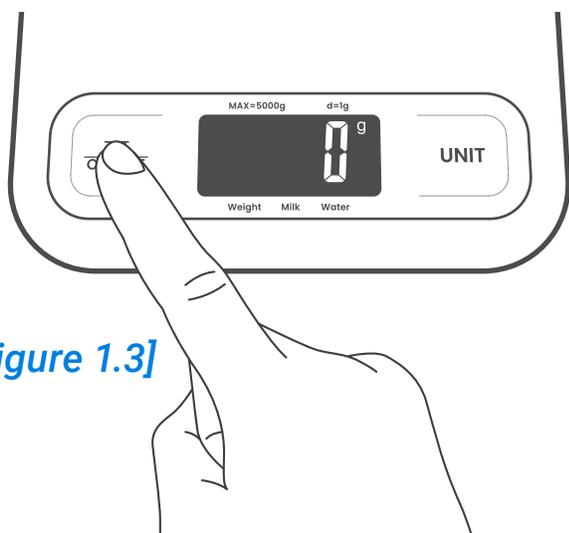

[Figure 1.3]




[Figure 1.4]




Zero / Tare Function

Whenever you measure items inside a container, you can use the Tare function to remove the container's weight from the final measurement.


1. Tap **Z/T/ON/OFF** to turn on the scale. Make sure the display shows "0.00". **[Figure 1.5]**
2. Tap **UNIT** to select your desired measuring unit, which will show on the right of the display.
3. Place the container on the scale.
4. Wait for the reading on the display to stabilize. The display will show the container's weight.
5. Tap **Z/T/ON/OFF** to tare the weight of the container. The display should now show "0.00". **[Figure 1.6]**
6. Place the liquid or items in the container. The scale will measure the contents without including the weight of the container. **[Figure 1.7]**
7. When you're done, reset the scale by removing all weight and tapping **Z/T/ON/OFF** again.

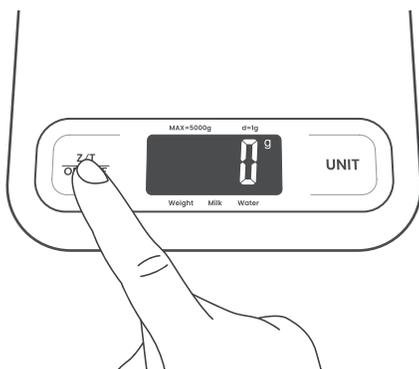

[Figure 1.5]

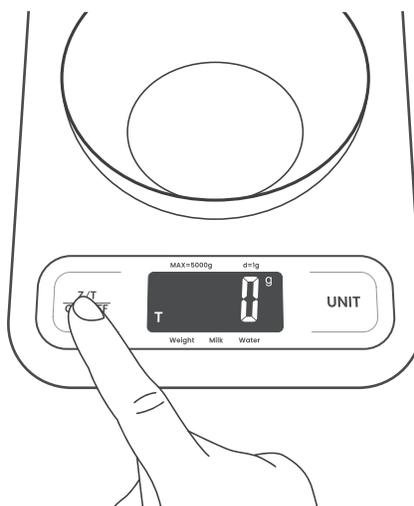

[Figure 1.6]

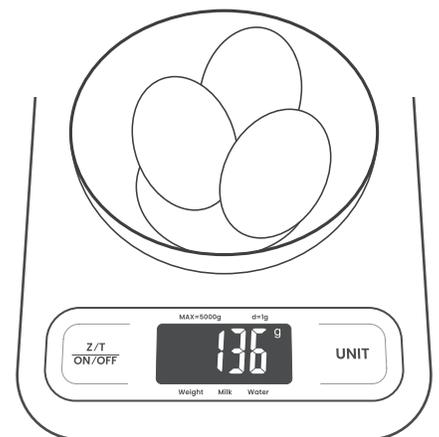

[Figure 1.7]




Battery Replacement

1. Turn the scale over and open the battery compartment.
2. Take out the used batteries and replace them with new 1.5V AAA batteries.
3. Replace the battery compartment cover.

Note:

- To save battery power, the display backlight will turn off after 30 seconds of inactivity and the scale will turn off after 3 minutes of inactivity.

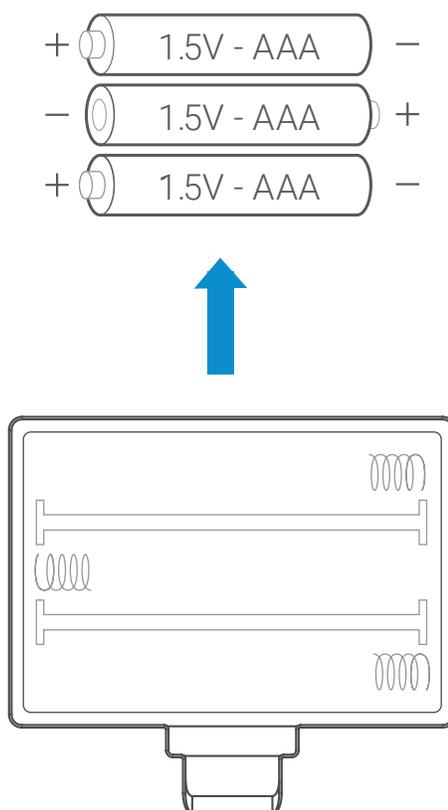

Troubleshooting

Problem	Possible Solution
Scale does not turn on	Open the battery compartment and remove the plastic strip.
	Replace the batteries (see page 11).
	Make sure the batteries are inserted under the correct polarity as marked in the battery compartment.
Reading is inaccurate	Place the scale on a hard, dry, flat surface, and keep the scale away from dirt, dust, vibrations, wind, air currents, and electromagnetic interference.
	Make sure the screen displays “0.00” before measuring (see Zero / Tare Function, page 10).
	Remove the batteries for 45 seconds, then replace them to reset the scale.
Display shows “EEEE”	Item exceeds weight capacity. Remove item from scale to protect its weight sensors. Use a different scale with a higher weight range.
Display shows “Lo”	Battery power is low. Replace the batteries (see page 11).

If your problem is not listed, please contact **Customer Support** (see page 16).



Federal Communication Commission

Interference Statement – Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC SDOC SUPPLIER'S DECLARATION OF CONFORMITY

ETEK CITY Corporation hereby declares that this equipment is in compliance with the FCC Part 15 Subpart B.

The declaration of conformity may be consulted in the support section of our Web site, accessible from www.etekcity.com.



Warranty Information

Product	Digital Kitchen Scale
Model	EKS-C302-WUS, EKS-C302-KUS, EKS-C302-GUS
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
Order ID	
Date of Purchase	

TERMS & POLICY

Etekcitey Corporation (“Etekcitey”) warrants this product to the original purchaser to be free from defects in material and workmanship, under normal use and conditions, for a period of 2 years from the date of original purchase.

Etekcitey agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

There is no other express warranty. This warranty does not apply:

- If the product has been modified from its original condition;
- If the product has not been used in accordance with directions and instructions in the user manual;
- To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;
- To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Etekcitey;
- To damages or defects occurring during commercial use, rental use, or any use for which the product is not intended;
- To damages or defects exceeding the cost of the product.



Etekcitey will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

This warranty does not extend to products purchased from unauthorized sellers. Etekcitey's warranty extends only to products purchased from authorized sellers that are subject to Etekcitey's quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via **support@etekcity.com**. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Every Etekcitey product automatically includes a 2-year warranty. To make the customer support process quick and easy, register your product online at **www.etekcity.com/warranty**.

This warranty is made by:

Etekcitey Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806



Customer Support

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Etekcitey Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806

Support Hours

Mon–Fri, 9:00 am–
5:00 pm PST/PDT

Email: support@etekcity.com

Toll-Free: (855) 686-3835

**Please have your order invoice and order ID ready before contacting Customer Support.*





Connect with us @Etekcinity

