
## Loer Chandelier Installation Instructions

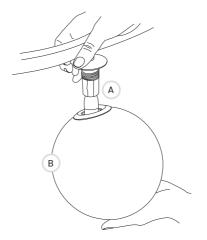

## Only qualified persons should assemble the luminaire. If in doubt, consult a suitably qualified person. Installation MUST be carried out in accordance and compliance with current building regulations.

## Ensure the electrical supply is turned OFF at the fuse board.

- 1. Identify if there are any hidden pipes or electrical cables in the ceiling to avoid causing damage or risk of electrical shock during installation.
- 2. Determine the fixing method appropriate to the ceiling structure and secure the ceiling rose bracket to the ceiling. We would always recommended that it is secured to a suitably strong joist or beam.
- 3. Before attaching the ceiling rose to the bracket, the chandelier should be adjusted to the desired drop height. Using a small flat head screwdriver, carefully loosen the grub screws in the cord grips at the top of each flex. Adjust the cords equally until the desired drop length is reached. It is essential to make the drop height of each of the wires identical; failure to do this will mean the light will not hang straight. Tighten the grub screws to securely hold each of the cords at the desired length.
- 4. Connect the chandelier to the electrical supply. If required, cut excess cord and reconnect using the supplied connector block. The luminaire is designed to be attached to an electrical supply of **220-240V AC 50-60Hz**.
- 5. Once the flex drops are adjusted to the desired height and the electrical connection is made, hand tighten the brass grub screws through the ceiling rose, into the ceiling bracket to securely hold the fitting in place.
- 6. Screw in the light bulbs provided (A). The light fitting has been designed to work with E27 **LED** candle shape light bulbs, up to a maximum of **9.5 Watts** each.
- 7. Carefully thread each of the glass spheres (B) over the light bulbs and locate onto the brass thread of the bulb holders. Gently tighten each sphere onto the bulb holder securely connecting the two parts. Due to the fragility of the glass sphere diffuser, this step should be carried out with great care to avoid breakage.
- 8. Turn the power supply on to complete installation.

\*\*\* If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard. \*\*\*