


revolution in tile Spacing



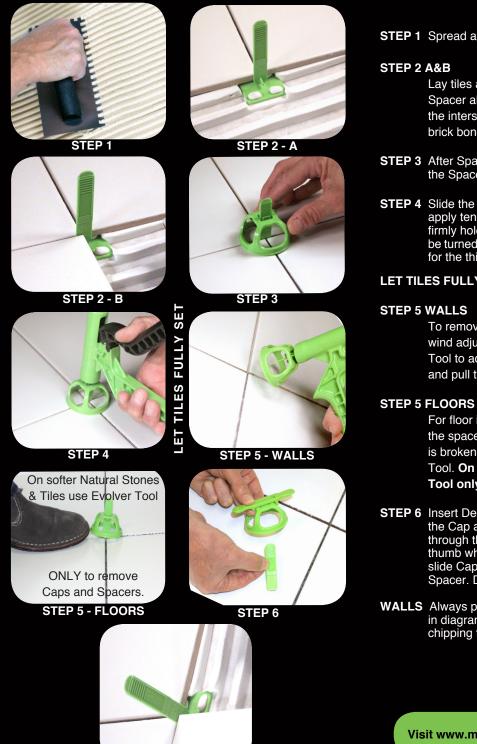


levolution

A Complete Tile & Spacer Leveling System in One!

The Easiest & Quickest way to Level & Space Wall & Floor Tiles

Levolution is a complete Tile Spacing & Leveling system in One! With its removable Spacer it allows you to choose between $\frac{1}{16}$ -in, $\frac{1}{8}$ -in, and $\frac{3}{16}$ -in grout joints. It also comes in 3 different space profiles, including a Cross for general stack bond, a Tee for laying tiles in a brick pattern and also a Flat Spacer.

Other systems on the market require you to use up to 4 pieces per intersection and an additional piece every 12" with large format tiles in order to keep them level. Levolution requires only one piece per intersection regardless of size which means your laying tiles instead of extra pieces. This results in more productivity saving you time.

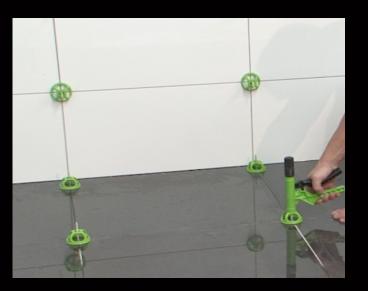

STEP 1 Spread adhesive using a 1/2in (12.7mm) notch trowel.

Lay tiles and insert appropriate Spacer using the Flat Spacer along the edge and the Cross Spacer (shown) in the intersection. Spacers are also available in Tees for brick bond projects.

- STEP 3 After Spacers are installed, place Cap by sliding it through the Spacer firmly.
- **STEP 4** Slide the Evolver Tool onto the Spacer and pull trigger to apply tension between the Cap and tile until the Cap is firmly holding tile. The tension knob at rear of gun can be turned clockwise or counter clockwise to set the tension for the thickness of that tile.

LET TILES FULLY SET (Per Manufacturer's Instructions)

To remove Caps and Spacers after tiles have fully set, wind adjuster knob counter clockwise on the Evolver Tool to adjust tension. Place Evolver Tool back on Spacer and pull trigger until Spacer breaks off to fully remove.


For floor installations, Spacers can be kicked (parallel to the spacer) to break off in order to save time. Once Spacer is broken off Caps can be removed with the Decapper Tool. On softer Natural Stones & Tiles use Evolver Tool only to remove Caps and Spacers.


- STEP 6 Insert Decapper Tool and place tapered end (tip) between the Cap and strap to loosen tooth. Slide the center slot through the Spacer and hook under Cap. Push down with thumb while supporting the Cap with index finger and slide Cap upwards removing the Cap from the Spacer. Discard the Spacer and keep Cap for reuse.
- **WALLS** Always place Spacer in a vertical position (cross as shown in diagram) or horizontal position (tee or flat) to avoid chipping tiles when removing the following day.

SYSTEM COMPONENTS

Evolver Tool Replacement Teeth

SYSTEM COMPARISON

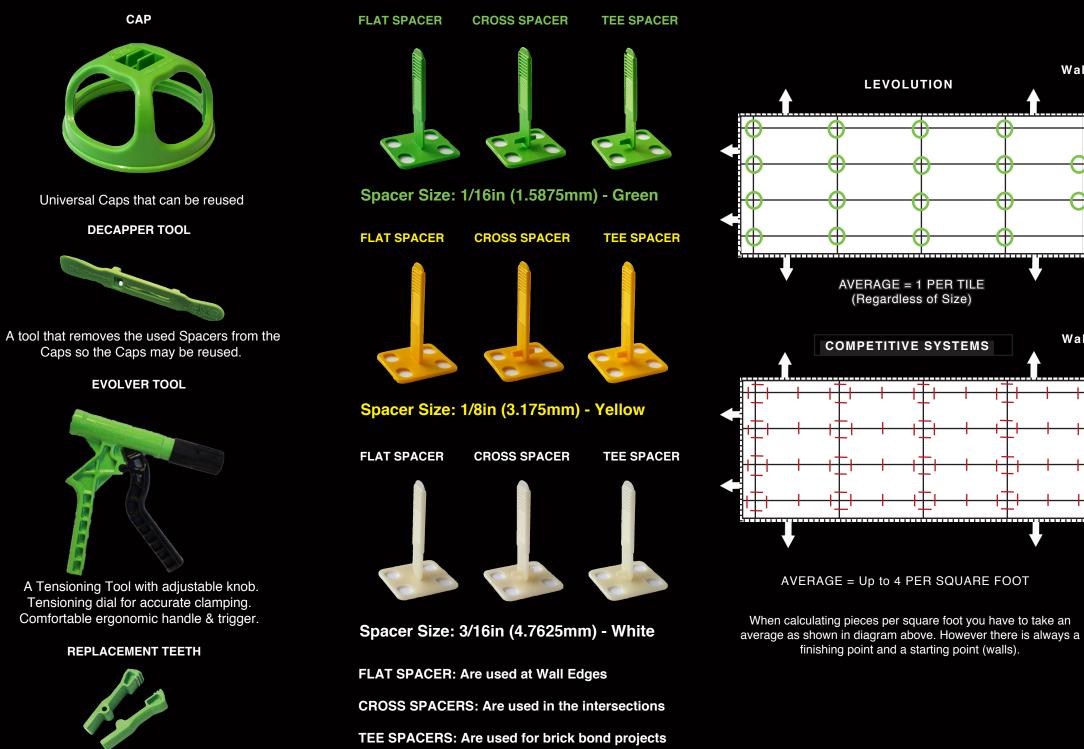

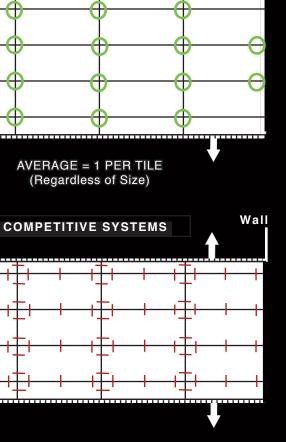

CONTACT

Wall

Miracle Sealants Company 12318 Lower Azusa Road Arcadia, California 91006-5872

Technical Support

 Product Information Product Use • Warranty Information technicalsupport@miraclesealants.com 1 800 350-1901 ext. 1

Customer Service

 Order Tracking Damaged Product Changes on Existing Orders • Warranty Claims customerservice@miraclesealants.com 1-800-350-1901 ext. 2

Marketing Department

Sales Tools, Literature & Samples
Sales Promotions & Events • Customer Events marketingsupport@miraclesealants.com 1-800-350-1901 ext. 3

Order Processing Fax – (626) 443-1435 (Download Fax Forms) Online Order Forms (Distributors Only) orders@miraclesealants.com

Monday - Friday 8:30am - 5:00pm PST

Visit www.miraclesealants.com to view product video