

1/ SAFETY INFORMATION

Read this instruction manual carefully before using the product. It contains important information for your safety as well as operating and maintenance advice.

1. Observe all safety instructions to avoid damage through improper use! Follow all warnings on the product.
2. Keep this instruction manual for future use. Should this product be passed on to a third party, then this instruction manual must be included.
3. This product contains no user serviceable parts, non-user replaceable lighting source and requires little maintenance. Leave any servicing or repairs to qualified personnel only.
4. Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product rating label.
5. **Danger of electric shock!** Do not attempt to repair the product yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.
6. **Warning!** During cleaning or operation do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water.
7. Do not pull the power adaptor out of the electrical outlet by the connection cord and do not wrap the connection cord around the product.
8. Connect the power adaptor to an easily reachable electrical outlet so that in case of an emergency the product can be unplugged immediately. Pull the power adaptor out of the electrical outlet to completely switch off the product.
9. **Warning! Risk of fire!** Do not expose the lens to a direct sunlight, even for a short period.
10. Disconnect the power adaptor from the electrical outlet when not in use and before cleaning.
11. Only use this product with the supplied power adaptor.
12. The product is not a toy. Keep it out of the reach of children.
13. Do not look straight into the light source during operation.
14. The light effects could cause visual problems. For epileptics particularly, epileptic seizures could be triggered under certain circumstances.
15. This product is intended for indoor use only. Do not use it outdoors.

16. Do not insert any foreign objects into the ventilation openings.
17. Do not cover the ventilation openings during use. Keep at least 50 cm of free space around the product.
18. Do not install the product in locations where it can intentionally blind others.
19. Do not direct the light source to roads, pavements or any traffic zones (on land, sea or air).
20.  Discarded electric appliances are recyclable and should not be discarded in the domestic waste!
Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres (if available).


2/ TECHNICAL DATA

Power adaptor	Input: 100 - 240 V/AC, 50/60 Hz
	Output: 5 V/DC, 1A
Power consumption	max. 5 W
Number of LEDs	6
Operating temperature	max. 40 °C
Dimensions	180 x 180 x 150 mm
Weight	approx. 0.3 kg

3/ DESCRIPTION

1. Power input
2. LED light

3. Power adaptor

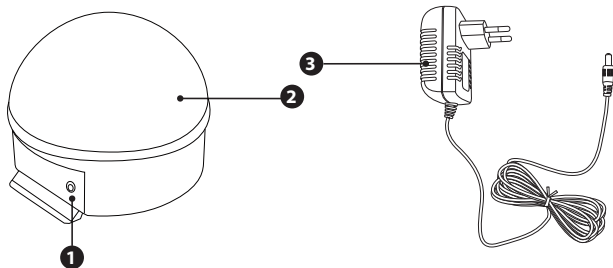

4/ INSTALLATION

- Install the product at least 2 meters away from the intended projection surface.

5/ USE

- Connect the provided power adaptor (3) to a suitable power source.

Note: The product has no power switch and is always on as long as it is connected to the power supply. Disconnect the power supply in order to switch the mini strobe off.

6/ MAINTENANCE AND CLEANING

Warning! When not in use or before cleaning always disconnect the product from the power source.

Warning! During cleaning or operation do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water.

- Clean the product with a dry, fiber-free cloth.
- Do not use any aggressive cleaning agents, rubbing alcohol or other chemical solutions as they can cause damage to the casing.

7/ WARRANTY AND LIMITATIONS OF LIABILITY

This product is guaranteed for a period of 24 months (defined by local law) from the date of purchase against any failure resulting from manufacturing or material defects.

This warranty does not cover damage caused by improper installation, improper use, or normal wear and tear of the product.

More specifically, the warranty does not cover:

- Damage or problems caused by improper use, accident, alteration or electrical connection of improper intensity or voltage.
- Modified products, those whose warranty seal or serial number have been damaged, altered, removed or oxidized.
- Replaceable batteries and accessories are guaranteed for a period of 6 months.
- Failure of the battery due to overcharging or failure to observe the safety instructions explained in the instruction manual.
- Cosmetic damage, including scratches, dents, or any other element.
- Damage caused by any intervention carried out by an unauthorised person.
- Defects caused by normal wear and tear or due to normal ageing of the product.
- Software updates due to a change in network settings.
- Product failures due to the use of third party software to modify, change or adapt the existing software.
- Product failures caused by use without accessories approved by the manufacturer.
- Oxidised products.

Under no circumstances can the manufacturer be responsible for the loss of data stored on the disk. Similarly, the manufacturer is not required to verify that the SIM/SD cards are removed from the returned products.

Repaired or replaced products may include new and/or reconditioned components and equipment.

Terms and conditions of implementation:

To obtain a warranty service, you are requested to return your product to the customer service desk of your retail outlet with your proof of purchase (receipt, invoice, ...), the product and its supplied accessories, with its original packaging.

It is important to have the date of purchase, the model and the serial or IMEI number on hand as information (this information usually appears on the product, the packaging or your proof of purchase).

Failing this, you must return the product with the accessories necessary for its proper operation (power supply, adaptor, etc.).

In the event that your claim is covered by the warranty, the after-sales service may, within the limits of local law, either:

- Repair or replace defective parts.
- Exchange the returned product with a product that has at least the same functionality and that is equivalent in terms of performance.
- Refund the product at the purchase price of the product mentioned on the proof of purchase.

If one of these 3 solutions is used, this does not give rise to the extension or renewal of the warranty period.

вРѢ ВУчаСУДваМСѢ

John Hornby Skewes & Co. Ltd.

KOaRbDdger & NOeUUcedBhd edOPT 60eSdefT &h
HRRR d#K.2hDK &LcUFRRHUCSRdb,h

www.jhs.co.uk

Authorized EU Representative: Pieters Musical Agencies
Sparrelaar 19, 5467 JP Veghel, Netherlands