



8 CUP POUR OVER COFFEE MAKER

Instruction Manual



Thank You for your purchase

Register & sign up for special
announcements and trendy recipes!

Tell us what you think!
Rate, review or ask us a question.

@bellahousewares.com
#getinspired



BellaLife



BellaLifestyle



TABLE OF CONTENTS


Important Safeguards	1-3
Additional Important Safeguards	3-4
Notes on the Plug	4
Notes on the Cord	5
Plasticizer Warning	5
Electric Power	5
Carafe Safety Precautions	6
Coffee Yield	7
Permanent Coffee Filter Basket	7
Getting to Know Your 8 Cup Pour Over Coffee Maker	8
Before Using for the First Time	9
Pour Over. Optimized	9
Brewing Coffee	9-10
Brewing a Second Carafe of Coffee	11
Hints for Great Tasting Coffee	11
User Maintenance Instructions	12
Care & Cleaning Instructions	12
Descaling	13
Storing Instructions	13
Warranty	14-15

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles or knobs.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Close supervision is necessary when any appliance is used by or near children.
5. In order to minimize the risk of property damage, never place the 8 Cup Pour Over Coffee Maker under cabinets. Make sure the area several feet above the 8 Cup Pour Over Coffee Maker is clear from all furniture or cabinetry.
6. Do not use outdoors.
7. Unplug unit from outlet when the appliance is not in use, and before cleaning. Allow unit to cool before putting on or taking off parts, and before cleaning.
8. To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or appliance in water or other liquids.
9. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment. **NOTE: DO NOT ATTEMPT TO REPAIR THE UNIT YOURSELF. THIS WILL VOID THE WARRANTY.**

- 
- 
10. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
 11. Never move the appliance by pulling the cord. Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
 12. Stand the appliance on a table or flat surface.
 13. Do not use a cracked carafe.
 14. Only use the carafe with this appliance. Handle with care as the glass may become hot.
 15. **CAUTION!** When full, the carafe can be heavy and after brewing, it gets very hot! Avoid touching the glass carafe. Use a firm grip on the carafe handle and be sure to handle with care to avoid burning.
 16. Never use your 8 Cup Pour Over Coffee Maker without water in the water reservoir.
 17. Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
 18. The carafe is designed for use with this appliance. It must never be used on a range top.
 19. Do not set hot carafe on a wet or cold surface.
 20. Do not clean the carafe with cleaners, steel wool pads, or other abrasive material.
 21. Press the Power button to turn the appliance OFF. Unplug the power cord from the electrical outlet when the appliance is not in use, left unattended, or when the carafe is empty.
 22. Do not use this appliance for other than its intended use.
 23. To reduce the risk of fire, do not mount unit over or near any portion of a heating or cooking appliance.

- 
24. To reduce the risk of electric shock, do not mount over a sink.
 25. To reduce the risk of fire, do not store anything directly on top of the appliance surface when the appliance is in operation.
 - 26 Scalding may occur if the filter and or filter holder is removed during the brewing cycle.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS





ADDITIONAL IMPORTANT SAFEGUARDS



WARNING: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Use water only in this appliance! Do not put any other liquids or food products in this appliance. Do not mix or add anything to the water placed in this appliance, except as instructed in the User Maintenance Instructions to clean the appliance.

- 
- 
4. DO NOT attempt to move an appliance containing hot liquids. Allow appliance to cool completely before moving.
 5. Keep appliance at least 4 inches away from walls or other objects during operation. Do not place any objects on top of appliance while it is operating. Place the appliance on a surface that is resistant to heat.
 6. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
 7. If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water.
 8. The appliance must be left to cool down sufficiently before adding more water to avoid exposure to steam.
 9. Always use fresh, cool water in your appliance. Warm water or other liquids, except as listed in cleaning section, may cause damage to the appliance.
 10. DO NOT put carafe into a microwave oven.
 11. DO NOT leave empty carafe on warming plate when appliance is turned ON, as the decanter may crack or become otherwise damaged.

Notes on the Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

Notes on the Cord

- A. A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used :
 1. The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance;
 2. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord;
 3. The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.

Plasticizer Warning

CAUTION: To prevent Plasticizers from migrating to the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top. Failure to do so may cause the finish to darken; permanent blemishes may occur or stains can appear.

Electric Power

If the electrical circuit is overloaded with other appliances, your 8 Cup Pour Over Coffee Maker may not operate properly. It should be operated on a separate electrical circuit from other appliances.

Carafe Safety Precautions

1. Do not use a cracked or chipped carafe.
2. This carafe is designed to be used only on the warming plate of your 8 Cup Pour Over Coffee Maker. Do not use in a conventional oven.
3. To avoid breakage, handle carafe with care. Avoid impact. Glass will break as a result of impact. Use care when filling with water to avoid hitting faucet.
4. Do not place hot carafe on cool or wet surface. Allow carafe to cool before washing or adding liquids.
5. Do not set empty carafe on a hot heating surface.
6. Do not clean with steel wool pads, abrasive cleanser, or any other materials that may scratch.
7. Do not bump or scratch the carafe. Remove carafe from the warming plate to avoid burning or scorching. Never operate the Coffee Maker with a carafe that has boiled dry.
8. Discard carafe if it is cracked, scratched, or heated while empty for an extended period of time

Coffee Yield

8 Cup Pour Over Coffee Maker: 8 (5 oz.) cups

NOTE: A 5-oz.cup is the American industry standard and is used by most Coffee Maker manufacturers. To fill your favorite over-sized mug, fill the 8 Cup Pour Over Coffee Maker reservoir with enough water for 3 to 4 cups (15 to 20 ounces).

NOTE: The amount of brewed coffee will always be less than the amount of water placed into the water reservoir; as much as 10% may be absorbed by coffee grounds and steam loss.


WARNING: TO AVOID THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT UNSCREW THE UNDER SIDE COVER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY

Permanent Coffee Filter Basket

The permanent coffee filter takes the place of disposable paper filters. Simply place the permanent coffee filter into the filter basket holder. Use the handle to lift the filter basket.

Getting to Know Your BELLA PRO 8 Cup Pour Over Coffee Maker

Product may vary slightly from illustration

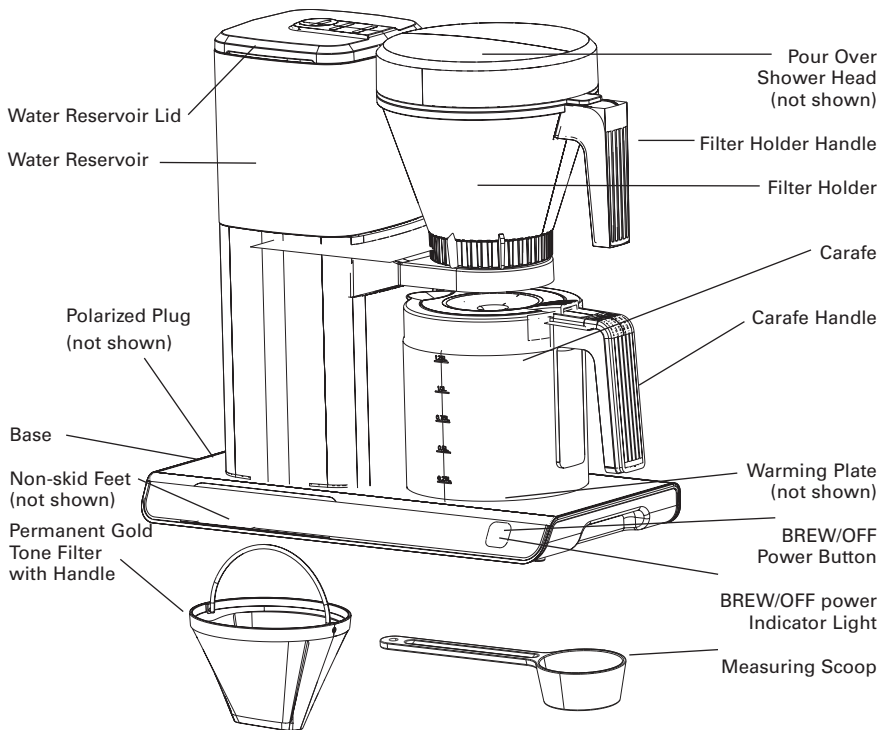

Before Using for the First Time

CAUTION: To protect against electrical shock, do not immerse the 8 Cup Pour Over Coffee Maker or allow the power cord to come into contact with water or other liquids.

1. Remove all packing material and labels from the inside and outside of the 8 Cup Pour Over Coffee Maker.
2. Place the unit on a flat, clean surface.
3. Before preparing coffee, thoroughly clean the carafe, filter holder and permanent filter in hot, sudsy water. Rinse and dry. See Care & Cleaning Instructions for a detailed description.
4. It is highly recommended to fill the carafe with 1 part white vinegar to 2 parts cold water. Pour water and vinegar solution into the water reservoir. Do not add the permanent coffee filter or ground coffee filter for this. Press the BREW/OFF button and let the brew cycle complete.
5. Remove the carafe from the warming plate and allow liquid to cool for 15 minutes. Repeat a 2nd time if desired
6. Rinse the unit by brewing a full carafe of cold water.
7. At end of BREW/OFF cycle, press the BREW/OFF button to turn the 8 Cup Pour Over Coffee Maker OFF. Discard water in the carafe. Wash carafe, permanent coffee filter, and filter holder in hot sudsy water. Dry parts thoroughly.
8. Wait an additional 15 minutes to allow the unit to cool before brewing your first carafe of coffee.

Pour Over. Optimized

We get it—you want pour over coffee in the comfort of your kitchen. And you want more than a cup at a time. This is pour over, optimized. A thoughtfully designed shower head utilizes pulse brewing to evenly water your coffee bed and achieve the perfect bloom. No paper filter necessary. Our permanent filter allows essential coffee oils to pass through, resulting in 8 Cups of smooth, full-bodied coffee. A carafe of craft coffee without the fuss.

WARNING! Dial must be in BREW position when brewing or overflow will occur. Move dial to BREW COMPLETE position once brewing cycle is completed to avoid coffee dripping.

Brewing Coffee

1. Fill with Water: Remove the water reservoir lid. Use the carafe to pour the desired amount of cold water into the water reservoir. Place back the water reservoir lid.

IMPORTANT: Before brewing always check to make sure that the water level is at least 5.5oz. (add water if needed.) Never exceed the 8 cup fill line. **NOTE:** The amount of brewed coffee will always be less than the amount of water placed into the water reservoir; as much as 10% is absorbed by coffee grounds and filter.

WARNING! Water must be added to the water reservoir before the brewing process can begin.

2. Add Filter: Add the filter with the filter holder. Place the funnel into the support and make sure it is assembled correctly. If desired you can use a #4 cone shaped paper filter in place of the permanent gold tone filter. **NOTE:** A paper filter may be used for finer grinds or for cleaner and sweeter tasting coffee.
3. Add ground coffee: approximately 1 level coffee scoop (included) is recommended for each cup of coffee brewed. For stronger or milder coffee, adjust amount of ground coffee to suit your taste. Remember to open the strength control valve clockwise to avoid water spill before brewing. And you can adjust the coffee strength through strength control valve based on your personal taste. Plug Coffee Maker into a 120V AC electrical wall outlet.
4. Brew: Press the BREW/OFF power button. The button will illuminate white as the Coffee Maker begins the BREW cycle. Water will begin to visibly pump up and through the shower head onto the grounds. **NOTE:** To interrupt the BREW cycle at any time, press the BREW/OFF power button; then remove plug from wall outlet.
5. Remove used grounds: Upon completion of the BREW cycle Wait at least 1 minute until all of the brew dripping from the shower head into the carafe has stopped. Remove from the warming plate.

CAUTION! When full, the carafe can be heavy.

CAUTION! After brewing, the carafe gets very hot! Avoid contact with the carafe. Use the tabs on the filter holder and permanent filter to lift filters up and off the top of the carafe. Set aside, dispose of used coffee grounds.

6. Pour and enjoy! Tilt the carafe slightly and pour hot coffee very slowly, so that the flow of the brewed coffee does not exceed the width of the spout.
7. Replace the carafe with unused coffee onto the warming plate. The 8 Cup Pour Over Coffee Maker will advance to a 2 hour KEEP WARM phase, the BREW/OFF power indicator light will remain illuminated white. At the end of the KEEP WARM phase, the Coffee Maker will turn OFF automatically.
8. Press the BREW/OFF button to turn the 8 Cup Pour Over Coffee Maker OFF when the carafe is empty or when the unit is not in use; then remove plug from wall outlet.

IMPORTANT! When the BREW/OFF power indicator light begins to flash quickly, the Coffee Maker is ready for descaling. Please consult the Descaling section of this Instruction

Manual for detailed procedures.

Brewing A Second Carafe Of Coffee

1. To brew another carafe of coffee, make sure the 8 Cup Pour Over Coffee Maker is OFF. It is recommended that the 8 Cup Pour Over Coffee Maker be allowed to cool for 15 minutes between cycles.
CAUTION: Failure to allow Coffee Maker to cool sufficiently could cause hot steam and spray when the water is added to the water reservoir. The hot steam can cause severe burns.
2. Remove the filter holder and permanent coffee filter; discard used coffee grounds.
3. Rinse the carafe, filter holder and permanent filter in cool, clean water.
4. Following the instructions previously outlined in the Brewing Coffee section of this Instruction Manual, add water to the water reservoir, use the coffee scoop to add ground coffee to the permanent coffee filter, place the empty carafe on the warming plate. Press the BREW/OFF power button. The button will illuminate white as the Coffee Maker begins the BREW cycle.

Hints for Great Tasting Coffee

- A clean Coffee Maker is essential for making great tasting coffee. Regular cleaning, as described in the Care & Cleaning Instructions and Descaling sections of this Instruction Manual is highly recommended.
- Always use fresh, cold water in 8 Cup Pour Over Coffee Maker.
- Finer grinds promote fuller extraction and provide rich, full-bodied coffee. Regular grinds will require slightly more coffee per cup to provide the strength of a finer grind.
- Store coffee beans or ground coffee in a cool, dry place. Once coffee has been opened, keep it tightly sealed in the refrigerator or freezer to maintain freshness.
- For optimum coffee flavor, buy whole beans and grind them to your liking, just before brewing.
- Do not re-use coffee grounds since this will greatly impair coffee flavor.
- Reheating coffee is not recommended. Coffee is at its peak flavor immediately after brewing.
- Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee grounds. Oiliness may occur more frequently if heavily roasted coffee beans are used. Over extraction may also cause oiliness, indicating a need to clean your 8 Cup Pour Over Coffee Maker.

User Maintenance Instructions

This appliance requires little maintenance. It contains no user-serviceable parts. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

Care & Cleaning Instructions

1. Always make sure the 8 Cup Pour Over Coffee Maker is unplugged and the warming plate is cool before attempting to clean.
2. After every use, remove the permanent coffee filter, discard used coffee grounds, rinse thoroughly. Wash the filter holder and carafe in hot, sudsy water. The carafe, filter holder, permanent filter and scoop are all top rack dishwasher safe.
WARNING: To avoid breakage, handle carafe with care. Avoid impact. Glass will break as a result of impact. Use care when filling with water to avoid hitting faucet.
3. Wipe the exterior with a damp cloth to remove superficial stains. For stubborn stains, use a nylon or plastic pad with a non-abrasive cleanser. Do not use metal scouring pads or abrasive cleansers.
4. When the BREW/OFF power indicator light begins to flash quickly, the 8 Cup Pour Over Coffee Maker is ready for descaling.

Descaling

Special cleaning of your 8 Cup Pour Over Coffee Maker is recommended depending on the frequency of use and quality of water used in the unit. If water in your area is especially hard, the following cleaning procedure should be performed more frequently, since minerals in water can detract from the flavor of the coffee and possibly lengthen brew time. While brewing, if the BREW/OFF power indicator light begins to flash, then the 8 Cup Pour Over Coffee Maker should be descaled.

1. Fill carafe with 1 part white vinegar to 2 parts cold water. Pour water and vinegar solution into the water reservoir.
2. Press and hold the BREW/OFF power button for 3 seconds until the BREW/OFF power indicator light slowly flashes. The 8 Cup Pour Over Coffee Maker will begin the CLEAN cycle until all water has been circulated and the water reservoir is empty. The BREW/OFF power indicator light will turn off when the descaling operation is complete.
NOTE: Press the BREW/OFF power button at any time during the CLEAN cycle to turn the 8 Cup Pour Over Coffee Maker OFF. When liquid stops dripping from the shower head into the carafe, remove the carafe from the warming plate and allow liquid to cool for 15 minutes.
3. Rinse the unit by brewing a full carafe of cold water.
4. At end of BREW cycle, press the BREW/OFF button to turn the 8 Cup Pour Over Coffee Maker OFF. Discard water in the carafe. Wash carafe, permanent coffee filter, and filter holder in hot sudsy water. Dry parts thoroughly.
5. When Coffee Maker has cooled, wipe exterior with a dry cloth.

Storing Instructions

1. Unplug unit and allow to cool.
2. Store the 8 Cup Pour Over Coffee Maker in its box or in a cool, dry place.

Limited Two-Year Warranty

SENSIO Inc. hereby warrants that for a period of **TWO YEARS** from the date of purchase, this product will be free from mechanical defects in material and workmanship, and for 90 days in respect to non-mechanical parts. At its sole discretion, SENSIO Inc. will either repair or replace the product found to be defective, or issue a refund on the product during the warranty period.

Exclusions:

The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified SENSIO Inc. personnel. Also, the warranty does not cover Acts of God such as fire, floods, hurricanes, or tornadoes.

SENSIO Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express

The warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt, as proof of purchase is required to obtain warranty validation. Retail stores selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.

or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, and therefore, the above exclusions or limitations may not apply to you. The warranty covers specific legal rights which may vary by state, province and/or jurisdiction.

How To Obtain Warranty Service:

You must contact Customer Service at our toll-free number: 1-866-832-4843. A Customer Service Representative will attempt to resolve warranty issues over the phone. If the Customer Service Representative is unable to resolve the problem, you will be provided with a case number and asked to return the product to SENSIO Inc. Attach a tag to the product that includes: your name, address, daytime contact telephone number, case number, and description of the problem.

Also, include a copy of the original sales receipt. Carefully package the tagged product with the sales receipt, and send it (with shipping and insurance prepaid) to SENSIO Inc.'s address. SENSIO Inc. shall bear no responsibility or liability for the returned product while in transit to SENSIO Inc.'s Customer Service Center.



For customer service questions or comments
1-866-832-4843
bellahousewares.com

Sensio Inc.
New York, NY 10016/USA

90167 R1