




Pet Stain Eraser PowerBrush Brush Roll Maintenance | Support

To maintain your Brush Roll and Brush Roll Chamber in between uses, follow these steps below:


- Have you emptied your Dirty Water Tank?
 - No > Go to [After Cleaning Care](#)
 - Yes > Remove the Brush Roll Cover pulling on the latch
 - Grab the Brush Roll by its handle and pull it out

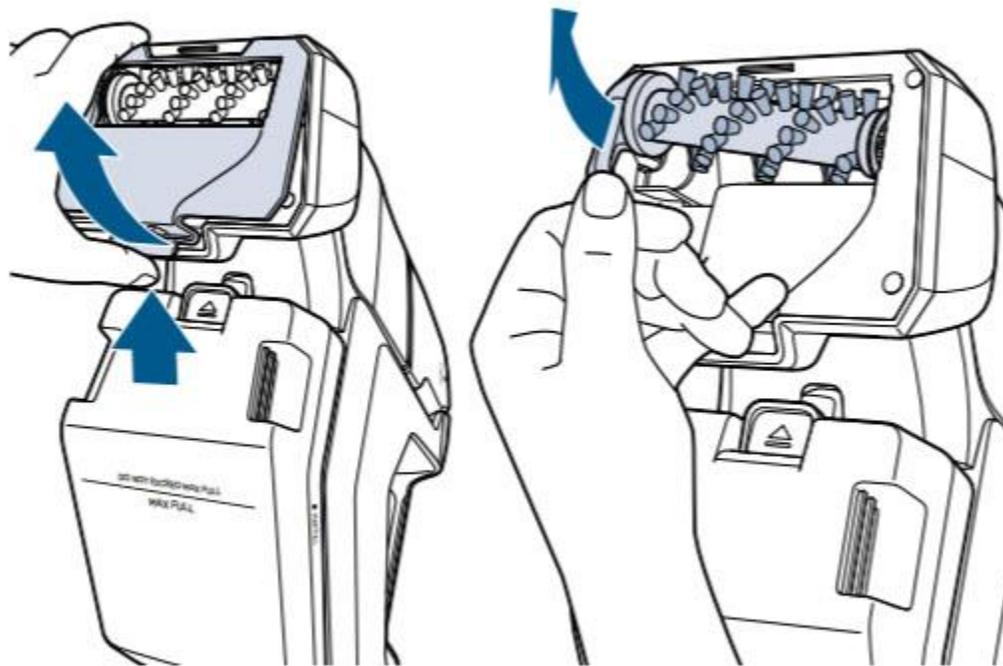

- Rinse Brush Roll under water and set aside to dry
- With a dry cloth, clean out any debris from the Brush Roll Chamber
- Remove any hair or debris from the Brush Roll Gear
- Put Brush Roll back into machine
 - Line up side opposite of Brush Roll handle into machine, then put the handle back into place

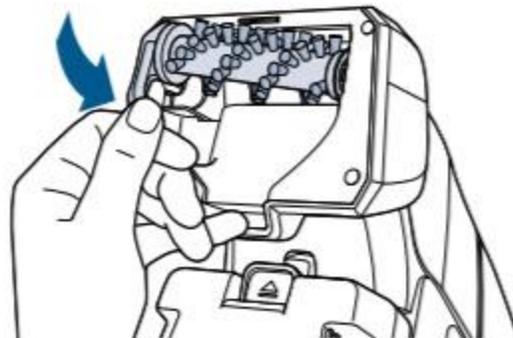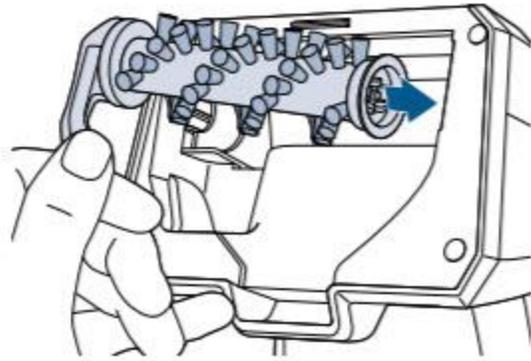

- Put the Brush Roll Cover back onto the machine
 - Slide into the top, then rotate down until it clicks into place

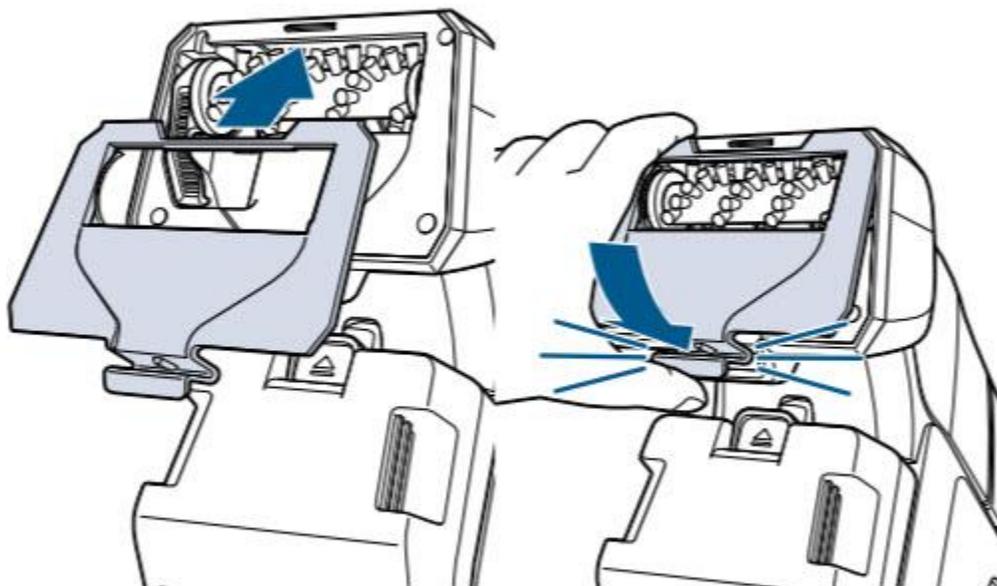

- Store Upright or Horizontally