


# Pet Stain Eraser PowerBrush light indication/error codes | Support

## Pet Stain Eraser PowerBrush Light Indication/Error Codes

Light Indication	Possible Cause	Remedies
Red light flashes above power button	Safety Shut Off	Remove Charger > Turn machine off for 10 minutes > Attempt to turn machine back on
Red light flashes above power button, White light flashes above spray button	Safety Shut Off	Remove Charger > Turn machine off for 10 minutes > Attempt to turn machine back on
Red light flashes above power button, All 3 White lights flash in battery	Battery Error	Turn machine off for 1 minute > Charge machine
Red light flashes above power, White light flashes above brush roll button	Brush Roll Obstruction	Follow steps in <a href="#">Brush Roll Maintenance</a>

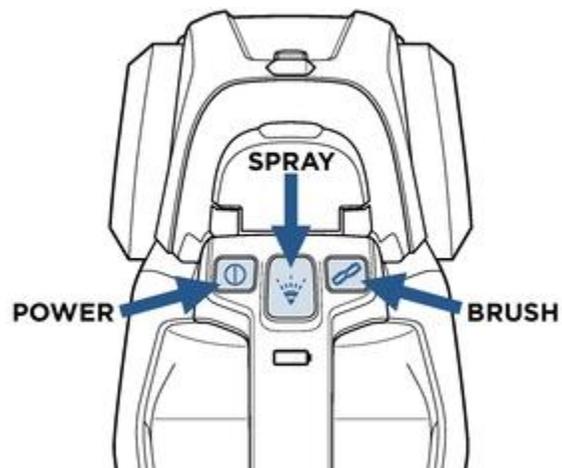

If remedy does not resolve issue, [Contact Us](#)