

Bissell®

STEAM MOP SELECT
MODEL 23V83



IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

Unplug from outlet when not in use and before conducting maintenance. When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- » This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- » Children should be supervised to ensure that they do not play with the appliance.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- » Unplug from electrical socket when not in use, before cleaning, maintaining or servicing the appliance, and if your appliance has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- » If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified person in order to avoid a hazard.
- » Do not run appliance over cord.
- » Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- » Use only as described in this user guide.
- » Use only manufacturer's recommended attachments.
- » Do not immerse in water or liquid.
- » If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- » Do not put any object into openings.
- » Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible liquids, such as petroleum, or use in areas where they may be present.
- » Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapours.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Keep appliance on a level surface.
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- » If your appliance has a motorised brush roll, do not leave machine running in the same spot without the handle fully upright.
- » Do not leave appliance when plugged in.
- » Do not use with damaged cord or plug.
- » Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners.
- » Keep cord away from heated surfaces.
- » To unplug, grasp the plug, not the cord.
- » Do not handle plug or appliance with wet hands.
- » Turn OFF all controls before unplugging.
- » Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
- » Do not use outdoors or on wet surfaces.
- » Always connect to a properly earthed electrical socket.
- » The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- » Keep the appliance out of reach of children when it is energized or cooling down.
- » The foot surfaces are liable to get hot during use.
- » Do not direct steam at people, animals, or equipment containing electrical components.
- » Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.
- » Always turn OFF vacuum mode if you encounter liquid on the floor.
- » Do not leave the appliance unattended while it is connected to the supply mains.
- » Do not open the filling aperture during use.

WARNING

SURFACE MAY BE HOT. AVOID CONTACT.



**THIS SYMBOL MEANS
WARNING: DANGER OF SCALDING**

SAVE THESE INSTRUCTIONS

FOR OPERATION ON A 220-240 VOLT A.C. 50-60 HZ POWER SUPPLY ONLY.

This model is for household use only.

Thanks for buying a BISELL® steam mop!

We love to clean and we're excited to share one of our innovative products with you. We want your steam mop to work like new for the years to come, so this guide has tips on how to use, maintain and, if there's a problem, troubleshoot.

Your steam mop needs a little assembly before getting to work, so flip to the "Assembly" section and let's get started!

- Safety Instructions. 2
- Product View. 4
- Assembly 5
- Operations 5-7
- Maintenance & Care 7
- Guarantee 8
- Consumer Care. 8

	WARNING	AN ACTION OR ATTENTION IS NEEDED TO THIS AREA IN ORDER TO REDUCE THE RISK OF ELECTRIC SHOCK, FIRE, OR INJURY
	GUIDE	READ USER GUIDE FOR COMPLETE SAFETY AND USER INSTRUCTIONS
	WEEE	DO NOT THROW THE APPLIANCE AWAY WITH THE NORMAL HOUSEHOLD WASTE AT THE END OF ITS LIFE, BUT HAND IT IN AT AN OFFICIAL COLLECTION POINT FOR RECYCLING. BY DOING THIS YOU WILL HELP TO PRESERVE THE ENVIRONMENT.

Product View

1. Strain Reliever Handle
2. Steam on Demand Trigger
3. Quick Release™ Cord Wrap
4. Power Cord
5. Lower Cord Wrap
6. Removable Water Tank
7. Indicator Light
8. Mop Pad
9. Mop Head



Assembly

Your steam mop assembles quickly and easily and is packaged with the following items:

- Handle Assembly
- Lower Body
- Manoeuvrable Mop Head
- Removable Water Tank
- 2 Steam Mop Select Mop Pads

1. Attach lower body to mop head by snapping it into place.
2. Slide handle assembly down into lower body until it snaps into place.
3. Slide water tank onto lower body and gently push tank into place.

WARNING

Do not plug in your steam mop until you are familiar with all instructions and operating procedures.



Removable Water Tank



Triangular Mop Pads



Operations

Special Features

Removable Water Tank

The water tank is located on the top of the steam mop. It can be refilled with water any time during use. Distilled or demineralized water is recommended in place of tap water. Do not use chemicals with your steam mop.

Indicator Light

The indicator light will glow when the steam mop is plugged in.

Manoeuvrable Mop Head

This triangular mop head allows you to clean in tight spaces and under cabinets.

Reusable Mop Pads

These reusable microfibre mop pads are machine washable and safe for fully sealed hard floor surfaces. The all-white “soft” pad is best for everyday use on delicate flooring like sealed hardwoods and laminate.

Steam on Demand Trigger

Press to release steam.

Operations


⚠️ WARNING

Never put descaling, aromatic, alcoholic, or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.

Attaching Mop Pads


The mop pad may have already come attached to the mop head, if not follow steps below.

1. Attach mop pad
 - a. Set mop head in mop pad, making sure toggle is located on the back.
 - b. Tighten mop pad by pulling on elasticcord while pressing on toggle.

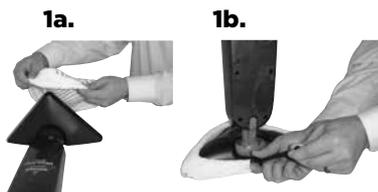

Filling the Water Tank

1. Remove tank by lifting straight up and away from unit.
2. Unscrew cap at bottom of water tank.
3. Fill water tank with water. For best results, water should be at room temperature.
4. Replace the cap, tighten until snug.
5. Replace water tank by gently sliding tank into place.
6. Twist the quick release cord wrap clockwise to unwrap the power cord completely and plug into a 220-240 Volt outlet as described on the Important Safety Instructions, page 2.
7. The indicator light will illuminate when the steam mop is plugged in.

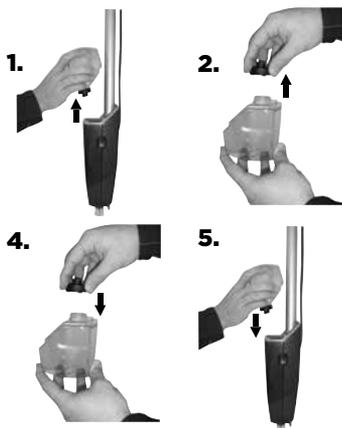

Before You Clean

- Thoroughly sweep or vacuum floor prior to cleaning with the steam mop.
- During first use, it may take several seconds for the Steam Mop to begin steaming. The water needs to flow through the filter to the heater. This delay will only occur during initial use or when using a new filter.
- Using distilled or demineralized water will maximize the performance of your filter.
- Do not attempt to use your steam mop without water in the tank.

Operations

Cleaning Your Hard Floors

Your steam mop is designed to clean hard flooring such as ceramic tile, vinyl, laminate, marble, stone and sealed hard wood floors. Use of your steam mop on waxed or some unwaxed floors may result in a diminished glossiness. The steam mop is not for use on unsealed wood floors. For best results test in an inconspicuous area and check the care instructions from your flooring manufacturer.

1. Plug the unit in and wait 30 seconds for it to heat up. Begin cleaning by slowly passing over surface while pressing the steam on demand trigger to emit steam as needed.
2. To be sure to sanitize an area of your floor, use the microfibre cloth pads and slowly and evenly stroke your steam mop back and forth at least three times over the area using continuous steam. For best results, remove the pad and wash after use.
3. When the steam mop stops emitting steam, unplug the unit. Simply remove the water tank, refill, and continue cleaning.

CAUTION

Exercise extreme care when using the steam mop on timber flooring. Test the steam mop in an inconspicuous area prior to mopping a large floor area. The steam mop generates hot steam, so when depressing the trigger to apply steam, ensure the steam mop is moving continuously. The trigger does not need to be depressed at all times. Prolonged application of steam in one area increases the risk of damage to the surface treatment on timber floors. Check with your timber floor treatment application specialist prior to steam mop operation. Regular foot traffic and direct sunlight will wear down timber floor surface treatment making it more susceptible to steam damage.

IMPORTANT

Sanitizing on timber floors is not recommended as prolonged application of steam in one area increases the risk of damage to the surface treatment on timber floors, especially in areas with regular foot traffic and direct sunlight, which will wear down timber floor surface treatments making it more susceptible to steam damage.

Maintenance & Care

Cleaning Your Steam Mop

1. Unplug power cord from outlet.
2. Carefully remove mop pad from mop head, as mop pad and lower assembly may be hot.
3. Any water remaining in the water tank should be emptied prior to machine storage.
4. Mop pad can be machine washed in warm water. Use only liquid detergents. Do not use fabric softeners. For best results, air dry.
5. Wrap power cord around quick release cord wrap on side of steam mop.
6. Wipe all surfaces of steam mop with a soft cloth. Store upright in a protected, dry area.

WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance checks.

CAUTION

Upright storage of the steam mop with a wet mop pad may result in the formation of white marks on your floor. To remove the white marks, clean area with vinegar.

Warranty

This warranty gives you specific legal rights, in addition to rights you may have under the *Australian Consumer Law*. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact your local BISSELL Consumer Care on the details set out below.

It may be necessary to obtain some of your personal information, such as a mailing address, to fulfill terms of this warranty. Any personal data will be handled pursuant to BISSELL's Privacy Policy, which can be found at global.BISSELL.com/privacy-policy.

BISSELL® One Year Warranty

Subject to the *conditions identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part due to manufacturer defect. This warranty applies to product used for personal purposes, and not commercial or rental service. This warranty does not apply to fans or routine maintenance or consumable components such as filters, belts, brush rolls, etc., damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the user guide. BISSELL recommends that the original packaging be kept for the duration of the warranty period in case such need arises within the warranty period that the item needs repacking and transportation.

*CONDITIONS OF WARRANTY

Subject to whether such loss is reasonably foreseeable, BISSELL and its in-country distributors are not liable for incidental or consequential damages of any nature associated with the use of this product.

This warranty is in addition to other rights or remedies under law. Nothing in this warranty excludes, limits or modifies any liability of BISSELL which is imposed by law, or limits or modifies any remedy available to the consumer which is granted by law. To make a claim under this warranty contact BISSELL Australia PTY LTD (details below). Contact BISSELL prior to returning any goods. Where agreed, BISSELL will reimburse reasonable postage / handling costs (if any) for returning goods to BISSELL. To claim expenses incurred in making a claim under this warranty please provide BISSELL with a copy of the receipt of the expenses by email or post.

For Australian Consumers Only: Our goods come with guarantees that cannot be excluded under the *Australian Consumer Law*. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NOTE: Please keep your original sales receipt. It provides proof of the date of purchase in the event of a warranty claim. See warranty for details.

Consumer Care

If your BISSELL product should require service or to claim under our limited warranty, please contact us as follows:

Australia

Telephone: 1300 247 735

Website: www.BISSELL.com.au

New Zealand

Telephone: 0800 247 735

Website: www.BISSELL.co.nz