



PIXAPRO COLLAPSIBLE BEAUTY DISH ASSEMBLY INSTRUCTIONS.

Step 1.

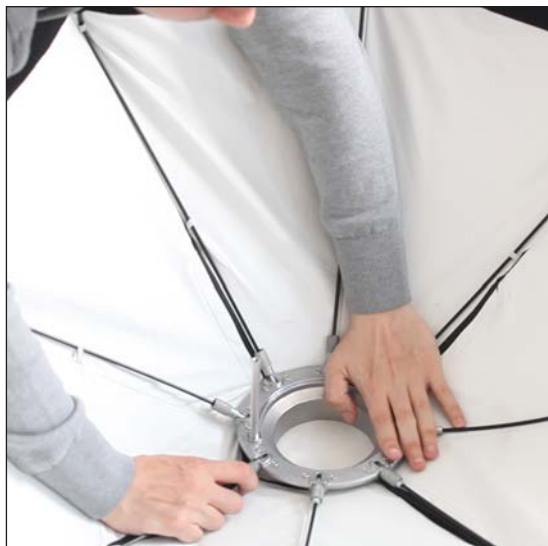


Open up the main body of the collapsible beauty dish, and push down onto each of the rods until they click into place.

Step 2.

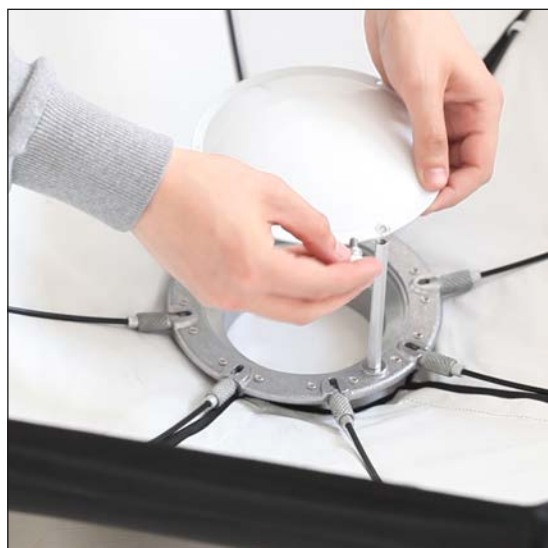

Once the Beauty dish is fully opened up, attach the Deflector, which simply screws onto the top of the spacer rod with a small thumb-screw.

Step 3.

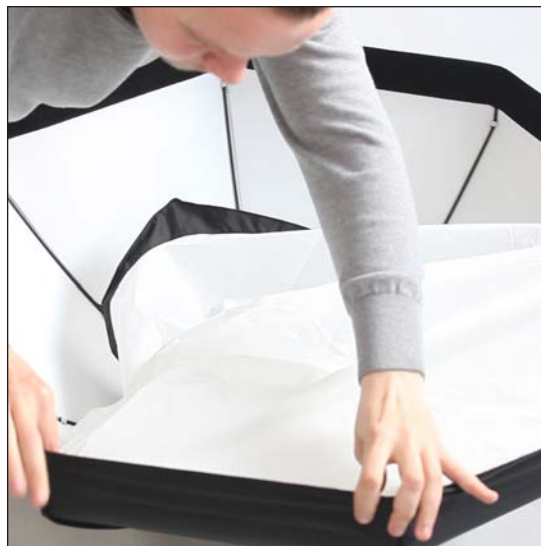

To add the optional diffuser, simply attach it to the inner edge of the Velcro strip that goes around the internal perimeter of the Beauty dish.

Used to reduce specular highlights.

Step 4.



To attach the optional honeycomb grid, simply press the edges of the grid the against the Velcro strip that goes around the internal perimeter of the Beauty Dish.

Used to narrow the spread of light.

HOW TO DISASSEMBLE.

Step 1.



To disassemble the Beauty Dish, simply press down on each of the rods with the heel of your palm, and use your thumb and index finger to release the locks.

Step 2.



Repeat the process for all eight rods.


Once all of the locks have been released, your beauty dish can now be folded, and placed into its carry bag.

Box Content.



Kit Includes: 1x Collapsible Beauty Dish, 1x Spacer rod, 1x Deflector, 1x Diffuser, 1x Honeycomb Grid 1x Carry Bag

Collapsible Beauty Dish Assembly Video

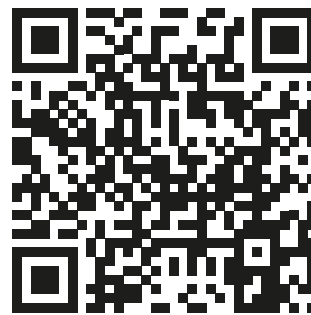

EssentialPhoto
PIXAPRO[®]

PIXAPRO LTD.
50 Popes Lane, Oldbury, West Midlands, B69 4PA
Tel: 0121 552 3113
Company Registration No. 07601334
Web: www.essentialphoto.co.uk
E-mail: customerservice@essentialphoto.co.uk

Facebook: www.facebook.com/EssentialPhoto.UK

Twitter: www.twitter.com/EssentialPhoto_