

MAINTENANCE

Clean matte white screen material with a soft cloth and mild soap with water. When not in use, retract screen in its housing to keep the surface clean.

NOTE

Regardless of mounting method, the screen should be securely supported so that vibration or even abusive pulling on the viewing surface will not cause the case to work loose or fall. The installer must insure that the fasteners used are of adequate strength and suitable for the mounting surface chosen.

MANUAL WALL/CEILING BACKGROUND SCREEN

USER'S GUIDE



YOU HAVE MADE A WISE SELECTION...

In choosing Manual Wall/Ceiling background screen designed and engineered to produce the sharpest, most pleasing pictures with maximum convenience.

PROTECT YOUR SCREEN by keeping it rolled in its protective case when not in use. Always examine both front and back of surface before re-rolling into case to make certain screen is free of dust, dirt or other foreign matter. Use a very soft duster to gently remove any foreign particles.

INSTALLATION

Flush Wall Mounting

1. Using a tape measure, mark the keyholes that are located at the back of the screen's case end cap.
2. After marking the area and predrilled hole, insert the screw and leave the screw's head out about 4mm (1/8") from the wall to mount the screen on. (Fig. 1)

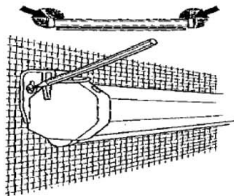


Fig. 1

Ceiling Mounted (additional hardware required)

1. You can also hang the screen on a ceiling by using a chain with s-hooks (not included) through the two loops located on each end of the case as shown on (Fig. 2).

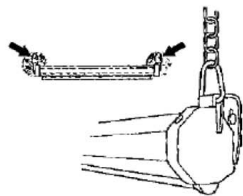


Fig. 2

OPERATING INSTRUCTIONS

Note: Always pull the screen down or let it up in either a steep incline or a 90-degree vertical angle. Do not allow the screen to touch the screen case when the screen goes up or comes down to avoid damaging the screen material.

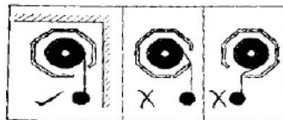


Fig. 3

1. Pull the screen down with the lanyard or by the handle at either a sharp incline or in a 90-degree angle. Do not attempt to pull the screen down by its material or touch the screen, as it will cause damage and likely void the warranty. (Fig.3)

Note: An internal auto-lock mechanism system will cause the screen to stop and lock on the desired position at intervals.

2. If you want the screen to retract back, simply pull the screen down more than 5cm (2") and retract the screen back by guiding the retracting material in a swift but gentle motion.

Note: Improperly bringing the screen up/down will damage the screen material or rolling system.