



PIXAPRO®

Single Axis Stabiliser Tripod

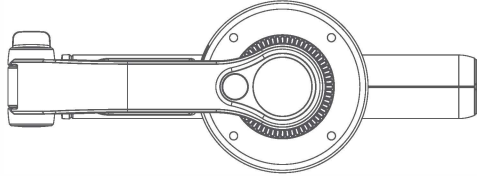


Quick Start Guide

Product description

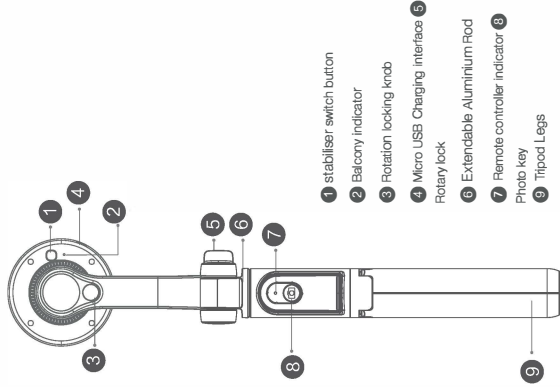

- 1 stabiliser switch button
- 2 Battery indicator
- 3 Rotation locking knob
- 4 Micro USB Charging interface
- 5 Rotary lock
- 6 Extendable Aluminium Rod
- 7 Remote controller indicator
- 8 Photo key
- 9 Tripod Legs


Bluetooth connection

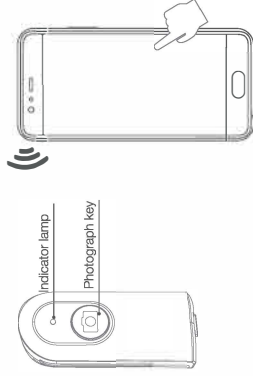


- 1 If you use an Android phone, before taking photos ensure that the volume button of your phone is set to the shutter button in camera settings.
- 2 Open Bluetooth of mobile phone to enter search state and click "PIXAPRO" in equipment searched; after connection is finished, blue light long on

Use method

- 1 Mount your phone onto the selfie stick

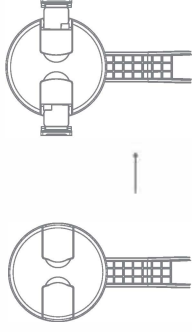


- 2 Extend the tripod

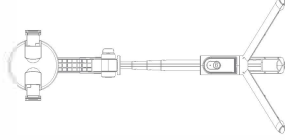


3


- 3 Usage mode of Stabiliser holder

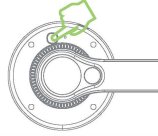

After clamping the mobile phone and keeping the phone in natural balance, then long press the power button for 3 seconds to start up.

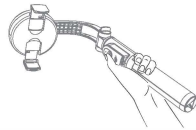

After starting up, it will enter the stable mode, move the holder, and the mobile phone will always keep a constant direction.

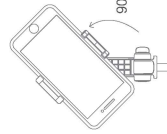

Clicking the power button of the stabiliser holder, and it will rotate 90 degrees counterclockwise.

4

Charging

- 1 Holder charging mode

Connect the Micro USB interface of the stabiliser holder for charging, and the red light will be on for a long time during the process of charging. The red lamp will be off automatically after charging is finished.



Micro USB interface

- 2 Charging Mode of Remote Controller

Connect the Micro USB interface charging, and the red light will be on for a long time during the process of charging. The red lamp will be off automatically after charging is finished.




Micro USB interface

6

- 4 Non-stabiliser mode


When the stabiliser is shut down or out of power, Rotate to tighten in the locking direction, the rotation function of the stabiliser disappears, and it will become a common tripod selfie stick. (When the rotation is reset to the holder end, the stabiliser mode will be restored.)

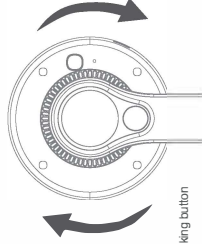

stabiliser Rotary Locking button

- 5 Use the tripod (optional)

Open the bottom tripod, uplift the pull rod and put tripod on horizontal plane.

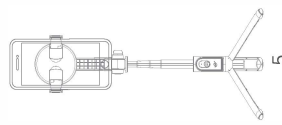

Powering off

Remote controller: Keep press the camera button for 3 seconds, the blue light flashes 3 times and goes off, indicating that it has been turned off.

stabiliser holder: Keep press the stabiliser button for 3 seconds, the green light goes off, indicating that it has been turned off.

1. When the stabiliser holder holds the mobile phone, try to keep the mobile phone centered. If it can't be centered, it is recommended to use the vertical screen mode.

2. The selfie stick will automatically enter the sleep state if it does not operate within 10 minutes after Bluetooth connection, then press the camera button again to recover connection

3. When using the remote control, if the battery is low, the remote control will flash red light for reminder, please charge in time.

Pixapro LTD. Unit 5 Sterling Park, Pedmore Road,
Brierley Hill, DY5 1TB.

TEL: 0121 552 3113
email: info@essentialphoto.co.uk

Dimensions: 60x100mm
Weight: 80g