

CRUX™

S'MORES MAKER

INSTRUCTION MANUAL





Created by CRUX in partnership with world renowned Artist & Producer Marshmello, the CRUX x Marshmello collection makes the perfect dish every time-cooked, puffed, crispy, gooey perfection.

TABLE OF CONTENTS

Important safeguards	2-3
Additional important safeguards.....	4
Notes on the plug	4
Notes on the cord.....	5
Plasticizer warning	5
Electric power	5
Introduction.....	6
Getting to know your S'mores Maker	7
Parts & assembly.....	8
How to operate.....	8-9
Helpful tips.....	9
Cleaning & Maintenance	9-10
Warranty.....	11-12

IMPORTANT SAFEGUARDS

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

1. READ ALL INSTRUCTIONS.

2. Do not touch hot surfaces. Use handles or knobs. Use oven mitts or potholders.
3. To protect against electric shock do not immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Bring it to a qualified technician for examination, repair or electrical or mechanical adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.

11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
14. Do not use appliance for other than intended use.

FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION HOT SURFACES: THIS APPLIANCE GENERATES HEAT AND ESCAPING STEAM DURING USE. PROPER PRECAUTIONS MUST BE TAKEN TO PREVENT THE RISK OF BURNS, FIRES, OR OTHER INJURY TO PERSONS OR DAMAGE TO PROPERTY.

CAUTION: THIS APPLIANCE IS HOT DURING OPERATION AND RETAINS HEAT FOR SOME TIME AFTER TURNING OFF. ALWAYS USE OVEN MITTS WHEN HANDLING HOT MATERIALS AND ALLOW METAL PARTS TO COOL BEFORE CLEANING. DO NOT PLACE ANYTHING ON TOP OF THE APPLIANCE WHILE IT IS OPERATING OR WHILE IT IS HOT.

1. All users of this appliance must read and understand this instruction manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. If this appliance begins to malfunction during use. Turn it off and remove plug from wall outlet. Do not use or attempt to repair the malfunctioning appliance.
4. Do not leave this appliance unattended during use.

NOTES ON THE PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

NOTES ON THE CORD

- A. A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used:
 - 1. The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance;
 - 2. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
 - 3. The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.

PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top. Failure to do so may cause the finish to darken; permanent blemishes may occur or stains can appear.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

INTRODUCTION

Thank you for purchasing the S'MORES MAKER. Now you can bring a taste of the outdoors inside and enjoy homemade s'mores all year 'round!

Simply, turn on and roast your marshmallow to perfection. Best of all, this unit has a built-in serving tray, making it easy to grab any of the s'mores fixings. Perfect for guests of all ages, your family will love making s'mores anytime!

FEATURES INCLUDE

- Flameless electric heater
- Serving tray with 4 compartment tray to hold marshmallows, chocolate, and graham crackers
- 3 roasting forks
- Durable stainless steel housing and top cover
- Easy to use, easy to clean



GETTING TO KNOW YOUR CRUX MARSHMELLO S'MORES MAKER

Product may vary slightly from illustration

1. Durable stainless steel housing and top cover
2. Flameless electric heater
3. Serving tray
4. Roasting Forks

PARTS & ASSEMBLY

- Thread the plug of the ELECTRIC STAINLESS STEEL S'MORES MAKER through the middle of the center of the serving tray. Place the base of the unit in the center.
- The Power Cord fits beneath the serving tray center.
- Link together the Food Trays and place the Food Tray over the

HOW TO OPERATE

1. Place the S'MORES MAKER on a flat, stable surface near an electrical outlet before starting. Keep about a foot of space around the unit to make sure that there is proper ventilation.
2. Always make sure that the cord is away from any water source.
3. Plug the appliance into an electrical socket.
4. Fill the Food Tray with marshmallows, graham crackers, chocolate, or other desired food items.
5. Press the Power Button of the S'MORES MAKER to the "ON" position.

NOTE: After a period of time, the Heater and Top Cover may glow red hot.

6. Push marshmallow into the tines (prongs) of the Roasting Fork provided.
7. Hold the handle of the Roasting Fork and hold above the Heater; rotate frequently to ensure even heating.
8. When the marshmallow has been roasted to the desired color and doneness, it is ready to serve.
9. Once finished with the S'MORES MAKER, Press Power Button to the "OFF" position and unplug from electrical socket.

By following these simple instructions, your S'MORES MAKER will be fun for friends, family and kids of all ages!

HELPFUL TIPS

MARSHMALLOWS

Packaged marshmallows tend to become misshapen. For even heating, it is best to mold marshmallows back into cylindrical shape before sliding onto Roasting Fork for cooking.

BURNING/ SMOKING

DO NOT overcook the marshmallow, as it may melt and fall on the Top Cover, causing smoke, fire, and a stain mark. In the event any object or food item falls onto the Top Cover, press Power Button to "OFF" position and unplug the unit. Wait until unit has cooled before cleaning.

CLEANING & MAINTENANCE

- Press Power Button to "OFF" position, unplug unit from the electrical socket before cleaning.
- Allow unit to cool for at least 20 minutes before cleaning. Top Cover will be hot to the touch.
- Once appliance has cooled, remove the Top Cover from the S'MORES MAKER. Clean with a soft, damp cloth, or wash in warm, soapy water and rinse.
- Dry S'MORES MAKER and Top Cover and Roasting Forks thoroughly before storage. Make sure the appliance has completely cooled and is dry before storing.

- Never use abrasive cleaners on the unit.
 - Never place the appliance in a dishwasher.
- NOTE:** Do not submerge the unit in water, as it is an electrical unit.
- Any other servicing shall be performed by an authorized service representative.

LIMITED TWO-YEAR WARRANTY

SENSIO Inc. hereby warrants that for a period of **TWO YEARS** from the date of purchase, this product will be free from mechanical defects in material and workmanship, and for 90 days in respect to non-mechanical parts. At its sole discretion, SENSIO Inc. will either repair or replace the product found to be defective, or issue a refund on the product during the warranty period.

The warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt, as proof of purchase is required to obtain warranty validation. Retail stores selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.

EXCLUSIONS:

The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified SENSIO Inc. personnel. Also, the warranty does not cover Acts of God such as fire, floods, hurricanes, or tornadoes.

SENSIO Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, and therefore, the above exclusions or limitations may not apply to you. The warranty covers specific legal rights which may vary by state, province and/or jurisdiction.

HOW TO OBTAIN WARRANTY SERVICE:

You must contact Customer Service at our toll-free number: 1-866-832-4843. A Customer Service Representative will attempt to resolve warranty issues over the phone. If the Customer Service Representative is unable to resolve the problem, you will be provided with a case number and asked to return the product to SENSIO Inc. Attach a tag to the product that includes: your name, address, daytime contact telephone number, case number, and description of the problem. Also, include a copy of the original sales receipt. Carefully package the tagged product with the sales receipt, and send it (with shipping and insurance prepaid) to SENSIO Inc.'s address. SENSIO Inc. shall bear no responsibility or liability for the returned product while in transit to SENSIO Inc.'s Customer Service Center.

CRUX™



For customer service, call 1-866-832-4843
or email help@cruxkitchen.com
For recipes, visit www.cruxkitchen.com

SENSIO Inc.
New York, NY 10016/USA

17538 V1

**NO
CAMPFIRE
NEEDED**

