
### How to use

- Separate Hot (left) and Cold (right) handles to control temperature and water flow.
- 2.Handles can be rotated 0-90°.
- Achieve the desired temperature by adjusting the handles.
- 4.The diverter (middle) allows for flow between bath spout or hand shower.

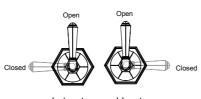

not water cold water

## Maintenance & Care

To avoid damage it is necessary to consider the below guidelines.

- 1. To clean the mixers surface use clean hot soapy water. ONLY use soft fabric cloths.
- 2. DO NOT use cleaning solutions that contain hydrochloric acid, formic acid, concentrated caustic soda, chlorine or acetic acid as they can cause considerable damage.
- 3. DO NOT use any coarse cleaning powders or brushes to clean the mixer.
- 4. If there is irregular water pressure & water flow is reduced, please check if the spout is clean, if not brush the spout after vinegar soaking.

# **Warranty Requirements**

For full warranty terms and conditions please visit the warranty section of our website. Please pay attention to the below. Failure to do so will void your warranty:

- 1. Do not use acid cleansers
- 2. Do not use abrasive cleansers
- 3. Do not use abrasive cloths

# Troubleshooting

Fault: Hot is coming out when I select cold or vise versa:

Cause: Hot and cold pipes are connected the wrong way round.

Fault: Fluctuating flow rate:

Cause: Possible blockage in the system or operating conditions are incorrect.

Fault: Low or no flow from the valve:

Cause: Possible blockage in the system, operating conditions are incorrect


or there is a blockage in the system.

Fault: Leak from the valve:

Cause: The holder isn't inserted to the bottom.



# Installation Guide Darcey Freestanding Bath Mixer DAR-412

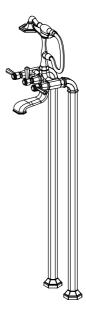

# **Important Information**

It is recommended that this product is installed by a qualified professional.

Please remove all packaging and check this product to ensure it has not been damaged or any parts are missing.

Before installing please make sure this is the correct model and you have all the parts required for installation and usage.

The printed picture is for reference only, this product is according to the actual goods.

Please check all the accessories are present. (1) Main Body (2) Base Ring (3) Flexible Pipes (Red & Blue).

Always read these instructions carefully and keep for future reference.

# **Operating Information**

Operating Pressure Minimum operating pressure 0.5 bar Maximum operating pressure 8 bar

## **Pre-Installation**

- 1. Before installing the mixer, flush through the pipe work to remove any debris & other impurities that can enter the tap.
- 2. Turn off water supply at the isolation valves before commencing with work.
- 3. To avoid damage, please make sure the water inlet flexible pipes are not twisted when in use.

## Installation

Get all accessories ready according to picture (1) the left hose (red) is for hot water inlet, and the right hose (blue) is for cold water inlet. Please install one hose at a time.

- 1. Build the main body of the tap & place in desired position, over the hot and cold feed. Mark pilot holes.
- 2. Screw body (Legs) into the Hot (Red) and Cold (Blue) feed pipes.
- 3. Connect the control valves to the body (legs). Then connect the bath spout to the main body of the tap. Check for any leakage then screw down and secure.
- 4. Connect the hand shower to the main body of the freestanding tap.

PLEASE MAKE SURE YOU FULLY TEST YOUR PRODUCT BEFORE TILING ETC. WE WILL NOT BE RESPONSIBLE FOR ANY COSTS INVOLVED IN REMOVAL OF THE TAP IF YOU FIND THERE IS A FAULT.

