

## How to use

The Darcey Bath Spout is to be used with the Darcey Shower Valve.

Please check the Darcey Shower Valve manual 'How to Use' section for this product .

## Maintenance & Care

To avoid damage it is necessary to consider the below guidelines.

1. To clean the products surface use clean hot soapy water. ONLY use soft fabric cloths.
2. DO NOT use cleaning solutions that contain hydrochloric acid, formic acid, concentrated caustic soda, chlorine or acetic acid as they can cause considerable damage.
3. DO NOT use any coarse cleaning powders or brushes to clean the product.
4. If there is irregular water pressure & water flow is reduced, please check if the hose is clean, if not brush the spout after vinegar soaking.

## Warranty Requirements

For full warranty terms and conditions please visit the warranty section of our website. Please pay attention to the below. Failure to do so will void your warranty:

1. Do not use acid cleansers
2. Do not use abrasive cleansers
3. Do not use abrasive cloths

## Troubleshooting

Fault: Hot is coming out when I select cold or vise versa:

Cause: Hot and cold pipes are connected the wrong way round.

Fault: Fluctuating flow rate:


Cause: Possible blockage in the system or operating conditions are incorrect.

Fault: Low or no flow from the valve:


Cause: Possible blockage in the system, operating conditions are incorrect or there is a blockage in the system.

Fault: Leak from the valve:

Cause: The holder isn't inserted to the bottom.

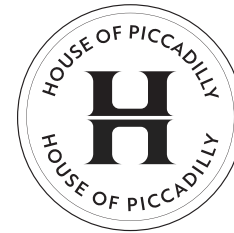

# Installation Guide Darcey Bath Spout DAR-411

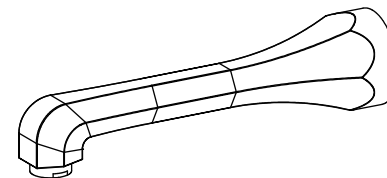

## Important Information

It is recommended that this product is installed by a qualified professional.

Please remove all packaging and check this product to ensure it has not been damaged or any parts are missing.

Before installing please make sure this is the correct model and you have all the parts required for installation and usage.

The printed picture is for reference only, this product is according to the actual goods.

Please check all the accessories are present.

Always read these instructions carefully and keep for future reference.

## Important Information

Operating Pressure

Minimum operating pressure 0.5 bar

Maximum operating pressure 8 bar

## Pre-Installation

1. Before installing the product, flush through the pipe work to remove any debris & other impurities that can enter the product.
2. Turn off water supply at the isolation valves before commencing with work.


## Installation

Get all accessories ready according to picture


1. Check the outlet is the same connection.
2. Connect adapter to the spout.
3. Connect the spout to the water supply & ensure the connection is tight.
4. Ensure there are no leaks.

PLEASE MAKE SURE YOU FULLY TEST YOUR PRODUCT BEFORE TILING  
ETC. WE WILL NOT BE RESPONSIBLE FOR ANY COSTS INVOLVED IN  
REMOVAL OF THE TAP IF YOU FIND THERE IS A FAULT.


1.

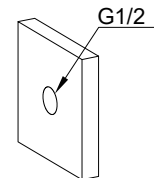

2.

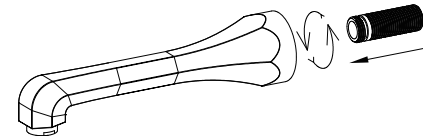

3.

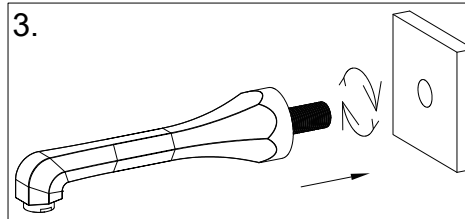

4.

