

# XZJ-80C User manual

\* This product with built-in Lithium battery, We strongly suggest you to charge it 2 hours before the first time of use to have a better experience of using it, charge it after use it. If you do not use it often, charge it monthly ( While charging Power indicator flicker works, Power full/enough indicator will be on)

## I. Panel


1、 Manual/Chase button: select lights, operate programs, edit programs, click it to switch selecting lights or operating programs indicator on, while operating programs indicators flash slowly. press it 3 seconds to editing programs mode and indicators flash fast.



- 2、 Page button: to turn page.
- 3、 Delete/Music: delect programs or music control button.
- 4、 ◀ button, back forward to the previous program. ▶ button, forward to next step. If the present step is the last step(will be end with one dot), press this button to save and enter to next step.
- 5、 Ch1~Ch8: channel fader. 1~5: button, to choose programs or select lights.
- 6、 Speed fader: program operating time. Fade fader: dimming time.

## II. Select light manually


- 1、 Press Manual to select lights and indicator on.
- 2、 Press 1-5 and Page to select lights. (address).
- 3、 CH1/8 channel value.

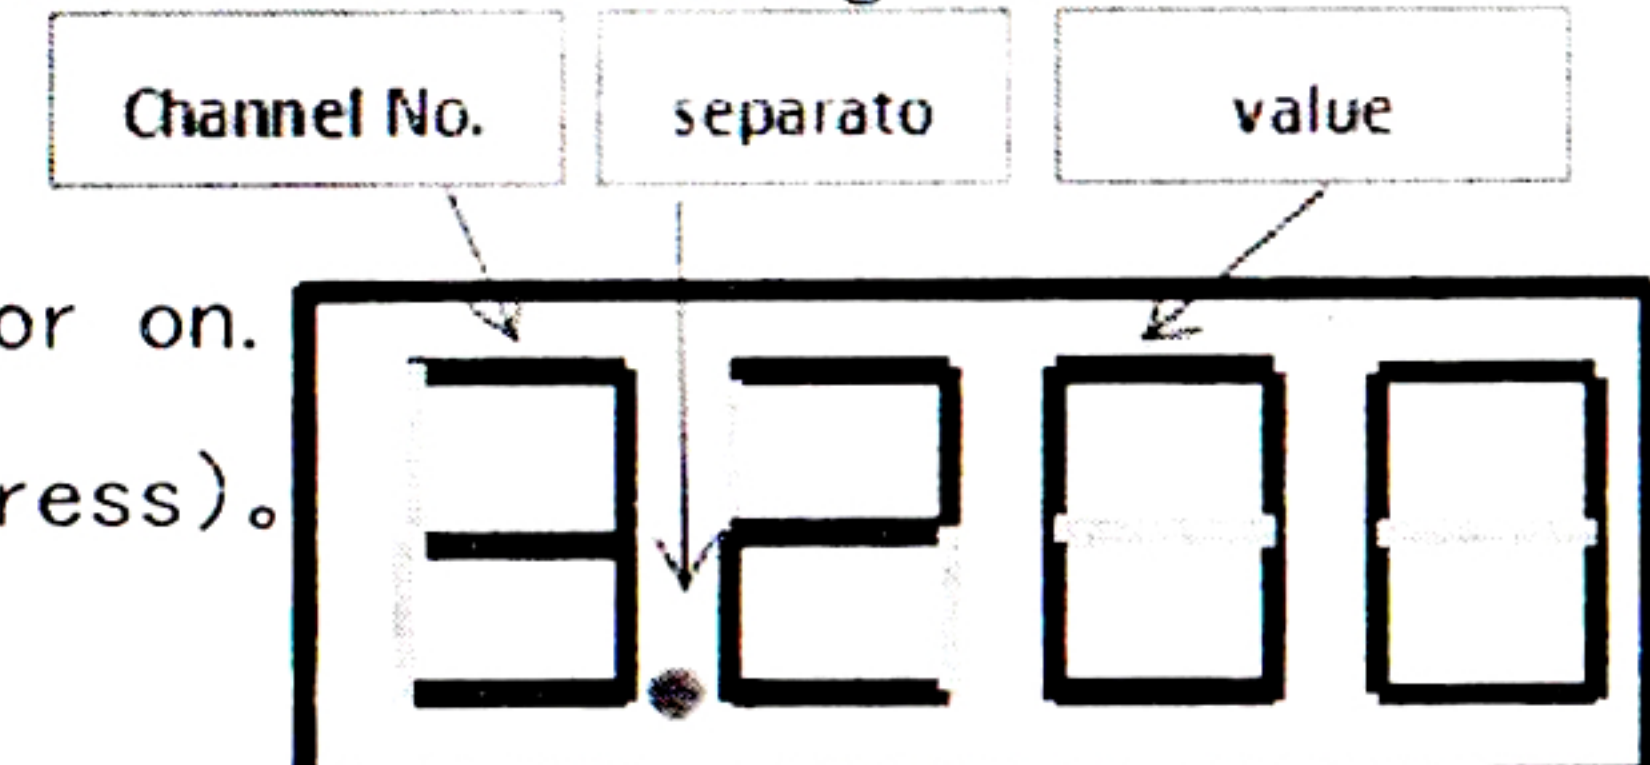

Example 1: when press1, Page A/B button off, it is CH1-CH8,  
If press Page A/B button, indicator on, will be CH9-CH16 relevantly.

## III. Edit program


1、 Press Chase button 3 seconds, indicator flash fast, digital display shows up “——” to enter programs editing mode.

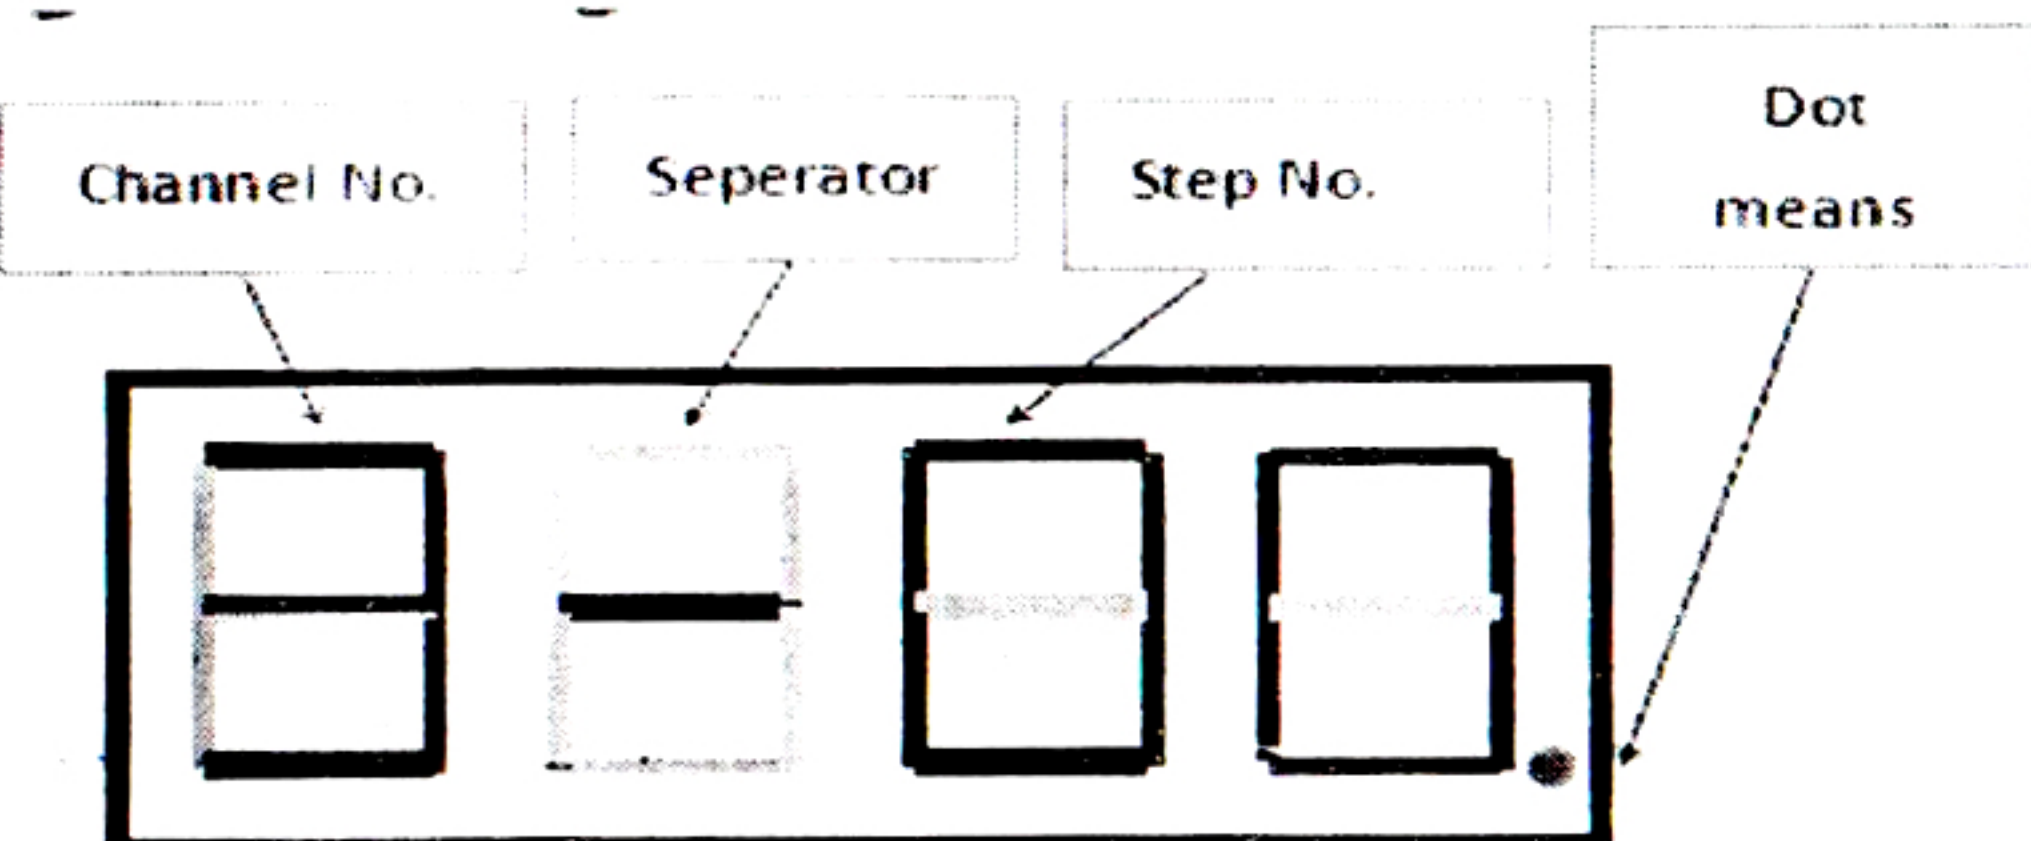

2、 Choose program, use 1-5 to select programs (Max. 99 steps of each program)

Example 1: when select 1, if No. 1 is empty, it will shows “1——”,  
Example 2: when select 2, if No. 2 saved with program, it will show “2-01”.


- 3、 Select program steps, press ◀ and ▶ buttons to select step to edit step program or preview the steps effects; press ▶ button to save the present step and forward to next step automatically, or edit the present effect.
- 4、 Select lights manually. (same as the above).
- 5、 Delete one step of the program, press Delete button, relevant indicator flash, steps deleted; press Delete 3 seconds to delete the present program.
- 6、 Save/exit program edit, press Chase button, indicator from fast flash to slow flash(Play program).

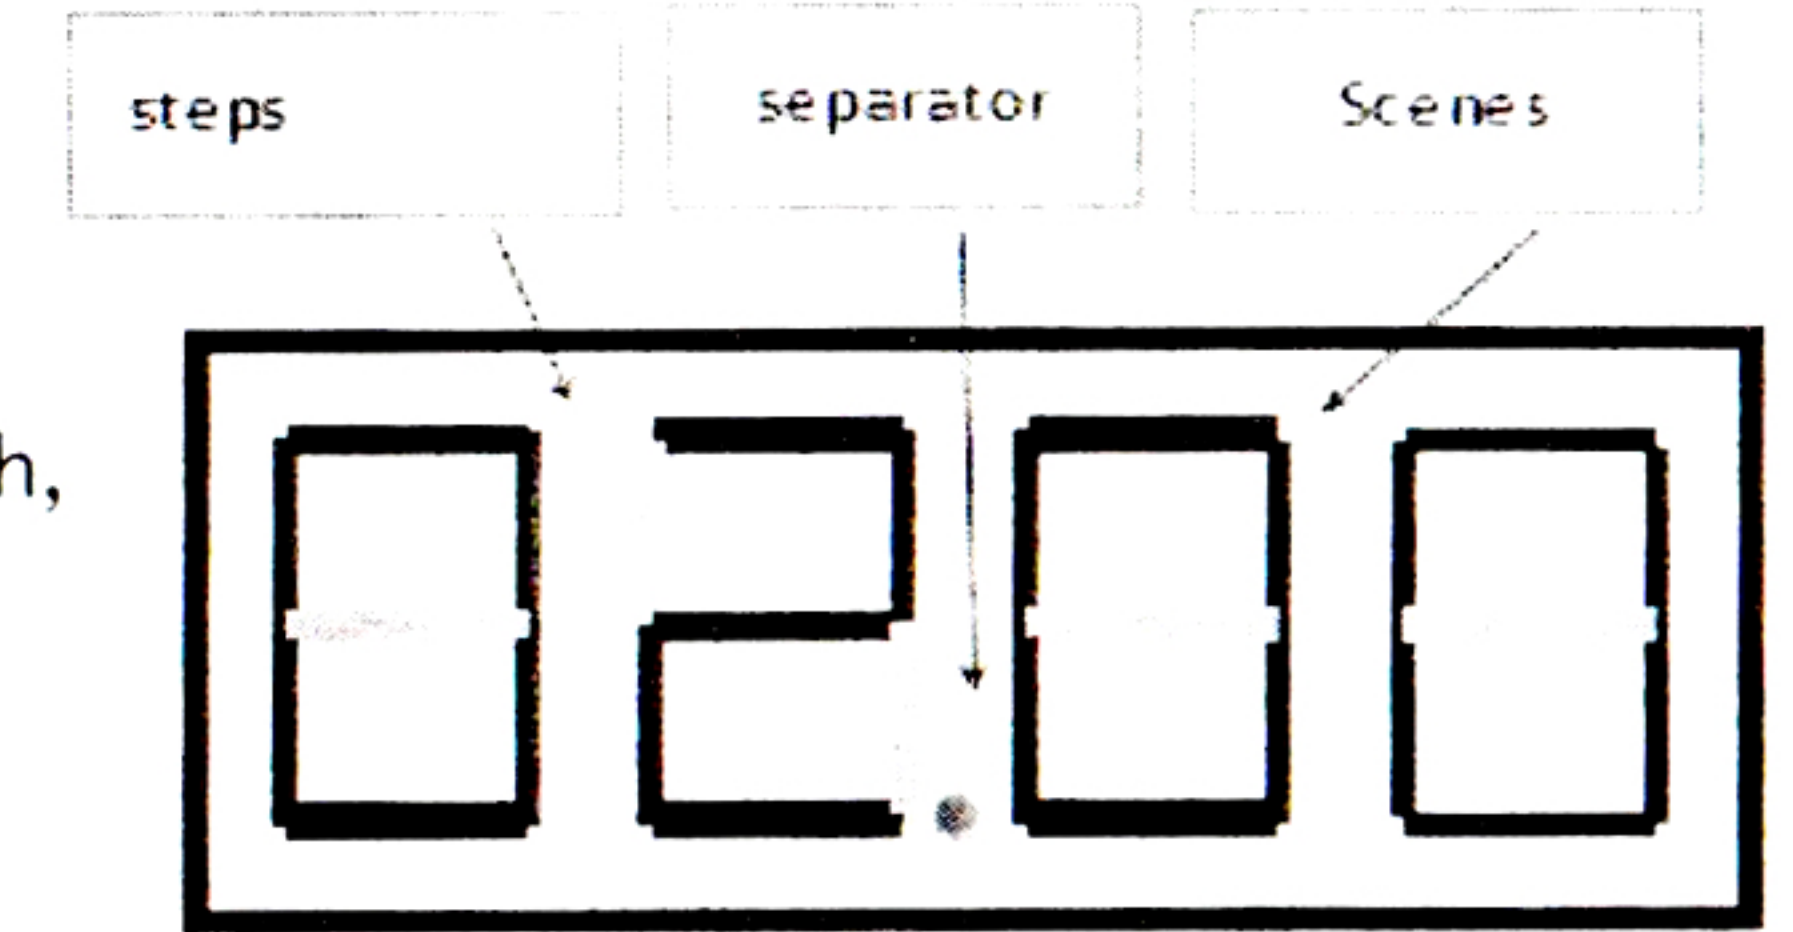

## IV. Play program

- 1、 Press Chase button, indicator slow flash, display shows “——” to playing mode.
- 2、 Use 1-5 to select the program.
- 3、 Playing time adjustment, use Speed fader to adjust, value increase time decline.
- 4、 Cross/fading adjustment use Fade to adjust, value increase fading time decline.
- 5、 Program switch/exit, use 1-5 to select different programs, if saved with programs, relevant indicators on, no programs, indicators off. Press again to pause playing and indicator off.

## V. Wireless introduction (wireless version only)

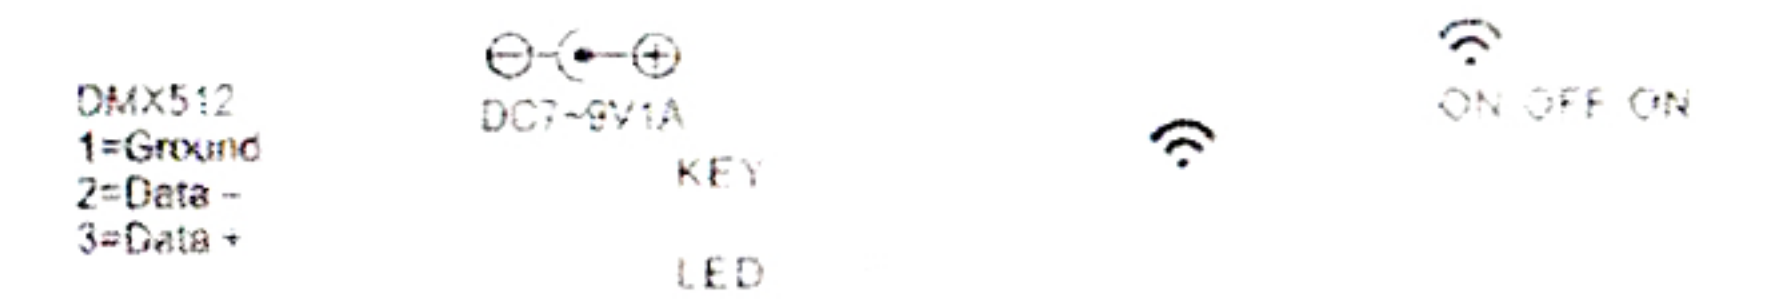

- 1、 Star this device and on the switch ON
- 2、 Press KEY button to adjust, 7 different colors for 7 code. The receiver and the controller match the same color, these two devices with be connected.
- 3、 LED indicator instruction.

Protocol	Color statue	Description
Colors protocol	Red, green, blue, yellow, cyan, purple and white	7 groups of wireless
	Red flash	Sending DMX signal
	Green flash	Receiving DMX signal

- 4、 instruction
  - 1) press display button to sub-menu to set ID,
  - 2) press ID setting again, add one more value of each press
- 3) ID code and corresponding LED colors:
  - 1: RED—red; 2: GREEN—green; 3: RED+GREED—yellow; 4: BLUE—blue;
  - 5: RED+BLUE—purple; 6: GREED+BLUE—cyan; 7: RED+GREED+BLUE—white