

General Spares List



Stephill Generators Ltd
Wallis Close, Park Farm South
Wellingborough,
Northamptonshire
NN8 6AG, United Kingdom
Tel: +44 (0) 1933 677911

www.stephill-generators.co.uk

parts@stephill.co.uk



SSD6000EC	
Engine	Yanmar L100
Alternator	NSM M100 SG
Prime Power (PRP)	6.0 kVA / 4.8 kW
Fuel tank capacity	24.0 Litres
Oil Type	15W-40

Description	Part No.	Qty
Fuel Tank Cap	022-1012	1
SSD6000 Fuel Tank	022-0579	1
SSD6000 Silencer	022-0566	1
SSD6000 Tail Pipe	022-0567	1
SSD6000 Manifold Pipe	022-0565	1
SSD6000 Down Pipe	022-0569	1
50mm Fuel Tank Gasket	022-1003	1
Fuel Filter Inline	048-0004	1
Air Filter	029-0007	1
Oil Filter	029-0032	1
Low Fuel Switch	022-1015	1
Coverstay	022-1002	1
Facet Fuel Lift Pump	022-1037	1
Alternator NSM M100 SG	028-0036	1
Alternator Mounts	027-0014	2
Engine Mounts	027-0013	2
Gas Strut	022-1055	1
Engine Yanmar L100	029-0022	1
Charge Regulator	029-0041	1
Capacitor 35µf	037-0019	1
Diode	028-0026	1
Fan (Alternator - Rotor)	028-0013	1
Wheel	027-0022	2
Wheel Cap	027-0023	2
Flush Pull Handle (Roof)	022-1033	1
Fan Adaptor	022-0596	1
Fan Cowl	022-0614	1
Fan	022-1035	1
Fan Locking Ring	022-1036	1

Description	Part No.	Qty
Control Panel 115V Tin 12		
Reset Button 16A	036-0049	2
Reset Button 30A	036-0052	1
Reset Button 20A	036-0050	1
IP23 Cover -Resets	036-0056	3
40A Double Pole MCB	036-0018	1
Socket-115V 32A	044-0003	1
Socket-115V 16A	044-0001	2
MCB Cover (4 module)	036-0039	1
Hours Run Meter (115V)	055-0006	1
Battery 12N24-3	054-0009	1
Relay-Spin 12V DC	056-0001	3
Battery Warning Lamp	045-0012	1
Low fuel Warning Lamp	045-0013	1
Low Oil Warning Lamp	045-0016	1
High Engine Temperature Warning Lamp	045-0014	1
Key Switch (Lucas)	045-0001	1
12V Bulb	045-0017	4
Toggle Latch Strike	022-1017	2
Toggle Latch	022-1018	2
Temperature Switch	022-1004	1
Temperature Switch Plate	020-0128	1
Engine Wiring Loom	039-0015	1
Handle - New style (as shown)	022-0704	1
Handle Left - Old style		
Handle Left - Old style	022-0642	1
Handle Right - Old style	022-0643	1
Trolley Foot - Old style	022-0599	2
Trolley Foot Brace	022-0666	1

* All canopy metalwork parts can be identified using the exploded view found in the SSD6000 handbook available from:

www.stephill-generators.co.uk

For enquires of other parts not shown contact:

parts@stephill.co.uk

Tel: +44 (0) 1933 677911