





HOW TO VERIFY THERMOCOUPLE

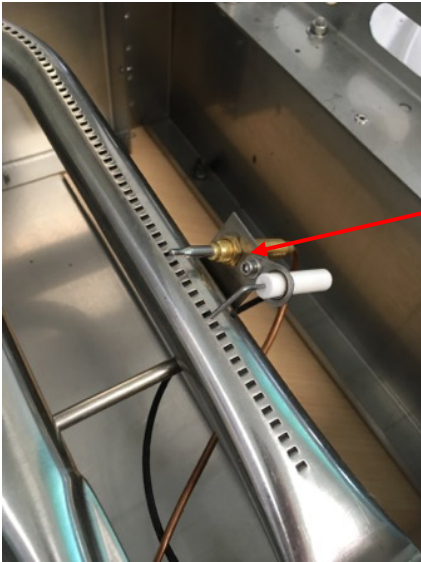

1- Brush and clean the thermocouple on burner

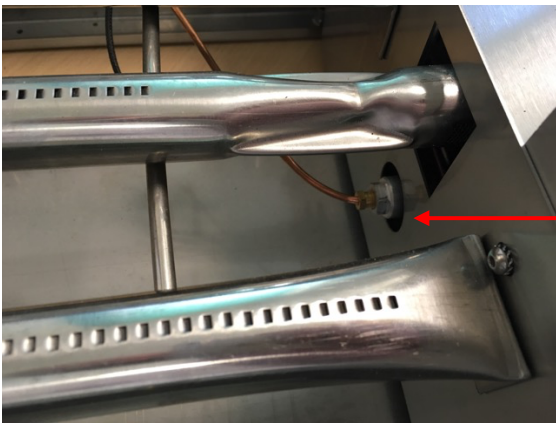

2- check that the screw is correctly tightened

3- try to start burner, when the flame is alight keep the knob push 30seconds. If there is still a flame everything is OK. If flame goes out change the Valve & thermocouple.