



# Suction Diffuser BAA/ARRA/PSA

302-062

## Installation, Operation & Maintenance Manual

SUPERSEDES: December 1, 2010


EFFECTIVE: May 1, 2011

Plant ID No. 001-3994

### Series PSD, PSDG

#### Receiving, Handling and Inspection

1. Unpack and inspect the suction diffuser for damage which may have occurred during shipping. Any damage should be reported to the carrier immediately.
2. Remove the suction diffuser flange covers and inspect for any foreign matter that could be washed downstream when the suction diffuser is put into service.
3. Carefully check the pressure and temperature ratings on the suction diffuser body or nameplate to be sure that they are correct for the intended application. Store the suction diffuser in a dry, clean area until it is installed.

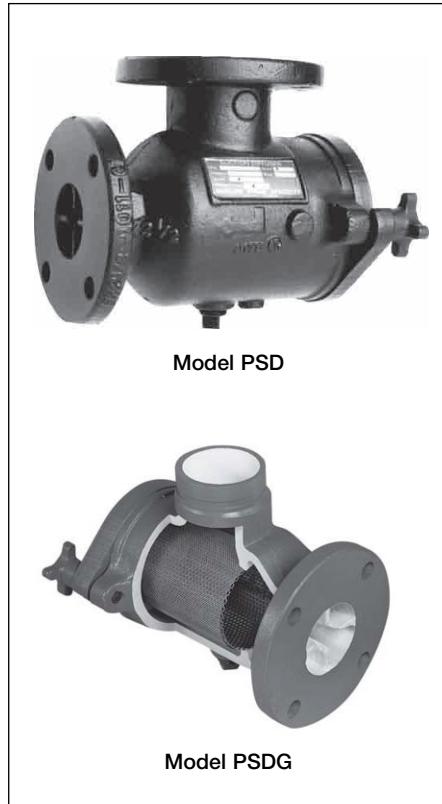

#### Recommended Mounting Position

The upstream side of the suction diffuser may be placed vertically or horizontally. Positioning bosses for a pipe support are located on 3 sides of the suction diffuser body. See table for pipe support inside diameters to fit each size of suction diffuser.

#### Installation


1. Two dimensions are used to designate the size of suction diffusers. The first is the inlet size. The second is the outlet size. Example: 3" x 2" suction diffuser has a 3" inlet and a 2" outlet flange.
2. Place the suction diffuser so that the head of the flow arrow points to the suction flange (inlet) of the pump. Full-face gaskets must be used on flat flanges. Pump and suction diffuser flanges should be aligned before final connections are made. Do not draw piping into place by force. Flange bolts should be only finger tight.
3. Suction and discharge piping should be properly supported so that the weight of piping does not rest on pump. To support the suction diffuser, cut a piece of pipe with the correct inside diameter (see table) to the approximate length from the boss to the adjustable foot. Take this measure with the foot adjusted to its shortest position. Place the pipe over the boss and on the foot. Adjust the nut upward until the weight of the suction diffuser is properly supported.
4. Tighten all flange bolts in sequence crossing to opposites. Slowly bring system to working pressure and check for leaks. If pressure gauges are installed, be sure that threaded fittings are properly sealed. If leaks occur, check for piping and flange misalignment. If there is no misalignment, retighten flange bolting.

#### Start Up Service


After 30 days of operation, the temporary mesh sleeve around the perforated screen should be removed.

#### Cleaning & Servicing


We recommend that pressure gauges be installed on the suction diffuser inlet and outlet or the suction diffuser inlet and suction side of the pump to indicate when cleaning is required. Record the pressure drop when the suction diffuser is clean. When the indicated pressure drop doubles, the suction diffuser should be cleaned.

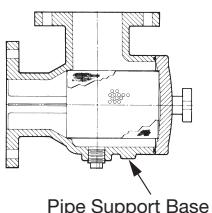

1. Shut down the pump and close the upstream and downstream isolation valves.
2. Remove the NPT plug on the body of the suction diffuser and allow to drain.
3. Loosen knobs (or nuts) and remove cover. Do not use sharp objects to pry cover from body or the O-ring seal may be damaged.
4. Remove and clean perforated screen. The temporary mesh sleeve should be removed and thrown away after the 30 day start-up period. Inspect the perforated screen for damage and replace if necessary.
5. Before reassembling the suction diffuser, inspect the O-ring seal for cuts or other damage and replace if necessary.
6. When reassembling, be sure that the O-ring is seated against the cover and that the screen is seated snugly in the recess of the cover. Reinstall cover and tighten cover knobs (or nuts) in sequence crossing to opposites.
7. Open upstream isolation valve slowly to bring the system back up to working pressure. If there are no leaks, open the downstream isolation valve and restart the system. If leakage occurs, the cover should be checked for proper seating. Retighten knobs (or nuts).

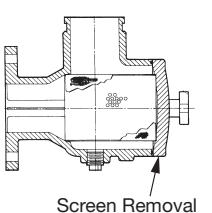

**Note:** For a "quick clean", a blow down valve may be substituted for the NPT plug. Opening this valve with the system running will flush out most of the accumulated sediment from the suction diffuser. We do not recommend this procedure for the first service after start-up. This procedure should be used only if it is not possible to carry out scheduled maintenance on the suction diffuser described in steps 1-7.

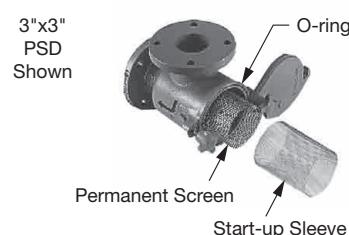


**Table of Screen Removal Allowances & Pipe Support Inside Diameters**

SIZE (Inlet x Outlet)	2" x 1 <sup>1</sup> / <sub>4</sub> "	2 <sup>1</sup> / <sub>2</sub> " x 2"	3" x 2"	4" x 3"	5" x 4"	6" x 4"	8" x 6"	8" x 8"	10" x 8"	10" x 10"	12" x 8"	12" x 10"	12" x 12"
Screen Removal	8 <sup>13</sup> / <sub>16</sub>	9 <sup>1</sup> / <sub>8</sub>	9 <sup>5</sup> / <sub>8</sub>	11 <sup>1</sup> / <sub>2</sub>	14 <sup>7</sup> / <sub>8</sub>	16 <sup>9</sup> / <sub>16</sub>	16 <sup>7</sup> / <sub>8</sub>	22 <sup>7</sup> / <sub>8</sub>	22 <sup>7</sup> / <sub>8</sub>	30 <sup>1</sup> / <sub>4</sub>	22 <sup>7</sup> / <sub>8</sub>	33	28 <sup>3</sup> / <sub>4</sub>
Pipe Support ID													
PSD - Class 125	0.824	1.049	1.049	1.380	1.380	1.380	1.380	1.380	1.380	2.067	1.380	2.067	2.067
PSD - Class 300	0.824	1.380	1.380	1.380	-	1.380	1.380	1.380	1.380	2.067	-	2.067	-
PSDG	0.824	1.380	1.380	1.380	-	1.380	1.380	1.380	1.380	1.380	-	1.380	-

Consult factory for other sizes and dimensions.

#### **PRESSURE DROP CHART - SUCTION DIFFUSER**

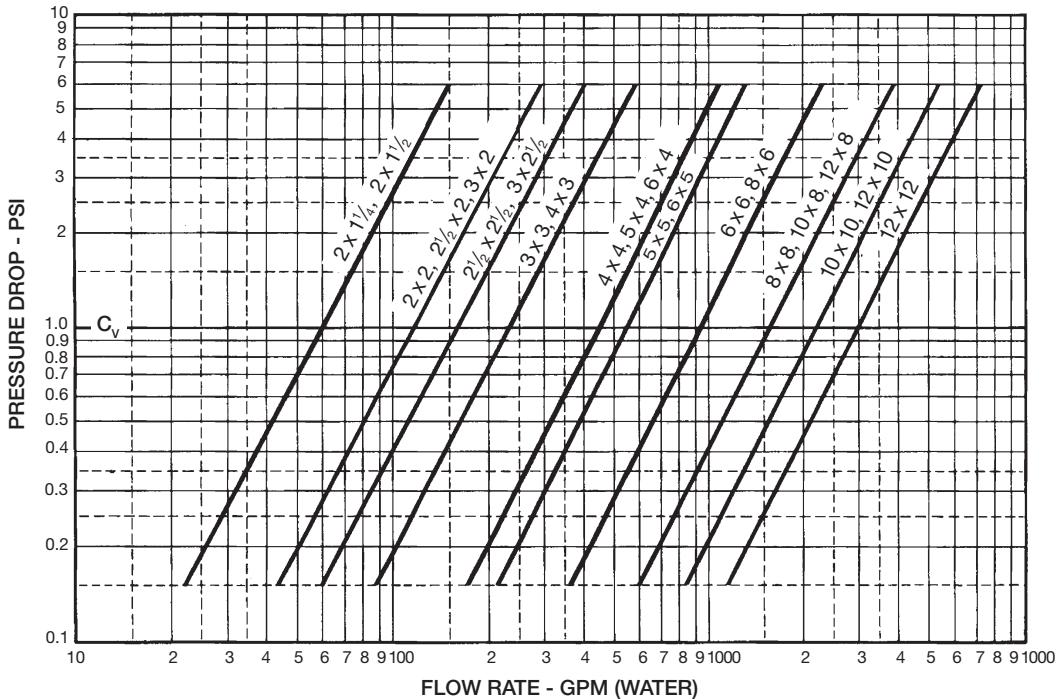

#### **CALIFORNIA PROPOSITION 65 WARNING**

**WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. (California law requires this warning to be given to customers in the State of California.)

## **LIMITED WARRANTY STATEMENT**

Taco, Inc. will repair or replace without charge (at the company's option) any product or part which is proven defective under normal use within one (1) year from the date of start-up or one (1) year and six (6) months from date of shipment (whichever occurs first).

In order to obtain service under this warranty, it is the responsibility of the purchaser to promptly notify the local Taco stocking distributor or Taco in writing and promptly deliver the subject product or part, delivery prepaid, to the stocking distributor. For assistance on warranty returns, the purchaser may either contact the local Taco stocking distributor or Taco. If the subject product or part contains no defect as covered in this warranty, the purchaser will be billed for parts and labor charges in effect at time of factory examination and repair.

Any Taco product or part not installed or operated in conformity with Taco instructions or which

has been subject to misuse, misapplication, the addition of petroleum-based fluids or certain chemical additives to the systems, or other abuse, will not be covered by this warranty.

If in doubt as to whether a particular substance is suitable for use with a Taco product or part, or for any application restrictions, consult the applicable Taco instruction sheets or contact Taco at [401-942-8000].

Taco reserves the right to provide replacement products and parts which are substantially similar in design and functionally equivalent to the defective product or part. Taco reserves the right to make changes in details of design, construction, or arrangement of materials of its products without notification.

**TACO OFFERS THIS WARRANTY IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY WARRANTY IMPLIED BY LAW INCLUDING WARRANTIES OF MERCHANTABILITY OR**

**FITNESS IS IN EFFECT ONLY FOR THE DURATION OF THE EXPRESS WARRANTY SET FORTH IN THE FIRST PARAGRAPH ABOVE.**

**THE ABOVE WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR STATUTORY, OR ANY OTHER WARRANTY OBLIGATION ON THE PART OF TACO.**

**TACO WILL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF ITS PRODUCTS OR ANY INCIDENTAL COSTS OF REMOVING OR REPLACING DEFECTIVE PRODUCTS.**

This warranty gives the purchaser specific rights, and the purchaser may have other rights which vary from state to state. Some states do not allow limitations on how long an implied warranty lasts or on the exclusion of incidental or consequential damages, so these limitations or exclusions may not apply to you.

## **Do it Once. Do it Right.®**

TACO, INC., 1160 Cranston Street, Cranston, RI 02920 Telephone: (401) 942-8000 FAX: (401) 942-2360.  
TACO (Canada), Ltd., 8450 Lawson Road, Unit #3, Milton, Ontario L9T 0J8. Telephone: 905/564-9422. FAX: 905/564-9436.

Visit our web site at: <http://www.taco-hvac.com>

Printed in USA  
Copyright 2011  
TACO, Inc.