

Installation Notice

- 1. Check if all components are included;
- 2. Suit for bathtub thickness 5-15mm;
- 3. Bathtub surface is out of flatness or made of stainless steel, it's necessary to use glass cement to seal;
- 4. After installation, full fill the bathtub with water, leave it alone after 8 hours, check if any leakage;
- 5. Suitable for the use of the environment : Temperature 60 $^{\circ}$ C to -5 $^{\circ}$ C;

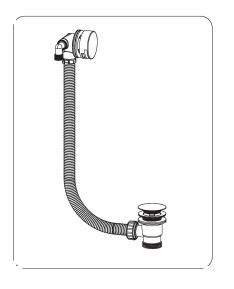



Contour Dimension

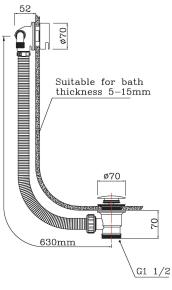




PARTS INCLUDED

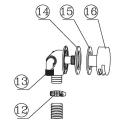

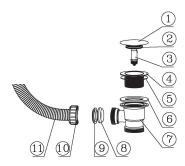


1. Cover	Х	1
2. Seal washer	X	1
3. Click clack mechanism	X	1
4. Waste flange	X	1
5. Silicone washer	X	1
6. Rubber washer	X	1
7. Waste body	X	1
8. Rubber seal washer	X	1
9. Plastic ring	X	1
10. Plastic screw	X	1
11. PVC hose	X	1
12. Clamp	X	1
13. Overflow elbow	X	1
14. Rubber washer	X	1
15. Foam Gasket	X	1
16 Overflow cover	x	1


Installation Steps

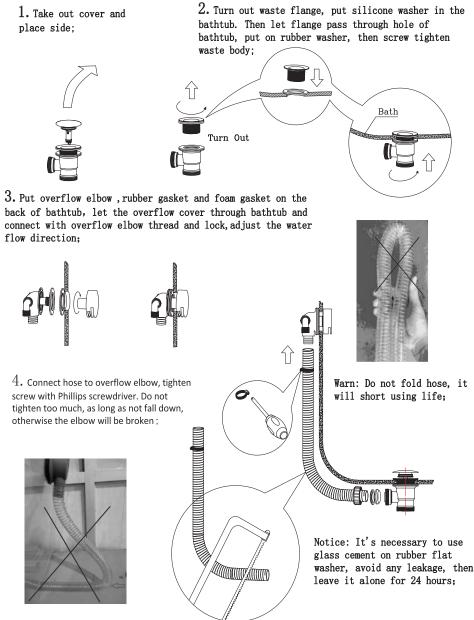

Tips:

- 1. After completing the installation, ensure hose not folded and twisted, otherwise it will short using life;
- 2, Cut hose according to the actual required length, do not let hose distort;

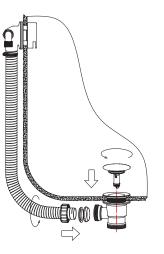

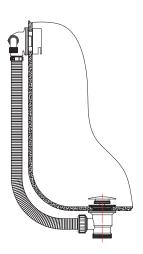

5. Tighten screw plastic nut to the waste body, and put back cover;

 Ensure all accessories are installed in place;

Once assembled, filled the bathtub with water, check for leaks 8 hours.

