

# CU352 Backup Battery

## Installation and operating Instructions

1. Make sure that the back of the CU352 Controller is wiped clean of any dirt or residue that may interfere with the adhesive of the mounting fastener tape used to mount the backup battery.
2. Connect the backup battery wire leads to the backup battery screw terminal connector located in the lower left back corner of the CU352 (see Fig. 1). The red wire connects to the positive terminal (+ or 12V). The black wire connects to the negative terminal (- or 0V).
3. Orient the backup battery with the mounting fastener tape facing the CU352 and the wire leads coming out of its lower right corner.

**Note:** Do not restrict the ability to remove the back cover of the CU352 by covering the screw hole in the center of the cover with the backup battery (see Fig. 1).

**Note:** Do not restrict access to the CU352 Service Connection Port located to the left of the backup battery connector by covering it with the backup battery (see Fig. 1).

4. Peel off the backing of the mounting fastener tape and firmly press the backup battery with the adhesive side against the back lower left corner of the CU352 (see Fig. 2).

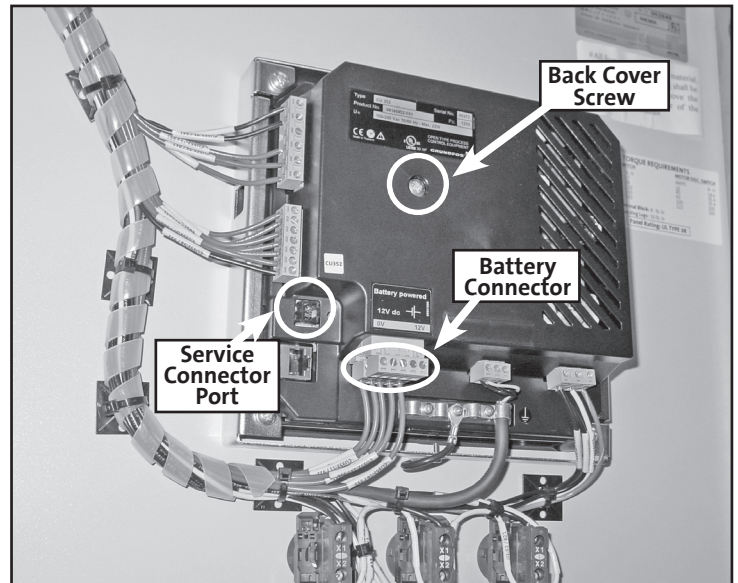


Fig. 1

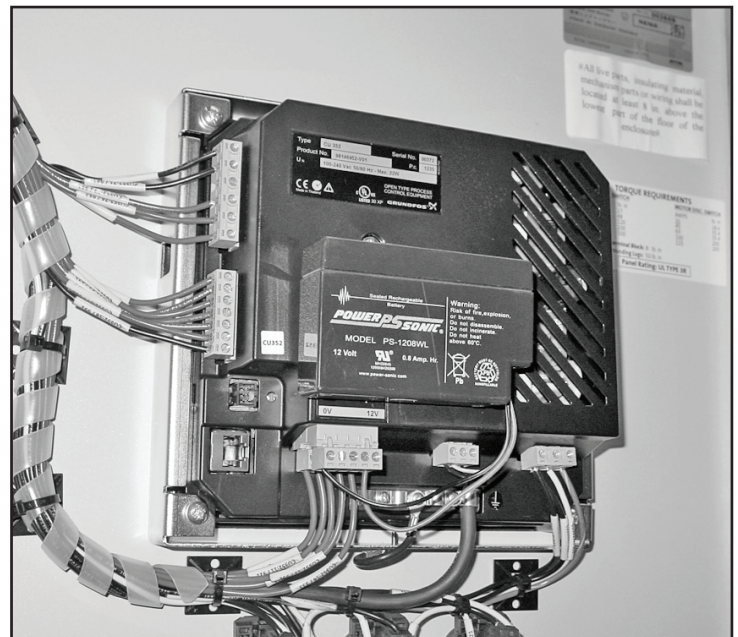


Fig. 2