

BISSELL®



ICONPET™ TURBO CORDLESS VACUUM MODEL 3175F



**Go online for a comprehensive walkthrough
of your new purchase!**

This guide has everything you need to get ready for first use, including setting up, using and maintaining your machine, but online you'll find additional resources like tips and troubleshooting, videos, product registration, parts, and more. Go to **global.BISSELL.com**.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Use only as described in this user guide.
- Use only manufacturer's recommended attachments.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorised service center.
- Do not put any object into openings.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as petroleum, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use appliance in an enclosed space filled with vapours given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapours.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without filters in place.
- Do not use on wet surfaces. Do not expose to rain. Store indoors.
- If the charger supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
- The battery is to be disposed of safely.
- This appliance contains batteries that are only replaceable by skilled persons.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

- Unplug charger from electrical socket when not in use, before cleaning, maintaining or servicing the appliance, and if your appliance has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- The battery must be removed from the appliance before it is scrapped.
- Do not use with damaged cord or charger. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- The appliance must be disconnected from the supply mains when removing the battery.
- This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- Battery pack and charger base output terminals are not to be short-circuited.
- Keep batteries out of reach of children.
- Dispose of used batteries promptly.
- Turn OFF all controls before unplugging.
- Do not pull or carry charger by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners.
- Keep charger cord away from heated surfaces.
- To unplug, grasp the charger plug, not the cord.
- Do not handle charger plug or appliance with wet hands.
- Do not charge the appliance outdoors.
- Do not recharge, disassemble, heat above 60°C, or incinerate.
- Never put batteries in mouth. If swallowed, contact your physician or local poison control.
- Prevent unintentional starting. Ensure the switch is in the OFF-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energising appliance that have the switch on invites accidents.
- Do not use appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
- Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
- Keep the temperature range of between 4-30°C when charging battery, storing appliance or during use.
- Do not use the appliance during charging.
- Do not immerse in water for cleaning.
- Use only with charger provided by manufacturer SIL, Model SSC-32010AU.

SAVE THESE INSTRUCTIONS

ORIGINAL INSTRUCTIONS. FOR OPERATION ON A 220-240 VOLT A.C. 50-60 HZ POWER SUPPLY ONLY. THIS MODEL IS FOR HOUSEHOLD USE ONLY.

SYMBOL	EXPLANATION
	Caution.
	Read operator's manual.
	Risk of fire.
	Risk of electric shock.
	For indoor use only.
	Do not expose to rain.

SYMBOL	EXPLANATION
	Store indoors.
	Do not use on wet surfaces.
	Protection against moving parts.
	Risk of automatic start-up.
	Always turn unit OFF prior to charging.
	Detachable power supply unit.

SYMBOL	EXPLANATION
	Class II equipment.
	Allow parts to dry.
	This symbol means to recycle. Do not mix batteries with general household waste. Recycle used batteries at your nearest recycling center.
	Recycle.

SYMBOL	EXPLANATION
	This symbol on the product and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points. Please contact your local authority for further details of your nearest designated collection point.






 
 

 
 

 
We're so happy you chose ICONPET™ Turbo Cordless vacuum. We put this guide together to help you set up, use and maintain your cordless vacuum. We've also included some tips we think will come in handy when you first start using your cordless vacuum, so let's get started!

For a comprehensive walkthrough of your product, go to [global.BISSELL.com](https://www.global.BISSELL.com).

What's in the Box?	4	Using the Parking Brake	7
Getting to Know Your Vacuum	4	Attaching Tools for Hand Vac Use . . .	8
Assembly	5	Emptying the Dirt Tank	9
Installing the Wall Storage & Charging Station	5	Removing the Brush Roll	9
Charging the Battery	6	Cleaning & Replacing the Filters . . .	10
Using the Vacuum	7	Troubleshooting	11

What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the underside of the insert inside the carton.


				
Hand Vacuum Assembly	Extension Wand	Motorised Tangle-Free Foot	Battery Charger	Wall Storage & Charging Station
				
Lighted Crevice Tool & Dusting Brush	LED Motorised TurboBrush® Tool	Pet Dusting Brush	Extended Reach Hose	Extra Scented Filter

Getting to Know Your Vacuum

For additional support videos and information about your vacuum, visit global.BISSELL.com.


Product View

1. Hand Vacuum Assembly
2. Cleaning Mode Button
3. Power Button
4. Tank Release Button
5. Dirt Tank
6. Hand Vacuum Release Button
7. Extension Wand
8. Foot Release Button
9. Parking Brake
10. Tangle-Free Brush Roll
11. Motorised Floor Cleaning Foot
12. LED Headlights
13. Charging Port
14. Post-Motor Filter
15. Foot Hose

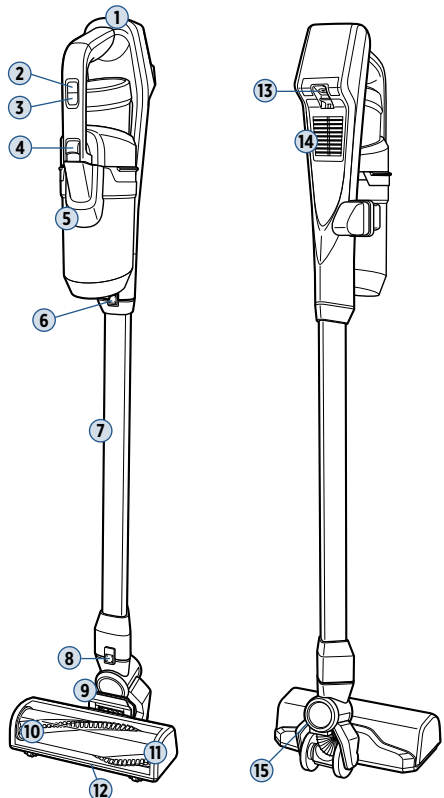

Assembly


▶ Go to global.BISSELL.com for assembly videos.

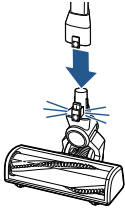

1. Connect the extension wand to motorised floor cleaning foot. The two will “click” into place.



2. Connect the hand vacuum to the extension wand. The two will “click” into place.

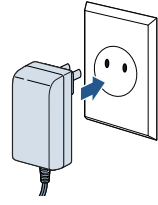


3. Charge your stick vacuum before first use. Refer to page 6 for instructions.

Installing the Wall Storage & Charging Station


▶ Go to global.BISSELL.com for more tips and video instructions on installing the Wall Storage & Charging Station.




Install the Wall Storage & Charging Station near a wall outlet and at least 1.2 meters from the ground.

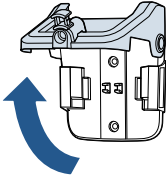


1. Lift the cover of the mount and position it using the included bubble level.

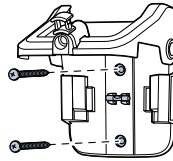

 
2. Insert two screws to secure to the wall.




3. Insert the tool holders into the side of the Wall Storage & Charging Station.

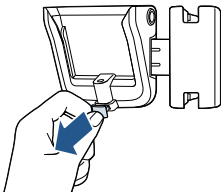

4. Pull the power cable clip away from the mount.

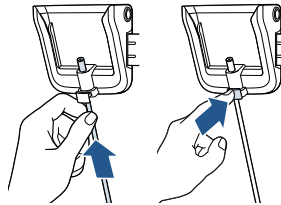

5. Insert the charging cable and secure it with the clip.

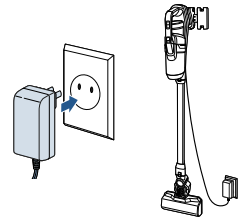

6. Plug the power adapter into the wall. Place the machine on the mount. Refer to page 6 for charging instructions.



Charging the Battery

Go to global.BISSELL.com for additional how-to videos.



Before first use, make sure to fully charge your stick vacuum for 4 hours to get a full charge. You can plug the charger directly into the hand vacuum or into the Wall Storage & Charging Station.

Charging with the Hand Vacuum

<p>1. Plug the battery charger into the wall.</p>	<p>2. Plug the charger into the charging port on the back of the hand vacuum.</p>	<p>3. Let the hand vacuum charge for 4 hours or until all three sections of the battery charge icon are illuminated.</p>

Charging with the Wall Storage & Charging Station

<p>1. Follow instructions on page 5 for installing the Wall Storage & Charging Station. Once installed, hang the machine onto the mount.</p>	<p>2. Let the vacuum charge for 4 hours or until all three sections of the battery charge icon are illuminated.</p>

Using the Vacuum

🔍 Looking for more guidance? Go to global.BISSELL.com for tips and 24-7 support while cleaning.



ICONpet™ Turbo can be used as a stick vacuum, hand vacuum or for extended reach with hand vacuum + wand.

<p>1. Press the power button to begin cleaning and to turn OFF the machine when finished.</p>	<p>2. Press the cleaning mode button to toggle between the three settings.</p> <ul style="list-style-type: none">•• High For cleaning carpet and area rugs. This mode balances power and run time. This is the default mode when the vacuum is turned ON. Run time: Up to 20 minutes.••• Turbo For maximum suction. This mode is active for 5 minutes and then will default back to high power mode. Run time: Up to 7 minutes.• Standard For hard floors. Offers the quietest sound. Run time: Up to 50 minutes. <p>Note: If your vacuum is difficult to push on carpet or is shutting OFF abruptly, try reducing the power setting.</p>

Note: All batteries differ when it comes to run time and power production. The cleaning mode you choose and the surfaces you vacuum (long, thick carpet uses more power than short, low pile carpet) affect run time and power produced. To better preserve run time and overall battery life, use the power mode best suited to your cleaning task and only use TURBO mode when you need an additional boost of suction power.

Using the Parking Brake

▶ Go to global.BISSELL.com for additional how-to videos.



The parking brake helps prevent the wheels from sliding when the machine is leaning against a wall.

<p>1. To lock the wheels, push the brake away from the brush roll.</p>	<p>2. Lean the machine against a wall for temporary storage.</p>	<p>3. To disengage, pull the brake toward the brush roll.</p>

⚠️ WARNING Do not use your vacuum until you are familiar with all instructions and operating procedures.



Attaching Tools for Hand Vac Use

Go to [global.BISSELL.com](https://www.global.BISSELL.com) for tips on above floor cleaning tools.




Clean stairs or furniture easily with the tools provided. Pair your desired tool with the hand vacuum or extension wand.


A line drawing showing the bottom of the hand vacuum being detached from the extension wand. Two blue arrows point to the release button on the wand and the corresponding slot on the vacuum head.	A line drawing showing a tool being inserted into the bottom of the hand vacuum. A blue arrow points from the tool into the vacuum's attachment point.	A line drawing showing the hand vacuum with a tool attached, being used to clean a surface like a chair or stairs. A blue arrow indicates the direction of movement.
<p>1. Press the release button to disconnect the hand vacuum from the extension wand.</p>	<p>2. Attach your chosen tool.</p>	<p>3. Use the tool to clean furniture, stairs or other surfaces in your home.</p>

Emptying the Dirt Tank


More of a video person? Go to global.BISSELL.com for additional how-to videos.

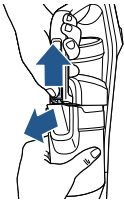


1. Turn OFF your machine. Remove the dirt tank by sliding the latch on the front.

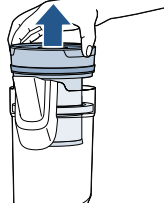


2. Grab the top of the tank and pull up. This will activate a wiping feature to remove debris from the mesh filter screen.

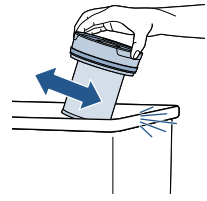


3. Remove the separator from the tank and tap on the side of the trash bin.

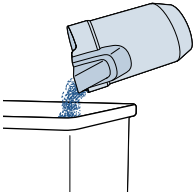

4. Dump dirt from the tank into the trash bin.

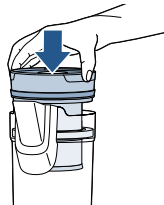


5. Slide the separator back into the tank, ensuring the notch is seated into the tank correctly.

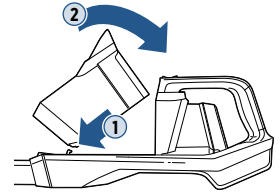


6. Guide the notched out area on the bottom of the tank onto the hook on the hand vacuum. Push into place.

Removing the Brush Roll


Go to global.BISSELL.com for a full list of maintenance and troubleshooting support.

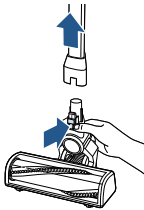

1. Turn the machine OFF and press the foot release button to disconnect the motorised floor cleaning foot from the extension wand.

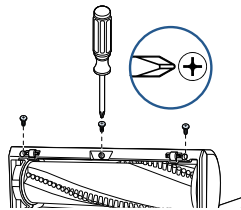

2. Remove the sole plate from the bottom of the foot by unscrewing the seven screws with a Phillips-head screw driver.

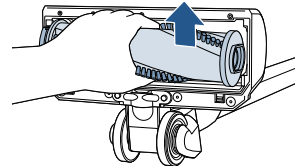

3. Pull the brush roll straight up and out of the chamber to remove. To reinsert, push the brush roll straight down into the chamber with the flat side of the brush roll against the flat side of the chamber wall.

⚠️ WARNING

Before using your vacuum, make sure that the dirt tank is in locked position and that all filters, both pre- and post-motor filters, are in place. DO NOT operate your vacuum without these filters.



Cleaning & Replacing the Filters

➔ Go to global.BISSELL.com for tips on maintaining and replacing your vacuum filters.



Pre-Motor Filters

For best cleaning performance, always clean your pre-motor filter after each use.

<p>1. Turn OFF machine and remove dirt tank from the hand vacuum.</p>	<p>2. Pull filter from the top of the tank. Remove the filter from the filter frame housing. Tap the filter against the side of a trash bin to remove dust and debris.</p>	<p>3. Rinse under warm water and squeeze to remove dirt. Lay out for 24 hours, until completely dry. Replace filter into the frame with the tag side down (touching the frame) before use.</p>

Post-Motor Filter

<p>1. Turn OFF machine and press the latch on the back of the hand vacuum.</p>	<p>2. Remove the post-motor filter from the vacuum.</p>	<p>3. If there's debris on the filter, tap it on a trash bin and rinse under warm water. Let dry for at least 24 hours before putting it back in the vacuum and replacing the filter cover.</p>

⚠️ WARNING

- Do not use your vacuum until you are familiar with all instructions and operating procedures.
- Before using your vacuum, make sure that the dirt tank is in locked position and that all filters, both pre- and post-motor filters, are in place. DO NOT operate your vacuum without these filters.

Troubleshooting

For additional help with your vacuum visit global.BISSELL.com.



This guide has everything you need to get ready for first use, including setting up, using and maintaining your machine, but online you'll find additional resources like tips and troubleshooting, videos, product registration, parts, and more.

Problem	Possible Cause	Remedies
Vacuum won't pick up dirt	Filters are dirty.	Remove and rinse pre-motor filters. Let dry for 24 hours before reinstalling. Remove and dust off post-motor filter.
	There is a clog in the vacuum.	Remove the foot and extension wand from the hand vacuum. Check for clogs in each of these sections. Clear clogs before reassembling.
	Dirt tank is not seated correctly.	Remove the tank and reseal properly.
Dirt is escaping from the vacuum	Dirt tank is full.	Empty the tank.
	Filters are missing or dirty.	Check to see if the pre- and post-motor filters are in place. Clean if necessary.
	There is a clog in the vacuum.	Remove the foot and extension wand from the hand vacuum. Check for clogs in each of these sections. Clear clogs before reassembling.
Vacuum won't charge	Wrong charger is being used.	Use only the charger that comes with the machine.
	Charger is not plugged into the machine properly.	Remove the charger and reinstall into the hand vacuum.

Errors

<p>Cause: Suction motor fault.</p> <p>Remedy: Turn machine OFF. Check and clean filters. Check and clean the machine of clogs. If problem persists, contact Consumer Care.</p>	<p>Cause: Brush roll stall.</p> <p>Remedy: Turn machine OFF. Check and clean the brush roll of any clogs. Brush roll can be removed for thorough cleaning (page 9). Turn machine ON.</p>

Warranty

This warranty gives you specific legal rights, in addition to rights you may have under the *Australian Consumer Law*. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact your local BISSELL® Consumer Care on the details set out below.

It may be necessary to obtain some of your personal information, such as a mailing address, to fulfill terms of this warranty. Any personal data will be handled pursuant to BISSELL's Privacy Policy, which can be found at global.BISSELL.com/privacy-policy.

BISSELL® Two-Year Warranty

Subject to the *conditions identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for two years any defective or malfunctioning part due to manufacturer defect. This warranty applies to product used for personal purposes, and not commercial or rental service. This warranty does not apply to fans or routine maintenance or consumable components such as filters, belts, brush rolls, etc., damage or malfunction caused by negligence, abuse, neglect, unauthorised repair, or any other use not in accordance with the user guide. BISSELL recommends that the original packaging be kept for the duration of the warranty period in case such need arises within the warranty period that the item needs repacking and transportation.

*Conditions of Warranty

Subject to whether such loss is reasonably foreseeable, BISSELL and its in-country distributors are not liable for incidental or consequential damages of any nature associated with the use of this product.

This warranty is in addition to other rights or remedies under law. Nothing in this warranty excludes, limits or modifies any liability of BISSELL which is imposed by law, or limits or modifies any remedy available to the consumer which is granted by law. To make a claim under this warranty contact BISSELL Australia PTY LTD (details below). Contact BISSELL prior to returning any goods. Where agreed, BISSELL will reimburse reasonable postage / handling costs (if any) for returning goods to BISSELL. To claim expenses incurred in making a claim under this warranty please provide BISSELL with a copy of the receipt of the expenses by email or post.

For Australian Consumers Only: Our goods come with guarantees that cannot be excluded under the *Australian Consumer Law*. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Consumer Care

Australia

Telephone: 1300 247 735

Website: www.BISSELL.com.au

New Zealand

Telephone: 0800 247 735

Website: www.BISSELL.co.nz

NOTICE Disconnecting the battery will destroy the appliance and invalidate the warranty.

But wait, there's more!

Join us online for a complete guide to your new product, including troubleshooting, parts and more. **Go to global.BISSELL.com.**



INFO



VIDEOS



PARTS



©2021 BISSELL Inc. All rights reserved.
Part Number 1625471 06/21 Rev A