

 





Pet Stain Eraser PowerBrush First Use Guide & Charging light indication | Support

Charging:


- Upon removing your machine from the box, insert charger
 - For maximum run time, charge machine for 4.5 hours prior to use
 - Note: It could take up to 2 hours for machine to go from 1 to 2 battery lights while charging

	Battery Light Indication	Battery Charge Percentage
	No Battery Lights	Machine is powered off/ Machine is fully charged if plugged in
	One Battery Light Breathing	1%-14% charged
	One Battery Light Solid, One Breathing Battery Light	15%-69% charged
	Two Solid Battery Lights, One Breathing Battery Light	70%-90% charged
	Three Solid Battery Lights	Fully Charged

	Battery Light Indication	Battery Charge Percentage
	One Battery Light Blinking	Battery Below 15% > Plug in to Charge


Formula Tank:

 - Open Formula Tank Cap and fill with Formula to the Formula dot
- Close Formula Tank Cap until it clicks and is securely closed


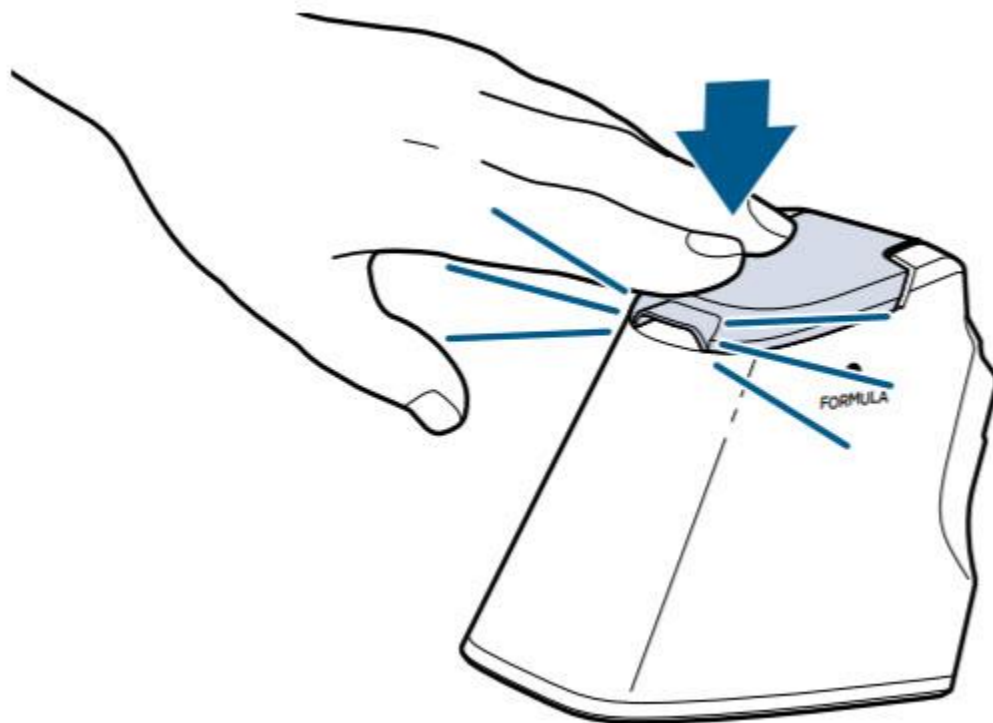


Cleaning:

 
- Turn Machine on
 - Brush Roll will automatically start spinning, to turn Brush Roll off hit the Brush Roll button

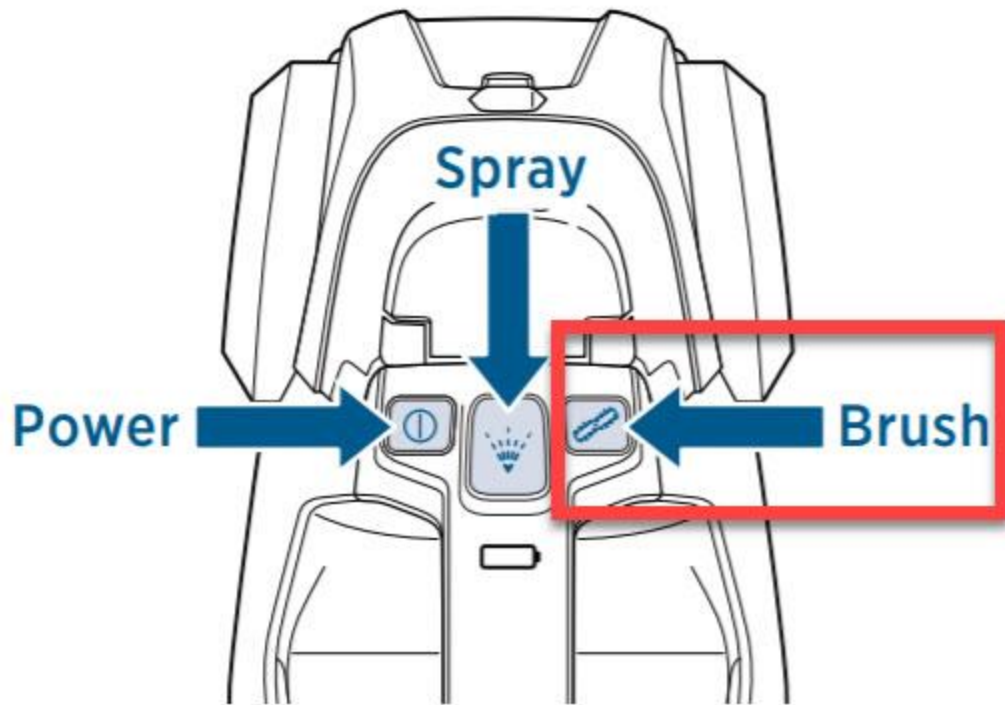


-
- Spray Formula in desired area using the Spray Button

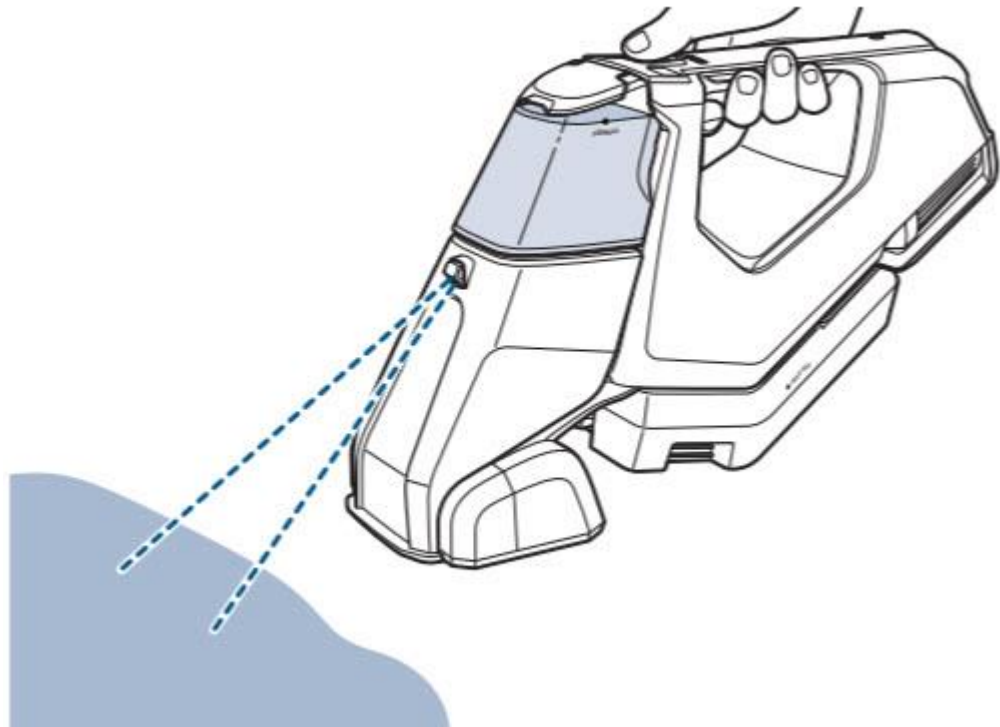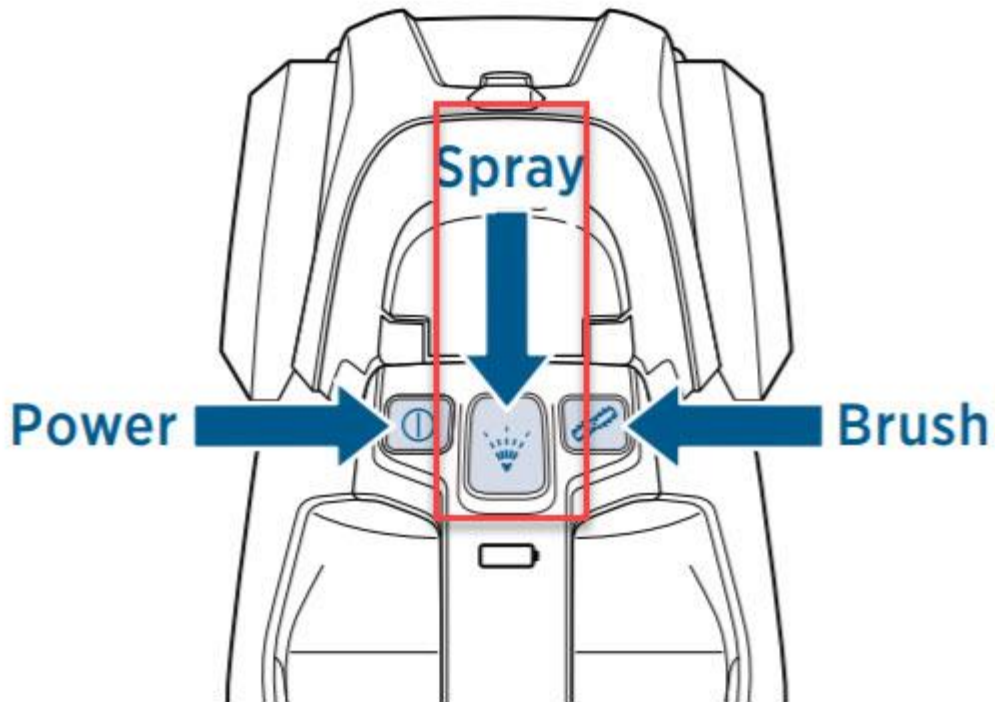

- Scrub the area with the rotating PowerBrush
 - Keep the nose of the machine flat on the surface

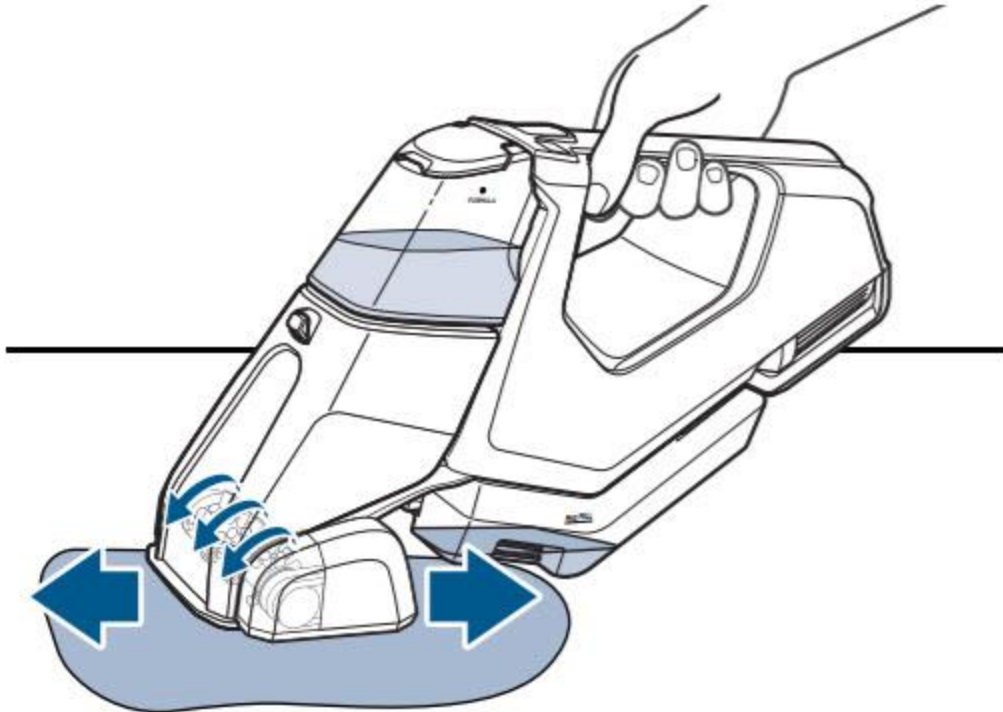

- For best suction, tilt the machine slightly forward and pull backwards while firmly pressing the suction channel to the cleaning area

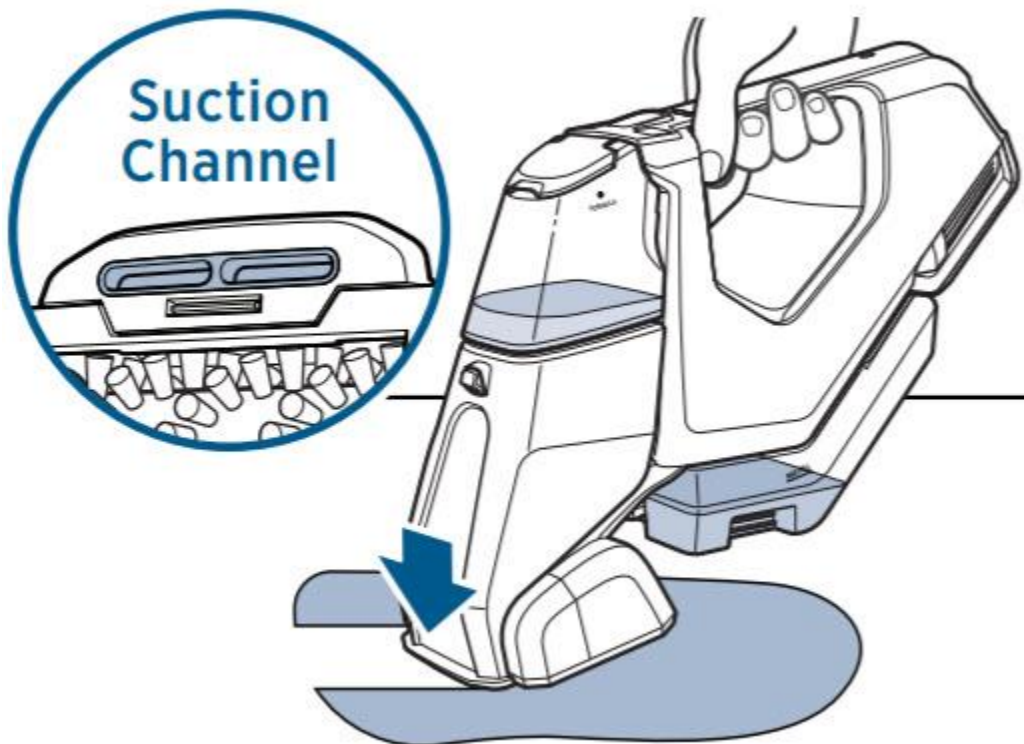

- Make sure to empty the Dirty Tank when it reaches the MAX FULL line
 - For instructions on Emptying the Dirty Water Tank > Go to **After Cleaning Care**

