



ASSEMBLY INSTRUCTION  
MONTERINGSVEJLEDNING  
MONTERINGSANVISNING  
KOKOAMISOHJEET  
INSTRUÇ ES DE MONTAGEM  
INSTRUCCIONES DE MONTAJE



CLASSIC 5 BURNER GAS GRILL 2 "POWER" BURNER INCLUDED  
CLASSIC GASGRILL MED 5 BRÆNDERE MED 2 "SEAR" BRÆNDERE.  
KLASSISK GASSGRILL MED 5 BRENNERS "POWER" BRENNERS INKLUDERT  
CLASSIC 5-POLTTIMEN KAASURILLI 2 TEHOPOLTTINTA SISÄLTYY MUKAAN  
CHURRASQUEIRA A GÁS CLÁSSICA DE 5 QUEIMADORES 2 QUEIMADORES "POWER" INCLUÍDOS  
PARRILLA DE GAS CLÁSICA DE 5 QUEMADORES 2 QUEMADORES "POWER" INCLUIDOS

MODEL / MODELL / MODEL / MODELL / MALLI / MODELO  
720-0888SH

For outdoors use only. / Kun til udendørs brug. / Kun for utendørs bruk. / Vain ulkokäyttöön.  
/ Apenas para uso externo. / Sólo para uso en exteriores.

**NEXGRILL**®

 
 
Part Number:  
19001228A0



2531DQ-0175  
2531-25

## TOOLS NEEDED / NØDVENDIGE VÆRKTØJER / VERKTØY SOM TRENGS / TARVITTAVAT TYÖKALUT / FERRAMENTAS NECESSÁRIAS / HERRAMIENTAS NECESARIAS

---

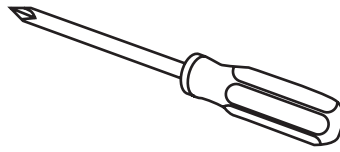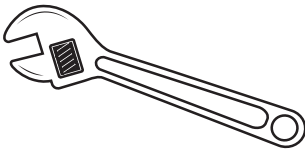

Some parts come with Screws preinstalled.  
Loosen and tighten for final assembly.

 
Nogle dele leveres med forudinstallerede  
skruer. Løsn og spænd for endelig montering.

Noen deler leveres med forhåndsmonterte  
skruer. Løsne og stram for endelig montering.

Joissakin osissa on valmiiksi asennetut ruuvit.  
Löysää ja kiristä ruuvit lopullista kokoonpanoa  
varten.

Algumas peças vêm com parafusos pré-  
instalados. Desaperte e aperte para a  
montagem final.

Algunas piezas vienen con tornillos  
preinstalados. Afloje y apriete para el  
ensamblaje final.



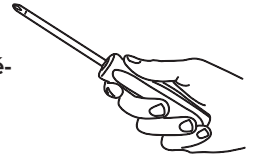


# HARDWARE PACKAGE LIST / LISTE OVER HARDWAREPAKKER / LISTE OVER MASKINVAREPAKKER / LAITTEISTOPAKETTIEN LUETTELO / LISTA DE PACOTES DE HARDWARE / LISTA DE PAQUETES DE HARDWARE

Screw  
Skrue  
Skrú  
Ruuvi  
Parafuso  
Tornillo  
1/4-20 x 1/2"



Screw  
Skrue  
Skrú  
Ruuvi  
Parafuso  
Tornillo  
5/32 - 32 x 2/5"

   Flat Washer  
Flad skive  
Flat skive  
Litteä aluslevy  
Arruela plana  
Arandela plana  
1/4"

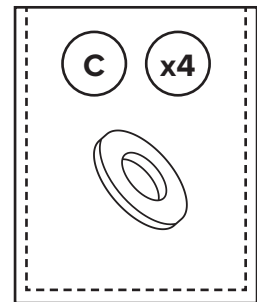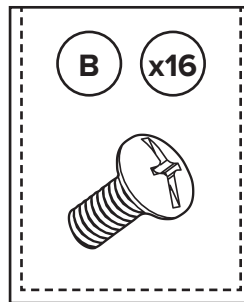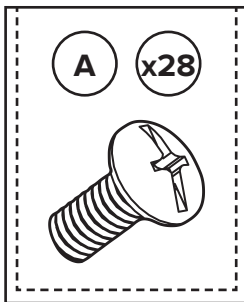

Flat Washer  
Flad skive  
Flat skive  
Litteä aluslevy  
Arruela plana  
Arandela plana  
5/32"











 
 
Nut  
møtrik  
nøtt  
mutteri  
noz  
tuerca  
5/16"









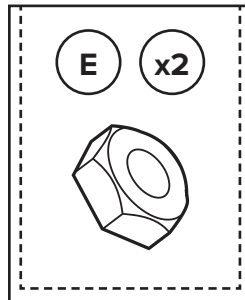
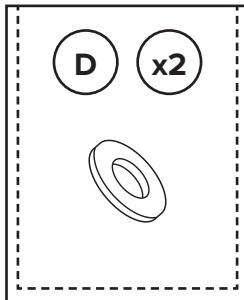




**QUESTIONS, PROBLEMS, MISSING PARTS? PLEASE CALL:  
SPØRGSMÅL, PROBLEMER, MANGLENDE DELE? RING VENLIGST:  
SPØRSMÅL, PROBLEMER, MANGLENDE DELER? RING:  
KYSYMYKSIÄ, ONGELMIA TAI PUUTTUVIA OSIA? SOITA:  
DÚVIDAS, PROBLEMAS, PEÇAS EM FALTA? LIGUE PARA:  
¿PREGUNTAS, PROBLEMAS, PIEZAS FALTANTES? LLAME AL:**



+49 5251 875 6174 | ServiceDE@nexgrill.de (DE)  
+45 60 20 60 71 | ServiceDK@nexgrill.com (DK)



## PARTS LIST / DELELISTE / DELELISTE / OSALUETTELO / LISTA DE PEÇAS / LISTA DE PIEZAS

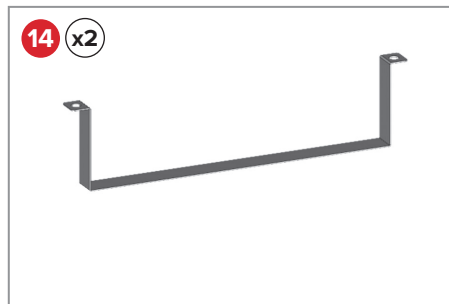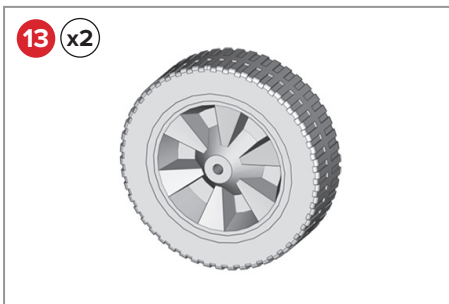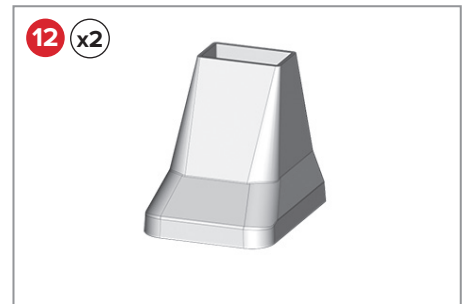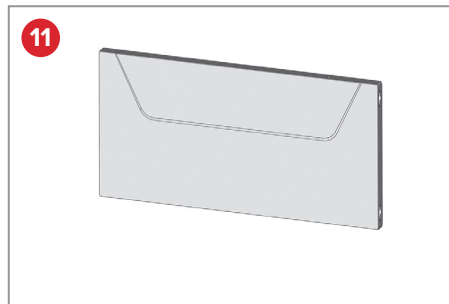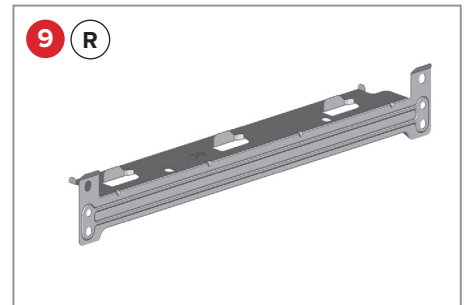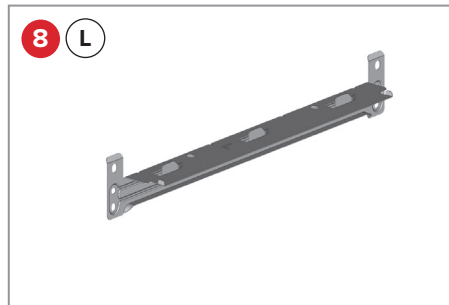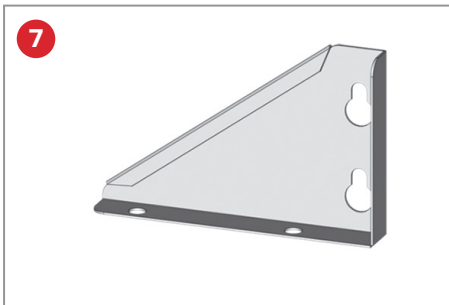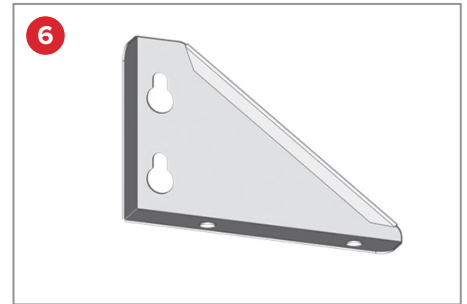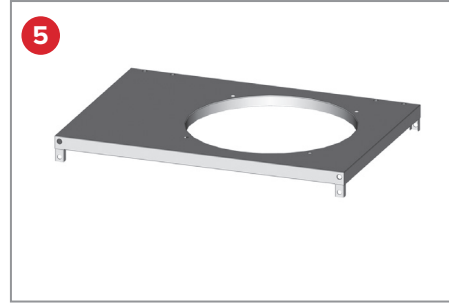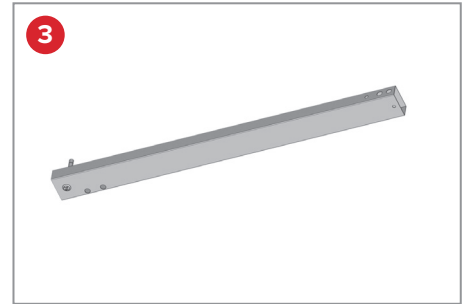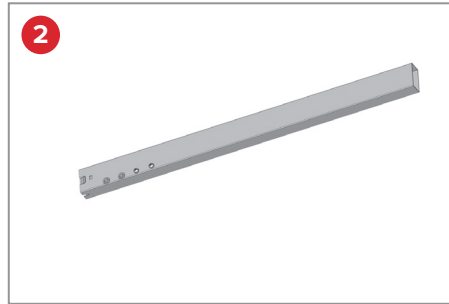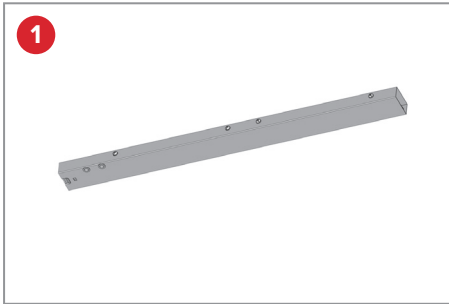            

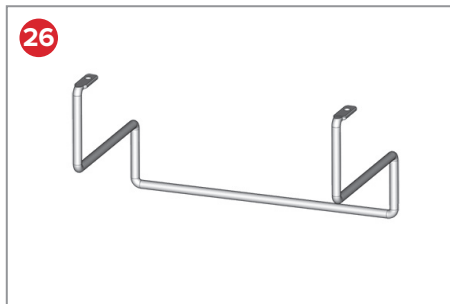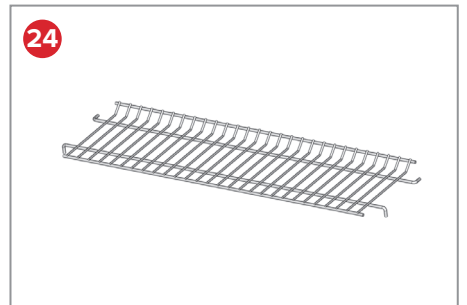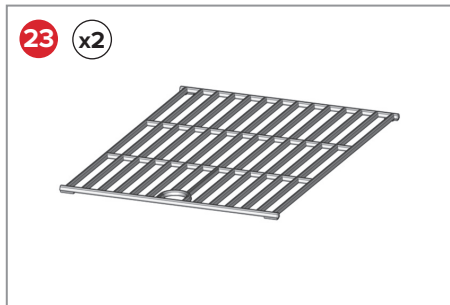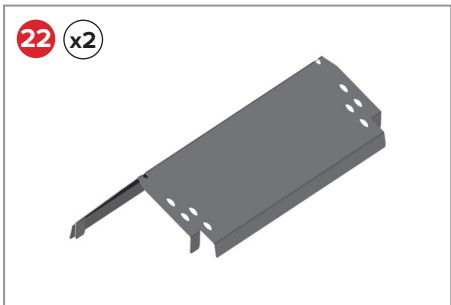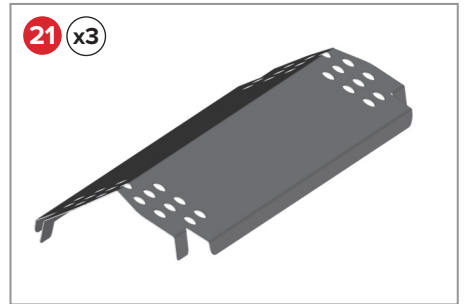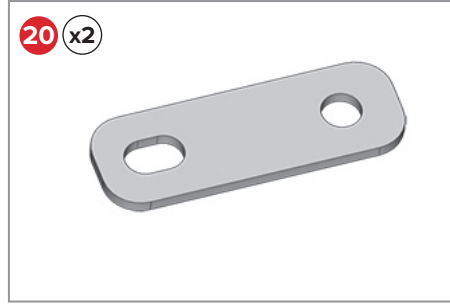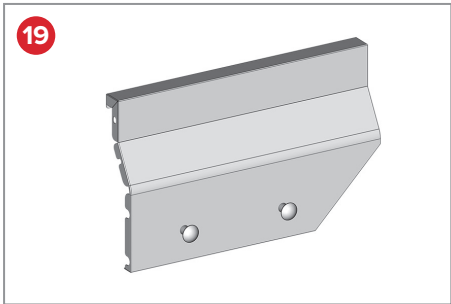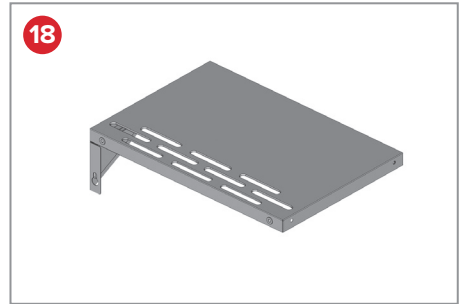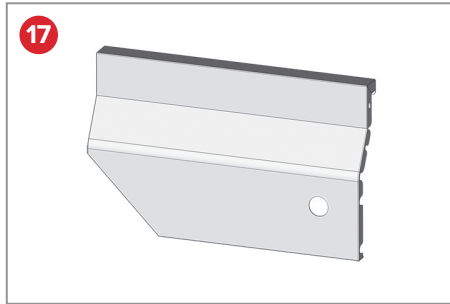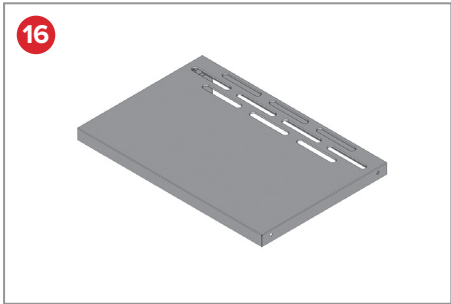          


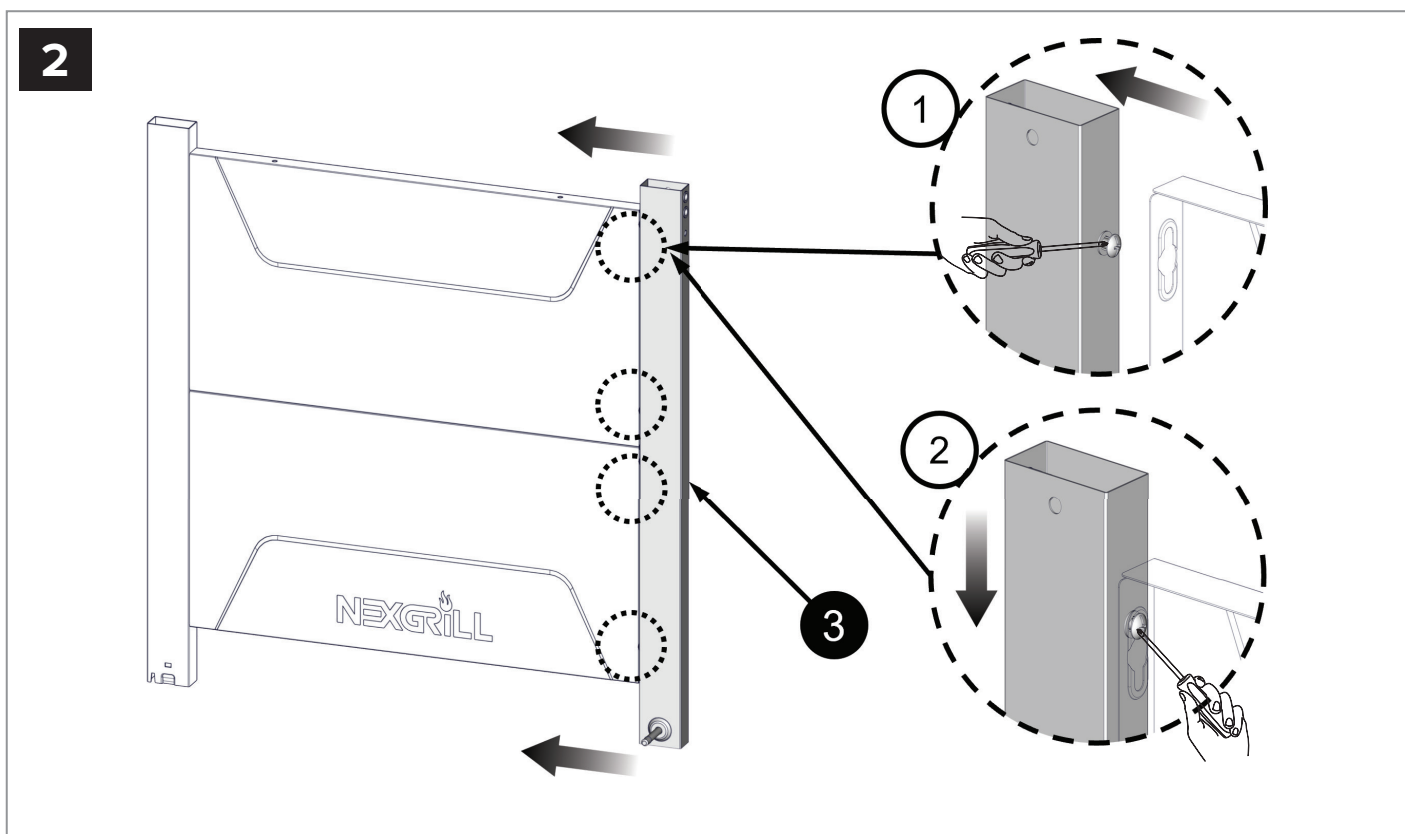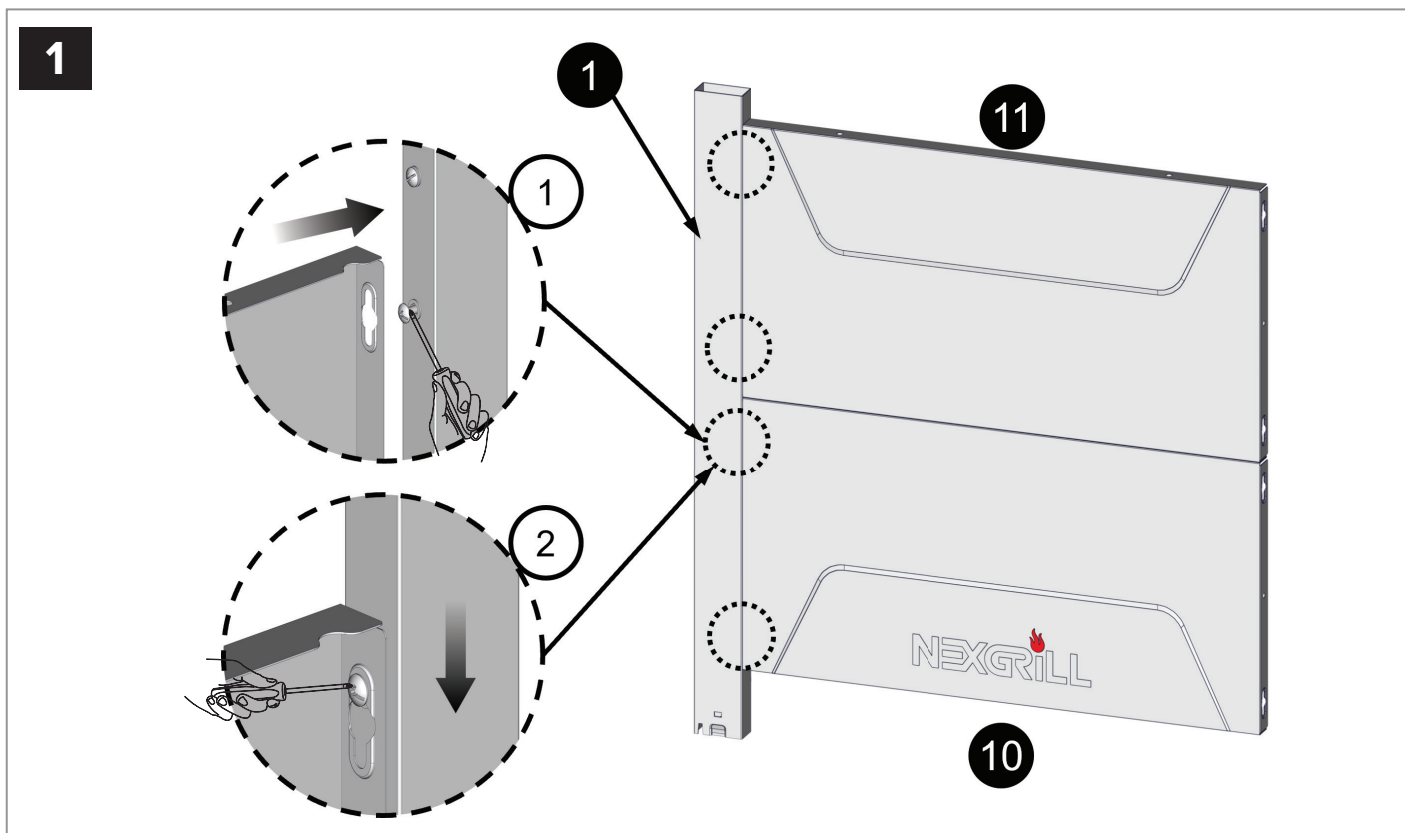  

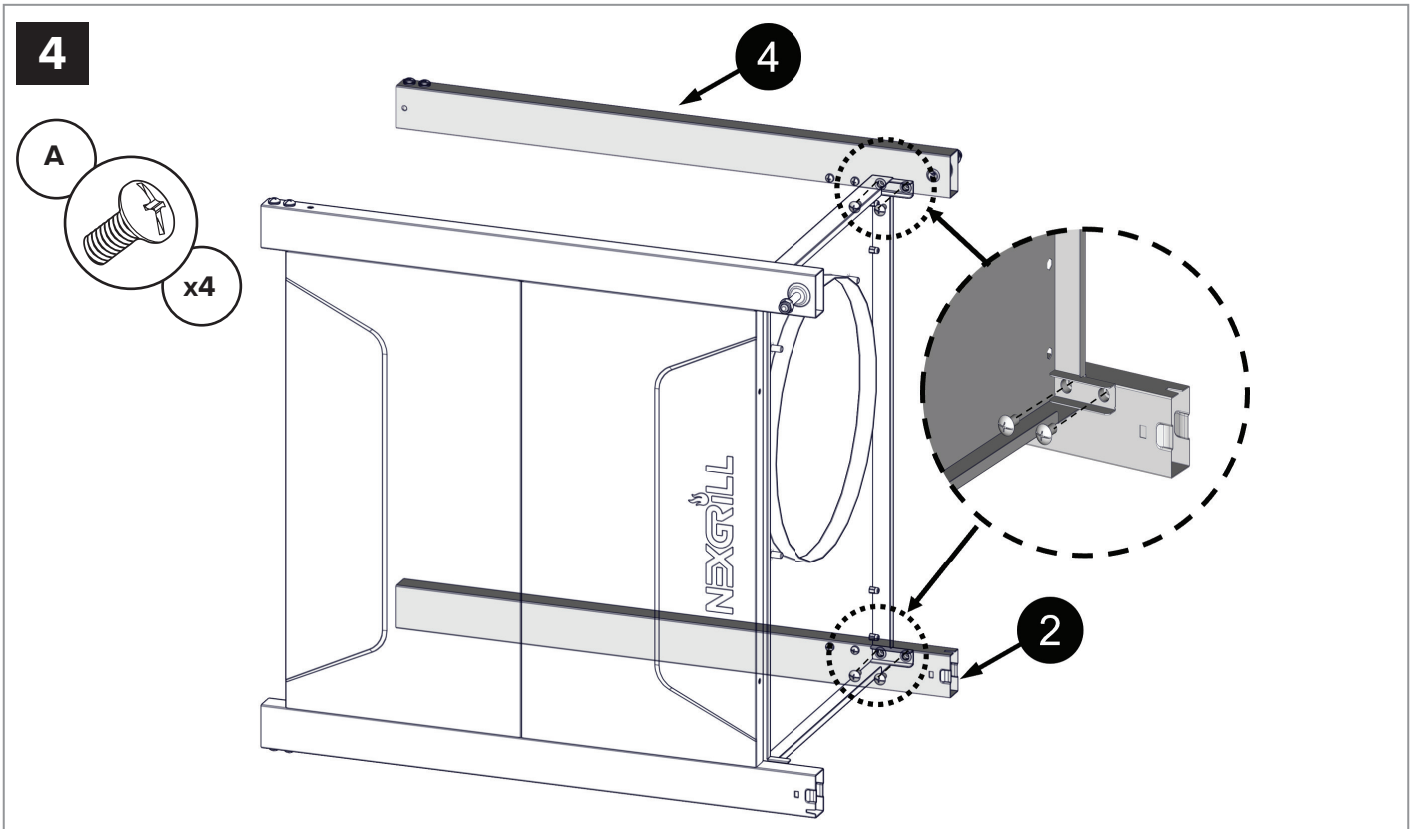 
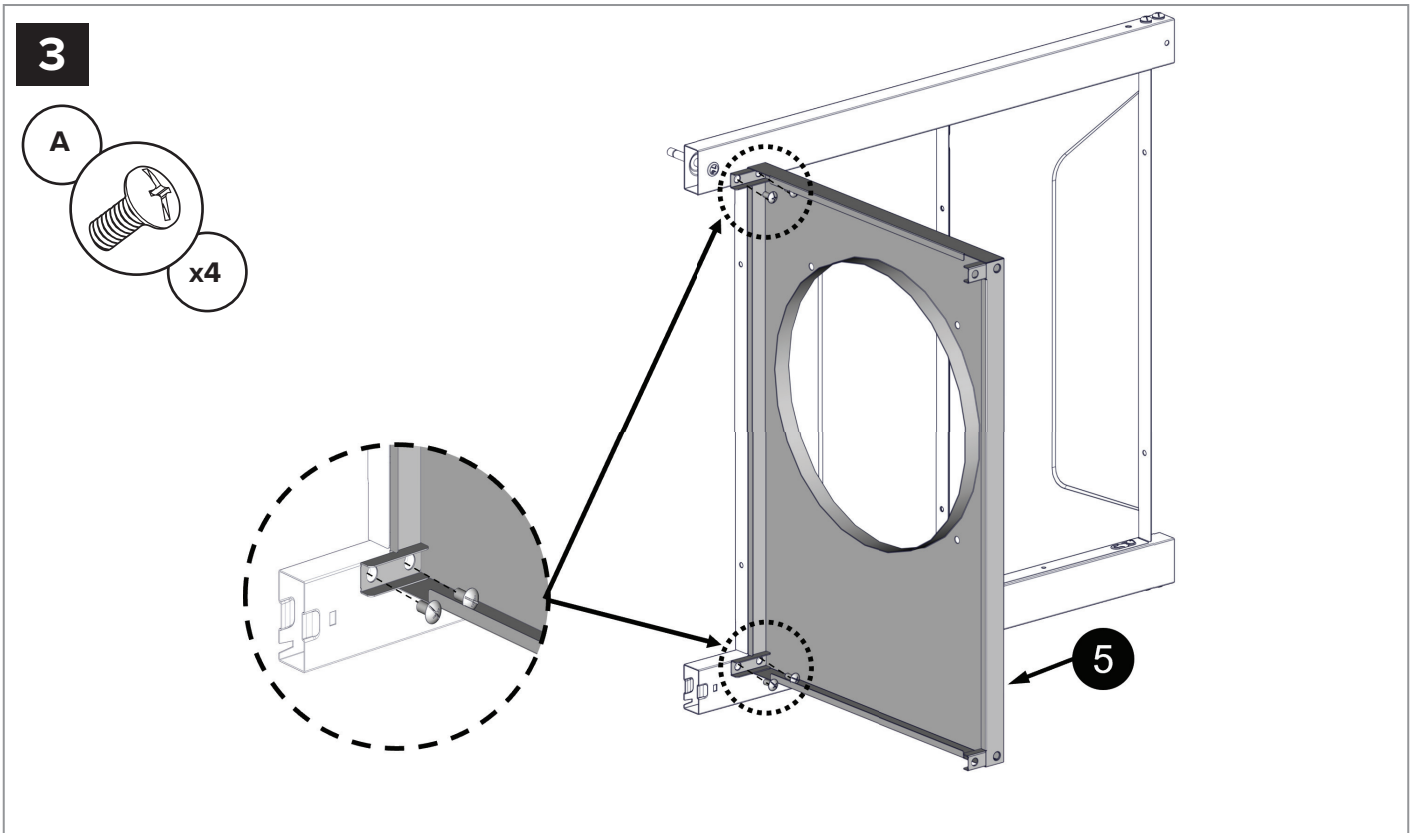 


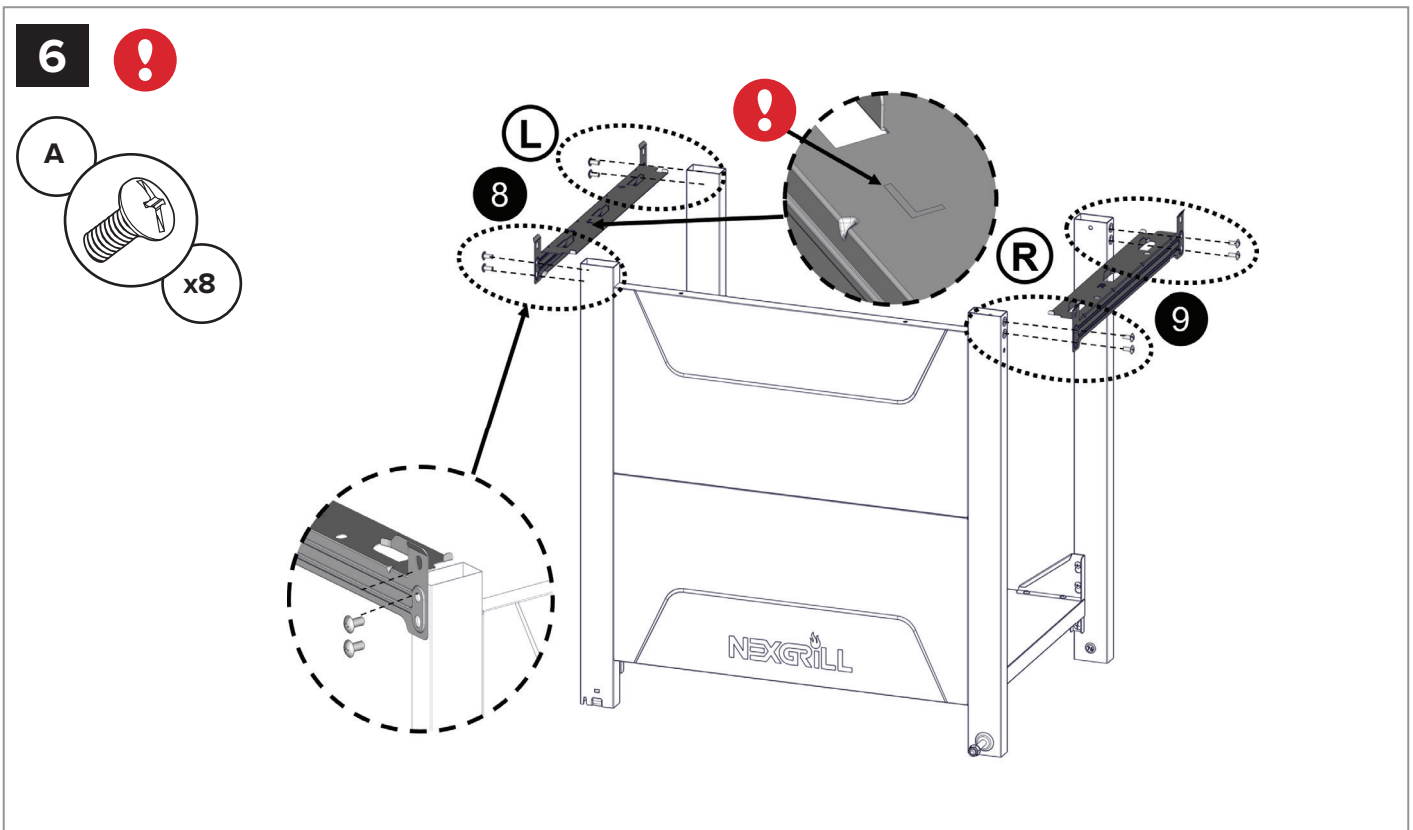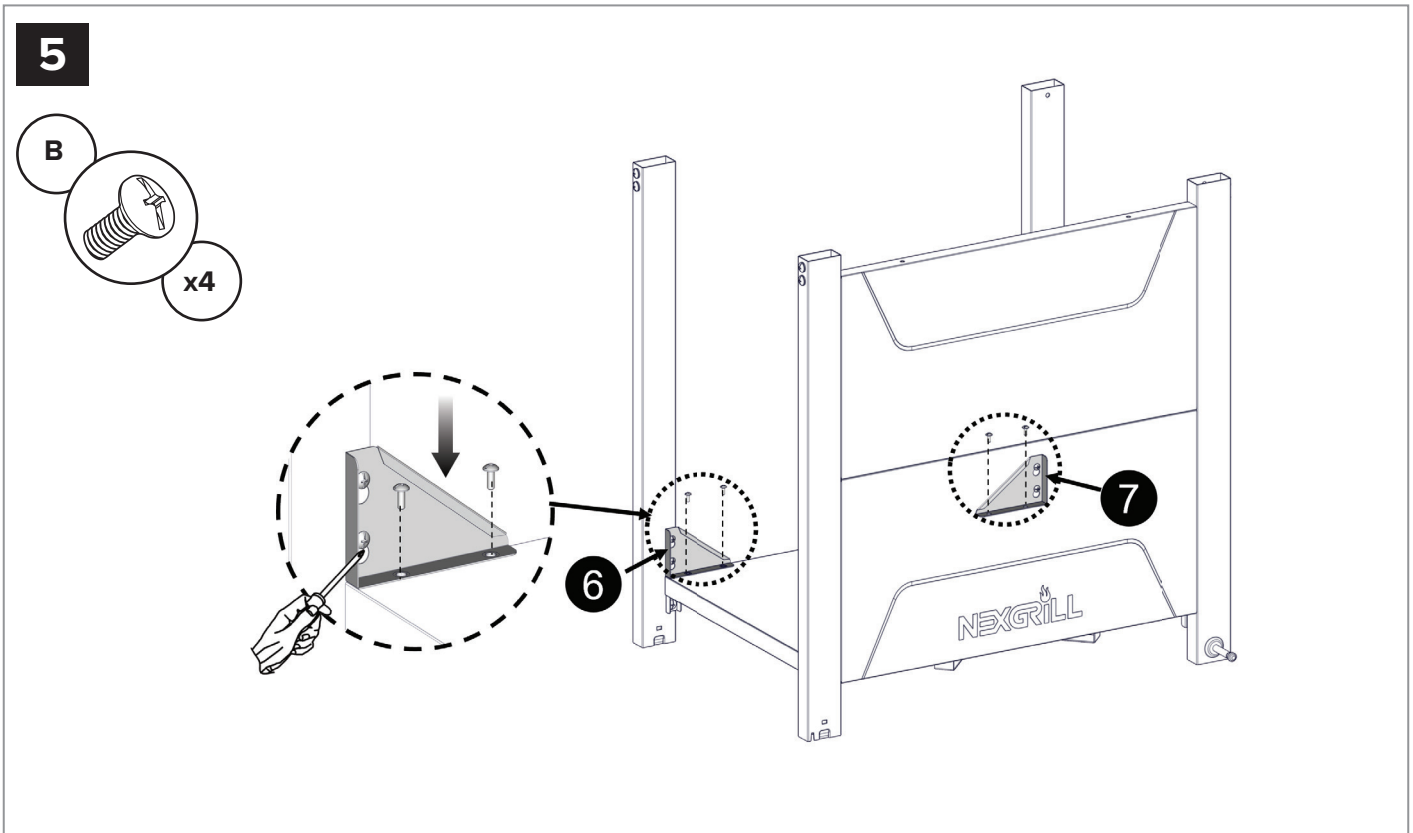  



7

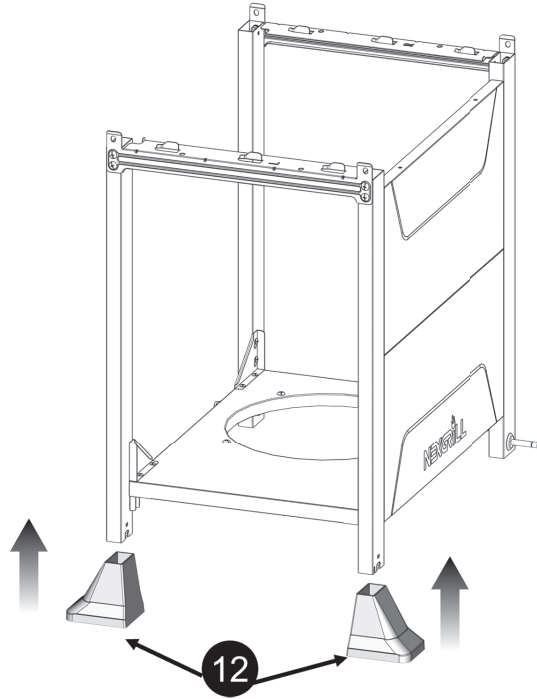 

8

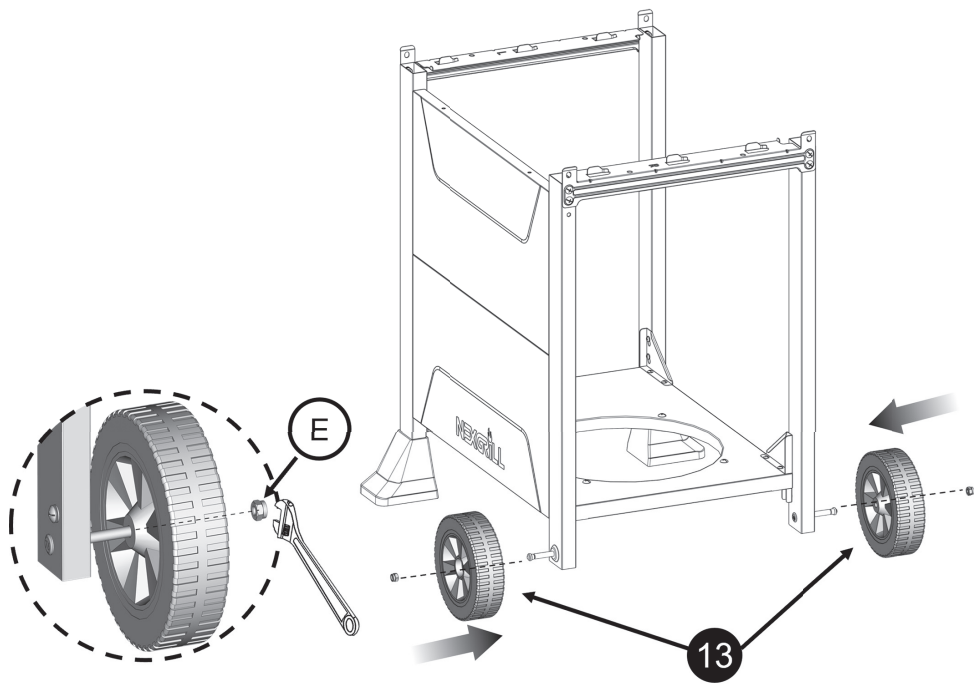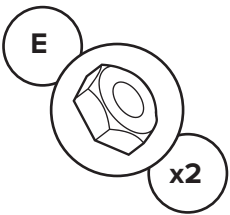  


9

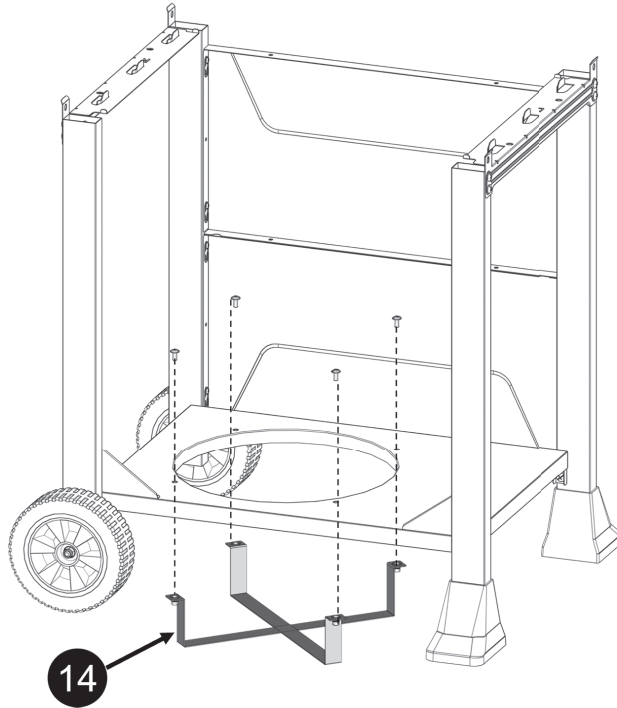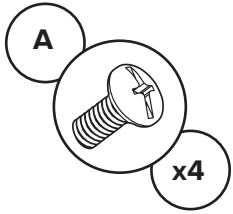  



10




 
15

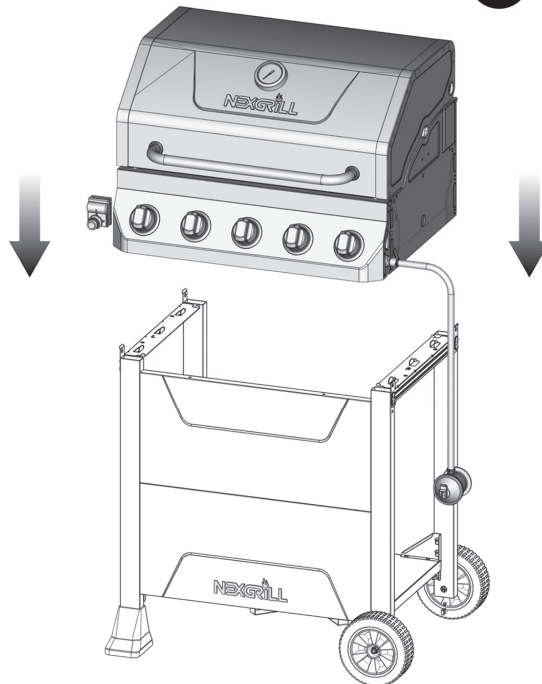


11

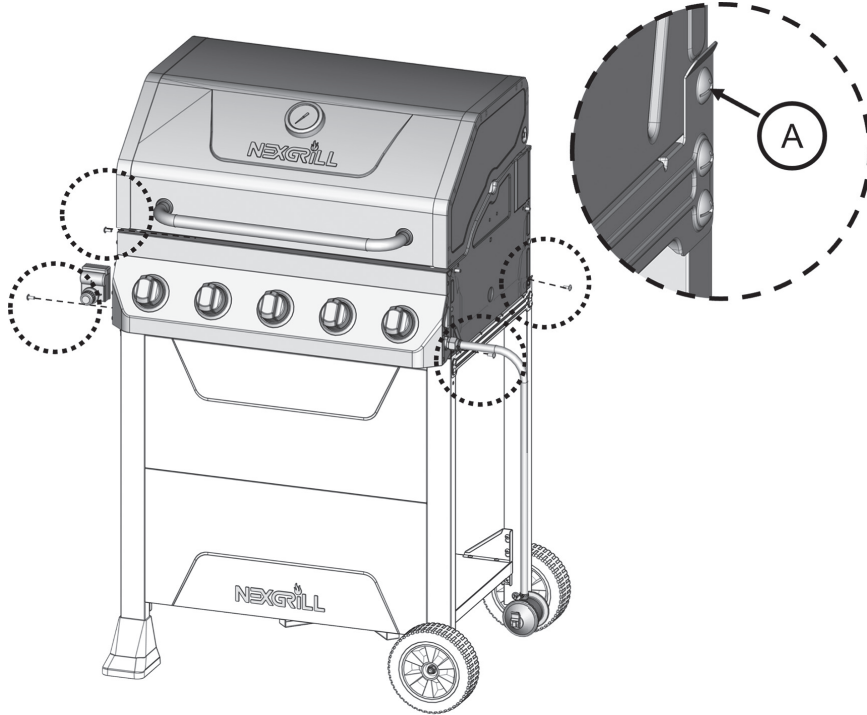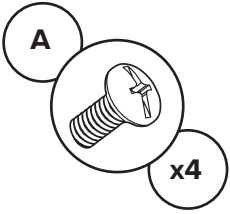  


12

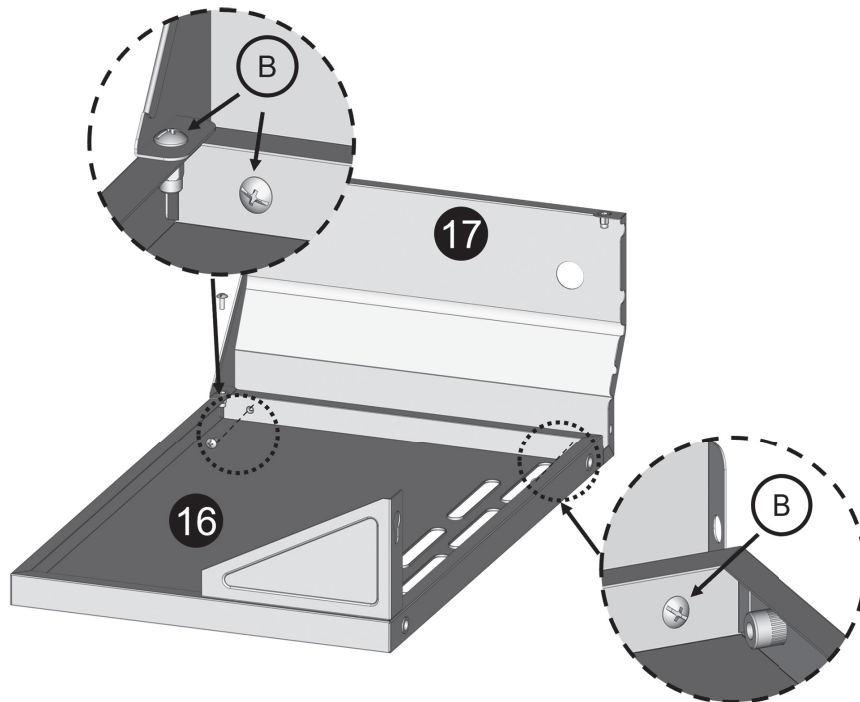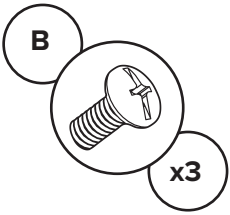  



**13**

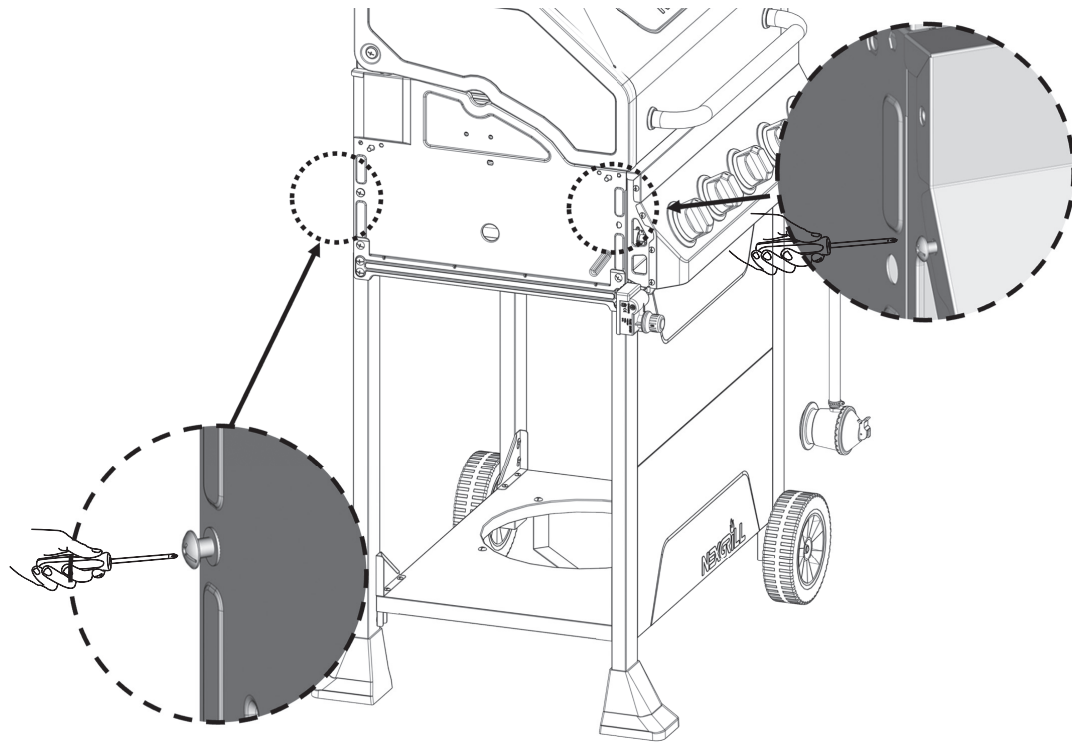 


**14**

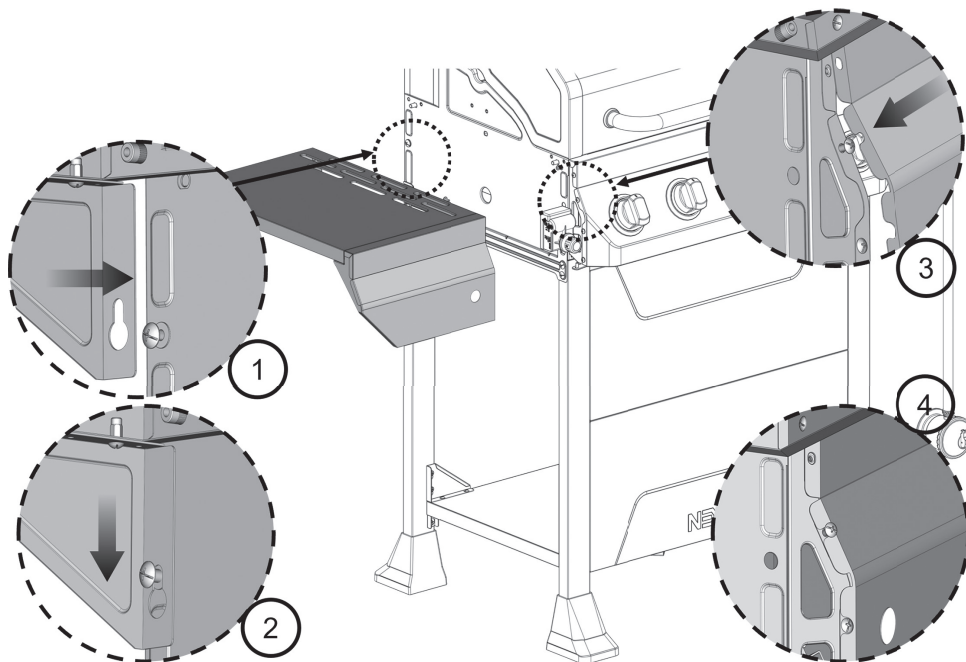 



15

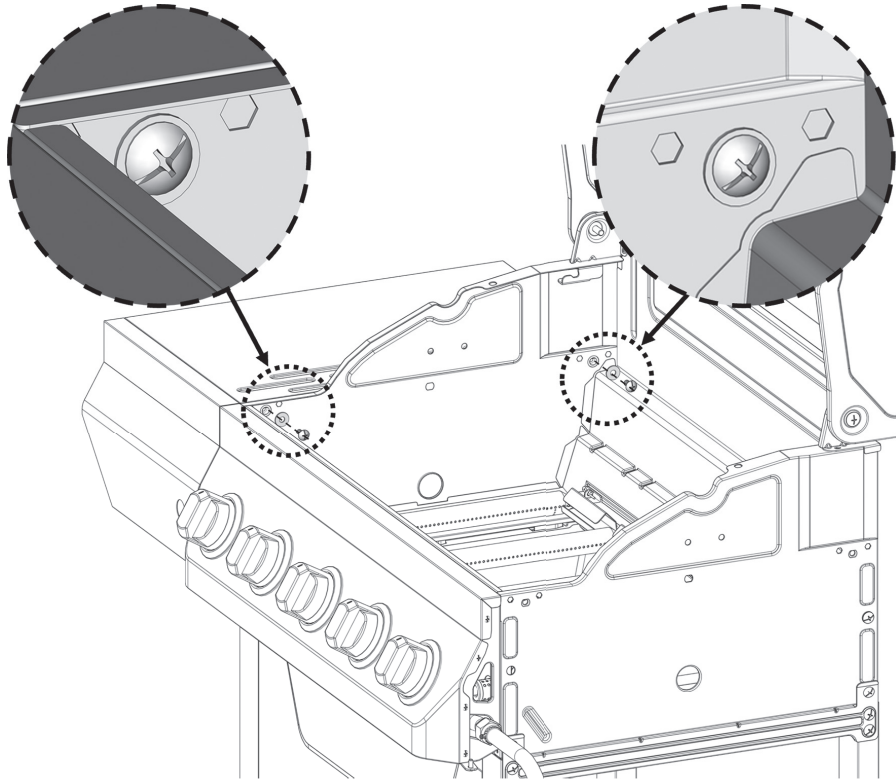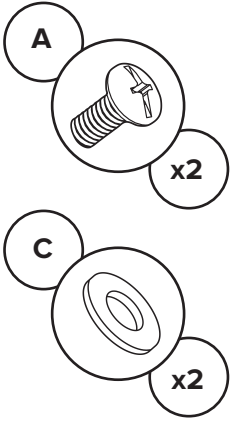  

16

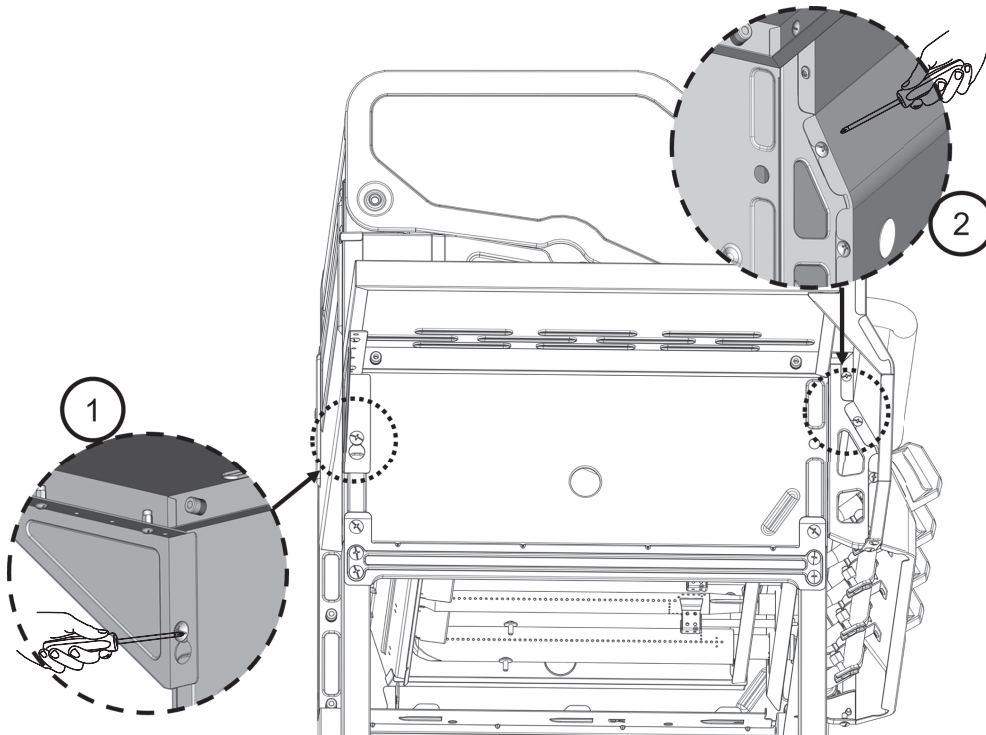 


17

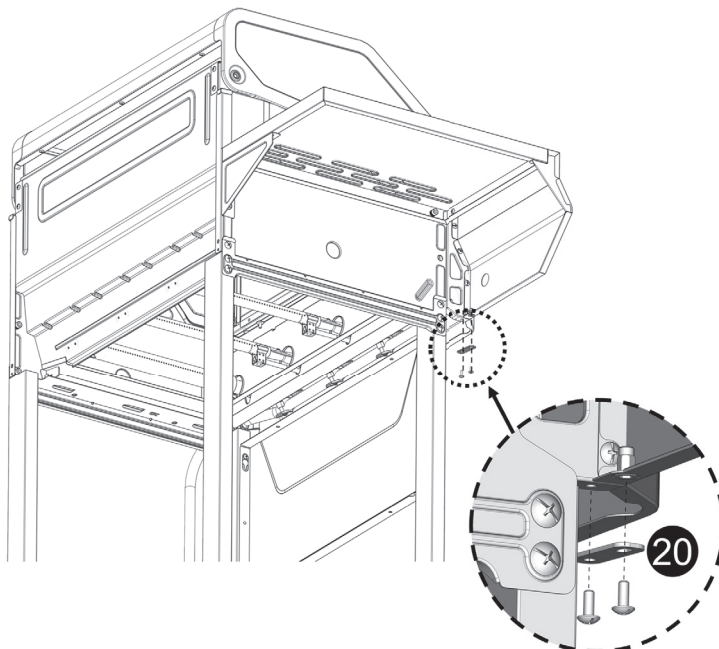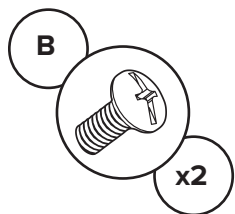  

18



 
Battery NOT included  
 Batteri IKKE inkludert  
 Batteri IKKE inkludert  
 Akku EI sisallytoimitukseen  
 Bateria NAO incluida  
 Bateria NO incluida

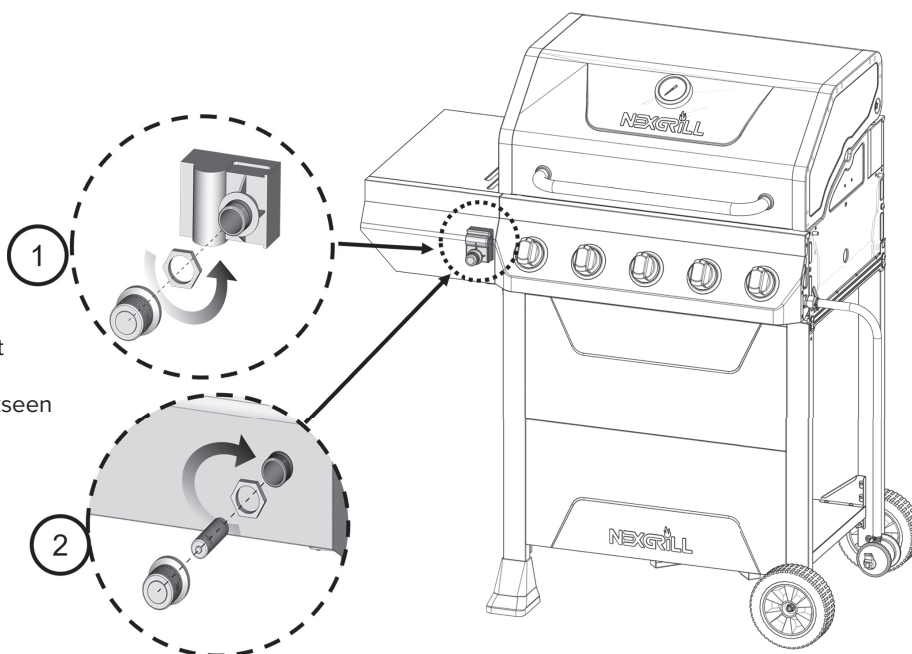



19



 
Battery NOT included  
Batteri IKKE inkludert  
Batteri IKKE inkludert  
Akku EI sisällytoimitukseen  
Bateria NAO inclusa  
Bateria NO incluida

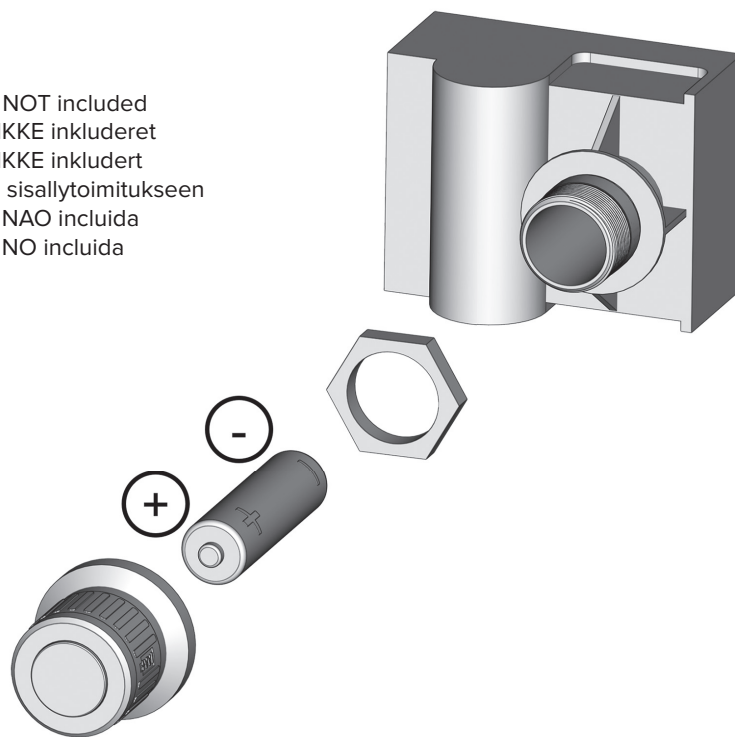


20

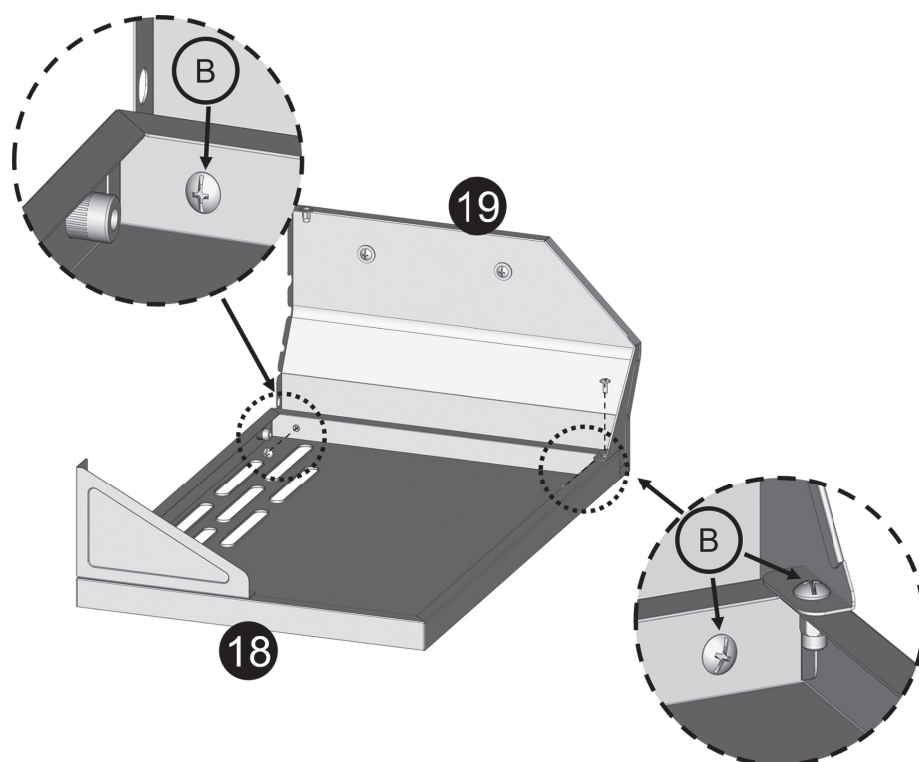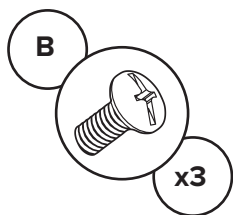  



21

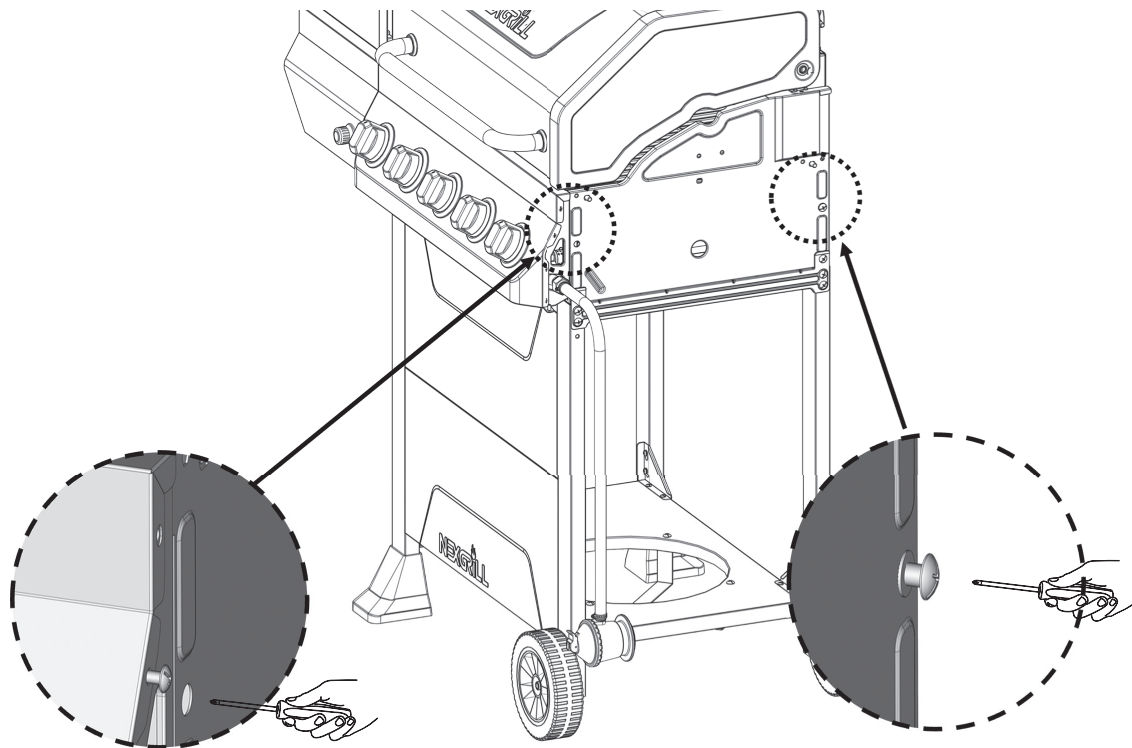 


22


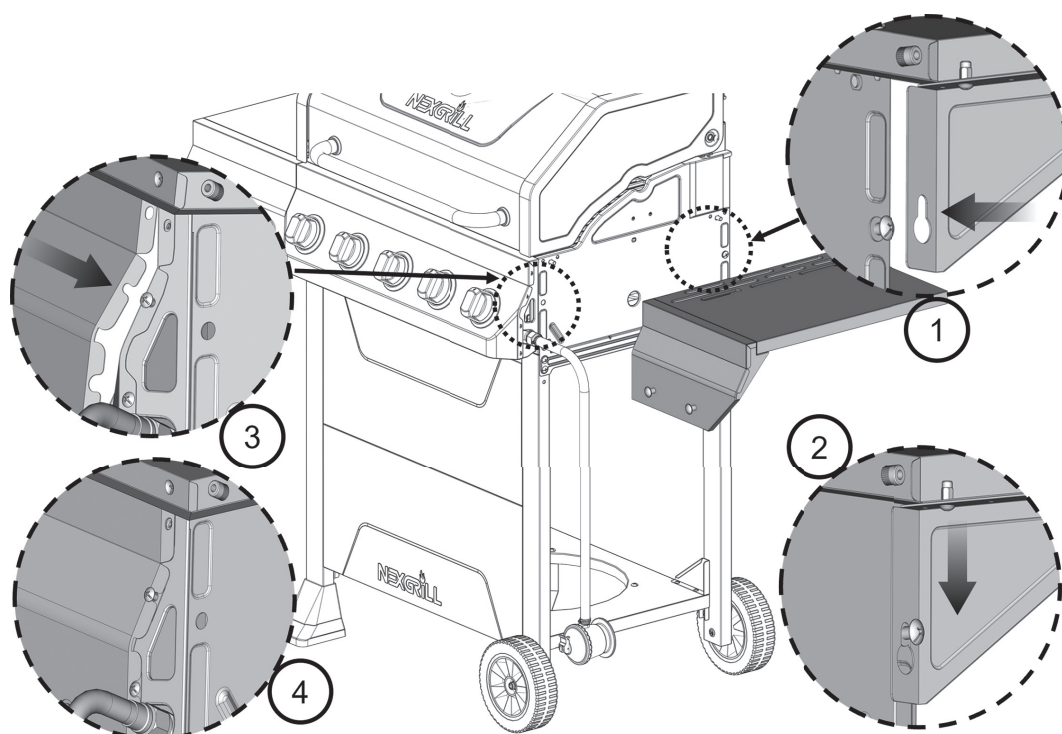 


23

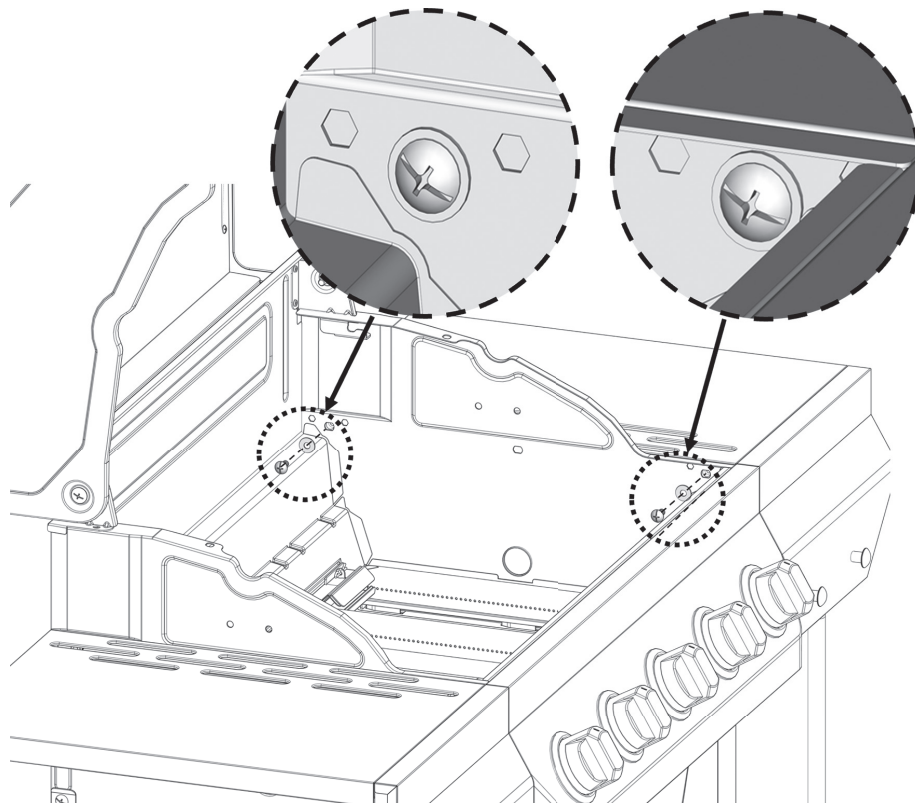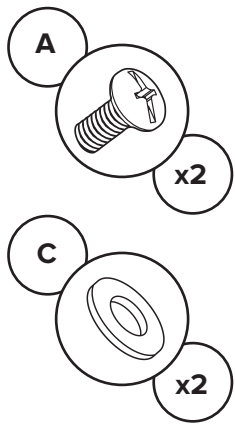  


24

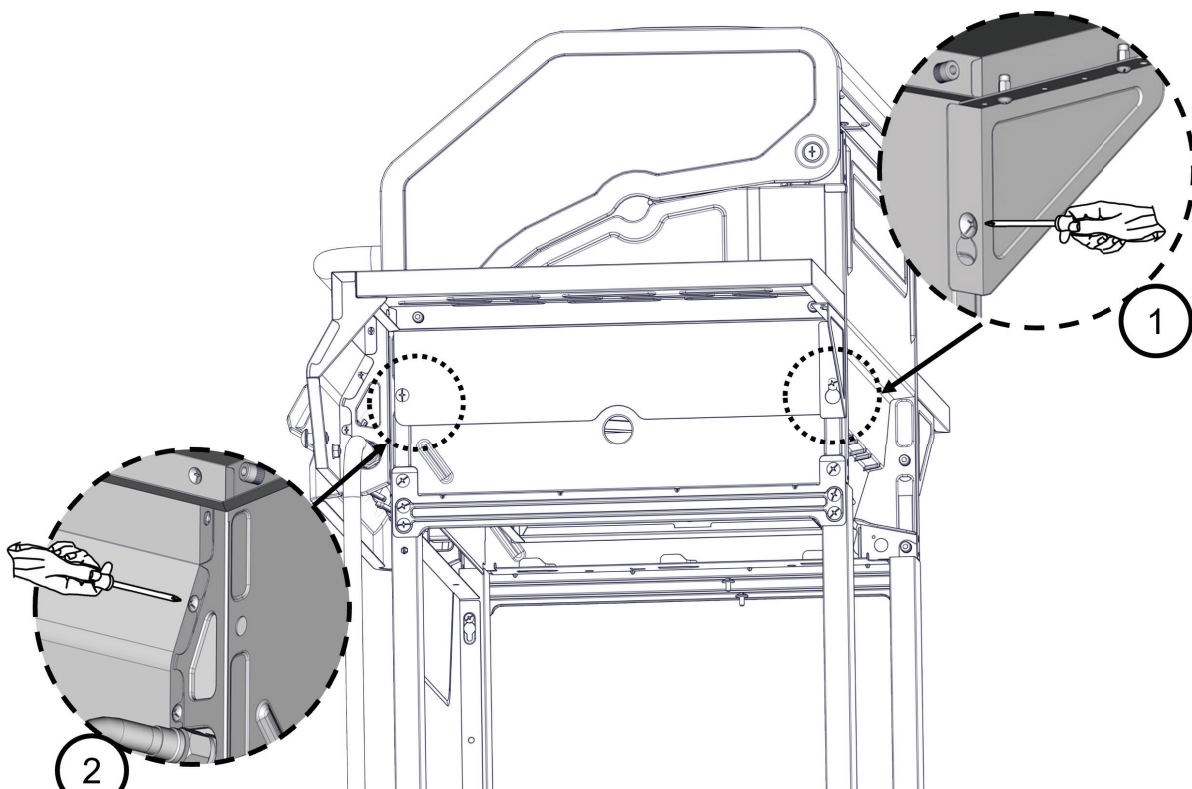 


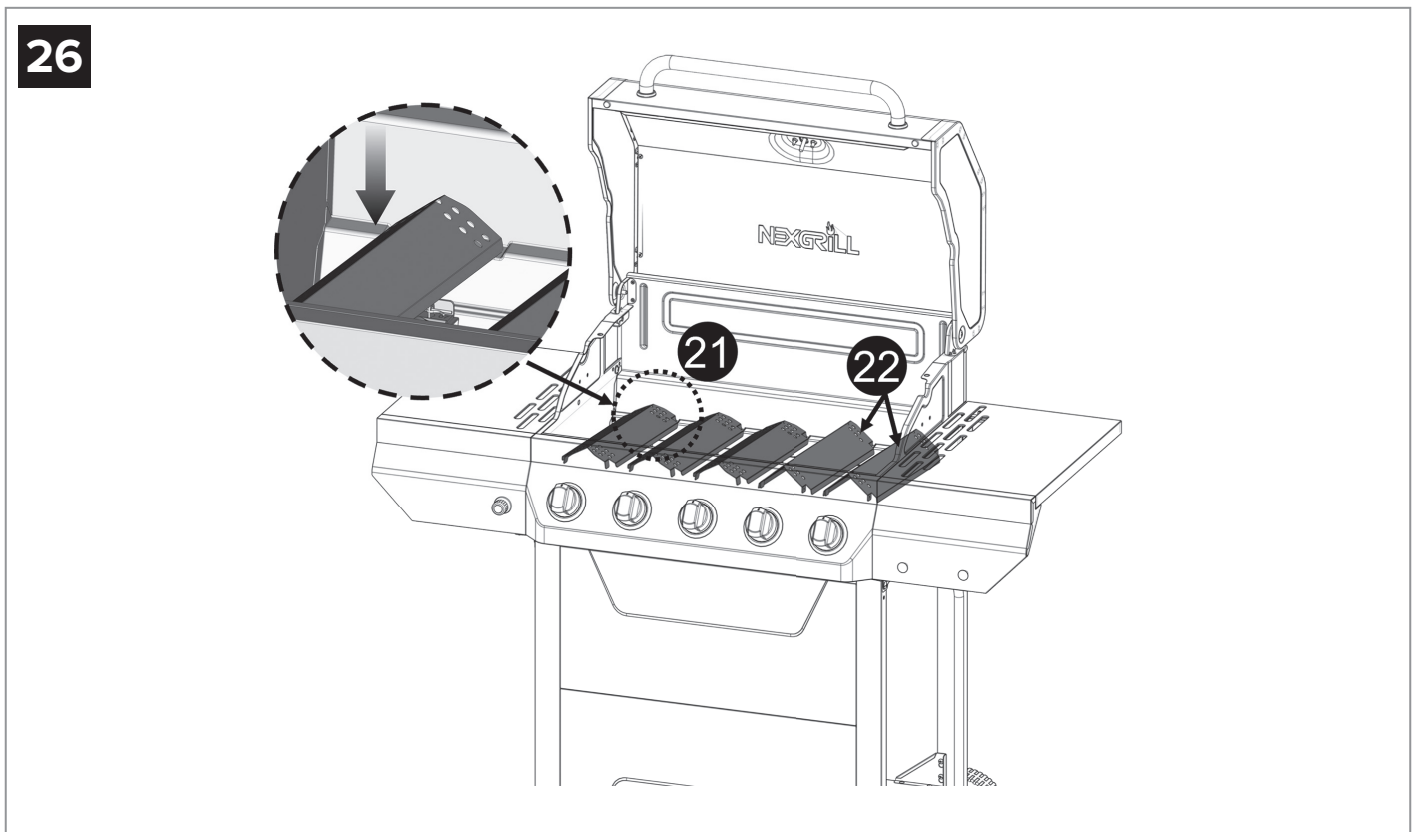 
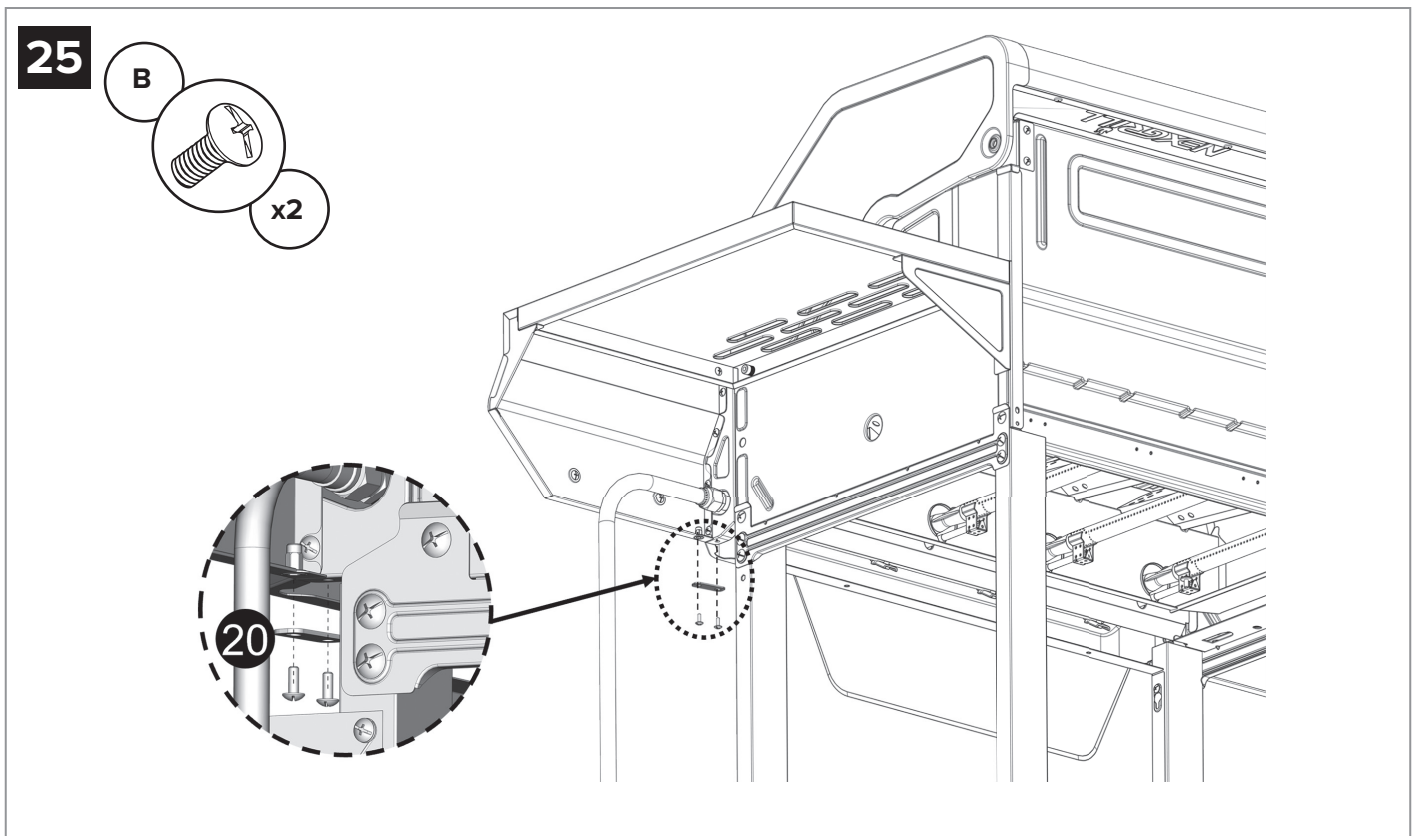 


27

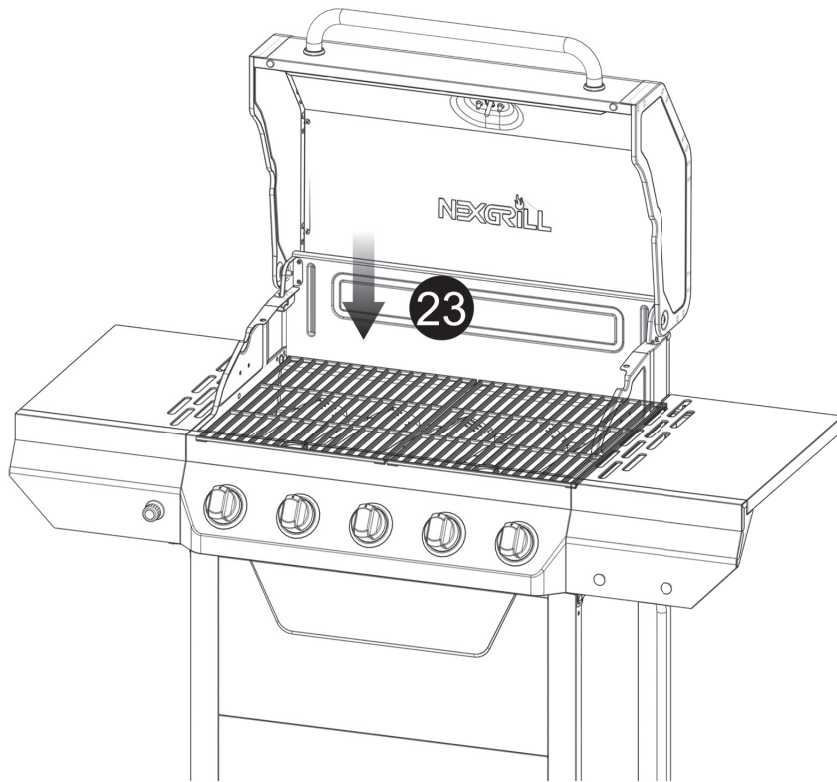 


28

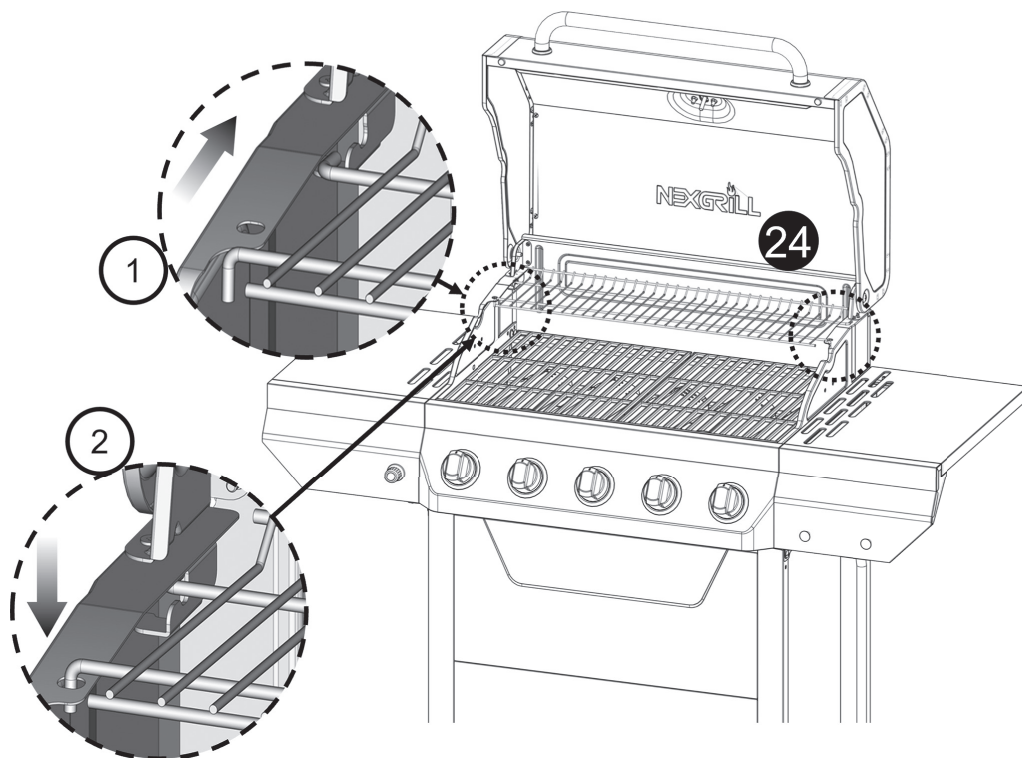 


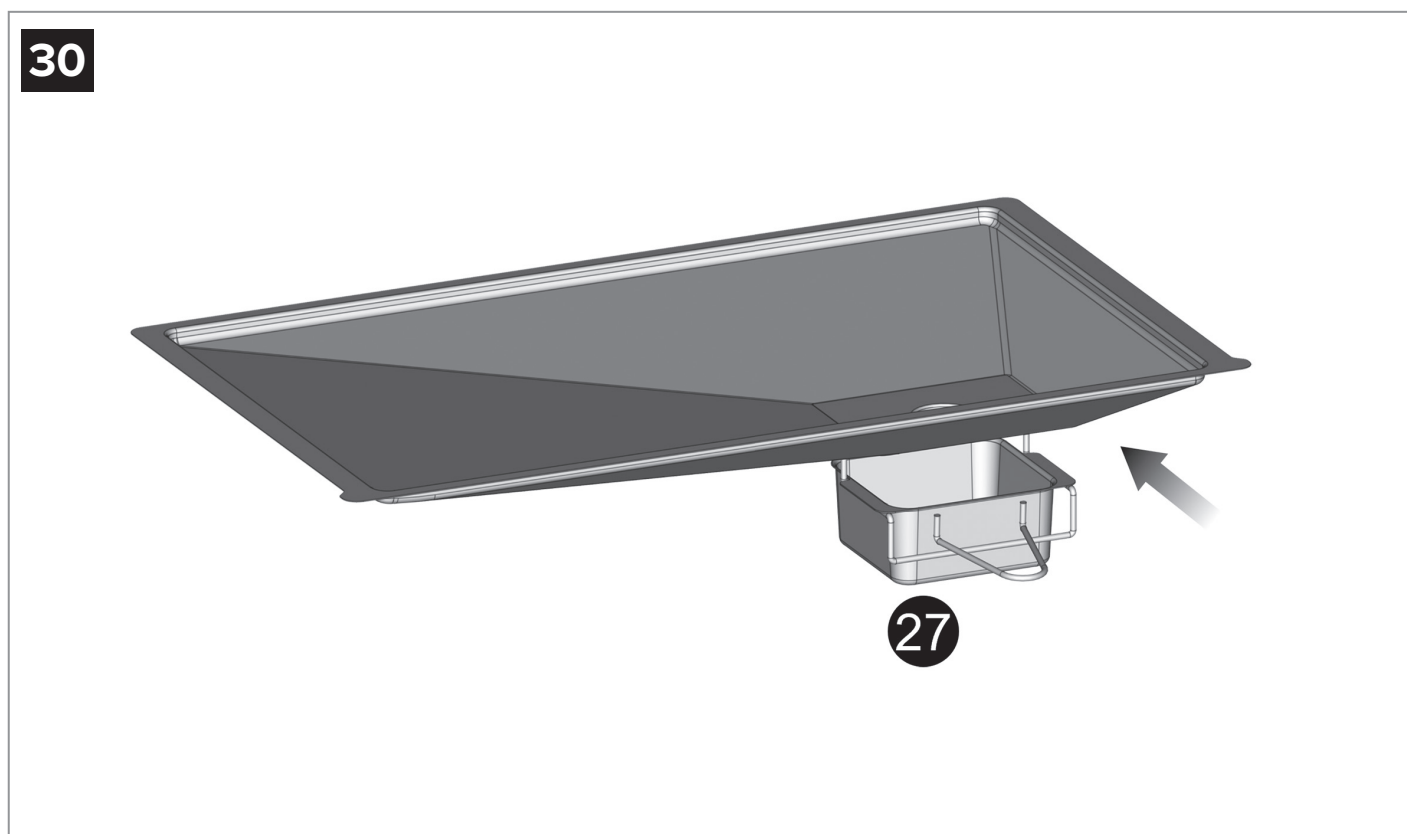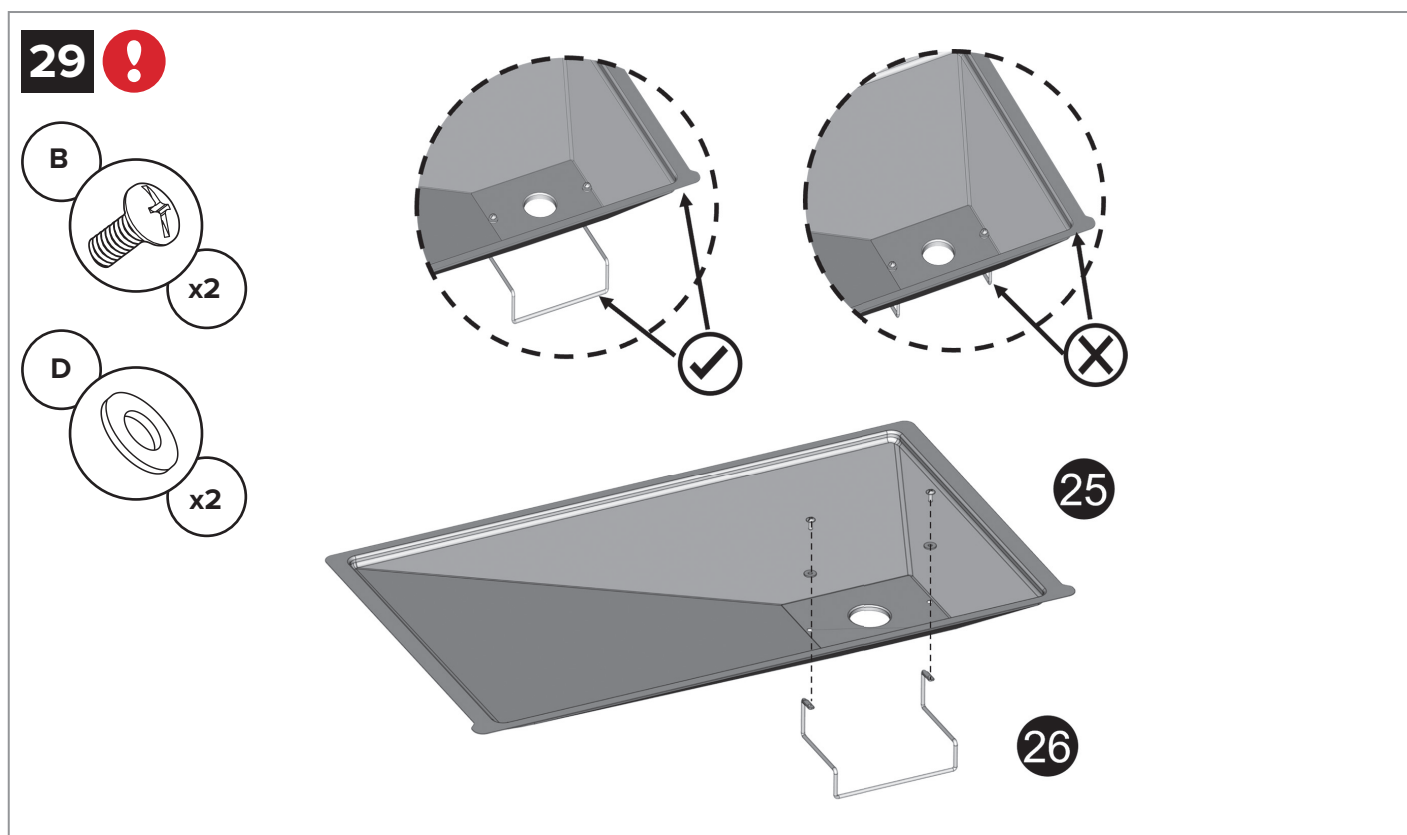  


31

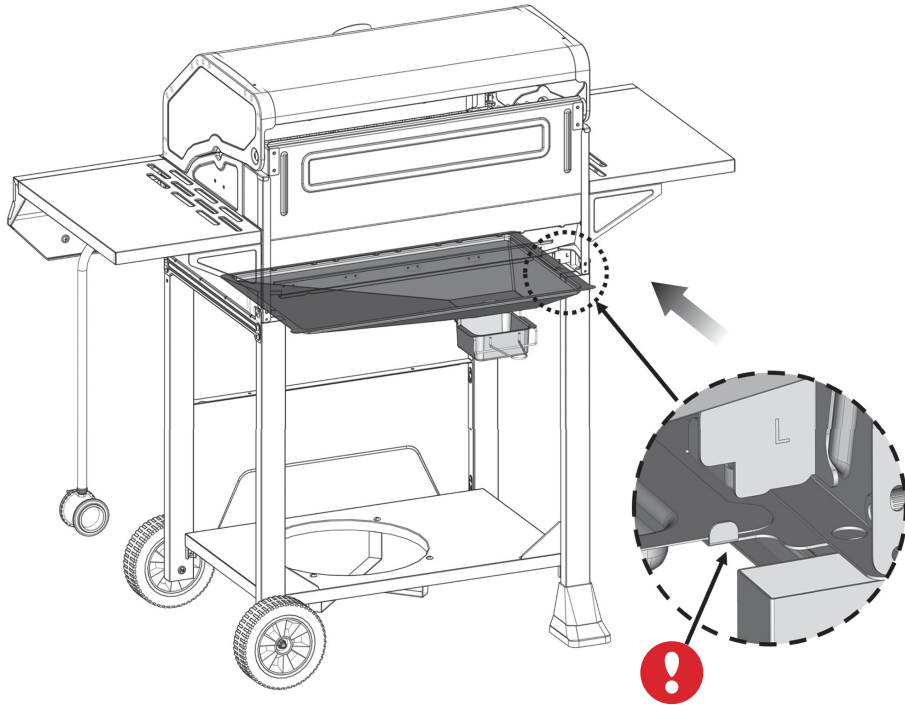 

32

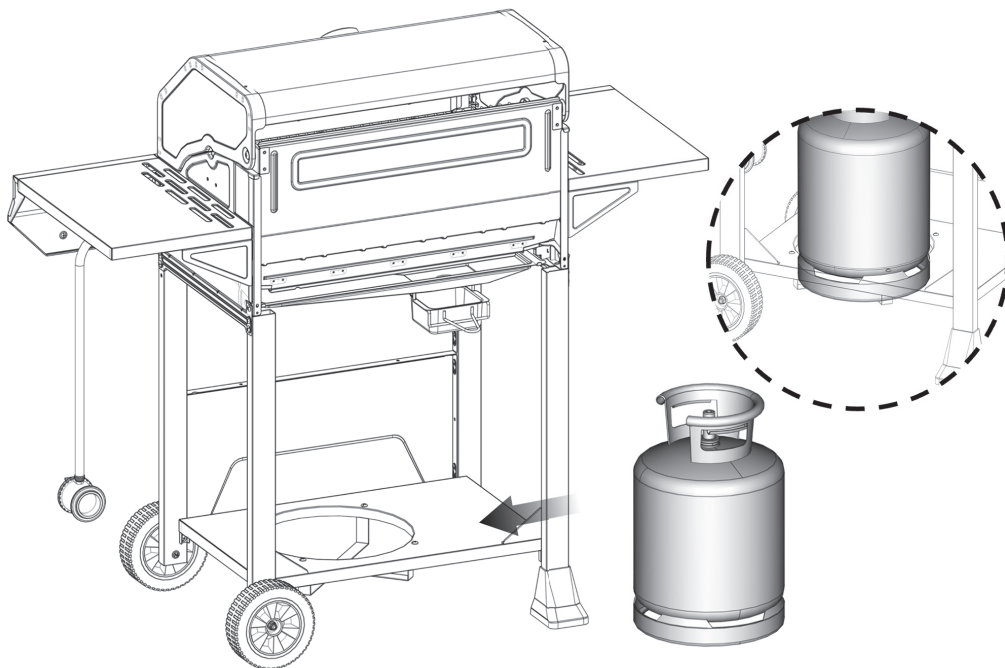 

**33**

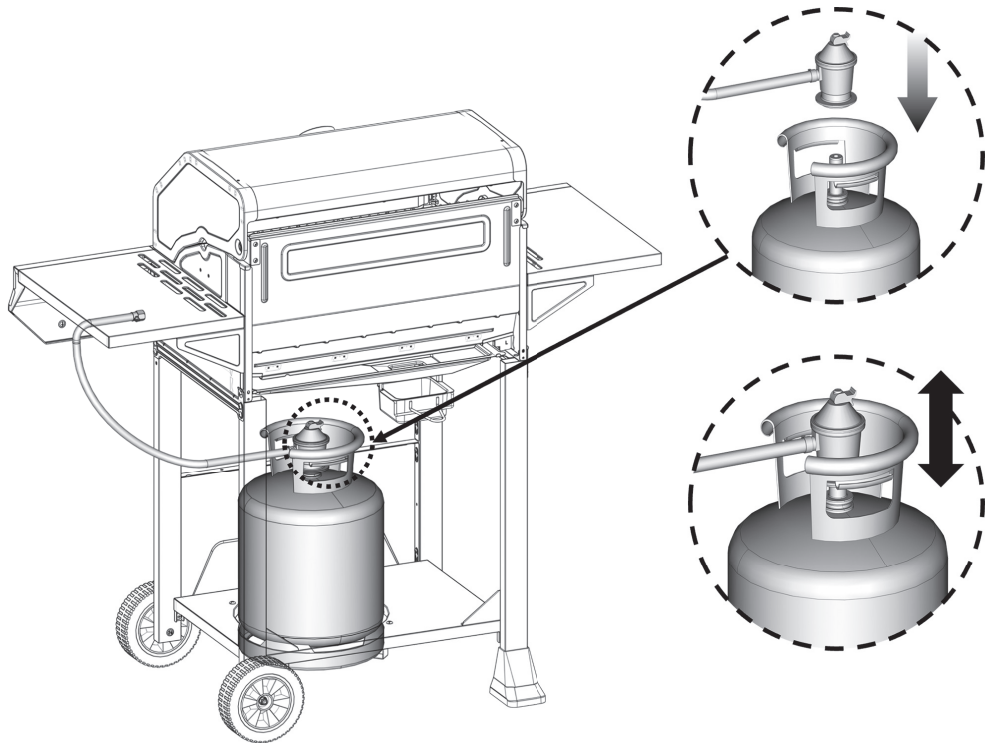 



QUESTIONS, PROBLEMS, MISSING PARTS? PLEASE CALL:  
SPØRGSMÅL, PROBLEMER, MANGLENDE DELE? RING VENLIGST:  
SPØRSMÅL, PROBLEMER, MANGLENDE DELER? RING:  
KYSYMYKSIÄ, ONGELMIA TAI PUUTTUVIA OSIA? SOITA:  
DÚVIDAS, PROBLEMAS, PEÇAS EM FALTA? LIGUE PARA:  
¿PREGUNTAS, PROBLEMAS, PIEZAS FALTANTES? LLAME AL:

+49 5251 875 6174 | ServiceDE@nexgrill.de (DE)  
+45 60 20 60 71 | ServiceDK@nexgrill.com (DK)

MODEL / MODELL / MODEL / MODELL / MALLI / MODELO  
**720-0888SH**

THIS ITEM IS INTENDED FOR OUTDOOR DOMESTIC USE ONLY. NOT FOR COMMERCIAL USE

**NEXGRILL**®

Part Number:  
19001228A0



2531DQ-0175  
2531-25