



SPOTCLEAN™ MAX PORTABLE DEEP CLEANER MODELS 3599H, 3582F

Important Safety Instructions.....2

What's in the Box?3

Assembly3

Filling the Clean Water Tank.....4

Getting Ready to Clean5

Using the Tools5

After-Cleaning Care6

Storing Your Machine.....7

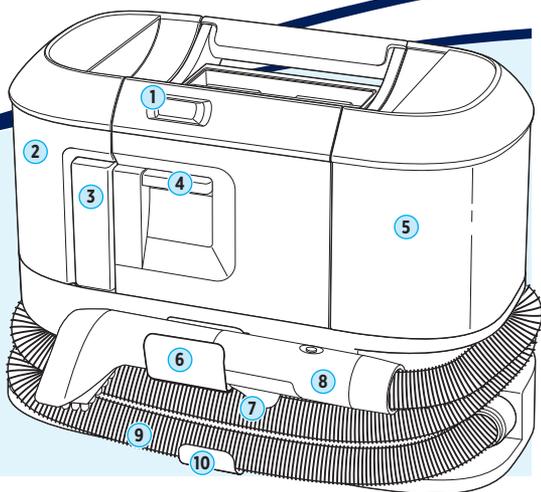
Troubleshooting.....7

Limited Warranty8



Product Overview

- | | |
|---------------------|-----------------|
| 1. Power Button | 6. Hose Clip |
| 2. Clean Water Tank | 7. Trigger |
| 3. Formula Tank | 8. Tool Adapter |
| 4. Rinse Switch | 9. Hose |
| 5. Dirty Water Tank | 10. Hose Clip |



SYMBOL	EXPLANATION
	Caution.
	Read operator's manual.
	Risk of fire.
	Risk of electric shock.
	For indoor use only.
	Do not overwet carpet. Use only on carpet moistened by the cleaning process.
	Use only BISSELL® cleaning formulas intended for use with this machine.
	Disconnect power before servicing.

SYMBOL	EXPLANATION
	This symbol on the product and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points. Please contact your local authority for further details of your nearest designated collection point.
	Use warm water, temperature up to 60°C.
	Check the manufacturer's tag before cleaning textile. "W" on the tag as shown means you can use your cleaner.
	Do not freeze.
	Recycle.

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Floor slippery when wet.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- Use only as described in this user guide.
- Use only manufacturer's recommended attachments.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water: do not attempt to operate it and have it repaired at an authorised service center.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Use extra care when cleaning on stairs.

- Do not use to pick up flammable or combustible liquids, such as petroleum, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapours.
- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- To unplug, grasp the plug, not the cable.
- Do not handle plug or appliance with wet hands.
- Turn off all controls before unplugging.
- Always connect to a properly earthed electrical socket. Do not modify earthed plug.
- Liquid must not be directed towards equipment containing electrical components.
- Do not immerse. Use only on surfaces moistened by the cleaning process. Use only BISSELL cleaning products intended for use with this machine.
- Use only on carpet moistened by cleaning process.

SAVE THESE INSTRUCTIONS

ORIGINAL INSTRUCTIONS.

FOR OPERATION ON A 220-240 VOLT A.C. 50-60 HZ POWER SUPPLY ONLY.

 
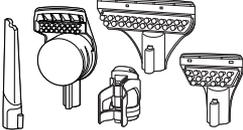
THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT VOIDS THE MANUFACTURER'S WARRANTY.

IMPORTANT INFORMATION

- Keep appliance on level surface.
- To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.
- Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.
- Do not turn ON your appliance until you are familiar with all instructions and operating procedures.

What's in the Box?

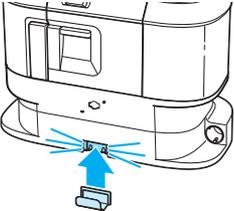
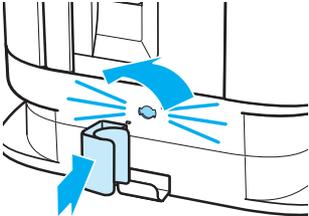
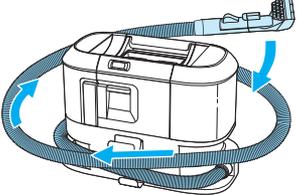
Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.

		
Machine	Hose Clip	Tool Clip
		
Tool Adapter	Tools (vary by model)	Trial Formula(s)

Assembly

▶ Go to global.BISSELL.com for assembly videos.

Note: Water has been used as part of normal quality testing to ensure full function of your machine. As a result, water droplets may be present in machine.

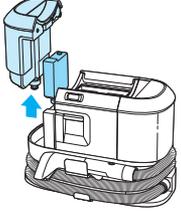
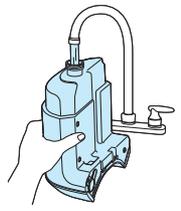
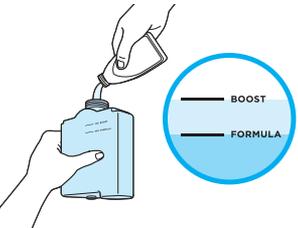
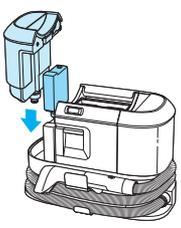
		
1. Install hose clip. It will click into place.	2. Install tool clip. It will click into place.	3. Wrap hose around machine. Secure hose and tool in clips.

Filling the Clean Water Tank



This machine is compatible with BISSELL® formulas made for portable deep cleaners. Always use genuine BISSELL formulas in your machine. Other formulas may harm the machine.

Note: Fill with warm (140°F/60°C MAX) tap water and add the appropriate BISSELL formula. Do not use boiling water. Do not heat water or tank in microwave.

		
<p>1. Choose your formula.* Scan the QR code or visit global.BISSELL.com for formulas.</p>	<p>2. Remove clean water and formula tanks.</p>	<p>3. Fill water tank with warm water (140° F/60° C MAX) and tighten cap. Do not boil or microwave water.</p>
		
<p>4. Add formula to the fill line on the tank and tighten cap. Optional: Add 30 mL of any BISSELL Boost.</p>	<p>5. Reinstall the clean water and formula tanks.</p>	

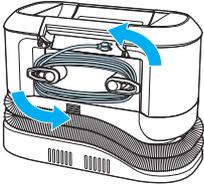
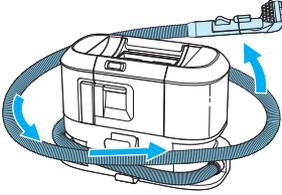
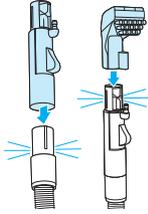
*Compatible BISSELL formulas include: Oxy Boost, Pro Stain & Odour, Pet Stain & Odour, Stain & Odour

⚠ WARNING To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL formula intended for use with this machine. Use of cleaning formulas that contain eucalyptus, lemon or pine oil may damage this appliance and void the warranty. Chemical spot cleaners or solvent-based soil removers should not be used. These products may react with the plastic materials used in your carpet washer causing cracking or pitting.

Getting Ready to Clean



Before cleaning, vacuum area to remove loose dirt. Spray any BISSELL® stain pretreat formula to soiled areas and allow to sit for a few minutes.

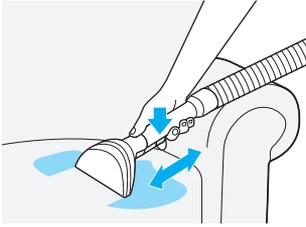
		
<p>1. Twist the Quick Release Cable Wrap to release cable. Unwind and plug into outlet.</p>	<p>2. Release flex hose from hose grip bracket and unwrap.</p>	<p>3. Connect tool adapter. Connect desired tool to adapter.</p>

Using the Tools

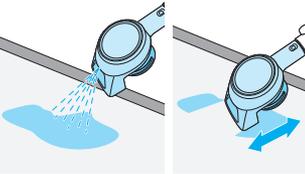
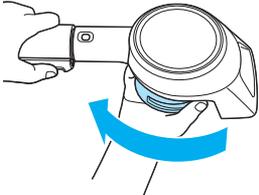
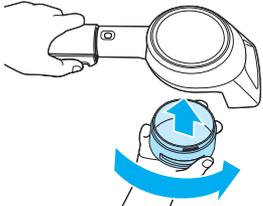
Tools vary by model. Visit global.BISSELL.com for additional tools.



Tough Stain Tool, 15cm Tool, and Crevice Tool

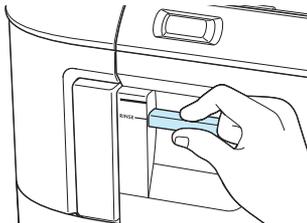
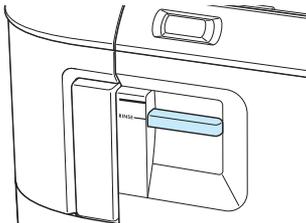
	
<p>1. Point tool above spot or stain and press spray trigger.</p>	<p>2. Release spray trigger and gently scrub the stain.</p>

Stain Trapper Tool

		
<p>1. Point tool above the spot or stain and press the spray trigger. Suction stain by placing tool onto surface and slowly moving backwards.</p>	<p>2. To empty tool tank, rotate clockwise. Pour dirty liquid into sink or toilet and rinse tank. Allow time to air dry.</p>	<p>3. Return tank to the tool by lining up the grooves and twisting it into place.</p>

CONTINUED ON NEXT PAGE ➔

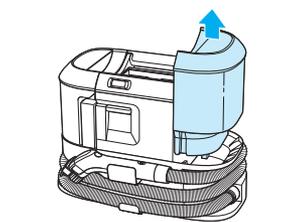
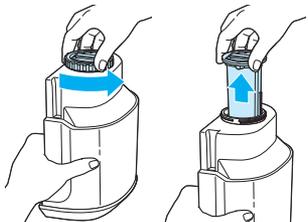
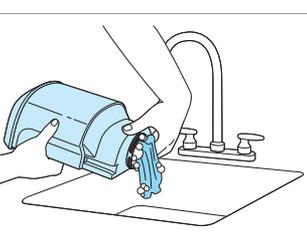
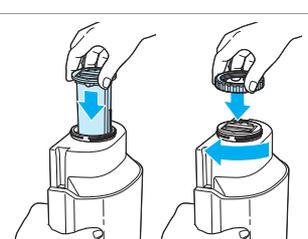
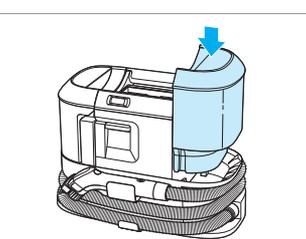
HydroRinse™ Self-Cleaning Hose Tool

		
<p>4. Switch machine to Rinse mode and turn ON.</p>	<p>5. Hold the hose and tool in an upright position with the machine ON. Hold down the trigger for 30 seconds.</p>	<p>6. Release trigger and let machine run for 30 seconds to clear water in hose. Empty the dirty water tank after use.</p>

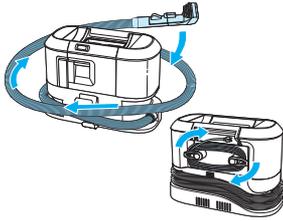
After-Cleaning Care



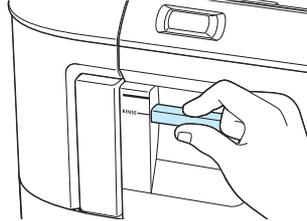
Emptying the Dirty Water Tank

		
<p>1. Remove the dirty water tank.</p>	<p>2. Twist cap and remove separator stack.</p>	<p>3. Empty and rinse tank.</p>
		
<p>4. Handwash tank with mild dish soap. Dry for 24 hours before reassembling. Note: This tank is not dishwasher safe.</p>	<p>5. Place separator stack and cap onto dirty water tank and firmly tighten.</p>	<p>6. Reinstall tank.</p>

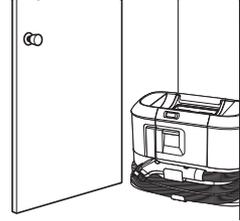
Storing Your Machine



1. Wrap hose around machine. Wrap cord around cord wraps.



2. Leave machine in Rinse mode for storage.



3. Store machine in cool dry place.

Troubleshooting

Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit global.BISSELL.com.



Problem	Possible Cause	Remedies
Reduced or no suction	Dirty tank full or not seated properly.	Empty tank and replace, snapping top lid into place.
	Clog or build-up in hose.	Suction hot water up to clear hose.
	Loose hose connection.	Ensure hose is locked in place.
Reduced spray or not spraying	Formula or water tank is empty.	Check and refill tanks.
	Spray tip clogged.	Rinse tool with warm water and use soft bristle brush on spray tips.
	Loose hose connection.	Ensure hose is locked in place. Hold trigger until water comes out.
	Lost prime.	Turn machine OFF. Refill the tanks as needed. Turn machine ON and hold the trigger until spray resumes.
Leaking	Water has not reached the dirty water tank.	Suction water up until it appears in the tank.
	Dirty water tank gasket not in place or damaged.	Place gasket in correctly (notched); if damaged, replace gasket.
	Loose hose connection.	Ensure hose is locked in place. Hold trigger until water comes out.
	Damaged or torn hose.	Have an authorized technician repair machine.
	Clean water tank cap is not securely tightened.	Remove clean water tank, unscrew cap, then place cap back on tank and tighten securely.

Note: Any other servicing should be performed by an authorized service representative.

NOTICE: To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result. Store machine in protected, dry area at room temperature (4°C - 40°C).

Limited Warranty

This limited warranty is provided by BISSELL® International Trading Company B.V. ("BISSELL") and applies in Australia and New Zealand. It gives you specific rights. It is offered as an additional benefit to your rights under law. You also have other rights under The Australian Consumer Law or New Zealand Consumer Laws, whichever applies to you. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this warranty will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor.

This warranty is given to the current owner of the product with the original sales receipt. The original sales receipt must include the product(s) purchased, the date purchased, and which country it was purchased from new. You must be able to evidence the date of purchase and show the product was purchased in Australia or New Zealand to submit a claim under this warranty. You will receive the warranty that is applicable to the country where your product was originally purchased, as shown on the original sales receipt. If you use the product outside of the country where it was purchased, your warranty may be void in BISSELL's sole discretion. It may be necessary to obtain some of your personal information, such as a mailing address, to fulfill the terms of this warranty. Any personal data will be handled pursuant to BISSELL's Privacy Policy, which can be found at global.BISSELL.com/privacy-policy.

Limited 2- or 3-Year Warranty (varies by model)

Model 3599H: Limited 3-Year Warranty

Model 3582F: Limited 2-Year Warranty

For the time periods listed above from the date of purchase by the original purchaser, subject to the *Conditions of Warranty identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge, any defective or malfunctioning part or product.

BISSELL recommends that the original packaging and original proof of purchase with the date of purchase and country where purchased be kept for the duration of the warranty period in case you want to redeem the warranty during the warranty period. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the warranty.

If your product is replaced by BISSELL under this warranty, then the new item will benefit from the remainder of the term of this warranty (calculated from the date of the original purchase). The period of this warranty shall not be extended whether or not your product is repaired or replaced.

*Conditions of Warranty

This warranty applies to products used for personal domestic use and not commercial or hire purposes. Consumable components and attachments such as filters, belts, shells, water tanks, scraping strips, brushes, and mop pads, which must be replaced or serviced by the user from time to time, are not covered by this warranty.

This warranty does not apply to any defect arising from fair wear and tear, including but not limited to the battery discharging time shortening due to the aging or use. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the user guide is not

covered by this warranty. An unauthorised repair (or attempted repair) may void this warranty whether or not damage has been caused by that repair/attempt. Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this warranty.

Except as set out below, BISSELL and its distributors are not liable for any loss or damage that is not foreseeable or for incidental or consequential damages of any nature associated with the use of this product including without limitation loss of profit, loss of business, business interruption, loss of opportunity, distress, inconvenience, or disappointment. Except as set out below, BISSELL's liability will not exceed the purchase price of the product.

BISSELL does not exclude or limit in any way its liability for (a) death or personal injury caused by our negligence or the negligence of our employees, agents or subcontractors; (b) fraud or fraudulent misrepresentation; (c) or for any other matter which cannot be excluded or limited under law.

To make a claim under this warranty contact BISSELL Australia PTY LTD (details below). Contact BISSELL prior to returning any goods. Where agreed, BISSELL will reimburse reasonable postage / handling costs (if any) for returning goods to BISSELL. To claim expenses incurred in making a claim under this warranty please provide BISSELL with a copy of the receipt of the expenses by email or post.

For Australian Consumers Only: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Important Notes

Please keep your original sales receipt. It provides proof of the date of purchase and where it was purchased in the event of a warranty claim. See warranty for details.

Please note that using your BISSELL machine outside of its country of original purchase and/or use with a power converter may damage your BISSELL machine and damage caused by mismatched power voltage will not be covered by your warranty.

Please note that putting vinegar, bleach, dish soap, detergent, homemade soap, and other non-BISSELL products in your BISSELL machine may damage your BISSELL machine. Damage caused by using non-BISSELL products in your machine will not be covered by your warranty.

Consumer Care

If your BISSELL product should require service or to claim under our limited guarantee, please contact us.

Australia

Telephone: 1300 247 735

Website: BISSELL.com.au

Address: 789 Springvale Road, Mulgrave, Victoria 3170

Email: consumercareau@bissell.com

New Zealand

Telephone: 0800 247 735

Website: www.BISSELL.co.nz

Address: 789 Springvale Road, Mulgrave, Victoria 3170

Email: consumercarenz@bissell.com

