

# Next-generation instant water filter

2X more filtered water, enjoyed 4X faster



## TABLE OF CONTENTS

<b>Important</b>	-----	<b>1</b>
<b>Warning</b>	-----	<b>1</b>
<b>Using the device</b>	-----	<b>2</b>
<b>Display</b>	-----	<b>3</b>
<b>Filter lifetime indication and replacement</b>	-----	<b>3</b>
<b>Maintenance</b>	-----	<b>4</b>
<b>Guarantee &amp; Service</b>	-----	<b>4</b>
<b>Packaging list</b>	-----	<b>4</b>

### Important

Please read this important information carefully before you use the device and save it for future reference.


### Warning

- This device is intended to filter tap water only. Do not put water of unknown quality or that has been microbiologically unsafe into the device.
- This device is designed to be used with water of temperature of 2-38°C/32-95°F.
- Do not put the device in the dishwasher for cleaning.
- Do not subject the device to impact or fall so as not to affect its normal function.
- If the tap water is turbid, please run the tap water for a while before filling in the water tank to ensure the filter lifetime.
- The filter may be moist due to the evaporation of water from the resin, which is normal and does not affect the use.
- According to the water quality and actual usage in different regions, please replace the filter regularly.
- Please do not immerse the device in water.
- Keep the device from direct sunlight, or any other heat source. Do not expose the device to moisture.
- Do not charge this device for a long time to avoid damage to the battery.
- To ensure the battery life, please charge it frequently to maintain sufficient power.
- The filtered water should be consumed within 24 hours.
- Do not put this product in the freezer, as it may cause damage to the product.

### Using the device

Cleaning instructions before use

- |  |   |   |
|--|---|---|
| <b>01</b> Remove all packaging from the device and the filter.                                 | <b>02</b> Clean the water tank with water or a clean damp cloth. (Note: Please do not immerse the device in water)                  | <b>03</b> Fully charge the device until the button shows constant blue light. |
| <b>04</b> Check if the sealing ring is intact on the filter. Install the filter in the device. | <b>05</b> Fill the tank with tap water to the max line, and press the dispensing button to discard 3L of water to flush the device. | <b>06</b> The device now is ready for use. Enjoy freshly filtered water.      |

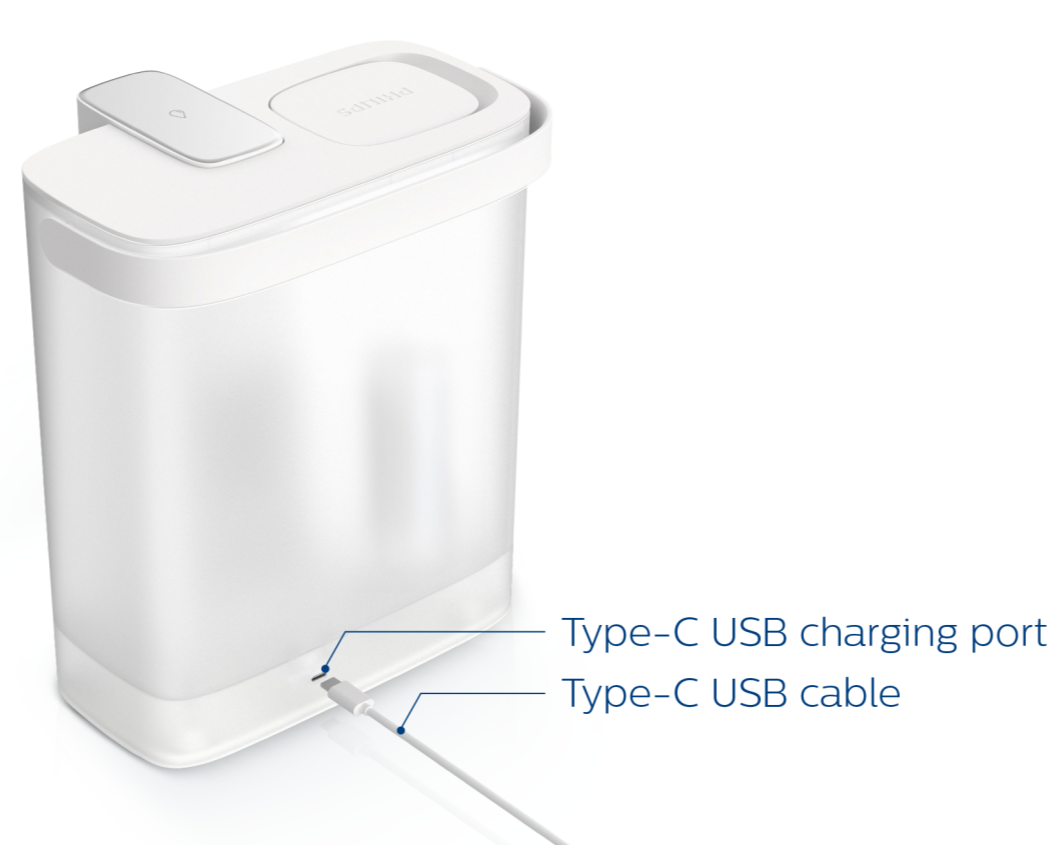

### Display

Press the button to start dispensing filtered water, and press it again to stop. The device will stop automatically in 1 minute. If the tank is in short of water, the device will not respond even if you press the button.

- |   |  |   |  |
|---|--|---|--|
| No light indication: the device is in standby mode                        | Constant blue light: the device is dispensing water  | Flashing red light when dispensing: the device should be recharged soon | Constant blue light: the device is fully charged |
| Flashing purple light when dispensing: the filter should be replaced soon | Flashing purple light and red light alternately when dispensing: the filter should be replaced, and the device should be recharged |   |  |

### Filter lifetime indication and replacement

- With a usage-based filter lifetime monitoring, the indicator will show constant purple light to remind you to replace the filter after 100L or every 30 days, whichever comes first.
- When the filter lifetime is less than 3 days or the remaining filtration capacity is less than 6L, the indicator will flash purple light to notify.
- Filter lifetime reset: press and hold the dispense button for 8 seconds. When the filter lifetime reset is completed, the indicator light will flash blue light 3 times.
- To prevent the filter from drying out, it should not be left unused for long periods. If such an extended period is anticipated (such as a holiday), then it is recommended to remove the filter and store it in a sealed plastic bag before putting it in the refrigerator (not the freezer).

- If the filter hasn't been used for more than 5 days, please discard 3L of water to flush the filter media; if it hasn't been used for more than 15 days, the filter should be replaced.
- Also please store the device completely dry when it is expected to be unused for a long period.

### Maintenance

Wash and rinse the tank regularly. Remove the filter and discard all the water before cleaning. The lid should be wiped clean with a damp cloth. Only use mild cleaning agents, never use solvents or corrosive chemicals. Never use abrasive pads on this device.

### Guarantee & Service

If you need information or if you have any question, please visit the Philips website at [www.philips.com/water](http://www.philips.com/water) or contact the consumer care center in your country. If there is no consumer care center in your country, go to the local dealer.

### Packaging list

- |              |    |                                 |    |
|--------------|----|---------------------------------|----|
| Device ----- | x1 | Type-C USB charging cable ----- | x1 |
| Filter ----- | x1 | Quick start guide -----         | x1 |