

# Dell PowerEdge R760xa

## Installation and Service Manual

## Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

<b>Chapter 1: About this document</b> .....	<b>8</b>
<b>Chapter 2: DellPowerEdge R760xa system overview</b> .....	<b>9</b>
Front view of the system.....	9
Left control panel view.....	12
Right control panel view.....	13
Rear view of the system.....	14
Inside the system.....	16
Locating the Express Service Code and Service Tag.....	17
System information labels.....	17
Rail sizing and rack compatibility matrix.....	20
<b>Chapter 3: Technical specifications</b> .....	<b>21</b>
Chassis dimensions .....	22
System weight.....	22
Processor specifications.....	23
PSU specifications.....	23
Supported operating systemsR760xa.....	24
Cooling fan specifications.....	24
System battery specifications.....	25
Expansion card riser specifications.....	25
Memory specifications.....	26
Storage controller specifications.....	27
Drives.....	28
Ports and connectors specifications.....	28
USB ports specifications.....	28
NIC port specifications.....	28
Serial connector specifications.....	28
VGA ports specifications.....	29
Video specifications.....	29
Environmental specifications.....	29
Particulate and gaseous contamination specifications.....	30
Thermal air restrictions.....	31
Liquid cooling restrictions.....	32
Thermal restriction matrix.....	32
<b>Chapter 4: Initial system setup and configuration</b> .....	<b>34</b>
Setting up the system.....	34
iDRAC configuration.....	34
Options to set up iDRAC IP address.....	34
Options to log in to iDRAC.....	35
Resources to install operating system.....	36
Options to download drivers and firmware .....	36
Options to download and install OS drivers .....	37

Downloading drivers and firmware.....	37
<b>Chapter 5: Pre-operating system management applications.....</b>	<b>38</b>
System Setup.....	38
System BIOS.....	39
iDRAC Settings.....	58
Device Settings.....	58
Service Tag Settings.....	58
Dell Lifecycle Controller.....	58
Embedded system management.....	58
Boot Manager.....	58
PXE boot.....	59
<b>Chapter 6: Minimum to POST .....</b>	<b>60</b>
Minimum configuration to POST .....	60
Configuration validation.....	60
Error messages.....	61
<b>Chapter 7: Disassembly and Reassembly.....</b>	<b>62</b>
Safety Instructions.....	62
Before working inside your system .....	63
After working inside your system.....	63
Recommended tools.....	63
Optional front bezel.....	64
Removing the front bezel.....	64
Installing the front bezel.....	65
System cover.....	66
Removing the system cover.....	66
Installing the system cover.....	67
Drive backplane cover.....	68
Removing the drive backplane cover.....	68
Installing the drive backplane cover.....	69
Air shroud.....	71
Removing the air shroud.....	71
Installing the air shroud.....	72
Cooling fans.....	74
Removing the cooling fan cage assembly .....	74
Installing the cooling fan cage assembly.....	74
Removing a cooling fan.....	75
Installing a cooling fan.....	76
Side wall brackets.....	77
Removing the side wall bracket.....	77
Installing the side wall bracket.....	78
Drives.....	79
Removing a drive blank.....	79
Removing an E3.S drive blank.....	80
Installing a drive blank.....	81
Installing an E3.S drive blank.....	81
Removing the drive carrier.....	82

Removing the E3.S drive carrier.....	82
Installing the drive carrier.....	83
Installing the E3.S drive carrier.....	84
Removing the drive from the drive carrier.....	85
Removing the E3.S drive from the drive carrier.....	86
Installing the drive into the drive carrier.....	87
Installing the E3.S drive into the drive carrier.....	88
Removing a NVMe drive blank.....	89
Installing a NVMe drive blank.....	90
PERC module.....	91
Removing the rear mounting front PERC module.....	91
Installing the rear mounting front PERC module.....	92
Drive backplane.....	93
Drive backplane.....	93
Removing the drive backplane .....	95
Installing the drive backplane.....	97
Cable routing.....	99
System memory.....	109
System memory guidelines.....	109
General memory module installation guidelines.....	111
Removing a memory module.....	112
Installing a memory module.....	112
Processor and heat sink module.....	114
Removing the processor and heat sink module.....	114
Removing the processor.....	116
Installing the processor.....	118
Installing the processor and heat sink module.....	121
Removing the liquid cooling module.....	123
Installing the liquid cooling module.....	125
Expansion cards and expansion card risers.....	126
Expansion card installation guidelines.....	127
Removing the expansion card risers.....	135
Installing the expansion card risers.....	138
Removing expansion card from the expansion card riser.....	140
Installing an expansion card into the expansion card riser.....	142
Removing the GPU riser module.....	144
Installing the GPU riser module.....	146
Removing the GPU.....	147
Installing the GPU.....	149
Removing the sponges.....	151
Installing the sponges.....	152
Removing the Bridge Cards.....	153
Installing the Bridge Cards.....	154
Removing the GPU riser module card holders.....	156
Installing the GPU riser module card holders.....	157
Optional serial COM port.....	158
Removing the serial COM port.....	158
Installing the serial COM port.....	159
Optional VGA port for liquid cooling module.....	160
Removing the VGA port.....	160

Installing the VGA port.....	161
Optional BOSS-N1 module.....	162
Removing the BOSS-N1 module blank.....	162
Installing the BOSS-N1 module blank.....	163
Removing the BOSS-N1 card carrier blank.....	164
Installing the BOSS-N1 card carrier blank.....	165
Removing the BOSS-N1 module.....	166
Installing the BOSS-N1 module.....	169
Removing the BOSS-N1 shroud.....	171
Installing the BOSS-N1 shroud.....	172
System battery .....	173
Replacing the system battery.....	173
Optional internal USB card.....	175
Removing the internal USB card.....	175
Installing the internal USB card.....	176
Intrusion switch.....	177
Removing the intrusion switch module.....	177
Installing the intrusion switch module.....	177
Optional OCP NIC card.....	178
Removing the OCP card.....	178
Installing the OCP card.....	179
Power supply unit.....	181
Hot spare feature.....	181
Removing a power supply unit blank.....	182
Installing a power supply unit blank.....	182
Removing a power supply unit.....	183
Installing a power supply unit.....	184
Trusted Platform Module.....	185
Upgrading the Trusted Platform Module.....	185
Initializing TPM for users.....	186
Initializing the TPM 1.2 for users.....	186
Initializing the TPM 2.0 for users.....	186
System board.....	186
Removing the system board.....	186
Installing the system board.....	187
Restoring the system using Easy Restore.....	189
LOM card, MIC card, and rear I/O board.....	189
Removing the LOM card and rear I/O board.....	189
Installing the LOM card and rear I/O board.....	191
Control panel.....	193
Removing the right control panel.....	193
Installing the right control panel.....	194
Removing the left control panel.....	195
Installing the left control panel.....	196
<b>Chapter 8: Upgrade Kits.....</b>	<b>198</b>
BOSS-N1 module kit.....	198
GPU kit.....	201
Internal USB card kit.....	203
Serial COM port kit.....	203

VGA port kit.....	203
<b>Chapter 9: Jumpers and connectors.....</b>	<b>204</b>
System board jumpers and connectors.....	205
System board jumper settings.....	207
Disabling a forgotten password.....	207
<b>Chapter 10: System diagnostics and indicator codes.....</b>	<b>209</b>
Status LED indicators.....	209
System health and system ID indicator codes.....	211
iDRAC Quick Sync 2 indicator codes.....	212
iDRAC Direct LED indicator codes.....	212
LCD panel.....	213
Viewing Home screen.....	213
Setup menu.....	214
View menu.....	214
NIC indicator codes.....	215
Power supply unit indicator codes.....	215
Drive indicator codes.....	217
Using system diagnostics.....	218
Dell Embedded System Diagnostics.....	218
<b>Chapter 11: Getting help.....</b>	<b>220</b>
Recycling or End-of-Life service information.....	220
Contacting Dell Technologies.....	220
Accessing system information by using QR code.....	220
QR code for PowerEdge R760xa system resources.....	221
Receiving automated support with Secure Connect Gateway (SCG).....	221
<b>Chapter 12: Documentation resources.....</b>	<b>222</b>

# About this document

This document provides an overview about the system, information about installing and replacing components, diagnostic tools, and guidelines to be followed while installing certain components.

# DellPowerEdge R760xa system overview

The PowerEdge R760xa system is a 2U server that supports:

- Up to two 4<sup>th</sup> Generation Intel Xeon® Scalable Processors with up to 56 cores
- Up to two 5<sup>th</sup> Generation Intel® Xeon® Scalable Processors with up to 64 cores
- Thirty-two DIMM slots
- Two redundant AC or DC power supply units
- Up to 6 x 2.5-inch NVMe (SSD) drives
- Up to 8 x 2.5-inch SAS/SATA/NVMe (SSD) drives
- Up to 6 x E3.S NVMe (SSD) drives

**NOTE:** For more information about how to hot swap NVMe PCIe SSD U.2 device, see the *Dell Express Flash NVMe PCIe SSD User's Guide* at [Dell Support > Browse all products > Infrastructure > Data Center Infrastructure > Storage Adapters & Controllers > Dell PowerEdge Express Flash NVMe PCIe SSD > Select This Product > Documentation > Manuals and Documents](#).

**NOTE:** All instances of SAS, SATA, NVMe drives are referred to as drives in this document, unless specified otherwise.

**CAUTION:** Do not install GPUs, network cards, or other PCIe devices on your system that are not validated and tested by Dell. Damage caused by unauthorized and invalidated hardware installation will null and void the system warranty.

## Topics:

- [Front view of the system](#)
- [Rear view of the system](#)
- [Inside the system](#)
- [Locating the Express Service Code and Service Tag](#)
- [System information labels](#)
- [Rail sizing and rack compatibility matrix](#)

## Front view of the system

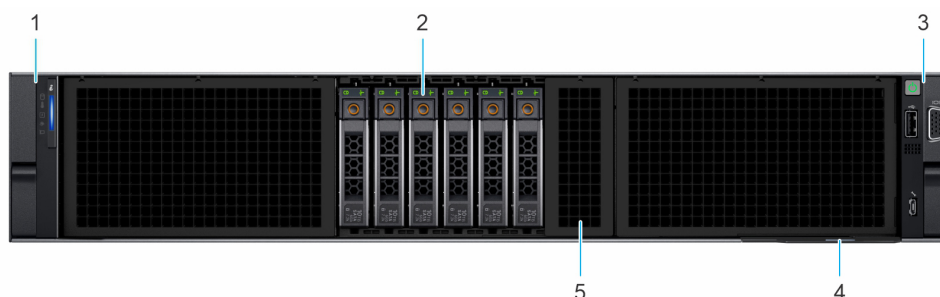



Figure 1. Front view of 6 x 2.5-inch drive system

Table 1. Features available on the front of the system

Item	Ports, panels, and slots	Icon	Description
1	Left control panel	N/A	Contains the system health, system ID, and the status LED indicator.
2	Drives	N/A	Enables you to install drives that are supported on your system.

**Table 1. Features available on the front of the system (continued)**

Item	Ports, panels, and slots	Icon	Description
			<b>NOTE:</b> For drive slot numbers, see the <a href="#">System information labels</a> section.
3	Right control panel	N/A	Contains the power button, VGA port, USB port, iDRAC Direct (Micro-AB USB) port, and the iDRAC Direct status LED.
4	Information Tag	N/A	The Information Tag is a slide-out label panel that contains system information such as Service Tag, NIC, MAC address, and so on. If you have opted for the secure default access to iDRAC, the Information tag will also contain the iDRAC secure default password.
5	Drive blank	N/A	Drive blank for drive direct attached configuration.

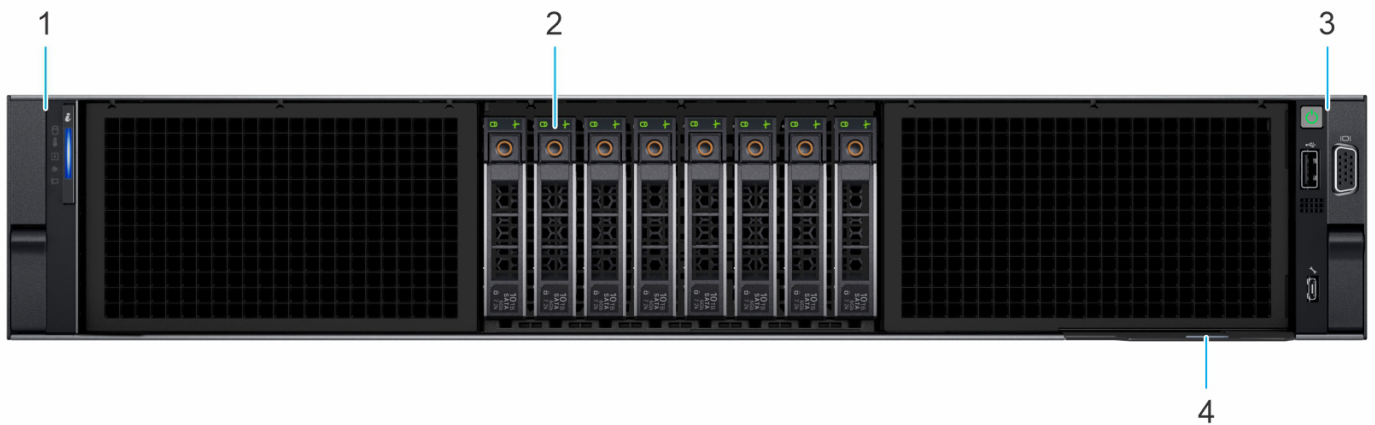

**Figure 2. Front view of 8 x 2.5-inch drives system**

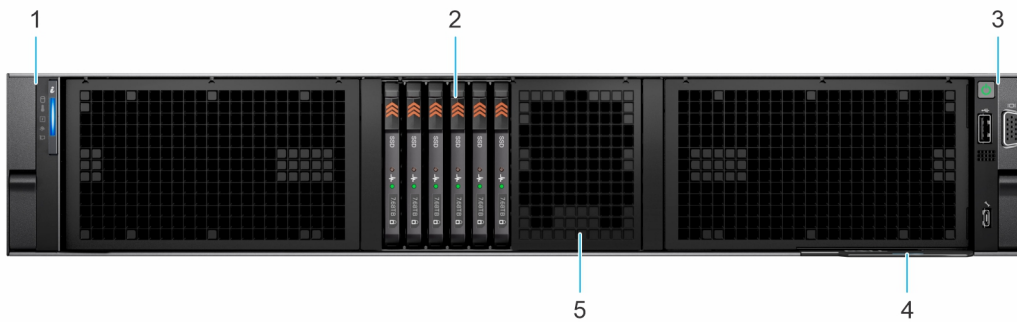


Figure 3. Front view of 6 x E3.S drives system

Table 2. Features available on the front of the system

Item	Ports, panels, and slots	Icon	Description
1	Left control panel	N/A	Contains the system health, system ID, and the status LED indicator.
2	Drives	N/A	Enables you to install drives that are supported on your system. <i>i</i> <b>NOTE:</b> For drive slot numbers, see the <a href="#">System information labels</a> section.
3	Right control panel	N/A	Contains the power button, VGA port, USB port, iDRAC Direct (Micro-AB USB) port, and the iDRAC Direct status LED.
4	Information Tag	N/A	The Information Tag is a slide-out label panel that contains system information such as Service Tag, NIC, MAC address, and so on. If you have opted for the secure default access to iDRAC, the Information tag will also contain the iDRAC secure default password.
5	Drive blank	N/A	Drive blank for drive direct attached configuration.

**NOTE:** For more information about the ports, see the [Technical specifications](#) section.

## Left control panel view

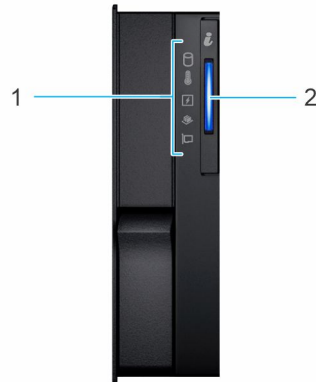


Figure 4. Left control panel

Table 3. Left control panel

Item	Indicator, button, or connector	Icon	Description
1	Status LED indicators	N/A	Indicates the status of the system. For more information, see the <a href="#">Status LED indicators</a> section.
2	System health and system ID indicator	<i>i</i>	Indicates the status of the system. For more information, see the <a href="#">System health and system ID indicator codes</a> section.

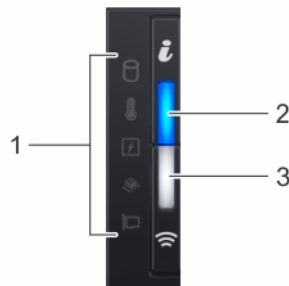


Figure 5. Left control panel with optional iDRAC Quick Sync 2 indicator

Table 4. Left control panel with optional iDRAC Quick Sync 2 indicator


Item	Indicator, button, or connector	Icon	Description
1	Status LED indicators	N/A	Indicates the status of the system. For more information, see the <a href="#">Status LED indicators</a> section.
2	System health and system ID indicator	<i>i</i>	Indicates the system health. For more information, see the <a href="#">System health and system ID indicator codes</a> section.
3	iDRAC Quick Sync 2 wireless indicator (optional)	☰	Indicates if the iDRAC Quick Sync 2 wireless option is activated. The Quick Sync 2 feature allows management of the system using mobile devices. This feature aggregates hardware/firmware inventory and various system level diagnostic/error information that can be used in troubleshooting the system. You can access system inventory, Dell Lifecycle Controller logs or system logs, system health status, and also configure iDRAC, BIOS, and networking parameters. You can also launch the virtual

**Table 4. Left control panel with optional iDRAC Quick Sync 2 indicator (continued)**

Item	Indicator, button, or connector	Icon	Description
			Keyboard, Video, and Mouse (KVM) viewer and virtual Kernel-based Virtual Machine (KVM), on a supported mobile device. For more information, see the Integrated Dell Remote Access Controller User's Guide at <a href="#">PowerEdge manuals</a> .

**NOTE:** For more information about the indicator codes, see the [System diagnostics and indicator codes](#) section.

## Right control panel view

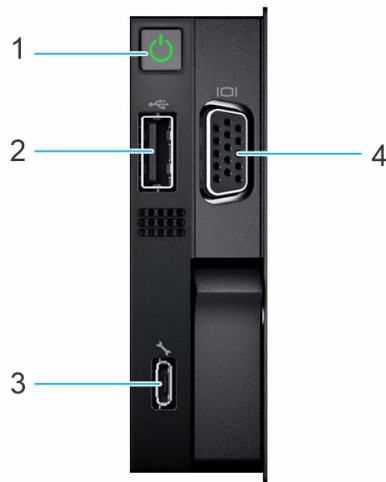

**Figure 6. Right control panel**

**Table 5. Right control panel**

Item	Indicator or button	Icon	Description
1	Power button		Indicates if the system is powered on or off. Press the power button to manually power on or off the system. <b>NOTE:</b> Press the power button to gracefully shut down an ACPI-compliant operating system.
2	USB 2.0 port		The USB port is 4-pin, 2.0-compliant. This port enables you to connect USB devices to the system.
3	iDRAC Direct (Micro-AB USB) port		The iDRAC Direct (Micro-AB USB) port enables you to access the iDRAC direct Micro-AB USB features. For more information, see the <i>Integrated Dell Remote Access Controller User's Guide</i> at <a href="#">PowerEdge Manuals</a> . <b>NOTE:</b> You can configure iDRAC Direct by using a USB to micro USB (type AB) cable, which you can connect to your laptop or tablet. Cable length should not exceed 3 feet (0.91 meters). Performance could be affected by cable quality.
4	VGA port		Enables you to connect a display device to the system.

**NOTE:** For more information about the ports, see the [Technical Specifications](#) section.

## Rear view of the system

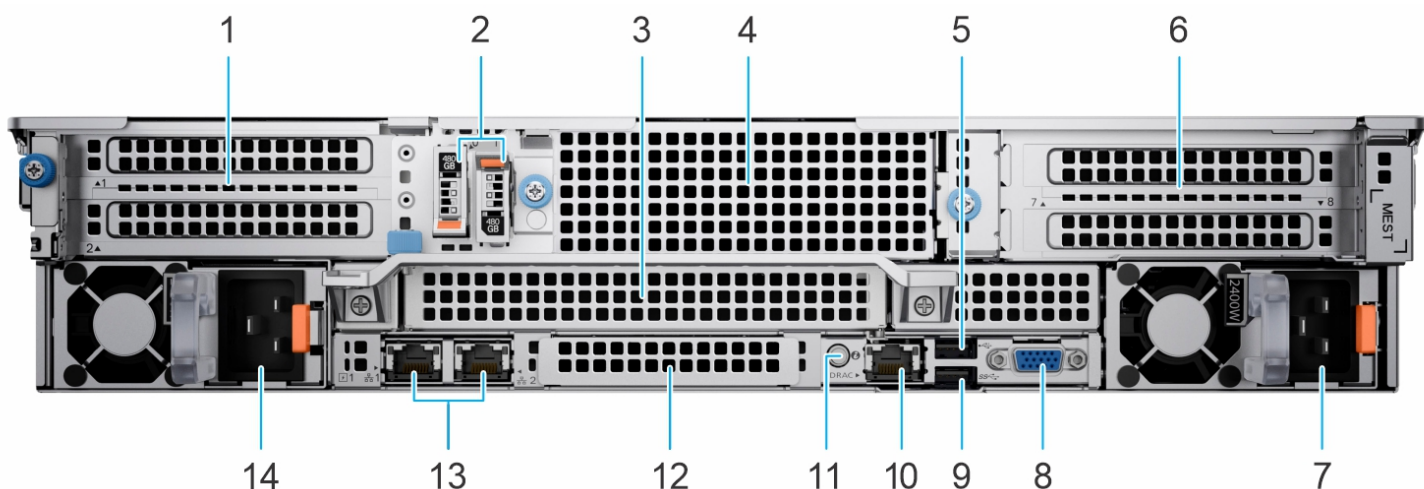

 

 


 


Figure 7. Rear view of the system

Table 6. Rear view of the system

Item	Ports, panels, or slots	Icon	Description
1	PCIe expansion card riser 1 (slot 1 and slot 2)	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information, see <a href="#">Expansion card installation guidelines</a> section.
2	BOSS-N1 (optional)	N/A	BOSS-N1 (optional) for internal system boot.
3	PCIe expansion card riser 2 blank	N/A	The expansion card riser blank is required to ensure proper system cooling. For more information, see <a href="#">Expansion card installation guidelines</a> section.
4	PCIe expansion card riser 3 blank	N/A	The expansion card riser blank is required to ensure proper system cooling. For more information, see <a href="#">Expansion card installation guidelines</a> section.
5	USB 2.0 port		The USB port is 4-pin, 2.0-compliant. This port enables you to connect USB devices to the system.
6	PCIe expansion card riser 4 (slot 7 and slot 8)	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information, see <a href="#">Expansion card installation guidelines</a> section.
7	Power supply unit (PSU2)		PSU2 is the secondary PSU of the system.
8	VGA port		Enables you to connect a display device to the system.
9	USB 3.0 port		The USB port is 9-pin and 3.0-compliant. This port enables you to connect USB devices to the system.
10	Dedicated iDRAC9 Ethernet port	<b>iDRAC</b>	Enables you to remotely access iDRAC. For more information, see the <i>Integrated Dell Remote Access Controller User's Guide</i> at <a href="#">PowerEdge Manuals</a> .
11	System Identification (ID) button		The System Identification (ID) button is available on the front and back of the system. Press the button to identify a system in a rack by turning on the system ID button. You can also use the system ID button to reset iDRAC and to access BIOS using the step through mode. When pressed, the system ID LED in the back panel blinks until either the front or rear button is pressed again. Press the button to toggle between on or off mode.

**Table 6. Rear view of the system (continued)**

Item	Ports, panels, or slots	Icon	Description
			<p><b>i</b> <b>NOTE:</b> If the server stops responding during POST, press and hold the <b>System ID</b> button for more than five seconds to enter the BIOS progress mode.</p> <p><b>i</b> <b>NOTE:</b> To reset the iDRAC (if not disabled on the iDRAC setup page by pressing F2 during system boot), press and hold the <b>System ID</b> button for more than 15 seconds.</p>
12	OCP NIC card blank	N/A	The optional OCP NIC card supports OCP 3.0. The NIC ports are integrated on the OCP card which is connected to the system board.
13	NIC ports (optional)		The NIC ports that are integrated on the LOM card provide network connectivity which is connected to the system board.
14	Power supply unit (PSU1)	 1	PSU1 is the primary PSU of the system.

**i** **NOTE:** For more information about the ports, see the [Technical Specifications](#) section.

# Inside the system

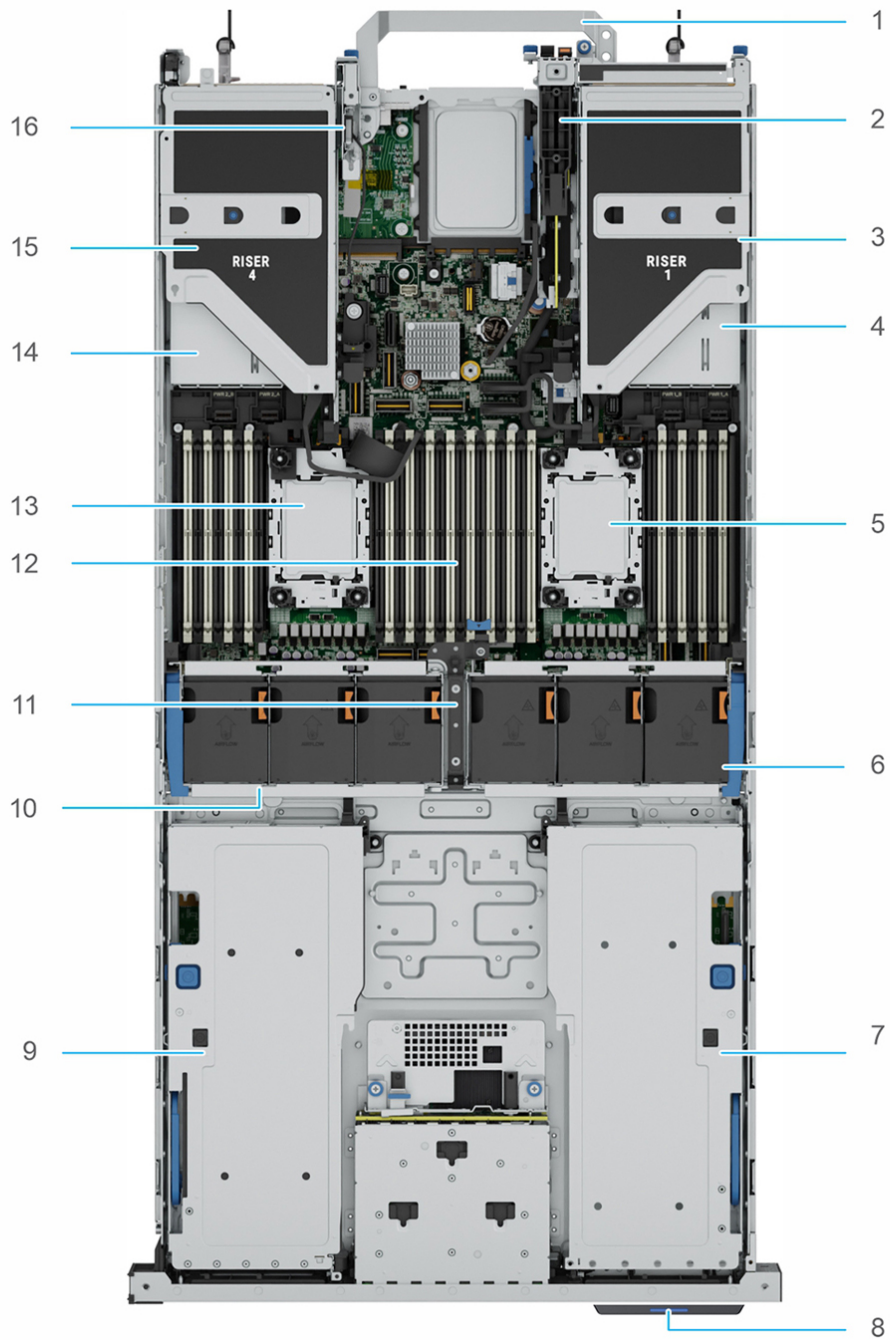


Figure 8. Inside the system

1. Handle


2. BOSS-N1 module (optional)

- 3. Riser 1
- 5. Processor 1 slot
- 7. GPU Riser module right
- 9. GPU Riser module left
- 11. Cable access latch
- 13. Processor 2 slot
- 15. Riser 4
- 4. Power supply unit (PSU1)
- 6. Cooling fans
- 8. Information tag
- 10. Cooling fan cage assembly
- 12. Memory DIMM sockets
- 14. Power supply unit (PSU2)
- 16. Intrusion switch module

## Locating the Express Service Code and Service Tag

The unique Express Service Code and Service Tag are used to identify the system.

The Information tag is located on the front of the system that includes system information such as the Service Tag, Express Service Code, Manufacture date, NIC, MAC address, QR code, and so on. If you have opted for the secure default access to iDRAC, the Information tag also contains the iDRAC secure default password. If you have opted for iDRAC Quick Sync 2, the Information tag also contains the OpenManage Mobile (OMM) label, where administrators can configure, monitor, and troubleshoot the PowerEdge servers.

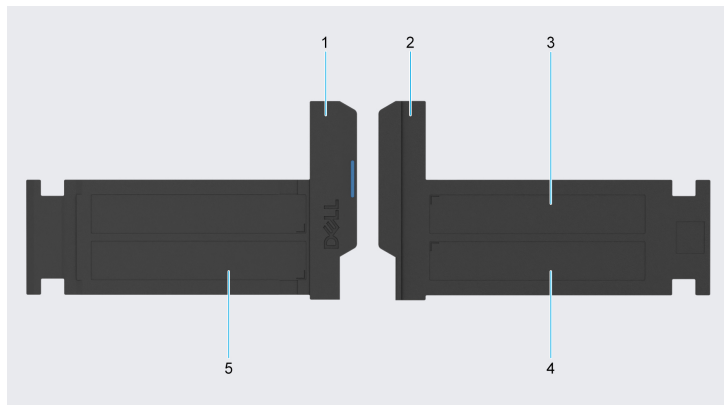

**Figure 9. Locating the Express Service Code and Service tag**

- 1. Service Tag (front view)
- 2. Service Tag (rear view)
- 3. OpenManage Mobile (OMM) label
- 4. iDRAC MAC address and iDRAC secure password label
- 5. Service Tag, Express Service Code, QR code

## System information labels

The system information labels are on the back side of the system cover.

**Figure 10. Service information**

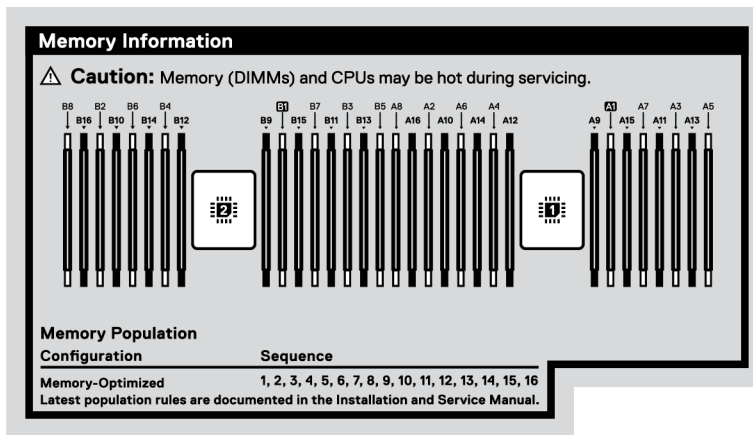
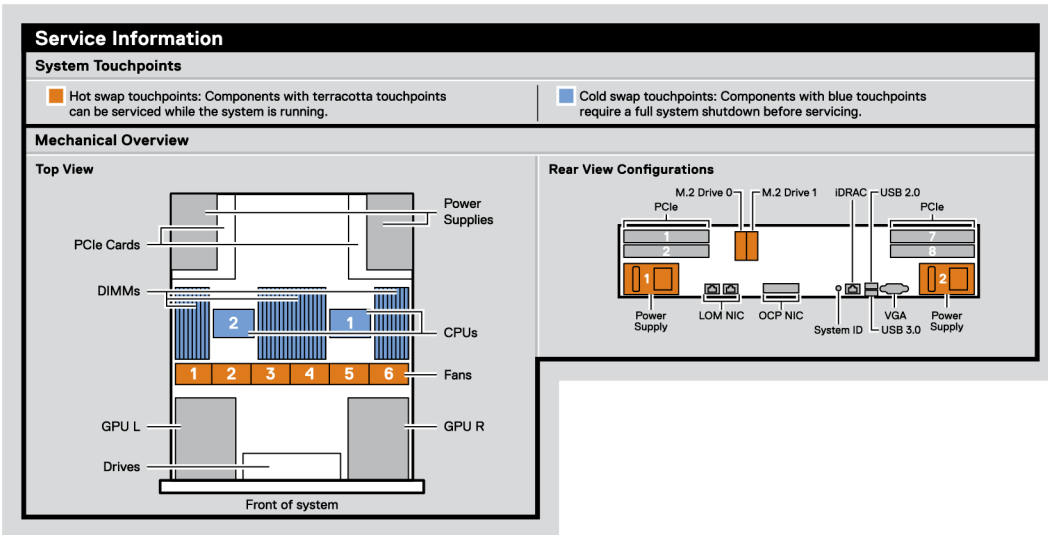


Figure 11. Memory information

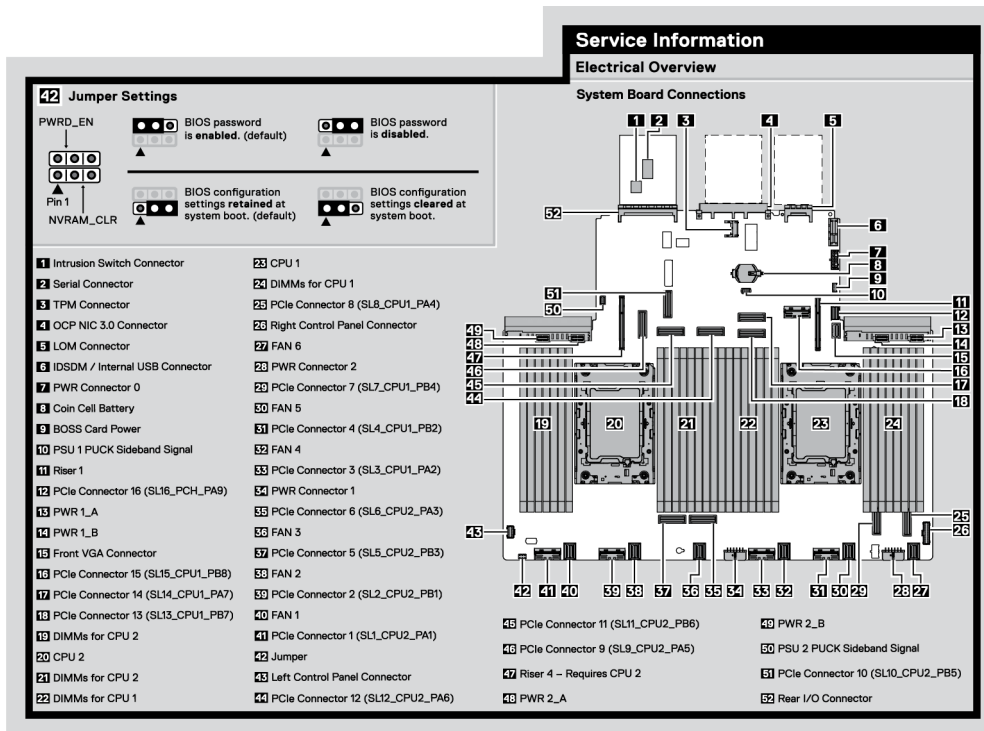


Figure 12. Electrical overview

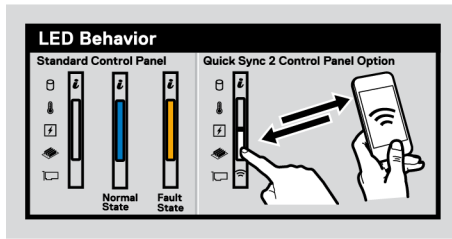


Figure 13. LED behavior

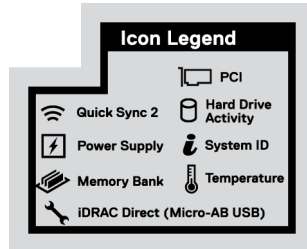


Figure 14. Icon legend

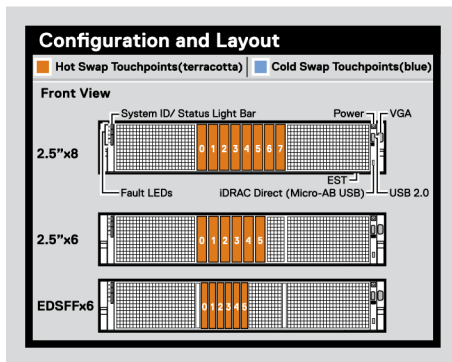


Figure 15. Configuration and layout for 2.5-inch drive system

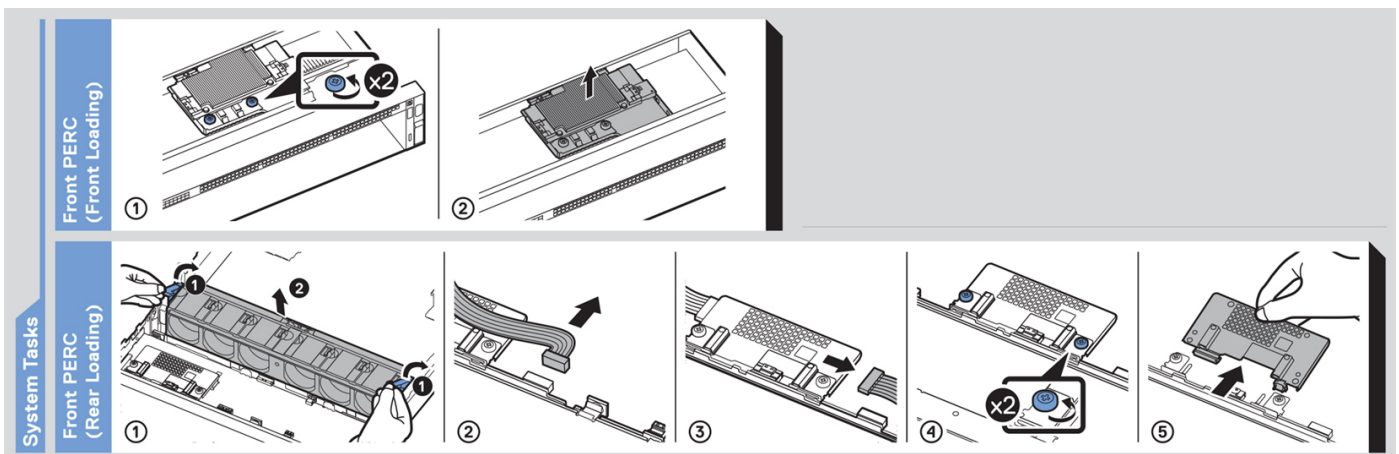


Figure 16. System tasks

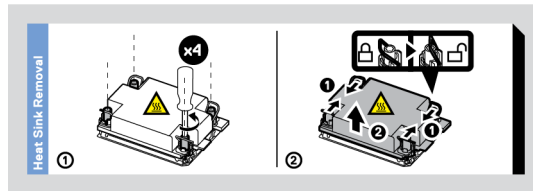


Figure 17. Heat sink

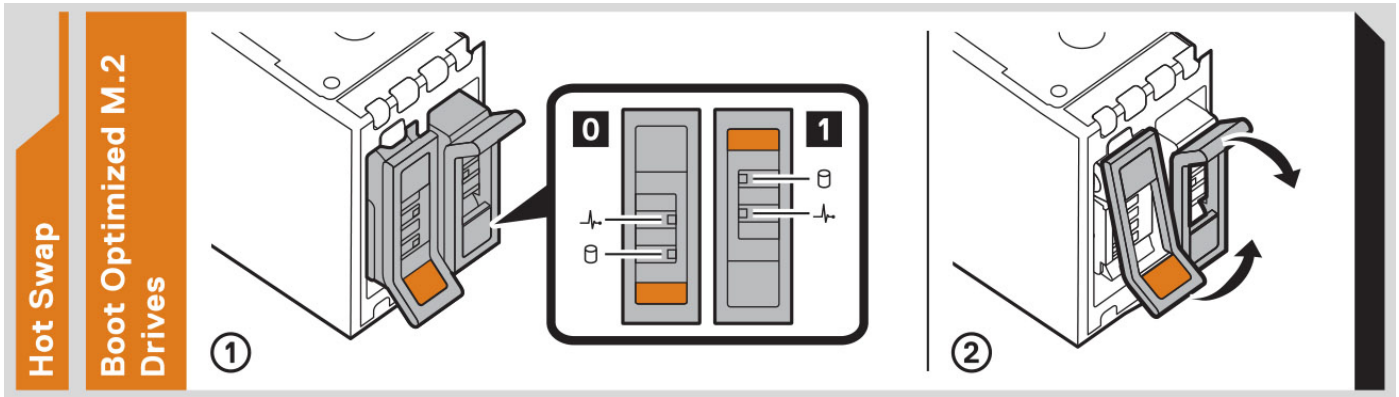


Figure 18. BOSS-N1

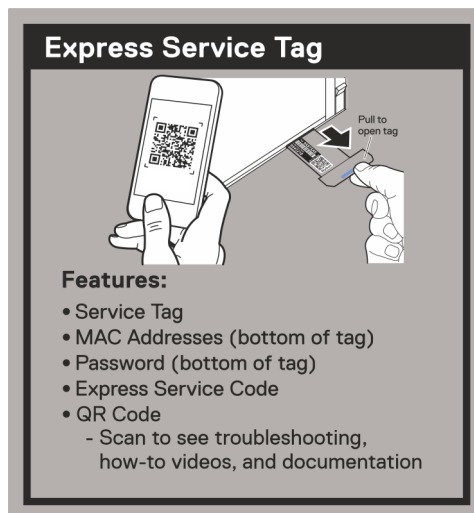


Figure 19. Express service tag

## Rail sizing and rack compatibility matrix

For specific information about the rail solutions compatible with your system, see the [Dell Enterprise Systems Rail Sizing and Rack Compatibility Matrix](#).

The document provides the information that is listed below:

- Specific details about rail types and their functionalities.
- Rail adjustability range for various types of rack mounting flanges.
- Rail depth with and without cable management accessories.
- Types of racks supported for various types of rack mounting flanges.

# Technical specifications

The technical and environmental specifications of your system are outlined in this section.

**Topics:**

- Chassis dimensions
- System weight
- Processor specifications
- PSU specifications
- Supported operating systems R760xa
- Cooling fan specifications
- System battery specifications
- Expansion card riser specifications
- Memory specifications
- Storage controller specifications
- Drives
- Ports and connectors specifications
- Video specifications
- Environmental specifications

# Chassis dimensions

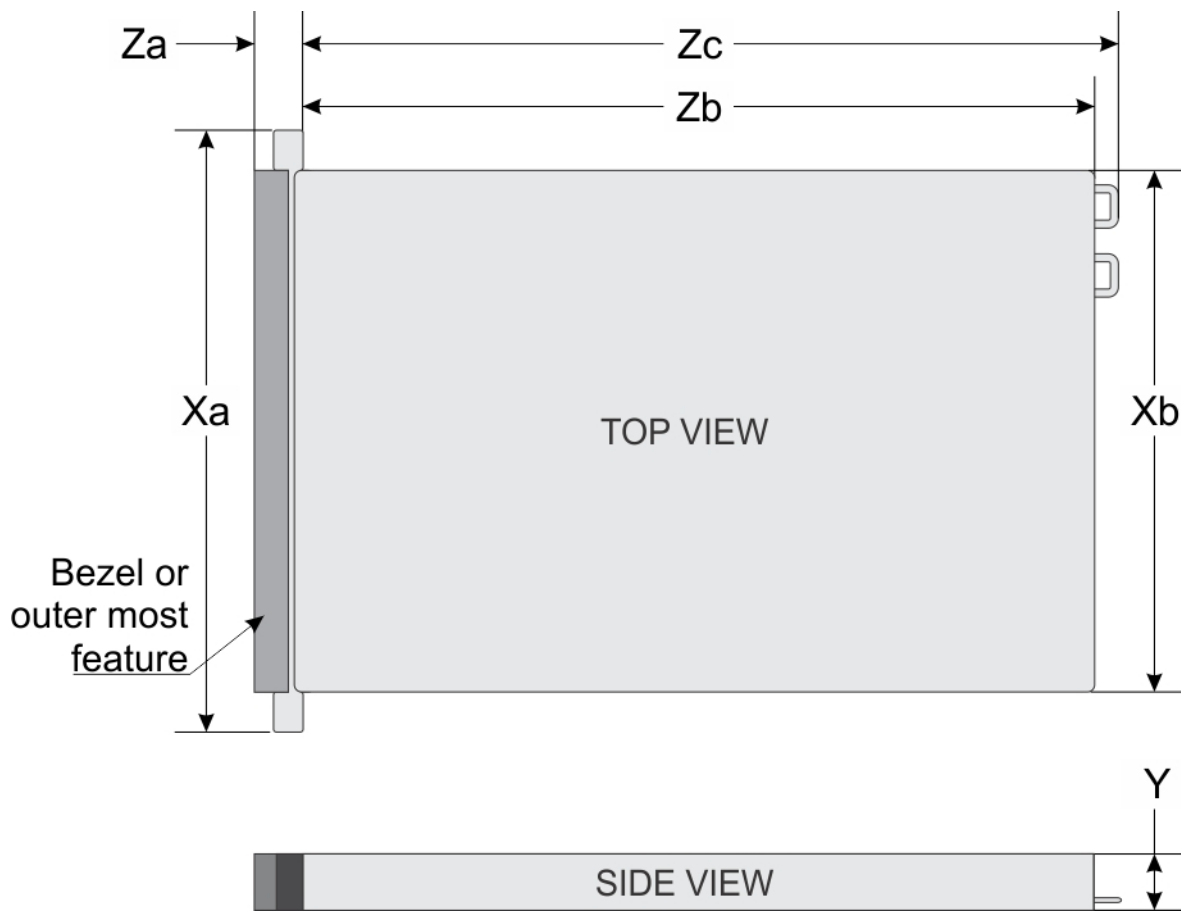


Figure 20. Chassis dimensions

Table 7. PowerEdge R760xa chassis dimensions

Xa	Xb	Y	Za	Zb	Zc
482.0 mm (18.97 inches)	434.0 mm (17.09 inches)	86.8 mm (3.41 inches)	35.84 mm (1.41 inches) With bezel 22.0 mm (0.86 inches) Without bezel	875.3 mm (34.46 inches) Ear to rear wall	910.89 mm (35.86 inches) Ear to PSU handle

**NOTE:** Zb is the nominal rear wall external surface where the system board I/O connectors reside.

# System weight

Table 8. PowerEdge R760xa system weight

System configuration	Maximum weight (with all drives/SSDs)
A server with fully populated drives	27.5 kg (60.62 lb)
A server without drives and PSU installed	25.1 Kg (55.33 lb)

# Processor specifications

**Table 9. PowerEdge R760xa processor specifications**

Supported processor	Number of processors supported
4 <sup>th</sup> or 5 <sup>th</sup> Generation Intel® Xeon® Scalable Processors	Up to two

# PSU specifications


The PowerEdge R760xa system supports up to two AC or DC power supply units (PSUs).

**Table 10. PSU specifications**

PSU	Class	Heat dissipation (maximum) (BTU/hr)	Frequency (Hz)	AC Voltage			DC Voltage		Current (A)
				200—240 V	100—120 V	277 V	240 V	336 V	
2400 W mixed mode	Platinum	9000	50/60	2400 W	1400 W	N/A	N/A	N/A	16—13.5
	N/A	10500	N/A	N/A	N/A	N/A	2400 W	N/A	11.2
2800 W mixed mode	Titanium	9000	50/60	2800 W	N/A	N/A	N/A	N/A	15.6
	N/A	10500	N/A	N/A	N/A	N/A	2800 W	N/A	13.6
3200 W mixed mode	Titanium	12000	50/60	N/A	N/A	3200 W	N/A	N/A	13.0
	Titanium	12000	N/A	N/A	N/A	N/A	N/A	3200 W	11.5

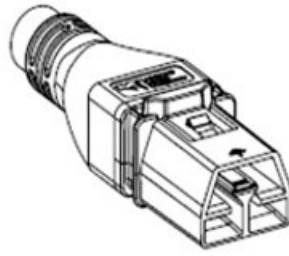- NOTE:** Heat dissipation is calculated using the PSU wattage rating.
- NOTE:** When selecting or upgrading the system configuration, to ensure optimum power utilization, verify the system power consumption with the Enterprise Infrastructure Planning Tool available at [calc](#).
- NOTE:** If a system with AC 2400 W PSUs operates at low line 100-120 Vac, then the power rating per PSU is degraded to 1400 W.





**Power Cord APP**

**Figure 21. PSU power cords**

**Table 11. PSU power cords**

Form factor	Output	Power cord
Redundant 86 mm	2400 W mixed mode	C19
	2800 W mixed mode	C21
	3200 W mixed mode	APP 2006G1

## Supported operating systems R760xa

The PowerEdge R760xa system supports the following operating systems:

- Canonical Ubuntu Server LTS
- Microsoft Windows Server with Hyper-V
- Red Hat Enterprise Linux
- SUSE Linux Enterprise Server
- VMware ESXi

**NOTE:** Intel Xeon® 6300 series CPUs do not support Windows Server 2019.

For more information, go to [Operating System Manuals](#).

## Cooling fan specifications

### Cooling options

The PowerEdge R760xa offers two types of cooling options:

- Air cooling
- Direct Liquid Cooling (DLC) (optional)

The PowerEdge R760xa system supports up to six standard (STD) cooling fans.

**Table 12. Cooling fan specifications**

Fan type	Abbreviation	Label color	Label image
Standard fans	STD	No label	

# System battery specifications

The PowerEdge R760xa system uses one CR 2032 3.0-V lithium coin cell battery.

# Expansion card riser specifications

The PowerEdge R760xa system supports up to four PCIe Gen5 x16 cards at the rear, and either four DW PCIe Gen5 x16 GPU cards or eight SW PCIe Gen5 x8 GPU cards at the front of the system.

**Table 13. Expansion card slots supported on the system board**

Slot no	Card support	CPU1			CPU2		
		R1V	RF1A	RF1B	R4T	RF2A	RF1B
PCIe Slot-1	FH-HL	x16	-	-	-	-	-
PCIe Slot-2	FH-HL	x16	-	-	-	-	-
PCIe Slot-7	FH-HL	-	-	-	x16	-	-
PCIe Slot-8	FH-HL	-	-	-	x16	-	-
PCIe Slot-3 1	FH-FL or FH-HL	-	-	-	-	x16 (DW or SW)	x8 (SW)
PCIe Slot-3 2	FH-FL or FH-HL	-	-	-	-	-	x8 (SW)
PCIe Slot-3 3	FH-FL or FH-HL	-	-	-	-	x16 (DW or SW)	x8 (SW)
PCIe Slot-3 4	FH-FL or FH-HL	-	-	-	-	-	x8 (SW)
PCIe Slot-3 5	FH-FL or FH-HL	-	-	x8 (SW)	-	-	-
PCIe Slot-3 6	FH-FL or FH-HL	-	x16 (DW or SW)	x8 (SW)	-	-	-
PCIe Slot-3 7	FH-FL or FH-HL	-	-	x8 (SW)	-	-	-

**Table 13. Expansion card slots supported on the system board (continued)**

Slot no	Card support	CPU1			CPU2		
		R1V	RF1A	RF1B	R4T	RF2A	RF1B
PCIe Slot-38	FH-FL or FH-HL	-	x16 (DW or SW)	x8 (SW)	-	-	-

**NOTE:** x16 card is only supported on x16 capable slot.

**Table 14. Label reference**

Label	Description
SW	Single Width
DW	Double Width
FH	Full Height
FL	Full Length
HL	Half Length

## Memory specifications

The PowerEdge R760xa system supports the following memory specifications for optimized operation.

**Table 15. Memory specifications for 4<sup>th</sup> Generation Intel Xeon® Scalable Processors**

DIMM type	DIMM rank	DIMM capacity	Single processor		Dual processors	
			Minimum system capacity	Maximum system capacity	Minimum system capacity	Maximum system capacity
DDR5 RDIMM	Single rank	16 GB	16 GB	256 GB	32 GB	512 GB
	Dual rank	32 GB	32 GB	512 GB	64 GB	1 TB
	Dual rank	64 GB	64 GB	1 TB	128 GB	2 TB
	Quad rank	128 GB	128 GB	2 TB	256 GB	4 TB
	Octa rank	256 GB	256 GB	4 TB	512 GB	8 TB

**Table 16. Memory module sockets**

Memory module sockets	Rated DIMM speed
32, 288-pin	4800 MT/s

**NOTE:** The processor may reduce the performance of the rated DIMM speed.

**Table 17. Memory specifications for 5<sup>th</sup> Generation Intel® Xeon® Scalable Processors**

DIMM type	DIMM rank	DIMM capacity	Single processor		Dual processors	
			Minimum system capacity	Maximum system capacity	Minimum system capacity	Maximum system capacity
DDR5 RDIMM	Single rank	16 GB	16 GB	256 GB	32 GB	512 GB
	Dual rank	32 GB	32 GB	512 GB	64 GB	1 TB

**Table 17. Memory specifications for 5<sup>th</sup> Generation Intel® Xeon® Scalable Processors (continued)**

DIMM type	DIMM rank	DIMM capacity	Single processor		Dual processors	
			Minimum system capacity	Maximum system capacity	Minimum system capacity	Maximum system capacity
	Dual rank	64 GB	64 GB	1 TB	128 GB	2 TB
	Dual rank	96 GB	96 GB	1.5 TB	192 GB	3 TB
	Quad rank	128 GB	128 GB	2 TB	256 GB	4 TB
	Octa rank	256 GB	256 GB	4 TB	512 GB	8 TB

**NOTE:** DDR4 memories are not supported in the R760xa.

**Table 18. Memory module sockets**

Memory module sockets	Rated DIMM speed
32, 288-pin	6400 MT/s, or 5600 MT/s

**NOTE:** 6400/5600 MT/s RDIMMs are applicable for 5th Gen Intel® Xeon® Scalable Processors.

**NOTE:** The processor may reduce the performance of the rated DIMM speed.

**NOTE:** Memory DIMM slots are not hot pluggable.

**NOTE:** Quad rank (4R) 128 GB has reached EOL.

## Storage controller specifications

The PowerEdge R760xa system supports the following controller cards:

**Table 19. Storage controller cards**

Supported storage controller cards
Internal controllers <ul style="list-style-type: none"> <li>PERC H965i</li> <li>HBA465i</li> <li>PERC H755</li> <li>PERC H755N</li> <li>PERC H355</li> </ul>
External controllers <ul style="list-style-type: none"> <li>HBA465e</li> <li>HBA355e</li> <li>H965e</li> </ul>
Internal Boot <ul style="list-style-type: none"> <li>Boot Optimized Storage Subsystem (BOSS-N1)</li> </ul>
Software RAID <ul style="list-style-type: none"> <li>S160</li> </ul>
SAS Host Bus Adapters (HBA) <ul style="list-style-type: none"> <li>HBA355i</li> </ul>

# Drives

The PowerEdge R760xa system supports:

- 8 x 2.5-inch hot-swappable SAS, SATA, or NVMe drives.
- 6 x 2.5-inch hot-swappable NVMe drives.
- 6 x E3.S Gen5 NVMe drives.

**NOTE:** For more information about how to hot swap NVMe PCIe SSD U.2 device, see the *Dell Express Flash NVMe PCIe SSD User's Guide* at [Dell Support > Browse all products > Infrastructure > Data Center Infrastructure > Storage Adapters & Controllers > Dell PowerEdge Express Flash NVMe PCIe SSD > Select This Product > Documentation > Manuals and Documents.](#)

# Ports and connectors specifications

## USB ports specifications

**Table 20. PowerEdge R760xa USB specifications**

Front		Rear		Internal (Optional)	
USB port type	No. of ports	USB port type	No. of ports	USB port type	No. of ports
USB 2.0-compliant port	One	USB 3.0-compliant port	One	Internal USB 3.0-compliant port	One
iDRAC Direct port (Micro-AB USB 2.0-compliant port)	One	USB 2.0-compliant port	One		

**NOTE:** The micro USB 2.0 compliant port can only be used as an iDRAC Direct or a management port.

## NIC port specifications

The PowerEdge R760xa system supports up to two 10/100/1000 Mbps Network Interface Controller (NIC) ports embedded on the LAN on Motherboard (LOM) and integrated on the optional Open Compute Project (OCP) card.

**Table 21. NIC port specification for the system**

Feature	Specifications
LOM card (optional)	1 GbE x 2
OCP card (OCP 3.0) (optional)	1 GbE x 4, 10 GbE x 2, 10 GbE x 4, 25 GbE x 2, 25 GbE x 4, 100 GbE x 2

**NOTE:** The system should have either LOM card or an OCP card that is installed in the system.

**NOTE:** On the system board, the supported OCP PCIe width is x8; the supported OCP PCIe width can be extended to x16 with optional OCP cable.

## Serial connector specifications

The PowerEdge R760xa system supports one optional card type serial connector, which is a 9-pin connector, Data Terminal Equipment (DTE), 16550-compliant.

The optional serial connector card is installed similar to an expansion card filler bracket.

## VGA ports specifications

The PowerEdge R760xa system supports DB-15 VGA port on front panel and on rear I/O board (optional for Direct Liquid Cooling configuration).

## Video specifications

The PowerEdge R760xa system supports integrated Matrox G200 graphics controller with 16 MB of video frame buffer.

**Table 22. Supported video resolution options**

Resolution	Refresh rate (Hz)	Color depth (bits)
1024 x 768	60	8, 16, 32
1280 x 800	60	8, 16, 32
1280 x 1024	60	8, 16, 32
1360 x 768	60	8, 16, 32
1440 x 900	60	8, 16, 32
1600 x 900	60	8, 16, 32
1600 x 1200	60	8, 16, 32
1680 x 1050	60	8, 16, 32
1920 x 1080	60	8, 16, 32
1920 x 1200	60	8, 16, 32

## Environmental specifications

**NOTE:** For additional information about environmental certifications, refer to the *Product Environmental Datasheet* located with the *Documentation* on [Dell Support](#).

**Table 23. Continuous Operation Specifications for ASHRAE A2**

Temperature	Specifications
Allowable continuous operations	
Temperature range for altitudes <= 900 m (<= 2953 ft)	10–35°C (50–95°F) with no direct sunlight on the equipment
Humidity percent range (non-condensing at all times)	8% RH with -12°C (10.4°F) minimum dew point to 80% RH with 21°C (69.8°F) maximum dew point
Operational altitude de-rating	Maximum temperature is reduced by 1°C/300 m (1.8°F/984 Ft) above 900 m (2953 Ft)

**Table 24. Continuous Operation Specifications for ASHRAE A3**

Temperature	Specifications
Allowable continuous operations	
Temperature range for altitudes <= 900 m (<= 2953 ft)	5–40°C (41–104°F) with no direct sunlight on the equipment
Humidity percent range (non-condensing at all times)	8% RH with -12°C (10.4°F) minimum dew point to 85% RH with 24°C (75.2°F) maximum dew point
Operational altitude de-rating	Maximum temperature is reduced by 1°C/175 m (1.8°F/574 Ft) above 900 m (2953 Ft)

**Table 25. Continuous Operation Specifications for ASHRAE A4**

Temperature	Specifications
Allowable continuous operations	
Temperature range for altitudes <= 900 m (<= 2953 ft)	5–45°C (41–113°F) with no direct sunlight on the equipment
Humidity percent range (non-condensing at all times)	8% RH with -12°C (10.4°F) minimum dew point to 90% RH with 24°C (75.2°F) maximum dew point
Operational altitude de-rating	Maximum temperature is reduced by 1°C/125 m (1.8°F/410 Ft) above 900 m (2953 Ft)

**Table 26. Common Environmental Specifications for ASHRAE A2, A3 and A4**

Allowable continuous operations	
Maximum temperature gradient (applies to both operation and non-operation)	20°C in an hour* (36°F in an hour) and 5°C in 15 minutes (9°F in 15 minutes), 5°C in an hour* (9°F in an hour) for tape <i>i</i> <b>NOTE:</b> * - Per ASHRAE thermal guidelines for tape hardware, these are not instantaneous rates of temperature change.
Non-operational temperature limits	-40 to 65°C (-40 to 149°F)
Non-operational humidity limits	5% to 95% RH with 27°C (80.6°F) maximum dew point
Maximum non-operational altitude	12,000 meters (39,370 feet)
Maximum operational altitude	3,050 meters (10,006 feet)

**Table 27. Maximum vibration specifications**

Maximum vibration	Specifications
Operating	0.21 G <sub>rms</sub> at 5 Hz to 500 Hz for 10 minutes (all operation orientations)
Storage	1.88 G <sub>rms</sub> at 10 Hz to 500 Hz for 15 minutes (all six sides tested)

**Table 28. Maximum shock pulse specifications**

Maximum shock pulse	Specifications
Operating	Six consecutively executed shock pulses in the positive and negative x, y, and z axis of 6 G for up to 11 ms.
Storage	Six consecutively executed shock pulses in the positive and negative x, y, and z axis (one pulse on each side of the system) of 71 G for up to 2 ms.

## Particulate and gaseous contamination specifications

The following table defines the limitations that help avoid any equipment damage or failure from particulates and gaseous contamination. If the levels of particulates or gaseous pollution exceed the specified limitations and result in equipment damage or failure, you must rectify the environmental conditions. Remediation of environmental conditions is the responsibility of the customer.

**Table 29. Particulate contamination specifications**

Particulate contamination	Specifications
Air filtration: Conventional Data Center only	Data center air filtration as defined by ISO Class 8 per ISO 14644-1 with a 95% upper confidence limit <i>i</i> <b>NOTE:</b> Filtering room air with a MERV8 filter, as specified in ANSI/ASHRAE Standard 127, is a recommended method for achieving the necessary environmental conditions.

**Table 29. Particulate contamination specifications (continued)**

Particulate contamination	Specifications
	<p><b>i</b> <b>NOTE:</b> Air entering the data center must have MERV11 or MERV13 filtration.</p> <p><b>i</b> <b>NOTE:</b> This condition applies to data center environments only. Air filtration requirements do not apply to IT equipment designed to be used outside a data center, in environments such as an office or factory floor.</p>
Walk-Up Edge Data Center or Cabinet (sealed, closed loop environment)	<p>Filtration is not required for cabinets that are anticipated to be opened six times or less per year. Class 8 per ISO 1466-1 filtration as defined above is required otherwise.</p> <p><b>i</b> <b>NOTE:</b> In environments commonly above ISA-71 Class G1 or that may have known challenges, special filters may be required.</p>
Conductive dust: data center and non-data center environments	<p>Air must be free of conductive dust, zinc whiskers, or other conductive particles.</p> <p><b>i</b> <b>NOTE:</b> Conductive dust, which can interfere with equipment operation, can originate from various sources, including manufacturing processes and zinc whiskers that may develop on the plating of raised floor tiles.</p> <p><b>i</b> <b>NOTE:</b> This condition applies to data center and non-data center environments.</p>
Corrosive dust: data center and non-data center environments	<ul style="list-style-type: none"> <li>• Air must be free of corrosive dust.</li> <li>• Residual dust present in the air must have a deliquescent point less than 60% relative humidity.</li> </ul> <p><b>i</b> <b>NOTE:</b> This condition applies to data center and non-data center environments.</p>

**Table 30. Gaseous contamination specifications**

Gaseous contamination	Specifications	Notes
Copper coupon corrosion rate	ISA-71 Class G1: <300 Å/month	Per ANSI/ISA71.04
Silver coupon corrosion rate	ISA-71 Class G1: <200 Å/month	Per ANSI/ISA71.04

## Thermal air restrictions

### ASHRAE A2 environment

- Processors > 350 W are not supported
- 8470Q and 6458Q 350 W Processors are not supported
- Maximum 30° C (86°F) for GPU > 350 W With Processor > 225 W

### ASHRAE A3 environment

- Processors > 225 W are not supported
- GPUs at rear slots are not supported
- Nvidia A2 GPU and Intel ATS-M75 GPU are supported at the front slots. Other GPUs are not supported
- 96 GB or greater capacity RDIMMs are not supported
- Two power supplies are required. System performance may be reduced in the event of a PSU failure
- Non-Dell qualified peripheral cards and/or peripheral cards greater than 25 W are not supported
- 85°C (185°F) active optics cable is required

## ASHRAE A4 environment

- Processors > 185 W are not supported
- GPUs at rear slots are not supported
- Nvidia A2 GPU and Intel ATS-M75 GPU are supported at the front slots. Other GPUs are not supported
- 96 GB or greater capacity RDIMMs are not supported
- 2.5-inch NVMe storages are not supported
- BOSS-N1 is not supported
- Two power supplies are required. System performance may be reduced in the event of a PSU failure
- Non-Dell qualified peripheral cards and/or peripheral cards greater than 25 W are not supported
- OCP cards 3.0 are not supported
- 85°C (185°F) active optics cable is required

## Liquid cooling restrictions

### ASHRAE A3 environment

- GPUs at rear slots are not supported
- Nvidia A2 GPU and Intel ATS-M75 GPU are supported at the front slots. Other GPUs are not supported
- 96 GB or greater capacity RDIMMs are not supported
- Two power supplies are required. System performance may be reduced in the event of a PSU failure
- Non-Dell qualified peripheral cards and/or peripheral cards greater than 25 W are not supported
- 85°C (185°F) active optics cable is required

### ASHRAE A4 environment

- GPUs at rear slots are not supported
- Nvidia A2 GPU and Intel ATS-M75 GPU are supported at the front slots. Other GPUs are not supported
- 96 GB or greater capacity RDIMMs are not supported
- 2.5-inch NVMe storage are not supported
- BOSS-N1 is not supported
- Two power supplies are required. System performance may be reduced in the event of a PSU failure
- Non-Dell qualified peripheral cards and/or peripheral cards greater than 25 W are not supported
- OCP cards 3.0 are not supported
- 85°C (185°F) active optics cable is required

## Thermal restriction matrix

**Table 31. References used in the restriction table.**

<b>Label</b>	<b>Description</b>
STD	Standard
HSK	Heat sink
LP	Low Profile
FH	Full Height

**Table 32. Thermal restriction matrix**

Configuration		-	Ambient temperature
Front GPU TDP		<=350 W	
Front drives		8x 2.5" SAS/SATA/NVMe	
CPU TDP/ cTDP	125 W	System Fan (60 x 76 mm) with 2U HPR HSK	
	150 W		
	165 W		
	185 W		
	195 W		
	205 W		
	225 W		
	250 W		
	270 W		
	300 W		
	330 W		
	350 W		

- i** **NOTE:** The PowerEdge R760xa system supports all CPU SKUs at 35°C (95°F) except 8470Q and 6458Q 350 W CPUs that require liquid cooling support.
- i** **NOTE:** There is only one type of fan supported in R760xa. Six fans are required to be installed for all R760xa system configurations.
- i** **NOTE:** Fan type supported: STD
- i** **NOTE:** 96 GB DIMM supports:
  - 2DPC up to 30°C with GPU equal or lower than 250 W
  - 1DPC up to 35°C with GPU greater than 250 W.

# Initial system setup and configuration

This section describes the tasks for initial setup and configuration of the Dell system. The section also provides general steps to set up the system and the reference guides for detailed information.

## Topics:

- [Setting up the system](#)
- [iDRAC configuration](#)
- [Resources to install operating system](#)


## Setting up the system

Perform the following steps to set up the system:

### Steps

1. Unpack the system.
2. Install the system into the rack. For more information, see the rail installation and cable management accessory guides relevant to your rail and cable management solution at [PowerEdge manuals](#).
3. Connect the peripherals to the system and the system to the electrical outlet.
4. Power on the system.

For more information about setting up the system, see the *Getting Started Guide* that is shipped with your system.


 **NOTE:** For information about managing the basic settings and features of the system, see the [Pre-operating system management applications](#) chapter.

## iDRAC configuration

The Integrated Dell Remote Access Controller (iDRAC) is designed to make you more productive as a system administrator and improve the overall availability of Dell servers. iDRAC alerts you to system issues, helps you to perform remote management, and reduces the need for physical access to the system.

## Options to set up iDRAC IP address

To enable communication between your system and iDRAC, you must first configure the network settings based on your network infrastructure. The network settings option is set to **DHCP**, by default.





 **NOTE:** For static IP configuration, you must request for the settings at the time of purchase.


You can set up the iDRAC IP address using one of the interfaces in the table below. For information about setting up iDRAC IP address, see the documentation links provided in the table below.

**Table 33. Interfaces to set up iDRAC IP address**

Interface	Documentation links
iDRAC Settings utility	Integrated Dell Remote Access Controller User's Guide at <a href="#">iDRAC Manuals</a> or for system-specific Integrated Dell Remote Access Controller User's Guide, go to <a href="#">PowerEdge Manuals</a> > <b>Product Support</b> page of your system > <b>Documentation</b> .

**Table 33. Interfaces to set up iDRAC IP address (continued)**

Interface	Documentation links
	<p> <b>NOTE:</b> To determine the most recent iDRAC release for your platform and for the latest documentation version, see KB article <a href="#">KB78115</a>.</p>
OpenManage Deployment Toolkit	Dell OpenManage Deployment Toolkit User's Guide available at <a href="#">OpenManage Manuals</a> > OpenManage Deployment Toolkit.
iDRAC Direct	<p>Integrated Dell Remote Access Controller User's Guide at <a href="#">iDRAC Manuals</a> or for system-specific Integrated Dell Remote Access Controller User's Guide, go to <a href="#">PowerEdge Manuals</a> &gt; <b>Product Support</b> page of your system &gt; <b>Documentation</b>.</p> <p> <b>NOTE:</b> To determine the most recent iDRAC release for your platform and for the latest documentation version, see KB article <a href="#">KB78115</a>.</p>
Lifecycle Controller	<p>Dell Lifecycle Controller User's Guide at <a href="#">iDRAC Manuals</a> or for system-specific Dell Lifecycle Controller User's Guide, go to <a href="#">PowerEdge Manuals</a> &gt; <b>Product Support</b> page of your system &gt; <b>Documentation</b>.</p> <p> <b>NOTE:</b> To determine the most recent iDRAC release for your platform and for the latest documentation version, see KB article <a href="#">KB78115</a>.</p>
Server LCD panel	<a href="#">LCD panel</a> section.
iDRAC Direct and Quick Sync 2 (optional)	<p>Integrated Dell Remote Access Controller User's Guide at <a href="#">iDRAC Manuals</a> or for system-specific Integrated Dell Remote Access Controller User's Guide, go to <a href="#">PowerEdge Manuals</a> &gt; <b>Product Support</b> page of your system &gt; <b>Documentation</b>.</p> <p> <b>NOTE:</b> To determine the most recent iDRAC release for your platform and for the latest documentation version, see KB article <a href="#">KB78115</a>.</p>

 **NOTE:** To access iDRAC, ensure that you connect the ethernet cable to the iDRAC dedicated network port or use the iDRAC Direct port by using the micro USB (type AB) cable. You can also access iDRAC through the shared LOM mode, if you have opted for a system that has the shared LOM mode enabled.


## Options to log in to iDRAC

To log in to the iDRAC Web User Interface, open a browser and enter the IP address.


You can log in to iDRAC as:

- iDRAC user
- Microsoft Active Directory user
- Lightweight Directory Access Protocol (LDAP) user

In the login screen displayed, if you have opted for secure default access to iDRAC, the default username is `root` and enter the iDRAC secure default password available on back of the Information Tag. If you opted for legacy password, use the iDRAC legacy username and password - `root` and `calvin`, the iDRAC default password will be blank on the information tag. Then you will be prompted and required to create a password of your choice before proceeding. You can also log in by using your Single Sign-On or Smart Card.

 **NOTE:** Ensure that you change the default username and password after setting up the iDRAC IP address.

For more information about logging in to the iDRAC and iDRAC licenses, see the latest [Integrated Dell Remote Access Controller User's Guide](#)

 **NOTE:** To determine the most recent iDRAC release for your platform and for latest documentation version, see KB article [KB78115](#).



You can also access iDRAC using command-line protocol - RACADM. For more information, see the [Integrated Dell Remote Access Controller RACADM CLI Guide](#).


You can also access iDRAC using automation tool - Redfish API. For more information, see the [Integrated Dell Remote Access Controller User's Guide Redfish API Guide](#).

## Resources to install operating system

If the system is shipped without an operating system, you can install a supported operating system by using one of the resources provided in the table below. For information about how to install the operating system, see the documentation links provided in the table below.

**Table 34. Resources to install the operating system**

Resource	Documentation links
iDRAC	<a href="#">Integrated Dell Remote Access Controller User's Guide</a> or for system specific Integrated Dell Remote Access Controller User's Guide, go to <a href="#">PowerEdge Manuals</a> > <b>Product Support</b> page of your system > <b>Documentation</b> .  <b>NOTE:</b> To determine the most recent iDRAC release for your platform and for latest documentation version, see KB article at <a href="#">KB78115</a> .
Lifecycle Controller	Dell Lifecycle Controller User's Guide at <a href="#">iDRAC Manuals</a> or for system specific Dell Lifecycle Controller User's Guide, go to <a href="#">PowerEdge Manuals</a> > <b>Product Support</b> page of your system > <b>Documentation</b> . Dell recommends using Lifecycle Controller to install the OS, since all required drivers are installed on the system.  <b>NOTE:</b> To determine the most recent iDRAC release for your platform and for latest documentation version, see KB article at <a href="#">KB78115</a> .
OpenManage Deployment Toolkit	<a href="#">OpenManage Manuals</a> > OpenManage Deployment Toolkit
Dell certified VMware ESXi	<a href="#">Virtualization solutions</a>

 **NOTE:** For more information about installation and how-to videos for operating systems supported on PowerEdge systems, see [Supported Operating Systems for Dell PowerEdge systems](#).

## Options to download drivers and firmware

You can download the firmware from the Dell support site. For information about downloading firmware, see the [Downloading drivers and firmware](#) section.

You can also choose any one of the following options to download the firmware. For information about how to download the firmware, see the documentation links provided in the table below.

**Table 35. Options to download firmware**

Option	Documentation link
Using Integrated Dell Remote Access Controller Lifecycle Controller (iDRAC with LC)	<a href="#">iDRAC Manuals</a>
Using Dell Repository Manager (DRM)	<a href="#">OpenManage Manuals</a>
Using Dell Server Update Utility (SUU)	<a href="#">OpenManage Manuals</a>
Using Dell OpenManage Deployment Toolkit (DTK)	<a href="#">OpenManage Manuals</a>
Using iDRAC virtual media	<a href="#">iDRAC Manuals</a>

## Options to download and install OS drivers

You can choose any one of the following options to download and install OS drivers. For information about how to download or install OS drivers, see the documentation links provided in the table below.

**Table 36. Options to download and install OS drivers**

Option	Documentation
Dell support site	<a href="#">Downloading drivers and firmware</a> section.
iDRAC virtual media	<a href="#">Integrated Dell Remote Access Controller User's Guide</a> or for system specific, go to <a href="#">Integrated Dell Remote Access Controller User's Guide &gt; Product Support</a> page of your system > <b>Documentation</b> . <b>NOTE:</b> To determine the most recent iDRAC release for your platform and for latest documentation version, see <a href="#">Integrated Dell Remote Access Controller Release Notes</a> .

## Downloading drivers and firmware

It is recommended that you download and install the latest BIOS, drivers, and systems management firmware on the system.

### Prerequisites

Ensure that you clear the web browser cache before downloading the drivers and firmware.

### Steps

1. Go to [Drivers](#).
2. Enter the Service Tag of the system in the **Enter a Dell Service Tag, Dell Product ID or Model** field, and then press Enter.

**NOTE:** If you do not have the Service Tag, click **Browse all products**, and navigate to your product.

3. On the displayed product page, click **Drivers & Downloads**.  
On the **Drivers & Downloads** page, all drivers that are applicable to the system are displayed.
4. Download the drivers to a USB drive, CD, or DVD.

# Pre-operating system management applications

You can manage basic settings and features of a system without booting to the operating system by using the system firmware.

## Options to manage the pre-operating system applications

You can use any one of the following options to manage the pre-operating system applications:

- System Setup
- Dell Lifecycle Controller
- Boot Manager
- Preboot Execution Environment (PXE)

### Topics:

- [System Setup](#)
- [Dell Lifecycle Controller](#)
- [Boot Manager](#)
- [PXE boot](#)

## System Setup

Using the


**System Setup** option, you can configure the BIOS settings, iDRAC settings, and device settings of the system.

You can access system setup by using any one of the following interfaces:

- Graphical User interface — To access go to iDRAC Dashboard, click **Configurations > BIOS Settings**.
- Text browser — To enable the text browser, use the Console Redirection.

To view

**System Setup**, power on the system, press F2, and click **System Setup Main Menu**.

 **NOTE:** If the operating system begins to load before you press F2, wait for the system to finish booting, and then restart the system and try again.

The options on the

**System Setup Main Menu** screen are described in the following table:

**Table 37. System Setup Main Menu**

Option	Description
<b>System BIOS</b>	Enables you to configure the BIOS settings.
<b>iDRAC Settings</b>	Enables you to configure the iDRAC settings. The iDRAC settings utility is an interface to set up and configure the iDRAC parameters by using UEFI (Unified Extensible Firmware Interface). You can enable or disable various iDRAC parameters by using the iDRAC settings utility. For more information about this utility, see <a href="#">Integrated Dell Remote Access Controller User's Guide</a>

**Table 37. System Setup Main Menu (continued)**

Option	Description
<b>Device Settings</b>	Enables you to configure device settings for devices such as storage controllers or network cards.
<b>Service Tag Settings</b>	Enables you to configure the System Service Tag.

## System BIOS

To view the **System BIOS** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS**.

**Table 38. System BIOS details**

Option	Description
<b>System Information</b>	Provides information about the system such as the system model name, BIOS version, and Service Tag.
<b>Memory Settings</b>	Specifies information and options that are related to the installed memory.
<b>Processor Settings</b>	Specifies information and options that are related to the processor such as speed and cache size.
<b>SATA Settings</b>	This field sets NVMe drive mode.
<b>NVMe Settings</b>	Specifies options to change the NVMe settings.
<b>Boot Settings</b>	Specifies options to specify the Boot mode (BIOS or UEFI). Enables you to modify UEFI and BIOS boot settings.
<b>Network Settings</b>	Specifies options to manage the UEFI network settings and boot protocols. Legacy network settings are managed from the <b>Device Settings</b> menu.
<b>Integrated Devices</b>	Specifies options to manage integrated device controllers and ports, specifies related features, and options.
<b>Serial Communication</b>	Specifies options to manage the serial ports, its related features, and options.
<b>System Profile Settings</b>	Specifies options to change the processor power management settings, memory frequency.
<b>System Security</b>	Specifies options to configure the system security settings, such as system password, setup password, Trusted Platform Module (TPM) security, and UEFI secure boot. It also manages the power button on the system.
<b>Redundant OS Control</b>	Sets the redundant OS information for redundant OS control.
<b>Miscellaneous Settings</b>	Specifies options to change the system date and time.

## System Information

To view the **System Information** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > System Information**.

**Table 39. System Information details**

Option	Description
<b>System Model Name</b>	Specifies the system model name.
<b>System BIOS Version</b>	Specifies the BIOS version installed on the system.
<b>System Management Engine Version</b>	Specifies the current version of the Management Engine firmware.
<b>System Service Tag</b>	Specifies the system Service Tag.

**Table 39. System Information details (continued)**

Option	Description
<b>System Manufacturer</b>	Specifies the name of the system manufacturer.
<b>System Manufacturer Contact Information</b>	Specifies the contact information of the system manufacturer.
<b>System CPLD Version</b>	Specifies the current version of the system Complex Programmable Logic Device (CPLD) firmware.
<b>UEFI Compliance Version</b>	Specifies the UEFI compliance level of the system firmware.

## Memory Settings

To view the **Memory Settings** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > Memory Settings**.

**Table 40. Memory Settings details**

Option	Description
<b>System Memory Size</b>	Specifies the size of the system memory.
<b>System Memory Type</b>	Specifies the type of memory installed in the system.
<b>System Memory Speed</b>	Specifies the speed of the system memory.
<b>Video Memory</b>	Specifies the size video memory.
<b>System Memory Testing</b>	Specifies whether the system memory tests are run during system boot. The two options available are <b>Enabled</b> and <b>Disabled</b> . This option is set to <b>Disabled</b> by default.
<b>Memory Operating Mode</b>	Specifies the memory operating mode. The option is available and is set to <b>Optimizer Mode</b> , by default. Options such as Fault Resilient Mode and NUMA Fault Resilient Mode are available for support when the Advanced RAS capability processor is installed on the system.
<b>Current State of Memory Operating Mode</b>	Specifies the current state of the memory operating mode.
<b>Node Interleaving</b>	Enables or disables the Node interleaving option. Specifies if the Non-Uniform Memory Architecture (NUMA) is supported. If this field is set to <b>Enabled</b> , memory interleaving is supported if a symmetric memory configuration is installed. If the field is set to <b>Disabled</b> , the system supports NUMA (asymmetric) memory configurations. This option is set to <b>Disabled</b> by default.
<b>Memory training</b>	<p>When option is set to <b>Fast</b> and memory configuration is not changed, the system uses previously saved memory training parameters to train the memory subsystems and system boot time is also reduced. If memory configuration is changed, the system automatically enables <b>Retrain at Next boot</b> to force one-time full memory training steps, and then go back to <b>Fast</b> afterward.</p> <p>When option is set to <b>Retrain at Next boot</b>, the system performs the force one-time full memory training steps at next power on and boot time is slowed on next boot.</p> <p>When option is set to <b>Enable</b>, the system performs the force full memory training steps on every power on and boot time is slowed on every boot.</p>
<b>DIMM Self Healing (Post Package Repair) on Uncorrectable Memory Error</b>	Enables or disables Post Packing Repair (PPR) on uncorrectable memory error. This option is set to <b>Enabled</b> by default.
<b>Correctable Error Logging</b>	Enables or disables correctable error logging. This option is set to <b>Disabled</b> by default.
<b>Memory Paging Policy</b>	This field sets the Memory Paging Policy.


**Table 40. Memory Settings details (continued)**

Option	Description
Memory Map Out	This option controls DIMMs slots on the system. This option is set to <b>Enabled</b> by default. It allows to disable system installed DIMMs.

## Processor Settings

To view the **Processor Settings** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > Processor Settings**.



**Table 41. Processor Settings details**

Option	Description
Logical Processor	Each processor core supports up to two logical processors. If this option is set to <b>Enabled</b> , the BIOS displays all the logical processors. If this option is set to <b>Disabled</b> , the BIOS displays only one logical processor per core. This option is set to <b>Enabled</b> by default.
CPU Interconnect Speed	<p>Enables you to govern the frequency of the communication links among the processors in the system.</p> <p> <b>NOTE:</b> The standard and basic bin processors support lower link frequencies.</p> <p>The options available are <b>Maximum data rate, 20.0GT/s (on 5th Generation Intel Xeon Scalable Processor), 16.0 GT/s, 14.4 GT/s, and 12.8 GT/s</b>. This option is set to <b>Maximum data rate</b> by default.</p> <p>Maximum data rate indicates that the BIOS runs the communication links at the maximum frequency supported by the processors. You can also select specific frequencies that the processors support, which can vary.</p> <p>For best performance, you should select <b>Maximum data rate</b>. Any reduction in the communication link frequency affects the performance of non-local memory access and cache coherency traffic. In addition, it can slow access to non-local I/O devices from a particular processor.</p> <p>However, if power saving considerations outweigh performance, reduce the frequency of the processor communication links. Before reducing the frequency, you must localize the memory and I/O access to the nearest NUMA node to minimize the impact to system performance.</p>
Virtualization Technology	Enables or disables the virtualization technology for the processor. This option is set to <b>Enabled</b> by default.
Kernel DMA Protection	This option is set to <b>Disabled</b> by default. It is enabled for Secure Launch (Firmware Protection) support on Windows 2022.
Directory Mode	Enables or disables the directory mode. This option is set to <b>Enabled</b> by default.
Adjacent Cache Line Prefetch	Optimizes the system for applications that need high utilization of sequential memory access. This option is set to <b>Enabled</b> by default. You can disable this option for applications that need high utilization of random memory access.
Hardware Prefetcher	Enables or disables the hardware prefetcher. This option is set to <b>Enabled</b> by default.
DCU Streamer Prefetcher	Enables or disables the Data Cache Unit (DCU) streamer prefetcher. This option is set to <b>Enabled</b> by default.
DCU IP Prefetcher	Enables or disables the Data Cache Unit (DCU) IP prefetcher. This option is set to <b>Enabled</b> by default.
Sub NUMA Cluster	Enables or disables the Sub NUMA Cluster. This option is set to <b>Disabled</b> by default.

**Table 41. Processor Settings details (continued)**

Option	Description
<b>MADT Core Enumeration</b>	Specifies the MADT Core Enumeration. This option is set to default in <b>Round Robin</b> . Linear option supports industry core enumeration whereas, Round Robin option supports Dell optimized core enumeration.
<b>UMA Based Clustering Status</b>	Quadrant UMA Based Clustering is the default mode When Sub NUMA Clustering is <b>Disabled</b> . If Sub NUMA clustering is set to 2Way or 4Way then this setting is Disabled.
<b>UPI Prefetch</b>	Enables you to get the memory read started early on DDR bus. The Ultra Path Interconnect (UPI) Rx path spawns the speculative memory that is read to Integrated Memory Controller (iMC) directly. This option is set to <b>Enabled</b> by default.
<b>XPT Prefetch</b>	This option is set to <b>Enabled</b> by default.
<b>LLC Prefetch</b>	Enables or disables the LLC Prefetch on all threads. This option is set to <b>Enabled</b> by default.
<b>Dead Line LLC Alloc</b>	Enables or disables the Dead Line LLC Alloc. This option is set to <b>Enabled</b> by default. You can enable this option to enter the dead lines in LLC or disable the option to not enter the dead lines in LLC.
<b>Directory AtoS</b>	Enables or disables the Directory AtoS. AtoS optimization reduces remote read latencies for repeat read accesses without intervening writes. This option is set to <b>Disabled</b> by default.
<b>AVX P1</b>	Enables you to reconfigure the processor Thermal Design Power (TDP) levels during POST based on the power and thermal delivery capabilities of the system. TDP verifies the maximum heat the cooling system is must dissipate. This option is set to <b>Normal</b> by default. <b>i</b> <b>NOTE:</b> This option is only available on certain stock keeping units (SKUs) of the processors.
<b>Dynamic SST-Performance Profile</b>	Enables you to reconfigure the processor using Dynamic or Static Speed Select Technology. This option is set to <b>Disabled</b> by default.
<b>SST-Performance Profile</b>	Enables you to reconfigure the processor using Speed Select Technology.
<b>Intel SST-BF</b>	Enables Intel SST-BF. This option is displayed if Performance Per Watt (operating system) or Custom (when OSPM is enabled) system profiles are selected. This option is set to <b>Disabled</b> by default.
<b>Intel SST-CP</b>	Enables Intel SST-CP. This option is displayed and selectable for each system profile mode. This option is set to <b>Disabled</b> by default.
<b>x2APIC Mode</b>	Enables or disables x2APIC mode. This option is set to <b>Enabled</b> by default. <b>i</b> <b>NOTE:</b> For two processors 64 cores configuration, x2APIC mode is not switchable if 256 threads are enabled (BIOS settings: All CCD, cores, and logical processors enabled).
<b>AVX ICCP Pre-Grant License</b>	Enables or disables AVX ICCP Pre-Grant License. This option is set to <b>Disabled</b> by default.
<b>AVX ICC Pre-Grant Level</b>	Enables you to select between the different AVX ICC transition levels offered by Intel. This option is set to <b>128 heavy</b> by default.
<b>Opportunistic Snoop Broadcast</b>	Opportunistic Snoop Broadcast(OSB) is a feature within the PCIe protocol that enhances system performance by reducing latency and improving data transfer efficiency. <b>Auto</b> is default and controlled by SI Compatibility and Directory Mode Enable/Disable.
<b>Dell Controlled Turbo</b>	
<b>Dell Controlled Turbo Settings</b>	Controls the turbo engagement. Enable this option only when System Profile is set to <b>Performance</b> or <b>Custom</b> , and CPU Power Management is set to <b>Performance</b> . This item can be selected for each system profile mode. This option is set to <b>Disabled</b> by default. <b>i</b> <b>NOTE:</b> Depending on the number of installed processors, there might be up to two processor listings.
<b>Dell AVX Scaling Technology</b>	Enables you to configure the Dell AVX scaling technology. This option is set to <b>0</b> by default. Enter the value from 0 to 12 bins. The value that is entered decreases the Dell AVX Scaling Technology frequency when the Dell-controlled Turbo feature is enabled.

**Table 41. Processor Settings details (continued)**

Option	Description
<b>Optimizer Mode</b>	Enables or disables the CPU performance. When this option is set to <b>Auto</b> , set the CPU Power Management to Max Performance. When set to <b>Enabled</b> , enables the CPU Power Management settings. When set to <b>Disabled</b> , the CPU Power Management option is disabled. This option is set to <b>Auto</b> by default.
<b>Number of Cores per Processor</b>	Controls the number of enabled cores in each processor. This option is set to <b>All</b> by default.
<b>CPU Physical Address Limit</b>	Limit CPU physical address to 46 bits to support older Hyper-V. If enabled, automatically disables TME-MT. This option is set to <b>Enabled</b> by default.
<b>AMP prefetch</b>	When Enabled, this option enables one of the Mid_Level Cache (MLC) AMP hardware Prefetcher.
<b>Homeless Prefetch</b>	When enabled, this option allows L1Data Cache Unit (DCU) to prefetch when the Fill Buffers (FB) is full. Auto maps to hardware default setting.
<b>Uncore Frequency RAPL</b>	This setting control whether the Running Average Power Limit (RAPL) balancer is enabled. If enabled, it activates the uncore power budgeting.
<b>Processor Core Speed</b>	Specifies the maximum core frequency of the processor.
<b>Processor Bus Speed</b>	Specifies the bus speed of the processor.  <b>NOTE:</b> The processor bus speed option displays only when both processors are installed.
<b>Local Machine Check Exception</b>	Enables or disables the local machine check exception. This is an extension of the MCA Recovery mechanism providing the capability to deliver Uncorrected Recoverable (UCR) Software Recoverable Action Required (SRAR) errors to one or more specific logical processors threads receiving previously poisoned or corrupted data. When enabled, the UCR SRAR Machine Check Exception is delivered only to the affected thread rather than broadcast to all threads in the system. The feature supports operating system recovery for cases of multiple recoverable faults that are detected close, which would otherwise result in a fatal machine check event. The feature is available only on Advanced RAS processors. This option is set to <b>Disabled</b> by default.
<b>CPU Crash Log Support</b>	This field controls Intel CPU Crash Log feature for collection of previous crash data from Shared SRAM of Out-of-Band Management Services Module at post reset. This option is set to <b>Disabled</b> by default.
<b>Processor n</b>	 <b>NOTE:</b> Depending on the number of processors, there might be up to n processors listed. The following settings are displayed for each processor:

**Table 42. Processor n details**

Option	Description
<b>Family-Model-Stepping</b>	Specifies the family, model, and stepping of the processor as defined by Intel.
<b>Brand</b>	Specifies the brand name.
<b>Level 2 Cache</b>	Specifies the total L2 cache.
<b>Level 3 Cache</b>	Specifies the total L3 cache.
<b>Number of Cores</b>	Specifies the number of cores per processor.
<b>Microcode</b>	Specifies the processor microcode version.

## SATA Settings

To view the **SATA Settings** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > SATA Settings**.

**Table 43. SATA Settings details**

Option	Description
<b>Embedded SATA</b>	Enables the embedded SATA option to be set to <b>Off</b> , <b>AHCI mode</b> , or <b>RAID modes</b> . This option is set to <b>AHCI Mode</b> by default. <b>NOTE:</b> 1. You might also need to change the Boot Mode setting to UEFI. Otherwise, you should set the field to Non-RAID mode. 2. No ESXi and Ubuntu OS support under RAID mode.
<b>Security Freeze Lock</b>	Sends <b>Security Freeze Lock</b> command to the embedded SATA drives during POST. This option is applicable only for AHCI Mode. This option is set to <b>Enabled</b> by default.
<b>Write Cache</b>	Enables or disables the command for the embedded SATA drives during POST. This option is applicable only for AHCI Mode. This option is set to <b>Disabled</b> by default.
<b>Port n</b>	Sets the drive type of the selected device. For <b>AHCI Mode</b> , BIOS support is always enabled.

**Table 44. Port n**

Options	Descriptions
<b>Model</b>	Specifies the drive model of the selected device.
<b>Drive Type</b>	Specifies the type of drive attached to the SATA port.
<b>Capacity</b>	Specifies the total capacity of the drive. This field is undefined for removable media devices such as optical drives.

## NVMe Settings

This option sets the NVMe drive mode. If the system contains NVMe drives that you want to configure in a RAID array, you must set both this field and the Embedded SATA field on the SATA settings menu to RAID Mode. You may also need to change the Boot Mode setting to UEFI.

To view the **NVMe Settings** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > NVMe Settings**.

**Table 45. NVMe Settings details**

Option	Description
<b>NVMe mode</b>	Enables or disables the boot mode. The option is set to <b>Non-RAID</b> mode by default.
<b>BIOS NVMe Driver</b>	Sets the drive type to boot the NVMe driver. The available options are <b>Dell Qualified Drives</b> and <b>All Drives</b> . This option is set to <b>Dell Qualified Drives</b> by default.

## Boot Settings

You can use the **Boot Settings** screen to set the boot mode to either **BIOS** or **UEFI**. It also enables you to specify the boot order. The **Boot Settings** only support **UEFI** mode.




- **UEFI:** The Unified Extensible Firmware Interface (UEFI) is a new interface between operating systems and platform firmware. The interface consists of data tables with platform related information, boot and runtime service calls that are available to the operating system and its loader. The following benefits are available when the **Boot Mode** is set to **UEFI**:
  - Support for drive partitions larger than 2 TB.
  - Enhanced security (e.g., UEFI Secure Boot).
  - Faster boot time.

**NOTE:** You must use only the UEFI boot mode in order to boot from NVMe drives.

- **BIOS:** The **BIOS Boot Mode** is the legacy boot mode. It is maintained for backward compatibility.

To view the **Boot Settings** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > Boot Settings**.

**Table 46. Boot Settings details**

Option	Description
<b>Boot Mode</b>	<p>Enables you to set the boot mode of the system. If the operating system supports UEFI, you can set this option to UEFI. Setting this field to BIOS allows compatibility with non-UEFI operating systems. This option is set to <b>UEFI</b> by default.</p> <p> <b>CAUTION: Switching the boot mode may prevent the system from booting if the operating system is not installed in the same boot mode.</b></p> <p> <b>NOTE:</b> Setting this field to UEFI disables the <b>BIOS Boot Settings</b> menu.</p>
<b>Boot Sequence Retry</b>	<p>Enables or disables the Boot sequence retry feature or resets the system. When this option is set to <b>Enabled</b> and the system fails to boot, the system re-attempts the boot sequence after 30 seconds. When this option is set to <b>Reset</b> and the system fails to boot, the system reboots immediately. This option is set to <b>Enabled</b> by default.</p>
<b>Hard-Disk Failover</b>	<p>When Boot Mode is BIOS, this field specifies the devices in the Hard-Disk Drive Sequence menu the BIOS will attempt to boot. This field has no effect when Boot Mode is UEFI. When set to Disabled, the BIOS will only attempt to boot the first Hard-Disk device in the list. When set to Enabled, the BIOS will attempt to boot each Hard-Disk device in order until it is successful or the entire Hard-Disk Drive Sequence has been attempted.</p>
<b>Generic USB Boot</b>	<p>Enables or disables the generic USB boot placeholder. This option is set to <b>Disabled</b> by default.</p>
<b>Hard-disk Drive Placeholder</b>	<p>Enables or disables the Hard-disk drive placeholder. This option is set to <b>Disabled</b> by default.</p>
<b>Clean all Sysprep variables and order</b>	<p>When this option is set to <b>None</b>, BIOS will do nothing. When set to <b>Yes</b>, BIOS will delete variables of SysPrep #### and SysPrepOrder this option is a onetime option, will reset to none when deleting variables. This setting is only available in <b>UEFI Boot Mode</b>. This option is set to <b>None</b> by default.</p>
<b>UEFI Boot Settings</b>	<p>Specifies the UEFI boot sequence. Enables or disables UEFI Boot options.</p> <p> <b>NOTE:</b> This option controls the UEFI boot order. The first option in the list will be attempted first.</p>

**Table 47. UEFI Boot Settings**


Option	Description
<b>UEFI Boot Sequence</b>	Enables you to change the boot device order.
<b>Boot Options Enable/Disable</b>	Enables you to select the enabled or disabled boot devices

## Choosing system boot mode


System Setup enables you to specify one of the following boot modes for installing your operating system:


- UEFI boot mode (the default), is an enhanced 64-bit boot interface. If you have configured your system to boot to UEFI mode, it replaces the system BIOS.

1. From the **System Setup Main Menu**, click **Boot Settings**, and select **Boot Mode**.
2. Select the UEFI boot mode you want the system to boot into.

 **CAUTION: Switching the boot mode may prevent the system from booting if the operating system is not installed in the same boot mode.**

3. After the system boots in the specified boot mode, proceed to install your operating system from that mode.


 **NOTE:** Operating systems must be UEFI-compatible to be installed from the UEFI boot mode. DOS and 32-bit operating systems do not support UEFI and can only be installed from the BIOS boot mode.

 **NOTE:** For the latest information about supported operating systems, go to [OS support](#).

## Changing boot order


### About this task

You may have to change the boot order if you want to boot from a USB key or an optical drive. The following instructions may vary if you have selected **BIOS** for **Boot Mode**.

 **NOTE:** Changing the drive boot sequence is only supported in BIOS boot mode.


### Steps

1. On the **System Setup Main Menu** screen, click **System BIOS > Boot Settings > UEFI Boot Settings > UEFI Boot Sequence**.
2. Use the arrow keys to select a boot device, and use the plus (+) and minus (-) sign keys to move the device down or up in the order.
3. Click **Exit**, and then click **Yes** to save the settings on exit.

 **NOTE:** You can also enable or disable boot order devices as needed.

## Network Settings

To view the **Network Settings** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > Network Settings**.

 **NOTE:** Network Settings are not supported in BIOS boot mode.

**Table 48. Network Settings details**

Option	Description
<b>UEFI PXE Settings</b>	Enables you to control the configuration of the UEFI PXE device.
<b>Number of PXE Devices</b>	This field specifies the number of PXE devices. This option is set to <b>4</b> by default.
<b>PXE Device n</b> (n = 1 to 4)	Enables or disables the device. When enabled, a UEFI PXE boot option is created for the device.
<b>PXE Device n Settings</b> (n = 1 to 4)	Enables you to control the configuration of the PXE device.
<b>UEFI HTTP Settings</b>	Enables you to control the configuration of the UEFI HTTP device.
<b>HTTP Device n</b> (n = 1 to 4)	Enables or disables the device. When enabled, a UEFI HTTP boot option is created for the device.
<b>HTTP Device n Settings</b> (n = 1 to 4)	Enables you to control the configuration of the HTTP device.
<b>UEFI iSCSI Settings</b>	Enables you to control the configuration of the iSCSI device.
<b>iSCSI Initiator Name</b>	Specifies the name of the iSCSI initiator in IQN format.
<b>iSCSI Device1</b>	Enables or disables the iSCSI device. When enabled, a UEFI boot option is created for the iSCSI device automatically. This is set to <b>Disabled</b> by default.
<b>iSCSI Device1 Settings</b>	Enables you to control the configuration of the iSCSI device.
<b>UEFI NVMe-oF Settings</b>	Enables you to control the configuration of the NVMe-oF devices.
<b>NVMe-oF</b>	Enables or disables the NVMe-oF feature. When enabled, it allows to configure the host and target parameters needed for fabric connection. This is set to <b>Disabled</b> by default.
<b>NVMe-oF Host NQN</b>	This field specifies the name of the NVMe-oF host NQN. Allowed input is in the following format: nqn.yyyy-mm.<Reserved Domain Name>:<Unique

**Table 48. Network Settings details (continued)**

Option	Description
	String>. Leave it empty to use system generated value with following format: nqn.1988-11.com.dell:<Model name>.<Model number>.<Service Tag>. This is set to <b>nqn.1988-11.com.dell:&lt;model name&gt;.&lt;model number&gt;.&lt;service tag&gt;</b> by default.
<b>NVMe-oF Host Id</b>	This field specifies a 16 bytes value of the NVMe-oF host identifier that uniquely identifies this host with the controller in the NVM subsystem. Allowed input is a hexadecimal-encoded string in this format: 00112233-4455-6677-8899-aabbccddeeff. Leave it empty to use system generated value. A value of all FF is not allowed.
<b>Host Security Key Path</b>	This field specifies the Host security key path.
<b>NVMe-oF SubSystem Settings</b> (n = 1 to 4)	This field controls the parameters for the NVMe-oF subsystem n connections.

**Table 49. TLS Authentication Configuration screen details**

Option	Description
<b>TLS Authentication Mode</b>	View or modify the device's boot TLS Authentication Mode. This option is set to <b>One Way</b> by default. <b>None</b> means the HTTP server and the client will not authenticate each other for this boot.
<b>Root Certificate Configuration</b>	Import, delete, or export the root certificate.

**Table 50. NVMe-oF SubSystem Settings screen details**

Option	Description
<b>NVMe-oF SubSystem n</b> (n = 1 to 4)	Enables or disables NVMe-oF SubSystem. This option is set to <b>Disabled</b> by default.
<b>NVMe-oF SubSystem n Settings</b> (n = 1 to 4)	Enables you to control the configuration of the NVMe-oF SubSystem, if <b>Enabled</b> .

**Table 51. NVMe-oF SubSystem n Settings**

Option	Description
<b>Interface</b>	NIC interface used for NVMe-oF connections.
<b>Transport Type</b>	This field sets the value of transport type for NVMe-oF connection. This option is set to <b>TCP</b> by default.
<b>Protocol</b>	This field sets the value of protocol type for NVMe-oF connection. This option is set to <b>IPv4</b> by default.
<b>VLAN</b>	Enables or disables VLAN for this NVMe-oF connections. This option is set to <b>Disabled</b> by default.
<b>VLAN Id</b>	Specifies the VLAN Id for this NVMe-oF connection. This option is set to <b>1</b> by default.
<b>VLAN Priority</b>	Specifies the VLAN priority for this NVMe-oF connection. This option is set to <b>0</b> by default.
<b>Retry Count</b>	Specifies the retry count for this NVMe-oF connection. This option is set to <b>3</b> by default.
<b>Timeout</b>	Specifies the time out for this NVMe-oF connection. This option is set to <b>10000</b> by default.
<b>DHCP</b>	Enables and disables the DHCP for this NVMe-oF connection. This option is set to <b>Disabled</b> by default.
<b>Host IP Address</b>	Specifies the Host IP Address for this NVMe-oF connection.

**Table 51. NVMe-oF SubSystem n Settings (continued)**

Option	Description
<b>Host Subnet Mask</b>	Specifies the Host Subnet Mask for this NVMe-oF connection.
<b>Host Gateway</b>	Specifies the Host Gateway for this NVMe-oF connection.
<b>NVMe-oF subsystem info via DHCP</b>	Enables and disables the NVMe-oF subsystem's DHCP for this connection. This option is set to <b>Disabled</b> by default.
<b>NVMe-oF subsystem NQN</b>	Specifies the NVMe-oF subsystem's NQN for this connection.
<b>NVMe-oF subsystem Address</b>	Specifies the NVMe-oF subsystem's IP address for this connection.
<b>NVMe-oF subsystem Port</b>	Specifies the NVMe-oF subsystem's port for this connection. This option is set to <b>4420</b> by default.
<b>NVMe-oF subsystem NID</b>	Specifies the NamespaceID (NID) for this NVMe-oF connection.
<b>NVMe-oF subsystem Controller ID</b>	Specifies the NVMe-oF subsystem's Controller ID for this connection. This option is set to <b>0</b> by default.
<b>Security</b>	Enables or disables the security option for this NVMe-oF connection. This option is set to <b>Disabled</b> by default.
<b>Authentication Type</b>	Specifies the authentication type for this NVMe-oF connection. This option is set to <b>None</b> by default.
<b>Securitykeypath</b>	Specifies the Securitykeypath for this NVMe-oF connection.

## Integrated Devices

To view the **Integrated Devices** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > Integrated Devices**.

**Table 52. Integrated Devices details**

Option	Description
<b>User Accessible USB Ports</b>	<p>Configures the user accessible USB ports. Selecting <b>All Ports Off (Dynamic)</b> disables all front and back USB ports during POST. Selecting <b>All Ports Off</b> disables all front and back USB ports. This option is set to <b>All Ports On</b> by default. When user accessible USB ports are set to <b>All Ports Off (Dynamic)</b> the <b>Enable Front Ports Only</b> option is enabled.</p> <ul style="list-style-type: none"> <li>• <b>Enable Front Ports Only:</b> Enables or disables the front USB ports during the operating system runtime.</li> </ul> <p>The USB keyboard and mouse still function in certain USB ports during the boot process, depending on the selection. After the boot process is complete, the USB ports will be enabled or disabled as per the setting.</p>
<b>Internal USB Port</b>	Enables or disables the internal USB port. This option is set to <b>On</b> or <b>Off</b> . This option is set to <b>On</b> by default.
<b>iDRAC Direct USB Port</b>	The iDRAC Direct USB port is managed by iDRAC exclusively with no host visibility. This option is set to <b>ON</b> or <b>OFF</b> . When set to <b>OFF</b> , iDRAC does not detect any USB devices installed in this managed port. This option is set to <b>On</b> by default.
<b>I/OAT DMA Engine</b>	Enables or disables the I/O Acceleration Technology (I/OAT) option. I/OAT is a set of DMA features designed to accelerate network traffic and lower CPU utilization. Enable only if the hardware and software support the feature. This option is set to <b>Disabled</b> by default.
<b>Embedded Video Controller</b>	Enables or disables the use of Embedded Video Controller as the primary display. When set to <b>Enabled</b> , the Embedded Video Controller will be the primary display even if add-in graphic cards are installed. When set to <b>Disabled</b> , an add-in graphics card is used as the primary display. BIOS will

**Table 52. Integrated Devices details (continued)**

Option	Description
	<p>output displays to both the primary add-in video and the embedded video during POST and preboot environment. The embedded video will then be disabled right before the operating system boots. This option is set to <b>Enabled</b> by default.</p> <p><b>NOTE:</b> When there are multiple add-in graphic cards installed in the system, the first card discovered during PCI enumeration is selected as the primary video. You might have to rearrange the cards in the slots in order to control which card is the primary video.</p>
<b>I/O Snoop HoldOff Response</b>	<p>Selects the number of cycles PCI I/O can withhold snoop requests, from the CPU, to allow time to complete its own write to LLC. This setting can help improve performance on workloads where throughput and latency are critical. The options available are <b>256 Cycles, 512 Cycles, 1K Cycles, 2K Cycles, 4K Cycles, 8K Cycles, 16K Cycles, 32K Cycles, 64K Cycles</b> and <b>128K Cycles</b>. This option is set to <b>2K Cycles</b> by default.</p>
<b>Current State of Embedded Video Controller</b>	<p>Displays the current state of the embedded video controller. The <b>Current State of Embedded Video Controller</b> option is a read-only field. If the Embedded Video Controller is the only display capability in the system (that is, no add-in graphics card is installed), then the Embedded Video Controller is automatically used as the primary display even if the <b>Embedded Video Controller</b> setting is set to <b>Disabled</b>.</p>
<b>SR-IOV Global Enable</b>	<p>Enables or disables the BIOS configuration of Single Root I/O Virtualization (SR-IOV) devices. This option is set to <b>Disabled</b> by default.</p>
<b>OS Watchdog Timer</b>	<p>If your system stops responding, this watchdog timer aids in the recovery of your operating system. When this option is set to <b>Enabled</b>, the operating system initializes the timer. When this option is set to <b>Disabled</b> (the default), the timer does not have any effect on the system.</p>
<b>Empty Slot Unhide</b>	<p>Enables or disables the root ports of all the empty slots that are accessible to the BIOS and operating system. This option is set to <b>Disabled</b> by default.</p>
<b>IIO PCIe Data Link Feature Exchange</b>	<p>This field allows globally disabling PCIe Data Link Feature Exchange. This may be needed to support certain legacy hardware. This option is set to <b>Enabled</b> by default.</p>
<b>Mezzanine Slot Disablement</b>	<p>Enables or disables or boot driver disables the available mezzanine slots on your system. The slot disablement feature controls the configuration of the Mezzanine cards installed in the specified slot. Slots must be disabled only when the installed peripheral card prevents booting into the operating system or causes delays in system startup. If the slot is disabled, both the Option ROM and UEFI drivers are disabled. Only mezzanine slots that are present on the system will be available for control. When this option is set to boot driver disabled, both the Option ROM and UEFI driver from the slot will not run during POST. The system will not boot from the card and its pre-boot services will not be available. However, the card is available to the operating system.</p> <p><b>Slot n:</b> Enables or disables or only the boot driver is disabled for the PCIe slot n. This option is set to <b>Enabled</b> by default.</p>

## Serial Communication

To view the **Serial Communication** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > Serial Communication**.

**NOTE:** The serial port is optional for the PowerEdge R760xa system. The Serial Communication option is applicable only if the serial COM port is installed in the system.

**Table 53. Serial Communication details**

Option	Description
<b>Serial Communication</b>	<p>Enables the serial communication options. Selects serial communication devices (Serial Device 1 and Serial Device 2) in BIOS. BIOS console redirection can also be enabled, and the port address can be specified.</p> <p>The options available for System without serial COM port (DB9) are <b>On without Console Redirection</b>, <b>On with Console Redirection</b>, <b>Off</b>, <b>Auto</b>. This option is set to <b>Auto</b> by default.</p>
<b>Serial Port Address</b>	<p>Enables you to set the port address for serial devices. This option is set to either <b>COM1</b> or <b>COM2</b> for the serial device (<b>COM1=0x3F8,COM2=0x2F8</b>) and set to <b>COM1</b> by default.</p> <p><b>i</b> <b>NOTE:</b> You can use only Serial Device 2 for the Serial Over LAN (SOL) feature. To use console redirection by SOL, configure the same port address for console redirection and the serial device.</p> <p><b>i</b> <b>NOTE:</b> Every time the system boots, the BIOS syncs the serial MUX setting that is saved in iDRAC. The serial MUX setting can independently be changed in iDRAC. Loading the BIOS default settings from within the BIOS setup utility may not always revert the serial MUX setting to the default setting of Serial Device 1.</p>
<b>External Serial Connector</b>	<p>Enables you to associate the External Serial Connector to <b>Serial Device 1</b>, <b>Serial Device 2</b>, or the <b>Remote Access Device</b> by using this option. This option is set to <b>Serial Device 1</b> by default.</p> <p><b>i</b> <b>NOTE:</b> Only Serial Device 2 can be used for Serial Over LAN (SOL). To use console redirection by SOL, configure the same port address for console redirection and the serial device.</p> <p><b>i</b> <b>NOTE:</b> Every time the system boots, the BIOS syncs the serial MUX setting saved in iDRAC. The serial MUX setting can independently be changed in iDRAC. Loading the BIOS default settings from within the BIOS setup utility may not always revert this setting to the default setting of Serial Device 1.</p>
<b>Failsafe Baud Rate</b>	<p>Specifies the failsafe baud rate for console redirection. The BIOS attempts to determine the baud rate automatically. This failsafe baud rate is used only if the attempt fails, and the value must not be changed. This option is set to <b>115200</b> by default.</p>
<b>Remote Terminal Type</b>	<p>Sets the remote console terminal type. This option is set to <b>VT100/VT220</b> by default.</p>
<b>Redirection After Boot</b>	<p>Enables or disables the BIOS console redirection when the operating system is loaded. This option is set to <b>Enabled</b> by default.</p>




## System Profile Settings

To view the **System Profile Settings** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > System Profile Settings**.

**Table 54. System Profile Settings details**

Option	Description
<b>System Profile</b>	<p>Sets the system profile. If you set the System Profile option to a mode other than <b>Custom</b>, the BIOS automatically sets the rest of the options. You can only change the rest of the options if the mode is set to <b>Custom</b>. This option is set to <b>Performance Per Watt (DAPC)</b> by default. Other options include Performance, Performance Per Watt (OS), Workstation Performance and Custom.</p>

**Table 54. System Profile Settings details (continued)**

Option	Description
	<p> <b>NOTE:</b> All the parameters on the system profile setting screen are available only when the <b>System Profile</b> option is set to <b>Custom</b>.</p>
<b>Optimized Power Mode</b>	<p>Sets the Optimized Power Mode. When set to Enabled, the processor is tuned for lower power consumption. Also sets C1E to Enabled, sets CPU Power Management to System DBPM mode, sets Energy Efficient Policy to Performance, sets Uncore Frequency to Dynamic, and sets Dynamic Load Line Switch to Enabled.</p> <p>This option is set to <b>Disabled</b> by default.</p>
<b>CPU Power Management</b>	<p>Sets the CPU power management. This option is set to <b>System DBPM (DAPC)</b> by default. Other option includes <b>Maximum Performance, OS DBPM</b>.</p>
<b>Memory Frequency</b>	<p>Sets the speed of the system memory. You can select <b>Maximum Performance, Maximum Reliability</b> or a specific speed. This option is set to <b>Maximum Performance</b> by default.</p>
<b>Turbo Boost</b>	<p>Enables or disables the processor to operate in the turbo boost mode. This option is set to <b>Enabled</b> by default.</p>
<b>Energy Efficient Turbo</b>	<p>Energy Efficient Turbo (EET) is a mode of operation where a processor's core frequency is adjusted within the turbo range based on workload. Read-only unless System Profile is set to Custom. This option is set to <b>Enabled</b> by default.</p>
<b>C1E</b>	<p>Enables or disables the processor to switch to a minimum performance state when it is idle. This option is set to <b>Enabled</b> by default.</p>
<b>C States</b>	<p>Enables or disables the processor to operate in all available power states. C States allow the processor to enter lower power states when idle. When set to <b>Enabled</b> (OS controlled) or when set to <b>Autonomous</b> (if hardware controlled is supported), the processor can operate in all available Power States to save power, but may increase memory latency and frequency jitter. This option is set to <b>Enabled</b> by default.</p>
<b>Memory Patrol Scrub</b>	<p>Sets the memory patrol scrub mode. This option is set to <b>Standard</b> by default.</p>
<b>Memory Refresh Rate</b>	<p>Sets the memory refresh rate to either 1x or 2x. This option is set to <b>1x</b> by default.</p>
<b>Uncore Frequency</b>	<p>Enables you to select the <b>Uncore Frequency</b> option. <b>Dynamic mode</b> enables the processor to optimize power resources across cores and uncores during runtime. The optimization of the uncore frequency to either save power or optimize performance is influenced by the setting of the <b>Energy Efficiency Policy</b> option.</p>
<b>Dynamic Load Line Switch</b>	<p>Dynamic Load Line Switch control. Dynamic Link Library (DLL) is a <b>Power Management feature</b>, which dynamically switches to the performance mode during periods of high CPU utilization. Read-only unless System Profile is set to <b>Custom</b>. This option is set to <b>Enabled</b> by default.</p>
<b>Energy Efficient Policy</b>	<p>Enables you to select the <b>Energy Efficient Policy</b> option. The CPU uses the setting to manipulate the internal behavior of the processor and determines whether to target higher performance or better power savings. This option is set to <b>Balanced Performance</b> by default.</p>
<b>Monitor/Mwait</b>	<p>Enables the Monitor/Mwait instructions in the processor. This option is set to <b>Enabled</b> for all system profiles, except <b>Custom</b> by default.</p> <p> <b>NOTE:</b> This option can be disabled only if the C States option in the Custom mode is set to disabled.</p> <p> <b>NOTE:</b> When C States is set to Enabled in the Custom mode, changing the Monitor/Mwait setting does not impact the system power or performance.</p>
<b>Workload Profile</b>	<p>This option allows the user to specify the targeted workload of a server. It allows optimization of performance based on the workload type. This option is set to <b>Not Configured</b> by default.</p>
<b>CPU Interconnect Bus Link Power Management</b>	<p>Enables or disables the CPU Interconnect Bus Link Power Management. This option is set to <b>Enabled</b> by default.</p>

**Table 54. System Profile Settings details (continued)**

Option	Description
<b>PCI ASPM L1 Link Power Management</b>	Enables or disables the PCI <b>ASPM L1 Link Power Management</b> . This option is set to <b>Enabled</b> by default.
<b>Workload Configuration</b>	Set Workload Configuration. This field controls the Energy Performance Bias settings to allow BIOS to choose a configuration that improve performance on certain workload. Read-only unless System Profile is set to Custom. This option is set to <b>Balance</b> by default.


## System Security

To view the **System Security** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > System Security**.

**Table 55. System Security details**

Option	Description
<b>CPU AES-NI</b>	Improves the speed of applications by performing encryption and decryption by using the Advanced Encryption Standard Instruction Set (AES-NI). This option is set to <b>Enabled</b> by default.
<b>Strong Password Status</b>	Sets the Strong Password. If enabled, you must set up a password that has at least one character in lowercase, uppercase, digit, and a special character. Also, you have the option to set the minimum number of characters in both the new passwords. If disabled, you can set a password that has any character in it but the passwords must not have more than 32 characters. Changes made by enabling or disabling this feature become immediately effective. This option is set to <b>Disabled</b> by default.
<b>Strong Password Minimum Length (8 to 32)</b>	Controls the minimum number of characters used when setting a system or setup password. You can specify 8-32 characters. This option is set to <b>8</b> by default.
<b>System Password</b>	Sets the system password. This option is read-only if the password jumper is not installed in the system.
<b>Setup Password</b>	Sets the setup password. This option is read-only if the password jumper is not installed in the system.
<b>Password Status</b>	Locks the system password. This option is set to <b>Unlocked</b> by default.
<b>TPM Information</b>	Indicates the type of Trusted Platform Module, if present.
<b>EMR CPU TDX/ IFS features</b>	This option is set to <b>Disabled</b> by default.



**Table 56. TPM 2.0 security information**

Option	Description
<b>TPM Information</b>	
<b>TPM Security</b>	<p> <b>NOTE:</b> The TPM menu is available only when the TPM module is installed.</p> <p>Enables you to control the reporting mode of the TPM. When set to Off, the presence of the TPM is not reported to the OS. When set to On, the presence of the TPM is reported to the OS. The <b>TPM Security</b> option is set to <b>Off</b> by default.</p> <p>When TPM 2.0 is installed, the <b>TPM Security</b> option is set to <b>On</b> or <b>Off</b>. This option is set to <b>Off</b> by default.</p>
<b>TPM Information</b>	Indicates the type of Trusted Platform Module, if present.
<b>TPM Firmware</b>	Indicates the firmware version of the TPM.
<b>TPM Hierarchy</b>	<p>Enables, disables, or clears the storage and endorsement hierarchies. When set to <b>Enabled</b>, the storage and endorsement hierarchies can be used.</p> <p>When set to <b>Disabled</b>, the storage and endorsement hierarchies cannot be used.</p>


**Table 56. TPM 2.0 security information (continued)**

Option	Description
	When set to <b>Clear</b> , the storage and endorsement hierarchies are cleared of any values, and then reset to <b>Enabled</b> .
<b>TPM Advanced Settings</b>	Specifies TPM Advanced Settings details.

**Table 57. System Security details**

Option	Description
<b>Intel(R) TXT</b>	Enables you to set the Intel Trusted Execution Technology (TXT) option. To enable the <b>Intel TXT</b> option, virtualization technology and TPM Security must be enabled with Pre-boot measurements. This option is set to <b>Off</b> by default. It is set <b>On</b> for Secure Launch (Firmware Protection) support on Windows 2022.
<b>Memory Encryption</b>	Enables or disables the Intel Total Memory Encryption (TME) and Multi-Tenant (Intel® TME-MT). When option is set to <b>Disabled</b> , BIOS disables both TME and MK-TME technology. When option is set to <b>Single Key</b> BIOS enables the TME technology. When option is set to <b>Multiple Keys</b> , BIOS enables the TME-MT technology. This option is set to <b>Disabled</b> by default.
<b>Global Memory Integrity</b>	Allows Enabling or disabling of the Intel Global Memory Integrity. The Global Mem Integrity can be enabled only if Processor Settings -> CPU Physical Address Limit is disabled. This option is set to <b>Disabled</b> by default.
<b>TME Encryption Bypass</b>	Allows the option to bypass the Intel Total Memory Encryption. This option is set to <b>Disabled</b> by default.
<b>Intel(R) SGX</b>	Enables you to set the Intel Software Guard Extension (SGX) option. To enable the <b>Intel SGX</b> option, processor must be SGX capable, memory population must be compatible (minimum x8 identical DIMM1 to DIMM8 per CPU socket, not support on persistent memory configuration), memory operating mode must be set at optimizer mode, memory encryption must be enabled and node interleaving must be disabled. This option is set to <b>Off</b> by default. When this option is to <b>Off</b> , BIOS disables the SGX technology. When this option is to <b>On</b> , BIOS enables the SGX technology.
<b>Power Button</b>	Enables or disables the power button on the front of the system. This option is set to <b>Enabled</b> by default.
<b>AC Power Recovery</b>	Sets how the system behaves after AC power is restored to the system. This option is set to <b>Last</b> by default.  <b>NOTE:</b> The host system will not power on up until iDRAC Root of Trust (RoT) is completed, host power on will be delayed by minimum 90 seconds after the AC applied.
<b>UEFI Variable Access</b>	Provides varying degrees of securing UEFI variables. When set to <b>Standard</b> (the default), UEFI variables are accessible in the operating system per the UEFI specification. When set to <b>Controlled</b> , selected UEFI variables are protected in the environment and new UEFI boot entries are forced to be at the end of the current boot order.
<b>In-Band Manageability Interface</b>	When set to <b>Disabled</b> , this setting hides the Management Engine's (ME), HECI devices, and the system's IPMI devices from the operating system. This prevents the operating system from changing the ME power capping settings, and blocks access to all in-band management tools. All management should be managed through out-of-band. This option is set to <b>Enabled</b> by default.  <b>NOTE:</b> BIOS update requires HECI devices to be operational and DUP updates require IPMI interface to be operational. This setting needs to be set to Enabled to avoid updating errors.
<b>SMM Security Migration</b>	Enables or disables the UEFI SMM security migration protections. It is enabled for Windows 2022 support.

**Table 57. System Security details (continued)**

Option	Description
<b>Secure Boot</b>	Enables Secure Boot, where the BIOS authenticates each pre-boot image by using the certificates in the Secure Boot Policy. Secure Boot is set to <b>Disabled</b> by default.
<b>Secure Boot Policy</b>	When Secure Boot policy is set to <b>Standard</b> , the BIOS uses the system manufacturer's key and certificates to authenticate pre-boot images. When Secure Boot policy is set to <b>Custom</b> , the BIOS uses the user-defined key and certificates. Secure Boot policy is set to <b>Standard</b> by default.
<b>Secure Boot Mode</b>	<p>Configures how the BIOS uses the Secure Boot Policy Objects (PK, KEK, db, dbx).</p> <p>If the current mode is set to <b>Deployed Mode</b>, the available options are <b>User Mode</b> and <b>Deployed Mode</b>. If the current mode is set to <b>User Mode</b>, the available options are <b>User Mode</b>, <b>Audit Mode</b>, and <b>Deployed Mode</b></p> <p>Below are the details of different boot modes available in the <b>Secure Boot Mode</b> option.</p> <p><b>User Mode</b>                      In <b>User Mode</b>, PK must be installed, and BIOS performs signature verification on programmatic attempts to update policy objects. The BIOS allows unauthenticated programmatic transitions between modes.</p> <p><b>Audit mode</b>                      In <b>Audit Mode</b>, PK is not present. BIOS does not authenticate programmatic update to the policy objects and transitions between modes. The BIOS performs a signature verification on pre-boot images and logs the results in the image Execution Information Table, but executes the images whether they pass or fail verification. <b>Audit Mode</b> is useful for programmatic determination of a working set of policy objects.</p> <p><b>Deployed Mode</b>                      <b>Deployed Mode</b> is the most secure mode. In <b>Deployed Mode</b>, PK must be installed and the BIOS performs signature verification on programmatic attempts to update policy objects. <b>Deployed Mode</b> restricts the programmatic mode transitions.</p>
<b>Secure Boot Policy Summary</b>	Specifies the list of certificates and hashes that secure boot uses to authenticate images.
<b>Secure Boot Custom Policy Settings</b>	Configures the Secure Boot Custom Policy. To enable this option, set the Secure Boot Policy to <b>Custom</b> option.
<b>UEFI CA Certificate Scope</b>	This field specifies how Secure Boot uses the UEFI CA certificate in the Authorized Signature Database (db). When this field is set to Device Firmware and OS, Secure Boot will apply the UEFI CA certificate to all images, including device firmware, operating system loaders, and UEFI applications. When this field is set to Device Firmware, Secure Boot will apply the UEFI CA certificate only to device boot firmware, such as UEFI drivers for RAID or NIC devices. In this case, operating system loaders and UEFI applications will not execute if they are signed only by the UEFI CA key, even though the UEFI CA certificate is in db. This field is configurable only when the Secure Boot Policy is Custom. Otherwise, the value of this field is selected automatically based on the Secure Boot Policy setting.
<b>Intel Trust Domain Extension(TDX)</b>	<p><b>Intel Trust Domain Extension (TDX)</b> is a hardware-based trusted execution environment. It is designed to protect sensitive data and applications in Trust Domain(TD) or Virtual Machine(VM) from unauthorized access. <b>Memory Encryption</b> must be set to <b>Multiple Keys</b> for TDX to be enabled. TDX is set to <b>Disabled</b> by default.</p> <p> <b>NOTE:</b> To enable the TDX option, processor must be TDX capable, memory population must be compatible as SGX setting (minimum x8 identical DIMM1 to DIMM8 per CPU socket, not support on persistent memory configuration)</p>


**Table 57. System Security details (continued)**

Option	Description
<b>TME-MT/TDX Key Spilt to non-zero value</b>	When the TME-MT/TDX Key Spilt to non-zero value is set to <b>1, 2, 3, 4, 5, or 6</b> , it designates the number of bits for TDX usage, while the rest will be used by TME-MT. It is set to <b>1</b> by default.
<b>Disable excluding Mem below 1MB in CMR</b>	Convertible Memory Range (CMR) is programmed to define the memory region that are convertible between Intel SGX and Intel TDX usage. This option allows system to include memory region below 1MB in CMR. It is set to <b>Disabled</b> by default.
<b>TDX Secure Arbitration Mode Loader(SEAM)</b>	This SW module runs in a new CPU Secure Arbitration Mode (SEAM) as peer virtual machine manager (VMM). This SEAM module supports TD entry and exit using the existing virtualization infrastructure. It is set to <b>Disabled</b> by default.
<b>Intel(R) In-Field Scan</b>	The Intel(R) In-field Scan feature allows software to scan processor cores for latent faults. The scan can be performed in the field after the server is deployed. When <b>Enabled</b> , the BIOS configures all processors to respond to software scan requests. When this setting is <b>Disabled</b> , the processors will not respond to software scan requests. It is set to <b>Disabled</b> by default.

## Creating a system and setup password

### Prerequisites

Ensure that the password jumper is enabled. The password jumper enables or disables the system password and setup password features. For more information, see the System board jumper settings section.


 **NOTE:** If the password jumper setting is disabled, the existing system password and setup password are deleted and you need not provide the system password to boot the system.

### Steps

1. To enter System Setup, press F2 immediately after turning on or rebooting your system.
2. On the **System Setup Main Menu** screen, click **System BIOS > System Security**.
3. On the **System Security** screen, verify that **Password Status** is set to **Unlocked**.
4. In the **System Password** field, type your system password, and press Enter or Tab.  
Use the following guidelines to assign the system password:
  - A password can have up to 32 characters.

A message prompts you to reenter the system password.
5. Reenter the system password, and click **OK**.
6. In the **Setup Password** field, type your setup password and press Enter or Tab.  
A message prompts you to reenter the setup password.
7. Reenter the setup password, and click **OK**.
8. Press Esc to return to the System BIOS screen. Press Esc again.

A message prompts you to save the changes.

 **NOTE:** Password protection does not take effect until the system reboots.

## Using your system password to secure your system

### About this task

If you have assigned a setup password, the system accepts your setup password as an alternate system password.

### Steps

1. Turn on or reboot your system.
2. Type the system password and press Enter.

## Next steps

When **Password Status** is set to **Locked**, type the system password and press Enter when prompted at reboot.

- i** **NOTE:** If an incorrect system password is typed, the system displays a message and prompts you to reenter your password. You have three attempts to type the correct password. After the third unsuccessful attempt, the system displays an error message that the system has stopped functioning and must be turned off. Even after you turn off and restart the system, the error message is displayed until the correct password is entered.

## Deleting or changing system and setup password

### Prerequisites

- i** **NOTE:** You cannot delete or change an existing system or setup password if the **Password Status** is set to **Locked**.

### Steps

1. To enter System Setup, press F2 immediately after turning on or restarting your system.
2. On the **System Setup Main Menu** screen, click **System BIOS > System Security**.
3. On the **System Security** screen, ensure that **Password Status** is set to **Unlocked**.
4. In the **System Password** field, alter or delete the existing system password, and then press Enter or Tab.
5. In the **Setup Password** field, alter or delete the existing setup password, and then press Enter or Tab.  
If you change the system and setup password, a message prompts you to reenter the new password. If you delete the system and setup password, a message prompts you to confirm the deletion.
6. Press Esc to return to the **System BIOS** screen. Press Esc again, and a message prompts you to save the changes.
7. Select **Setup Password**, change, or delete the existing setup password and press Enter or Tab.  
**i** **NOTE:** If you change the system password or setup password, a message prompts you to reenter the new password. If you delete the system password or setup password, a message prompts you to confirm the deletion.

## Operating with setup password enabled

If **Setup Password** is set to **Enabled**, type the correct setup password before modifying the system setup options.

If you do not type the correct password in three attempts, the system displays the following message:

```
Invalid Password! Number of unsuccessful password attempts: <x> System Halted! Must power down.
```

Even after you power off and restart the system, the error message is displayed until the correct password is typed. The following options are exceptions:

- If **System Password** is not set to **Enabled** and is not locked through the **Password Status** option, you can assign a system password. For more information, see the System Security Settings screen section.
- You cannot disable or change an existing system password.

- i** **NOTE:** You can use the password status option with the setup password option to protect the system password from unauthorized changes.






## Redundant OS Control

To view the **Redundant OS Control** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > Redundant OS Control**.

**Table 58. Redundant OS Control details**

Option	Description
<b>Redundant OS Location</b>	Enables you to select a backup disk from the following devices: <ul style="list-style-type: none"><li>• <b>None</b></li></ul>


**Table 58. Redundant OS Control details (continued)**

Option	Description
	<ul style="list-style-type: none"> <li>• <b>SATA Ports in AHCI mode</b></li> <li>• <b>SATA ports</b></li> </ul> <p> <b>NOTE:</b> RAID configurations and NVMe cards are not included, as BIOS does not have the ability to distinguish between individual drives in those configurations.</p> <ul style="list-style-type: none"> <li>• <b>BOSS PCIe Cards (Internal M.2 Drives)</b></li> <li>• <b>Internal USB</b></li> </ul> <p> <b>NOTE:</b> RAID configurations and NVMe cards are not included, as BIOS does not have the ability to distinguish between individual drives in those configurations.</p>
<b>Redundant OS State</b>	<p> <b>NOTE:</b> This option is disabled if <b>Redundant OS Location</b> is set to <b>None</b>.</p> <p>When set to <b>Visible</b>, the backup disk is visible to the boot list and OS. When set to <b>Hidden</b>, the backup disk is disabled and is not visible to the boot list and OS. This option is set to <b>Visible</b> by default.</p> <p> <b>NOTE:</b> BIOS disables the device in hardware, so it is not accessed by the OS.</p>
<b>Redundant OS Boot</b>	<p> <b>NOTE:</b> This option is disabled if <b>Redundant OS Location</b> is set to <b>None</b> or if <b>Redundant OS State</b> is set to <b>Hidden</b>.</p> <p>When set to <b>Enabled</b>, BIOS boots to the device specified in <b>Redundant OS Location</b>. When set to <b>Disabled</b>, BIOS preserves the current boot list settings. This option is set to <b>Disabled</b> by default.</p>

## Miscellaneous Settings

To view the **Miscellaneous Settings** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > Miscellaneous Settings**.

**Table 59. Miscellaneous Settings details**

Option	Description
<b>System Time</b>	Enables you to set the time on the system.
<b>System Date</b>	Enables you to set the date on the system.
<b>Time Zone</b>	Time's offset from UTC.
<b>Daylight Savings Time</b>	Enable/Disable Daylight Savings Time. This option is set to Disabled by default.
<b>Asset Tag</b>	Specifies the asset tag and enables you to modify it for security and tracking purposes.
<b>Keyboard NumLock</b>	Enables you to set whether the system boots with the NumLock enabled or disabled. This option is set to <b>On</b> by default.  <b>NOTE:</b> This option does not apply to 84-key keyboards.
<b>F1/F2 Prompt on Error</b>	Enables or disables the F1/F2 prompt on error. This option is set to <b>Enabled</b> by default. The F1/F2 prompt also includes keyboard errors.
<b>Load Legacy Video Option ROM</b>	Enables or disables the Load Legacy Video Option ROM option. This option is set to <b>Disabled</b> by default.
<b>Dell Wyse P25/P45 BIOS Access</b>	Enables or disables the Dell Wyse P25/P45 BIOS Access. This option is set to <b>Enabled</b> by default.
<b>Power Cycle Request</b>	Enables or disables the Power Cycle Request. This option is set to <b>None</b> by default.

## iDRAC Settings

The iDRAC settings is an interface to set up and configure the iDRAC parameters by using UEFI. You can enable or disable various iDRAC parameters by using the iDRAC settings.

**i** **NOTE:** Accessing some of the features on the iDRAC settings needs the iDRAC Enterprise License upgrade.

For more information about using iDRAC, see *Dell Integrated Dell Remote Access Controller User's Guide* at [iDRAC Manuals](#).

## Device Settings

**Device Settings** enables you to configure device parameters such as storage controllers or network cards.

## Service Tag Settings

**Service Tag Settings** enables you to configure the System Service Tag.

## Dell Lifecycle Controller

Dell Lifecycle Controller (LC) provides advanced embedded systems management capabilities including system deployment, configuration, update, maintenance, and diagnosis. LC is delivered as part of the iDRAC out-of-band solution and Dell system embedded Unified Extensible Firmware Interface (UEFI) applications.

## Embedded system management

The Dell Lifecycle Controller provides advanced embedded system management throughout the lifecycle of the system. The Dell Lifecycle Controller is started during the boot sequence and functions independently of the operating system.

**i** **NOTE:** Certain platform configurations may not support the full set of features provided by the Dell Lifecycle Controller.

For more information about setting up the Dell Lifecycle Controller, configuring hardware and firmware, and deploying the operating system, see the Dell Lifecycle Controller documentation at [iDRAC Manuals](#).

## Boot Manager

The **Boot Manager** option enables you to select boot options and diagnostic utilities.

To enter **Boot Manager**, power on the system and press F11.

**Table 60. Boot Manager details**

Option	Description
<b>Continue Normal Boot</b>	The system attempts to boot to devices starting with the first item in the boot order. If the boot attempt fails, the system continues with the next item in the boot order until the boot is successful or no more boot options are found.
<b>One-shot Boot Menu</b>	Enables you to access boot menu, where you can select a one-time boot device to boot from.
<b>Launch System Setup</b>	Enables you to access System Setup.
<b>Launch Lifecycle Controller</b>	Exits the Boot Manager and invokes the Dell Lifecycle Controller program.
<b>System Utilities</b>	Enables you to launch System Utilities menu such as Launch Diagnostics, BIOS update File Explorer, Reboot System.

## PXE boot

You can use the Preboot Execution Environment (PXE) option to boot and configure the networked systems remotely.

To access the **PXE boot** option, boot the system and then press F12 during POST instead of using standard Boot Sequence from BIOS Setup. It does not pull any menu or allows managing of network devices.

# Minimum to POST

This section describes the minimum to POST system requirement of the Dell system.

## Topics:

- [Minimum configuration to POST](#)
- [Configuration validation](#)

## Minimum configuration to POST

The components that are listed below are the minimum configuration to POST:

- One processor
- One memory module (DIMM) in slot A1
- One power supply unit
- System board + LOM/OCP card + RIO card

**i NOTE:** Minimum to POST is intended for troubleshooting and isolation of system faults. Due to the General-Purpose computing on Graphics Processing Units (GPGPU) configuration design of this platform, two processors and two memory modules (DIMMs) in slot A1 and B1 are required for proper functionality. At the above noted minimum POST, configuration errors will be present.

## Configuration validation

The new generation of Dell systems have added interconnect flexibility and advanced iDRAC management features to collect precise system configuration information and report configuration errors.

When the system is powered on, information about installed cables, risers, backplanes, power supplies, floating card (fPERC, adapter PERC, BOSS), and processor is obtained from the CPLD and backplane memory maps are analyzed. This information forms a unique configuration, which is compared with one of the qualified configurations that are stored in a table that is maintained by iDRAC.

One or more sensors are assigned to each of the configuration elements. During POST, any configuration validation error is logged in the System Event Log (SEL)/LifeCycle (LC) log. The reported events are categorized in the configuration validation error table.

**Table 61. Configuration validation error**

Error	Description	Possible cause and recommendations	Example
Config Error	A configuration element within the closest match contains something that is unexpected and does not match any Dell qualified configuration.	Wrong configuration	Config Error: Backplane cable CTRS_SRC_SA1 and BP-DST_SA1
		The element reported in HWC8010 errors are assembled incorrectly. Verify element (cable, risers, etc) placement in the system.	Config Error : SL Cable PLANAR_SL7 and CTRL_DST_PA1
Config Missing	iDRAC found a configuration element missing within the closest match detected.	Missing or damaged cable, device, or part	Config Missing: Float card front PERC/ HBA
		Missing element or cable is reported in HWC8010 error logs. Install the	Config Missing : SL cable PLANAR_SL8 and CTRL_DST_PA1

**Table 61. Configuration validation error (continued)**

Error	Description	Possible cause and recommendations	Example
		missing element (cable, risers, etc).	
Comm Error	A configuration element is not responding to iDRAC using the management interface while running an inventory check.	System management sideband communication Unplug AC Power, reseal the element and replace the element if the problem persists.	Comm Error: Backplane 1

## Error messages

This section describes the error messages that are displayed on the screen during POST or captured in the system event log (SEL)/LifeCycle (LC) log.

**Table 62. Error message HWC8010**

Error code	HWC8010
Message	The System Configuration Check operation that is resulted in the following issue involving the indicated component type
Arguments	Riser, floating card (fPERC, BOSS), backplane, processor, cable, or other components
Detailed Description	The issue that is identified in the message is observed in the System Configuration Check operation.
Recommended Response Action	Do the following and retry the operation: <ol style="list-style-type: none"> <li>1. Disconnect the input power.</li> <li>2. Check for proper cable connection and component placement. If the issue persists, contact the service provider.</li> </ol>
Category	System Health (HWC = Hardware Config)
Severity	Critical
Trap/EventID	2329

**Table 63. Error message HWC8011**






Error code	HWC8011
Message	The System Configuration Check operation that is resulted in multiple issues involving the indicated component type
Arguments	Riser, floating card (fPERC, BOSS), backplane, processor, cable, or other components
Detailed Description	Multiple issues are observed in the System Configuration Check operation.
Recommended Response Action	Do the following and retry the operation: <ol style="list-style-type: none"> <li>1. Disconnect the input power.</li> <li>2. Check for proper cable connection and component placement. If the issue persists, contact the service provider.</li> </ol>
Category	System Health (HWC = Hardware Config)
Severity	Critical

# Disassembly and Reassembly

## Topics:

- Safety Instructions
- Before working inside your system
- After working inside your system
- Recommended tools
- Optional front bezel
- System cover
- Drive backplane cover
- Air shroud
- Cooling fans
- Side wall brackets
- Drives
- PERC module
- Drive backplane
- Cable routing
- System memory
- Processor and heat sink module
- Expansion cards and expansion card risers
- Optional serial COM port
- Optional VGA port for liquid cooling module
- Optional BOSS-N1 module
- System battery
- Optional internal USB card
- Intrusion switch
- Optional OCP NIC card
- Power supply unit
- Trusted Platform Module
- System board
- LOM card, MIC card, and rear I/O board
- Control panel

## Safety Instructions

-  **CAUTION:** Whenever you need to lift the system, get others to assist you. To avoid injury, do not attempt to lift the system by yourself.
-  **CAUTION:** Ensure that two or more people lift the system horizontally from the box and place it on a flat surface, rack lift, or into the rails.
-  **WARNING:** Opening or removing the system cover while the system is powered on may expose you to a risk of electric shock.
-  **WARNING:** Do not operate the system without the cover for a duration exceeding five minutes. Operating the system without the system cover can result in component damage.
-  **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that are shipped with your product.

**NOTE:** It is recommended that you always use an antistatic mat and antistatic strap while working on components inside the system.

**CAUTION:** To ensure proper operation and cooling, all system bays and fans must always be populated with a component or a blank.

**NOTE:** While replacing the hot swappable PSU, after next server boot, the new PSU automatically updates to the same firmware and configuration of the replaced one. For updating to the latest firmware and changing the configuration, see the *Lifecycle Controller User's Guide* at [iDRAC Manuals](#).

**NOTE:** While replacing faulty storage controller, FC, or NIC card with the same type of card, after you power on the system, the new card automatically updates to the same firmware and configuration of the faulty one. For updating to the latest firmware and changing the configuration, see the *Lifecycle Controller User's Guide* at [iDRAC Manuals](#).

**NOTE:** Only use certified Optical Fiber Transceiver Class I Laser Products.

## Before working inside your system

### Prerequisites

Follow the safety guidelines listed in the [Safety instructions](#).

### Steps

1. Power off the system and all attached peripherals.
2. Disconnect the system from the electrical outlet and disconnect the peripherals.
3. If applicable, remove the system from the rack.

For more information, see the *Rail Installation Guide* relevant to your rail solutions at [PowerEdge Manuals](#).

4. Remove the system cover.

**NOTE:** While removing the hot-swappable components from the front or rear of the system, do not remove the system cover.

## After working inside your system

### Prerequisites

Follow the safety guidelines listed in [Safety instructions](#).

### Steps

1. Replace the system cover.
2. If applicable, install the system into the rack.  
For more information, see the *Rail Installation Guide* relevant to your system at [PowerEdge Manuals](#).
3. Reconnect the peripherals and connect the system to the electrical outlet, and then power on the system.

## Recommended tools


You may need some or all the following tools to perform the removal and installation procedures:

- Phillips 1 screwdriver
- Phillips 2 screwdriver
- Torx T30 screwdriver
- 5 mm hexadecimal nut screwdriver
- Plastic scribe
- 1/4-inch flat blade screwdriver

- Wrist grounding strap that is connected to the ground
- ESD mat
- Needle-nose pliers
- Key to the bezel lock. The key is required only if your system includes a bezel.
- Phillips 1 screwdriver
- Phillips 2 screwdriver
- Torx T15 screwdriver
- 5 mm hexadecimal nut screwdriver
- Plastic scribe
- 1/4-inch flat blade screwdriver
- Wrist grounding strap that is connected to the ground
- ESD mat
- Needle-nose pliers

You need the following tools to assemble the cables for a DC power supply unit:

- AMP 90871-1 hand-crimping tool or equivalent
- Tyco Electronics 58433-3 or equivalent
- Wire-stripper pliers to remove insulation from size 10 AWG solid or stranded, insulated copper wire.

 **NOTE:** Use alpha wire part number 3080 or equivalent (65/30 stranding).

## Optional front bezel

### Removing the front bezel

#### Prerequisites

1. Follow the safety guidelines listed in [Safety instructions](#).
2. Keep the bezel key handy.

#### Steps

1. If locked, unlock the bezel.
2. Press the release button, and remove the left end of the bezel.
3. Unhook the right end of the bezel, and remove the bezel.

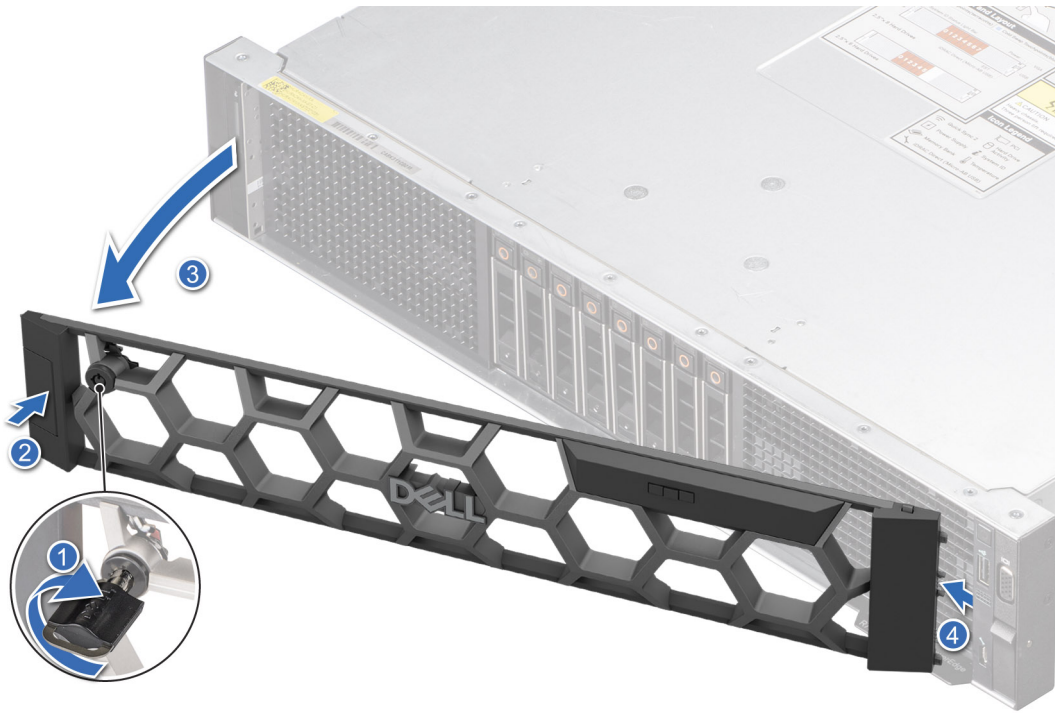


Figure 22. Removing the front bezel

### Next steps

Installing the front bezel.

## Installing the front bezel

### Prerequisites

1. Follow the safety guidelines listed in [Safety instructions](#).
2. Locate and remove the bezel key.

**NOTE:** The bezel key is part of the front bezel package.

### Steps

1. Align and insert the tabs on the right end of the bezel into the slots on the system.
2. Fit the left end of the bezel onto the system and press the bezel until you hear the release button click.
3. Lock the bezel.



Figure 23. Installing the front bezel

## System cover

### Removing the system cover

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Power off the system, and any attached peripherals.
3. Disconnect the system from the electrical outlet and peripherals.

#### Steps

1. Using a 1/4-inch flat head or a Phillips #2 screwdriver, rotate the lock counterclockwise to the unlock position.
2. Lift the release latch until the system cover slides back.
3. Lift the cover from the system.



**Figure 24. Removing the system cover**

#### **Next steps**

1. [Replace the system cover.](#)

## **Installing the system cover**

#### **Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. Ensure that all internal cables are connected and routed properly, and no tools or extra parts are left inside the system.

#### **Steps**

1. Align the tabs on the system cover with the guide slots on the system and slide the system cover.
2. Close the system cover release latch.
3. Using a 1/4-inch flat head or Phillips #2 screwdriver, rotate the lock clockwise to the lock position.



**Figure 25. Installing the system cover**

#### **Next steps**

1. Follow the procedure listed in [After working inside your system.](#)

## **Drive backplane cover**

### **Removing the drive backplane cover**

#### **Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions.](#)
2. Follow the procedure listed in [Before working inside the system.](#)
3. Follow the procedure listed in [Removing the system cover.](#)

#### **Steps**

1. Press the blue tab and slide the drive backplane cover.
2. Lift the drive backplane cover from the system.



**Figure 26. Removing the drive backplane cover**

#### **Next steps**

1. [Replace the drive backplane cover.](#)

## **Installing the drive backplane cover**

#### **Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

#### **Steps**

1. Align the drive backplane cover with the guide slots on the system.
2. Slide the drive backplane cover to the front of the system until the drive backplane cover fits into place.



**Figure 27. Installing the drive backplane cover**

**Next steps**

1. Follow the procedure listed in [After working inside your system.](#)

# Air shroud

## Removing the air shroud

### Prerequisites

**CAUTION:** Never operate your system with the air shroud removed. The system may get overheated quickly, resulting in shutdown of the system and loss of data.

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside the system](#).
3. Follow the procedure listed in [Removing the expansion card risers](#) to remove the Riser 1.
4. Remove the cables from the air shroud notch, place them on the other shroud on the other side of the system.

### Steps

1. Press the latch on the air shroud.

**NOTE:** To remove left air shroud, press the latch on right air shroud the opposite way.

2. Hold the edges of the air shroud, and lift the air shroud out of the system.


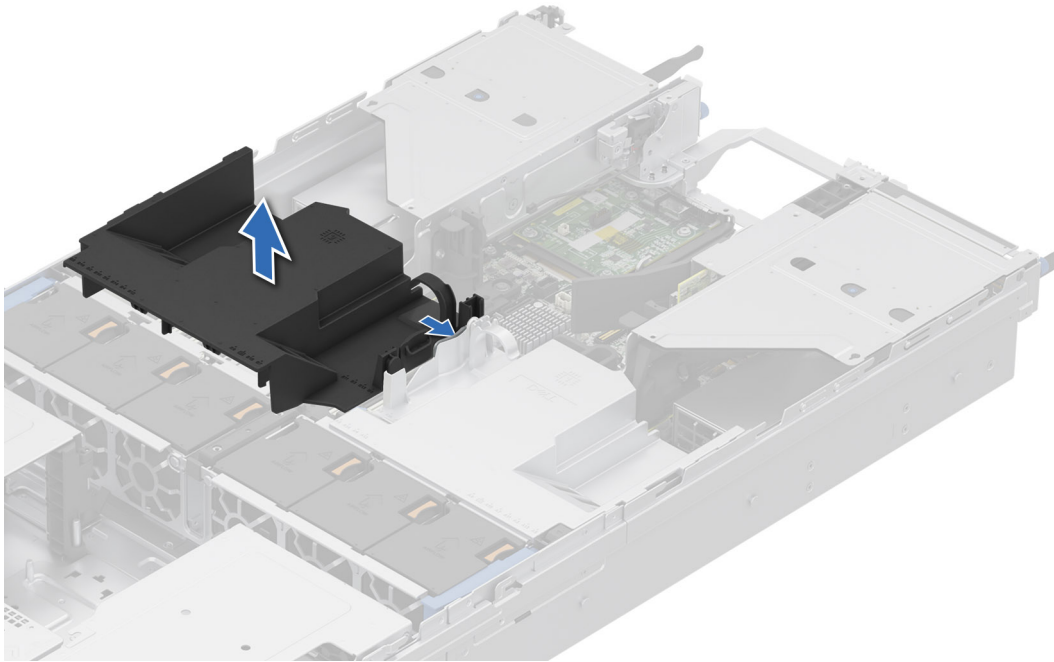


Figure 28. Removing the left air shroud

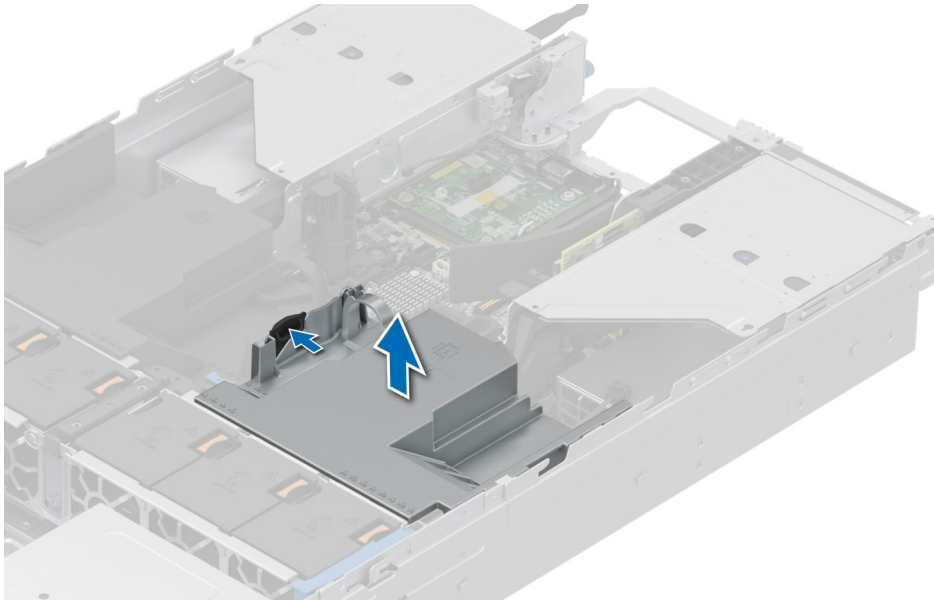

**Figure 29. Removing the right air shroud**

#### **Next steps**

1. [Replace the air shroud.](#)


## **Installing the air shroud**

#### **Prerequisites**


1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. Follow the procedure listed in [Removing the expansion card risers](#) to remove the Riser 1.

#### **Steps**

1. Align the slot on the air shroud with the tab on the left or right air shroud.
2. Lower the air shroud into the system until it is firmly seated.

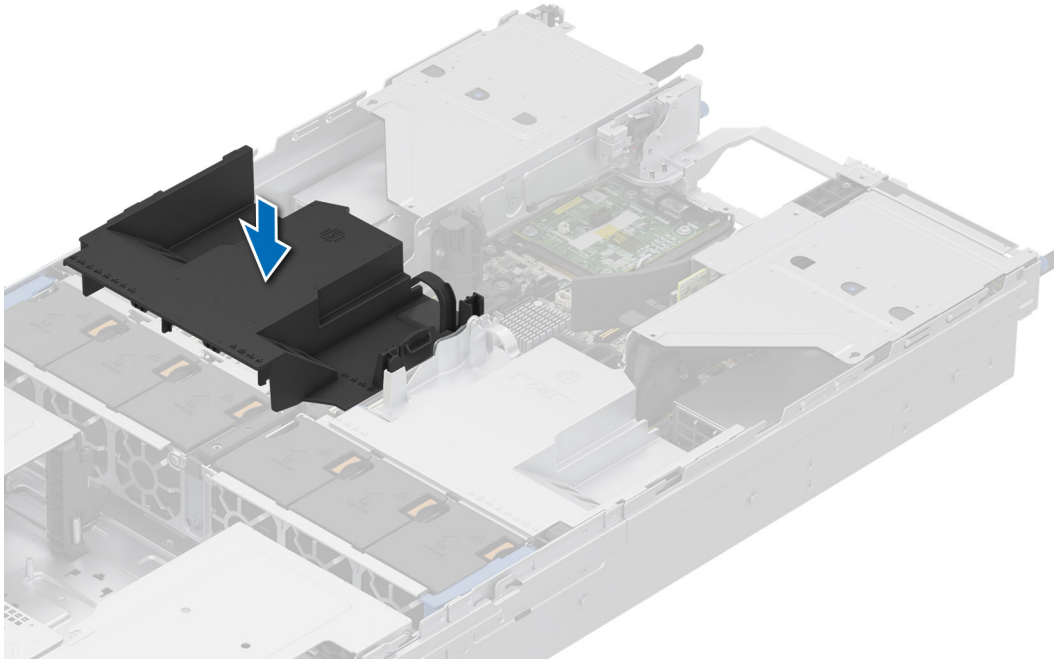

**Figure 30. Installing the left air shroud**

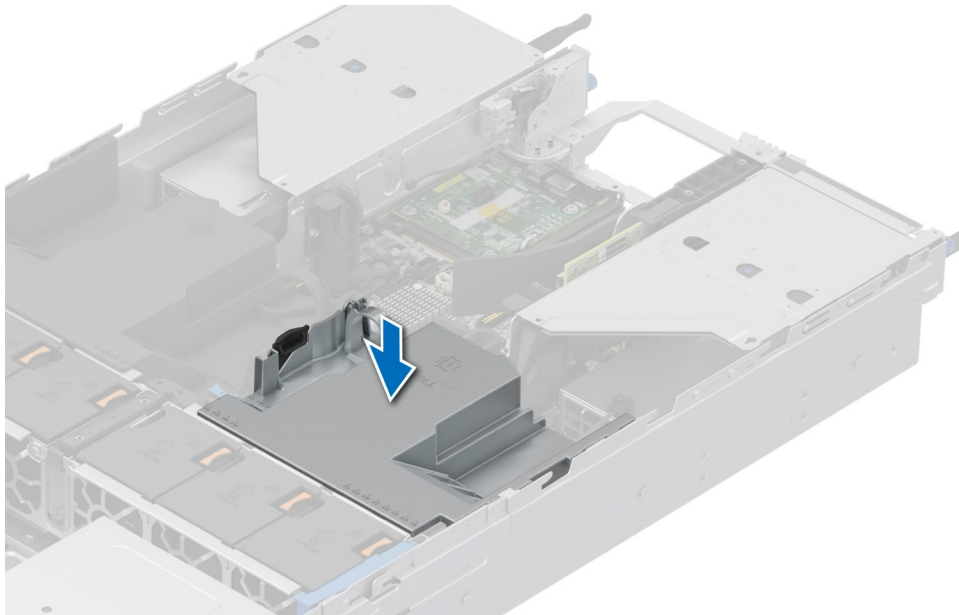

**Figure 31. Installing the right air shroud**

**Next steps**

1. Insert the cables into the air shroud notch. Black cable goes to black air shroud notch, and gray cables goes to gray air shroud notch.
2. Follow the procedure listed in the [Installing the expansion card risers](#) to install Riser 1.
3. Follow the procedure listed in [After working inside your system.](#)

# Cooling fans

## Removing the cooling fan cage assembly

### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If installed, [remove the air shroud](#).
4. Disconnect the cables from system board that pass through the cooling fan cage assembly cable latch.
5. Open cable access latch to remove the cables and place them towards system front.

### Steps

1. Lift the blue release levers to unlock the cooling fan cage assembly from the system.
2. Hold the release levers, and lift the cooling fan cage assembly away from the system.

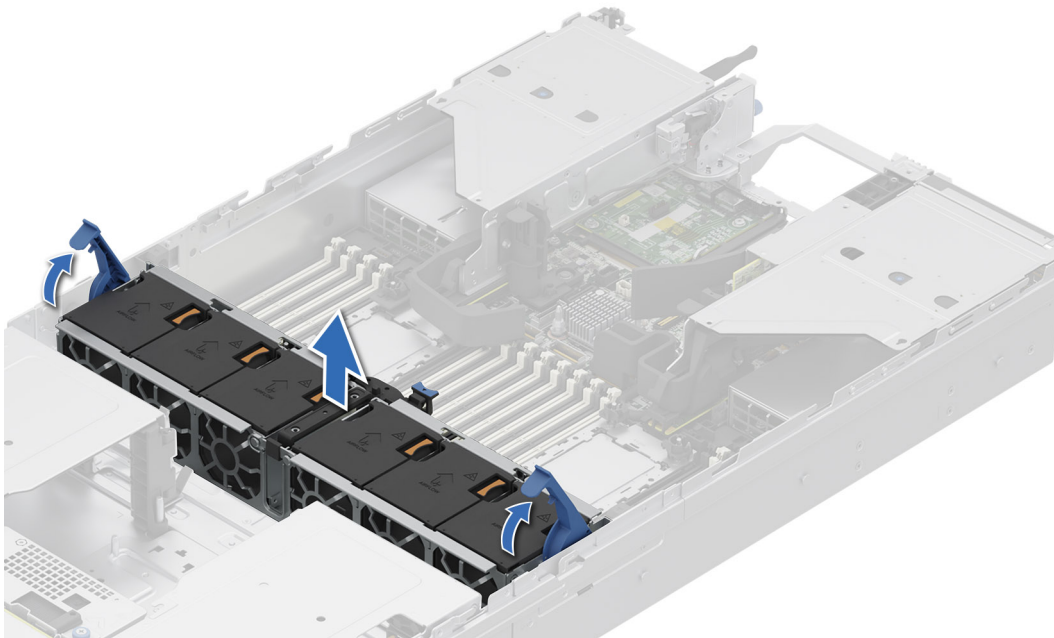


Figure 32. Removing the cooling fan cage assembly

### Next steps

1. [Installing the cooling fan cage assembly](#).

## Installing the cooling fan cage assembly

### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).


**CAUTION:** Ensure that the cables inside the system are correctly installed and retained by the cable retention bracket before installing the cooling fan cage assembly. Incorrectly installed cables may get damaged.

2. Follow the procedure listed in [Before working inside your system](#).
3. If installed, [remove the air shroud](#).
4. Disconnect the cables from system board that pass through the cooling fan cage assembly.

5. If opened close the cable side wall brackets on the system.

### Steps

1. Align the guide rails on the cooling fan cage assembly with the guides on the system.
2. Lower the cooling fan cage assembly into the system until seated firmly.
3. Lower the blue release levers and press to lock the cooling fan cage assembly into the system.

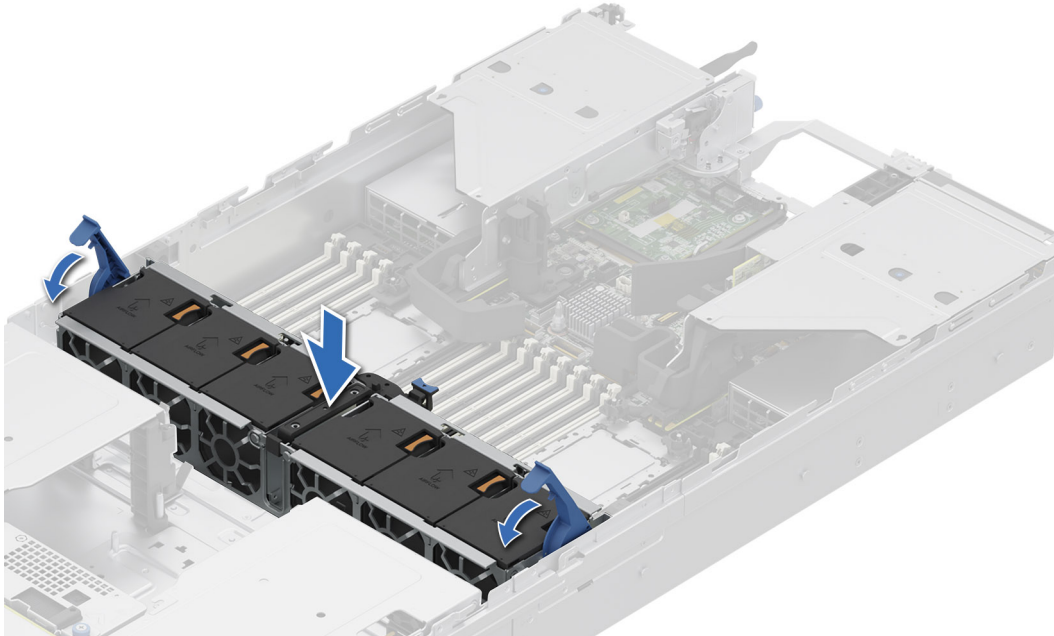

**Figure 33. Installing the cooling fan cage assembly**

### Next steps

1. If removed, [install the air shroud](#).
2. Insert the cables into cables access latch and close cable access latch.
3. Connect the cables to system board that pass through the cooling fan cage assembly cable latch.
4. Follow the procedure listed in [After working inside your system](#).

## Removing a cooling fan


### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

### Steps

Press the orange release tab and lift the cooling fan to disconnect the fan from the connector on the system board.

**⚠️ WARNING: Ensure not to tilt or rotate the cooling fan while removing from the system.**

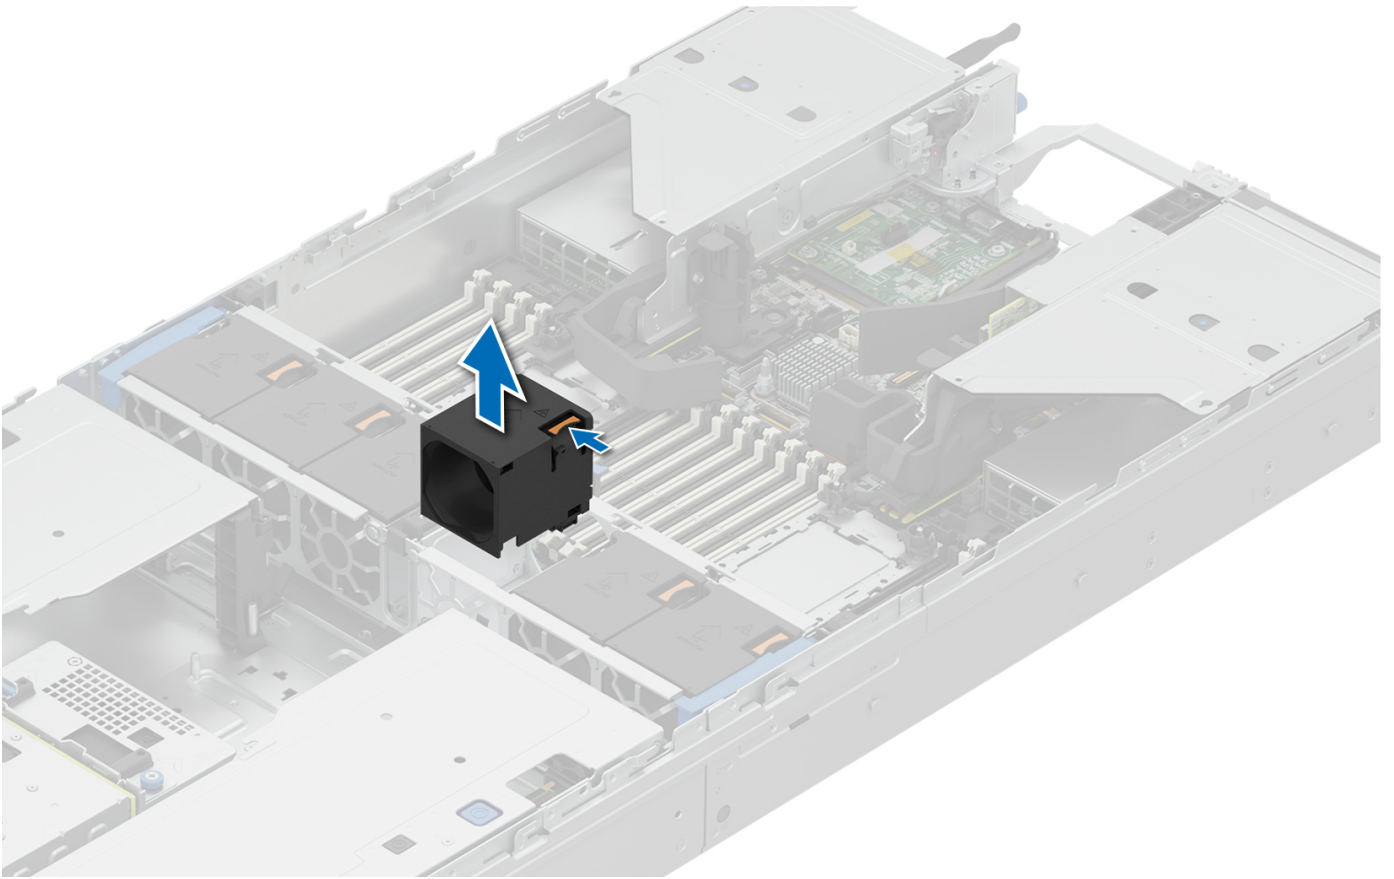

**Figure 34. Removing a cooling fan**

#### **Next steps**

1. [Replace a cooling fan.](#)


## **Installing a cooling fan**

#### **Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

#### **Steps**

Align and slide the cooling fan into the cooling fan cage assembly until the fan clicks into place.

 **NOTE:** The air flow arrow on the cooling fan must face towards rear side of the system.

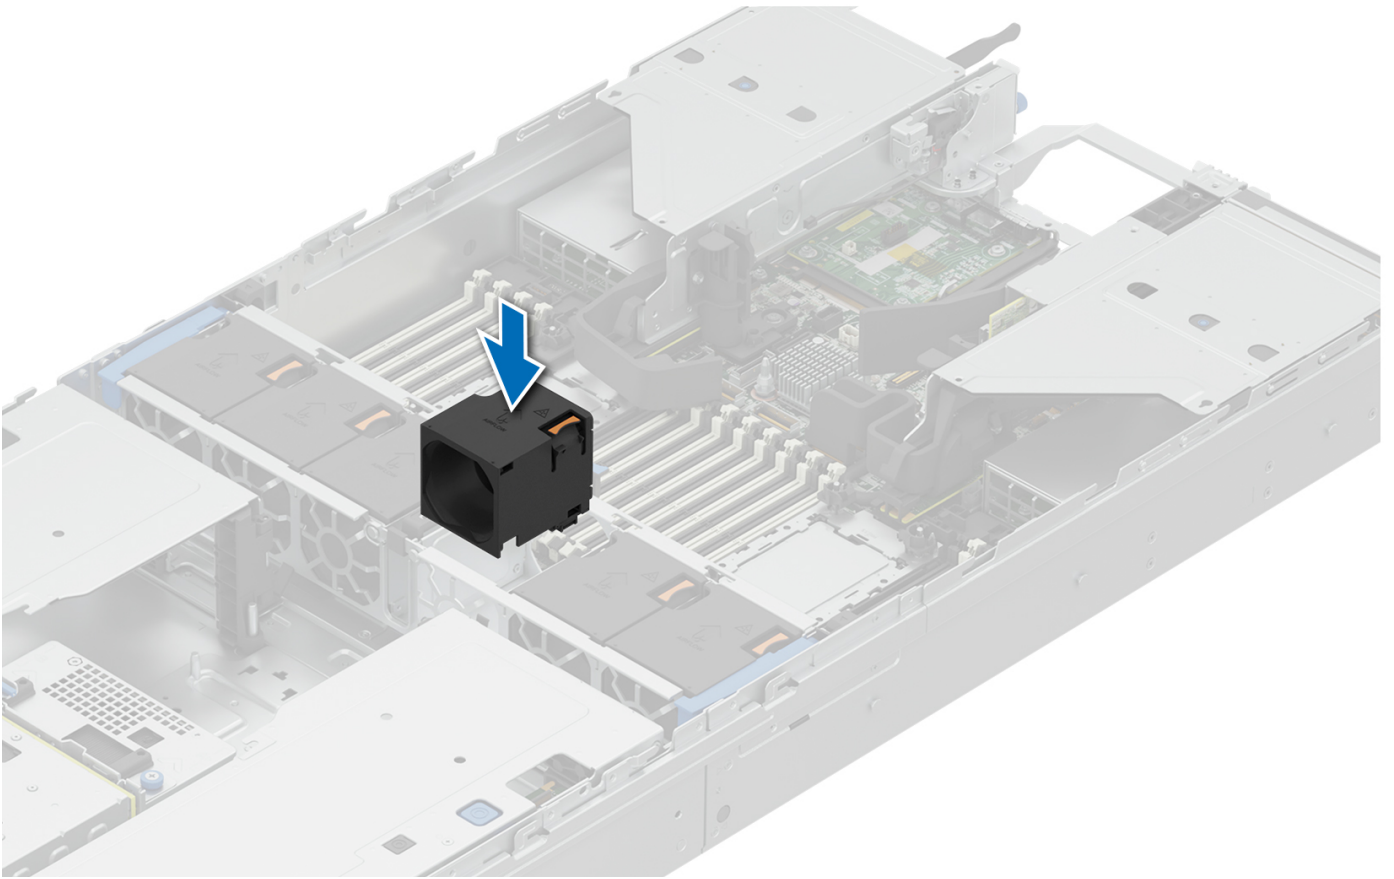


Figure 35. Installing a cooling fan

#### Next steps

1. Follow the procedure listed in [After working inside your system](#).

## Side wall brackets

### Removing the side wall bracket

There are two side wall brackets on either side of the system. The procedure to remove them is same.

#### Prerequisites


1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If required, [remove the drive backplane cover](#).
4. If installed, [remove the air shroud](#).
5. [Remove the cooling fan cage assembly](#).

**i** **NOTE:** Ensure that you note the routing of the cables as you remove them from the system board. Route the cables properly when you replace them to prevent the cables from being pinched or crimped.

#### Steps

1. Press the blue side tabs to release the side wall bracket.  
**i** **NOTE:** Move the cables out of the side wall bracket.

2. Press the center tab to release the bracket from the system, and lift it away from the system.

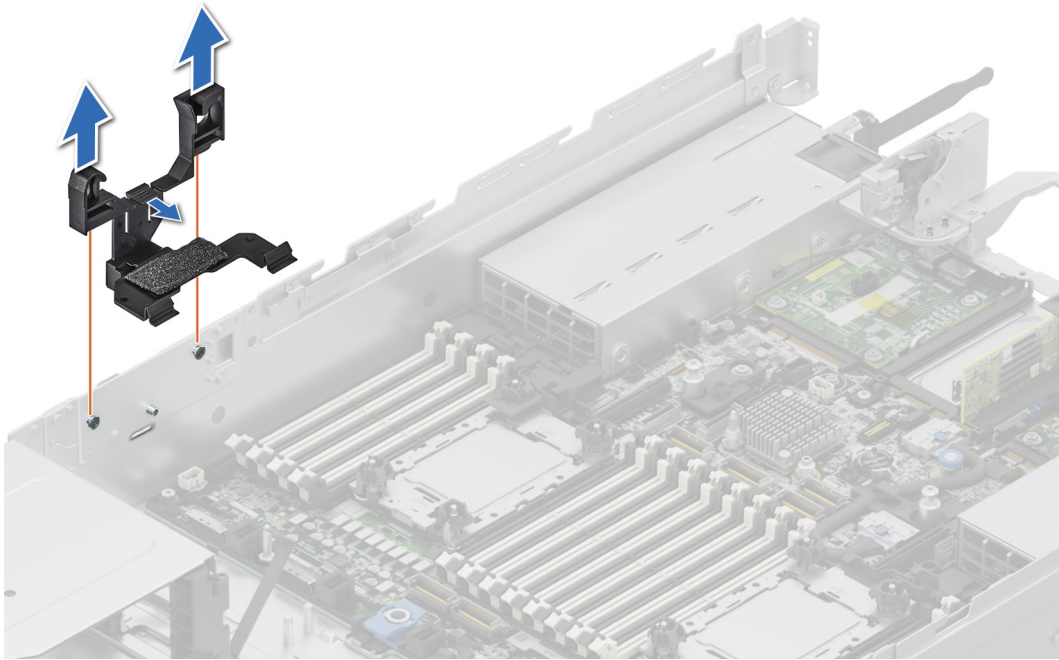

**Figure 36. Removing the side wall bracket**

#### Next steps

1. [Replace the side wall bracket.](#)

## Installing the side wall bracket

There are two side wall brackets on either side of the system. The procedure to install them is same.

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If required, [remove the drive backplane cover](#).
4. If installed, [remove the air shroud](#).
5. [Remove the cooling fan cage assembly](#).


**i** **NOTE:** Ensure that you note the routing of the cables as you remove them from the system board. Route the cables properly when you replace them to prevent the cables from being pinched or crimped.

#### Steps

1. Align the guide slots on the side wall bracket with the guides on the system and slide until the cover is seated firmly.

**i** **NOTE:** Route the cables through the side wall bracket.

2. Close the side wall bracket until the holder clicks into place.

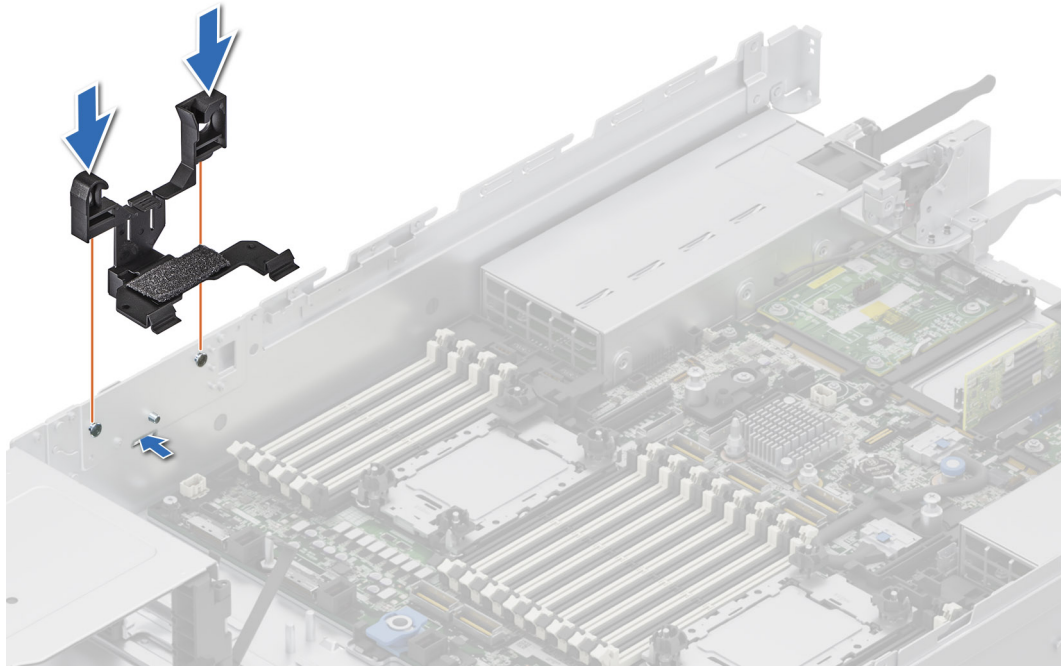

**Figure 37. Installing the side wall bracket**

#### **Next steps**

1. Install the cooling fan cage assembly.
2. If removed, install the air shroud.
3. If removed, install the drive backplane cover.
4. Follow the procedure listed in the [After working inside your system](#).

## **Drives**

### **Removing a drive blank**

#### **Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. If installed, [remove the front bezel](#).

**CAUTION:** To maintain proper system cooling, drive blanks must be installed in all empty drive slots.

#### **Steps**

Press the release button, and slide the drive blank out of the drive slot.

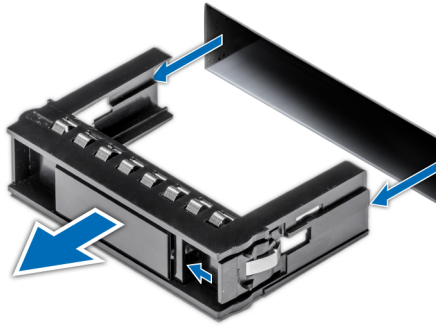


Figure 38. Removing a drive blank

**Next steps**

1. Replace the drive blank.

## Removing an E3.S drive blank

**Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. If installed, [remove the front bezel](#).

**CAUTION:** To maintain proper system cooling, drive blanks must be installed in all empty drive slots.

**Steps**

Press the release button at the bottom, and slide the drive blank out of the drive slot.

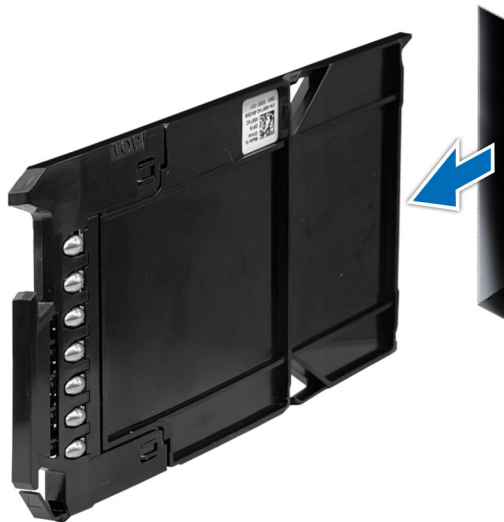


Figure 39. Removing an E3.S drive blank

**Next steps**

1. Replace the E3.S drive blank.

## Installing a drive blank

### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. If installed, [remove the front bezel](#).

### Steps

Slide the drive blank into the drive slot until the release button clicks into place.

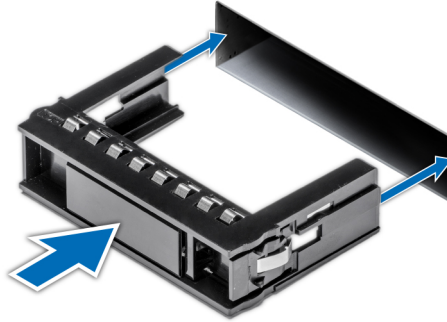


Figure 40. Installing a drive blank

### Next steps

1. If removed, [install the front bezel](#).

## Installing an E3.S drive blank

### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. If installed, [remove the front bezel](#).

### Steps

Insert the drive blank into the drive slot until the release button clicks into place.



Figure 41. Installing the E3.S drive blank

### Next steps

1. If removed, [install the front bezel](#).

## Removing the drive carrier

### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. If installed, [remove the front bezel](#).
3. Using the management software, prepare the drive for removal. If the drive is online, the green activity or fault indicator blinks while the drive is powering off. When the drive indicators are off, the drive is ready for removal. For more information, see the documentation for the storage controller.

**CAUTION:** Before attempting to remove or install a drive while the system is running, see the documentation for the storage controller card to ensure that the host adapter is configured correctly to support drive removal and insertion.

**CAUTION:** To prevent data loss, ensure that your operating system supports drive installation. For more information about the drives installation or uninstallation requirements, see the operating system's user guide.

### Steps

1. Press the release button to open the drive carrier release handle.
2. Holding the drive carrier release handle, slide the drive carrier out of the drive slot.

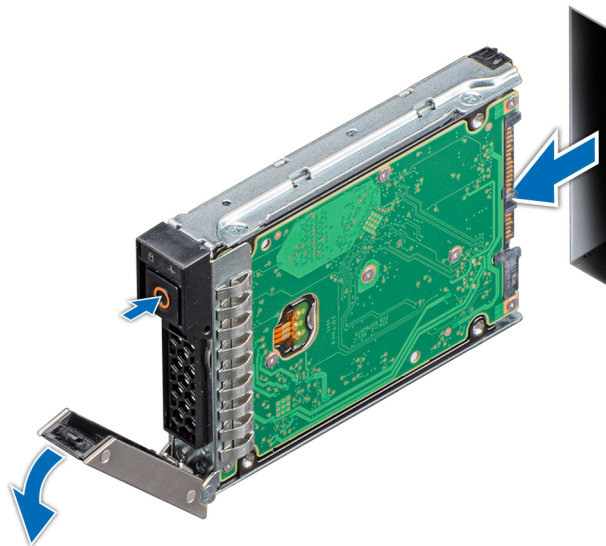


Figure 42. Removing a drive carrier

### Next steps

1. [Install a drive carrier](#) or [drive blank](#).

## Removing the E3.S drive carrier

### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. If installed, [remove the front bezel](#).

- Using the management software, prepare the drive for removal. If the drive is online, the green activity or fault indicator blinks while the drive is powering off. When the drive indicators are off, the drive is ready for removal. For more information, see the documentation for the storage controller.

**CAUTION:** Before attempting to remove or install a drive while the system is running, see the documentation for the storage controller card to ensure that the host adapter is configured correctly to support drive removal and insertion.

**CAUTION:** To prevent data loss, ensure that your operating system supports drive installation. For more information about the drives installation or uninstallation requirements, see the operating system's user guide.

### Steps

- Push the release button upwards to pop out the release handle.
- Holding the drive carrier release handle, slide the drive carrier out of the drive slot.

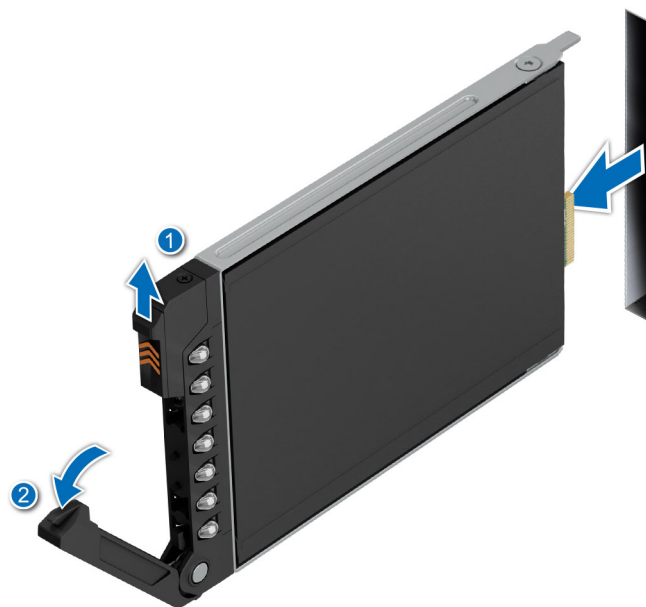


Figure 43. Removing the E3.S drive carrier

### Next steps

- [Install an E3.S drive carrier](#) or [Installing an E3.S drive blank](#).

## Installing the drive carrier

### Prerequisites

**CAUTION:** Before removing or installing a drive while the system is running, see the documentation for the storage controller card to ensure that the host adapter is configured correctly to support drive removal and insertion.

**CAUTION:** Combining SAS and SATA drives in the same RAID volume is not supported.

**CAUTION:** When installing a drive, ensure that the adjacent drives are fully installed. Inserting a drive carrier and attempting to lock its handle next to a partially installed carrier can damage the partially installed carrier's shield spring and make it unusable.

**CAUTION:** To prevent data loss, ensure that your operating system supports hot-swap drive installation. See the documentation supplied with your operating system.

**NOTE:** When a replacement hot swappable drive is installed while the system is powered on, the drive automatically begins to rebuild. Ensure that the replacement drive is blank. Any data on the replacement drive is immediately lost once the drive is installed.

**NOTE:** Ensure that the drive carrier's release handle is in the open position before inserting the carrier into the slot.

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. If installed, [remove the front bezel](#).
3. Remove the drive carrier or remove the drive blank when you want to assemble the drives in to the system.

### Steps

1. Slide the drive carrier into the drive slot.
2. Close the drive carrier release handle to lock the drive in place.

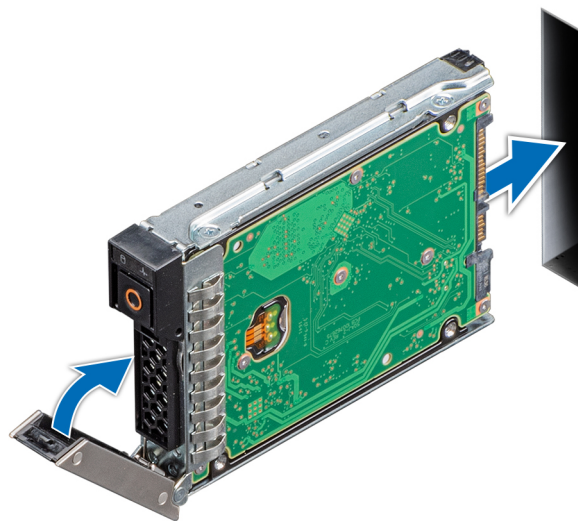


Figure 44. Installing a drive carrier

### Next steps

If removed, [install the front bezel](#).

## Installing the E3.S drive carrier

### Prerequisites

**CAUTION:** Before removing or installing a drive while the system is running, see the documentation for the storage controller card to ensure that the host adapter is configured correctly to support drive removal and insertion.

**CAUTION:** Combining SAS and SATA drives in the same RAID volume is not supported.

**CAUTION:** When installing a drive, ensure that the adjacent drives are fully installed. Inserting a drive carrier and attempting to lock its handle next to a partially installed carrier can damage the partially installed carrier's shield spring and make it unusable.

**CAUTION:** To prevent data loss, ensure that your operating system supports hot-swap drive installation. See the documentation supplied with your operating system.


**NOTE:** When a replacement hot swappable drive is installed while the system is powered on, the drive automatically begins to rebuild. Ensure that the replacement drive is blank. Any data on the replacement drive is immediately lost once the drive is installed.

**NOTE:** Ensure that the drive carrier's release handle is in the open position before inserting the carrier into the slot.

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. If installed, [remove the front bezel](#).
3. Remove the drive carrier or remove the drive blank when you want to assemble the drive in to the system.

### Steps

1. Slide the drive carrier into the drive slot.
2. Close the drive carrier release handle to lock the drive in place.

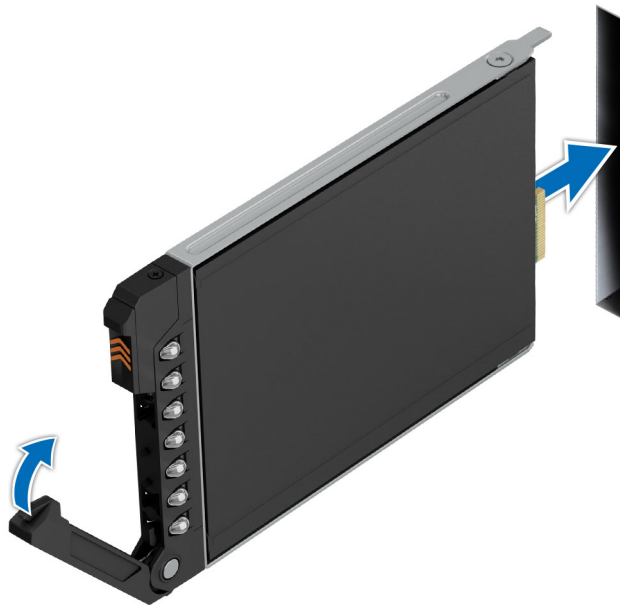

**Figure 45. Installing the E3.S drive carrier**

### Next steps

If removed, [install the front bezel](#).

## Removing the drive from the drive carrier

### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. [Remove the drive carrier](#).

### Steps


1. Using a Phillips #1 screwdriver, remove the screws from the slide rails on the drive carrier.  
**NOTE:** If the drive carrier has Torx screw , use Torx 6 (for 2.5-inch drive) screwdriver to remove the drive.
2. Lift the drive out of the drive carrier.



Figure 46. Removing the drive from the drive carrier

### Next steps

Install the drive into the drive carrier.

## Removing the E3.S drive from the drive carrier

### Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Using the management software, prepare the drive for removal.

If the drive is online, the green activity or fault indicator blinks while the drive is powering off. When the drive indicators are off, the drive is ready for removal. For more information, see the documentation for the storage controller.

**CAUTION:** Before attempting to remove or install a drive while the system is running, see the documentation for the storage controller card to ensure that the host adapter is configured correctly to support drive removal and insertion.

**CAUTION:** To prevent data loss, ensure that your operating system supports drive installation. For more information about the drive installation or uninstallation requirements, see the operating system's user guide.


### Steps

1. Using a Phillips 1 screw driver, remove the screws from the slide rails on the drive carrier.

**NOTE:** If the hard drive or SSD carrier has a Torx screw, use Torx 6 (for 2.5-inch drive) screwdriver to remove the drive.



2. Slide the drive out from the drive carrier.

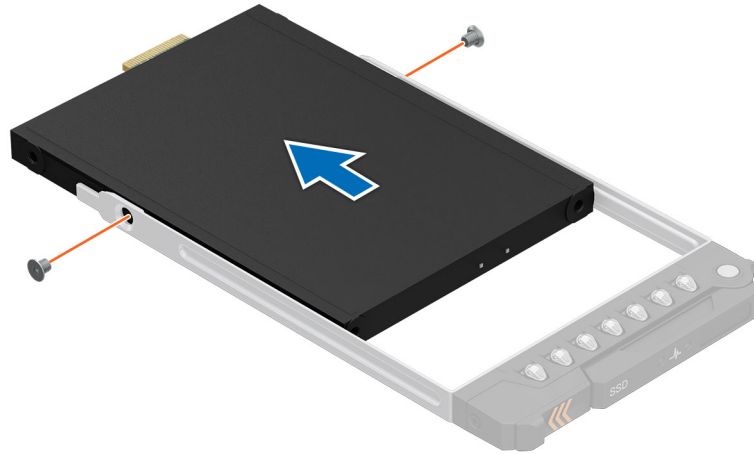

**Figure 47. Removing the E3.S drive from the drive carrier**

#### Next steps

1. [Installing the E3.S drive into the drive carrier.](#)

## Installing the drive into the drive carrier

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. [Remove the drive carrier.](#)

#### Steps

1. Insert the drive into the drive carrier with the drive connector facing towards the rear of the carrier.
2. Align the screw holes on the drive with the screws holes on the drive carrier.
3. Using a Phillips #1 screwdriver, secure the drive to the drive carrier with the screws.

**i** **NOTE:** When installing a drive into the drive carrier, ensure that the screws are torqued to 4 in-lbs.

**i** **NOTE:** If the drive carrier has Torx screw , use Torx 6 (for 2.5-inch drive) screwdriver to install the drive.



**Figure 48. Installing a drive into the drive carrier**

### Next steps

1. [Install the drive carrier.](#)

## Installing the E3.S drive into the drive carrier

### Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. [Remove the E3.S drive carrier.](#)


### Steps

1. Insert the drive into the drive carrier with the drive connector facing towards the rear of the carrier.
2. Align the screw holes on the drive with the screw holes on the drive carrier.
3. Using a Phillips 1 screwdriver, secure the drive to the drive carrier with the screws.

**NOTE:** When installing a drive into the drive carrier, ensure that the screws are torqued to 4 in-lbs.

**NOTE:** If the hard drive or SSD carrier has Torx screw, use Torx 6 (for 2.5-inch drive) screwdriver to install the drive.



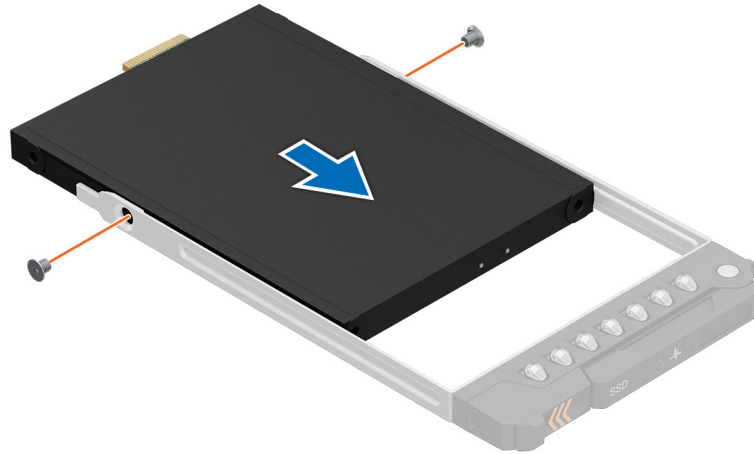

**Figure 49. Installing the E3.S drive into the drive carrier**

#### Next steps

1. Install the E3.S drive carrier.

## Removing a NVMe drive blank

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. If installed, [remove the front bezel](#).
3. [Remove all drives](#).

**NOTE:** All drives need to be installed to their original position.

4. [Remove the drive backplane cover](#).
5. [Remove the drive backplane](#).

**CAUTION:** For proper system cooling, drive blanks must be installed in all empty drive slots.

**NOTE:** NVMe drive blank is applicable for the system with x6 NVMe drive configuration.

#### Steps

Lift the release latch and push the NVMe drive blank out of the drive slot.

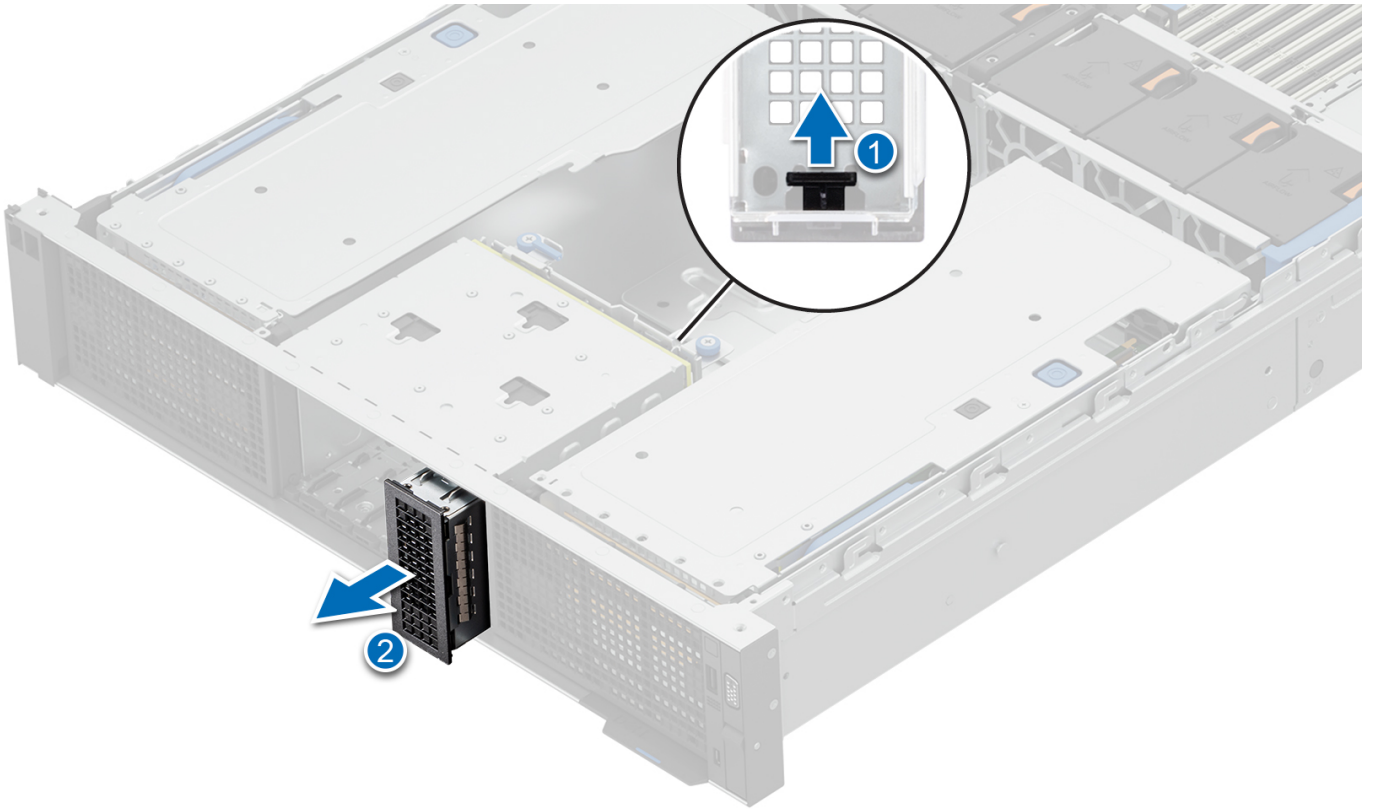


Figure 50. Removing a NVMe drive blank

#### Next steps

1. Replace the NVMe drive blank.

## Installing a NVMe drive blank

#### Prerequisites


1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. If installed, [remove the front bezel](#).
3. [Remove all drives](#).
4. [Remove the drive backplane cover](#).
5. [Remove the drive backplane](#).

**⚠ CAUTION:** For proper system cooling, drive blanks must be installed in all empty drive slots.

**i NOTE:** NVMe drive blank is applicable for the system with x6 NVMe drive configuration.

#### Steps

Slide the NVMe drive blank into the drive slot, until clicks into place.

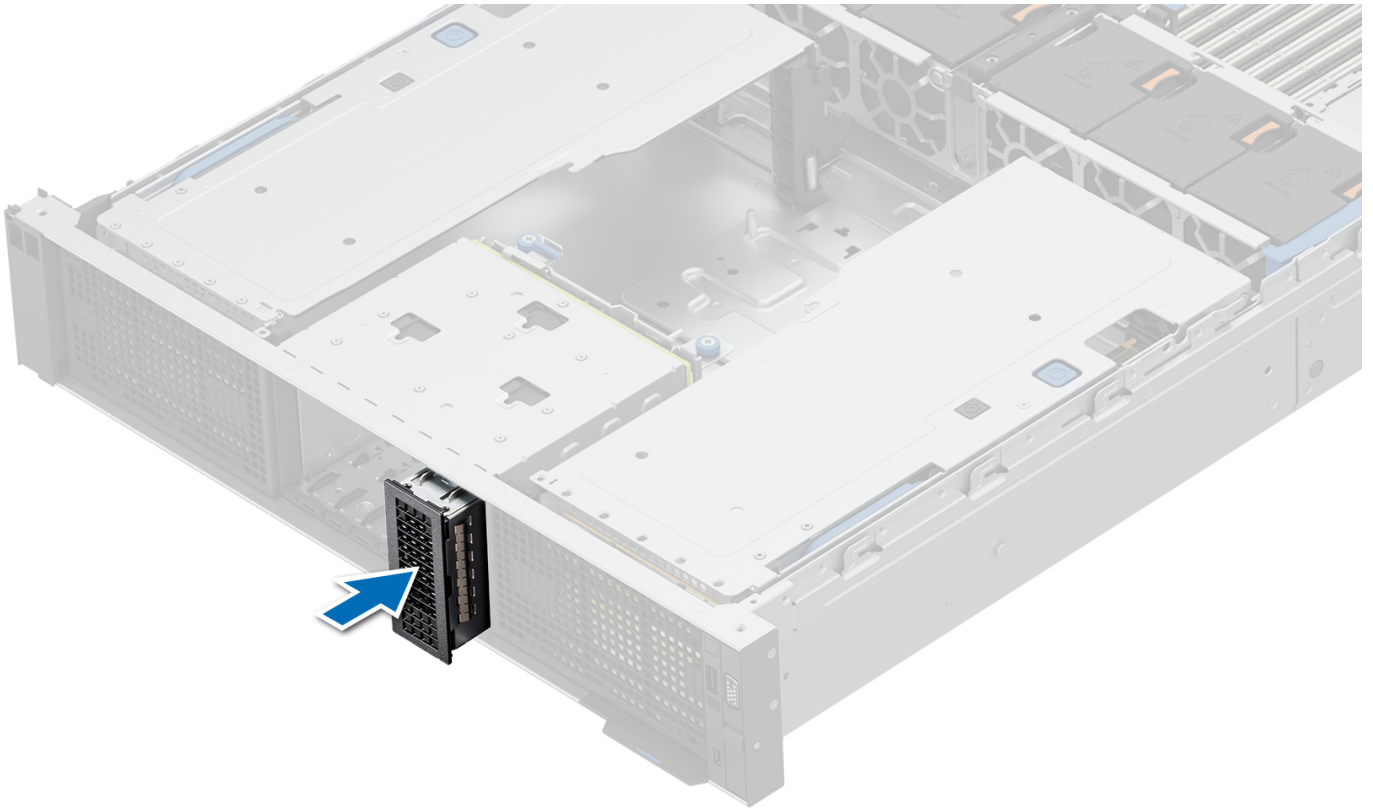

**Figure 51. Installing a NVMe drive blank**

**Next steps**

1. [Install all drives.](#)
2. If removed, [install the front bezel.](#)
3. If removed, [install the drive backplane.](#)
4. If removed, [install the drive backplane cover.](#)

## PERC module


### Removing the rear mounting front PERC module

**Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the drive backplane cover.](#)
4. Disconnect all the cables from rear mounting front PERC module, observe the cable routing.

**Steps**

1. Using a Phillips #2 screwdriver, loosen the captive screws on the rear mounting front PERC module.
2. Slide out the rear mounting front PERC module to disengage from the connector on the drive backplane.

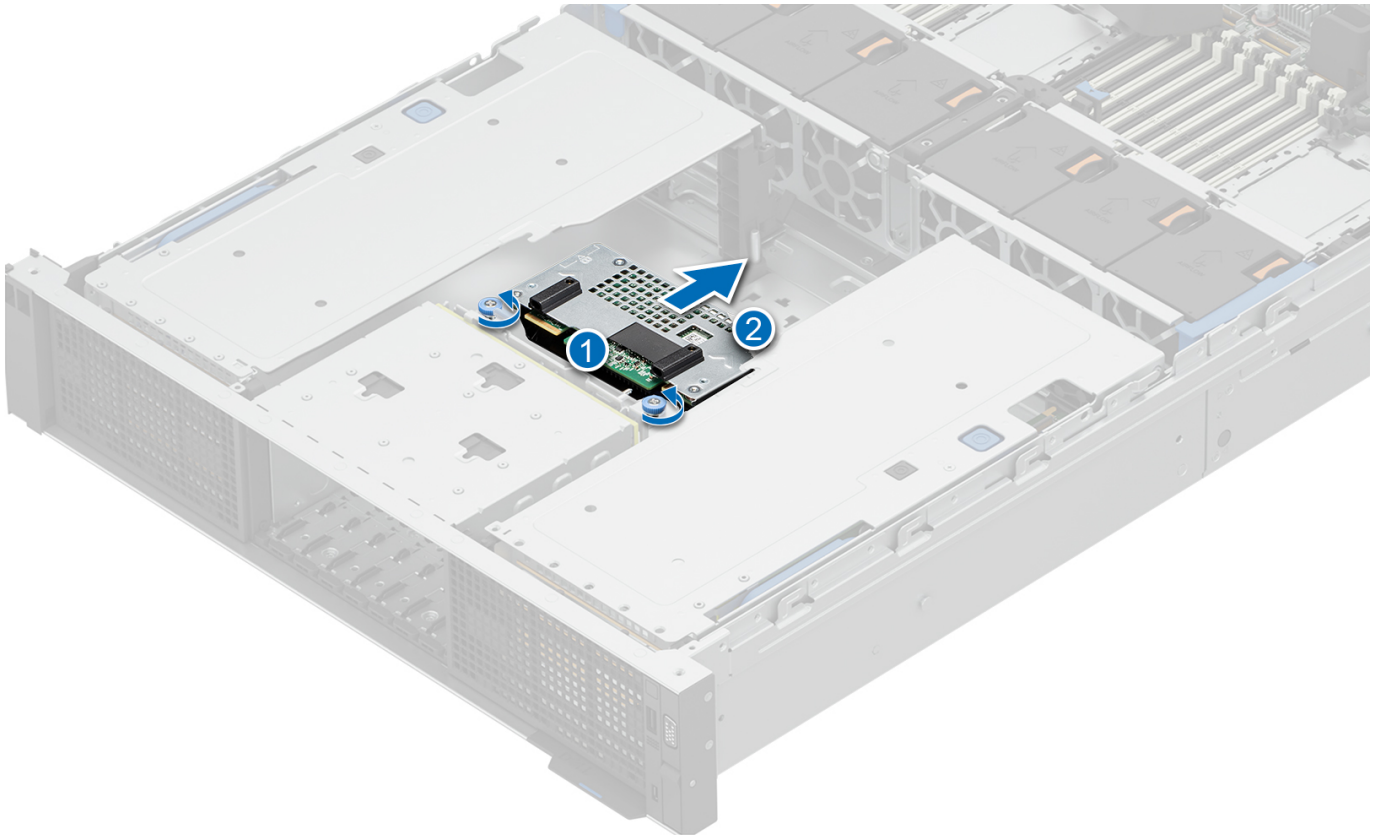

**Figure 52. Removing the rear mounting front PERC module**

#### Next steps

1. [Replace the rear mounting front PERC module.](#)

## Installing the rear mounting front PERC module


#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the drive backplane cover](#).
4. Disconnect all the cables from rear mounting front PERC module, observe the cable routing.

#### Steps

1. Align the connectors and guide slots on the rear mounting front PERC module with the connectors and guide pins on the drive backplane.
2. Slide in the rear mounting front PERC module, until the module is connected to the drive backplane.
3. Using a Phillips #2 screwdriver, tighten the captive screws on the rear mounting front PERC module.

**NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

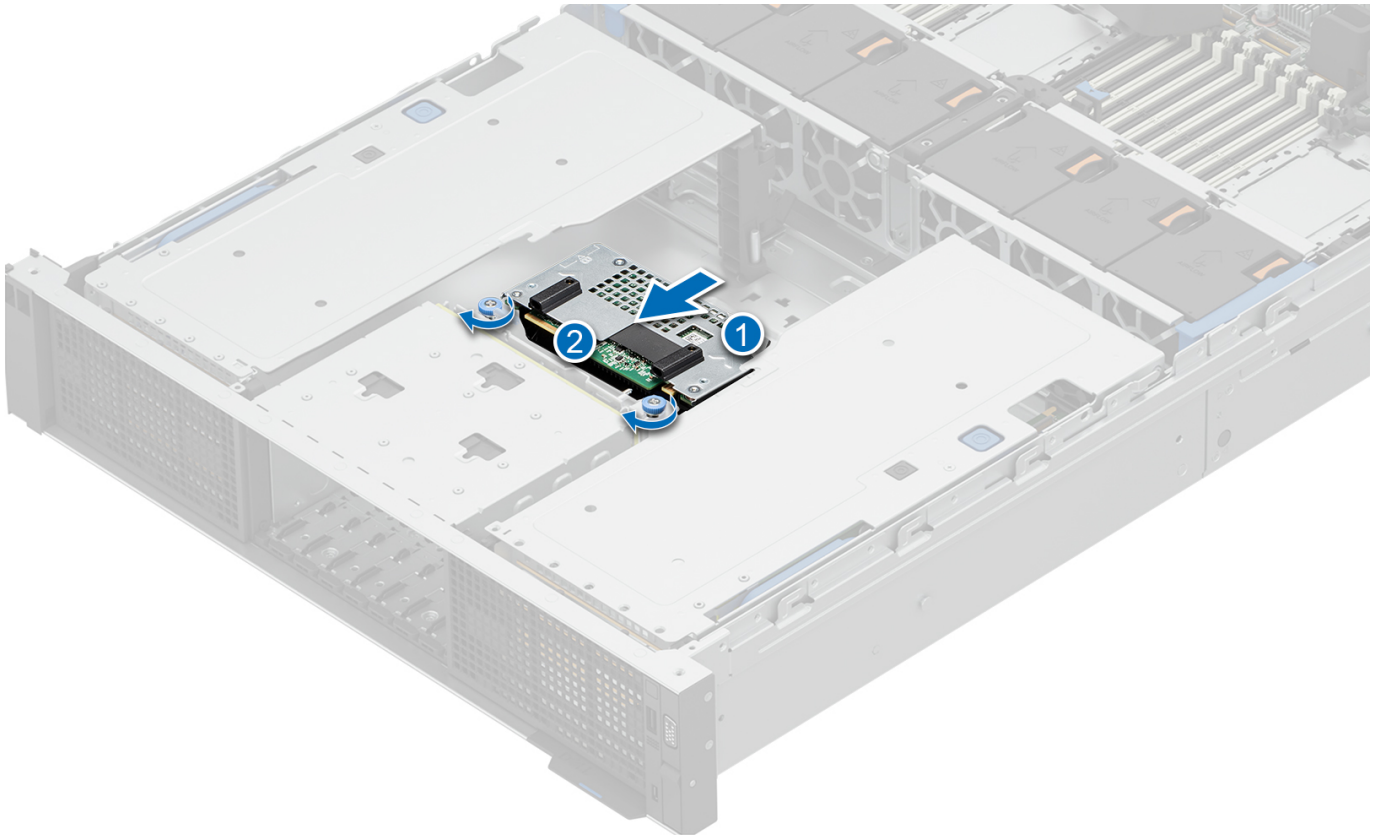

**Figure 53. Installing the rear mounting front PERC module**

**Next steps**

1. Connect all the cables to rear mounting front PERC module.

**NOTE:** Route the cables properly to prevent the cables from being pinched or crimped.

2. Install the drive backplane cover.
3. Follow the procedure listed in [After working inside your system.](#)

## Drive backplane


This is a service technician replaceable part only.

### Drive backplane

Depending on your system configuration, the drive backplanes that are supported are listed here:


**Table 64. Supported backplane options**

System	Supported hard drives options
PowerEdge R760xa	2.5-inch (x 8) NVMe backplane
	2.5-inch (x 8) SAS, or SATA backplane
	Upto 6 x E3.S Gen5 NVMe

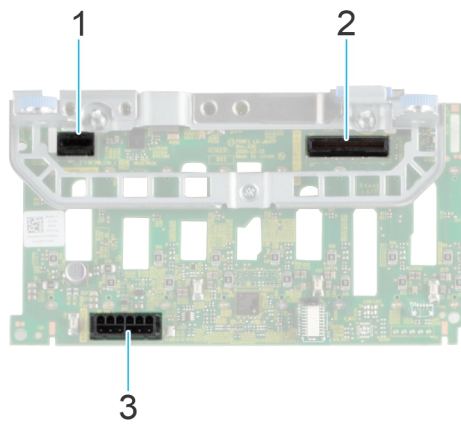


**Figure 54. 8 x 2.5-inch NVMe drive backplane**

1. BP\_PWR\_CTRL
2. BP\_DST\_SA1 (PERC to backplane)
3. BP\_PWR\_1 (backplane power and signal cable to system board)

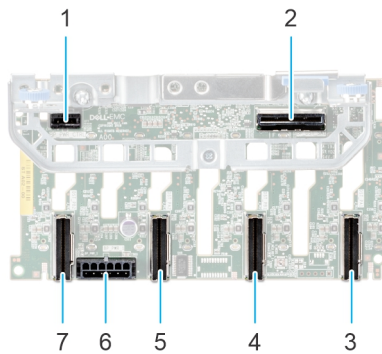

**Figure 55. 8 x 2.5-inch drive backplane**

- |   |  |
|---|--|
| <ol style="list-style-type: none"> <li>1. BP_PWR_CTRL</li> <li>3. BP_DST_PA1 (PCIe/NVMe connector)</li> <li>5. BP_DST_PA2 (PCIe/NVMe connector)</li> <li>7. BP_DST_PB2 (PCIe/NVMe connector)</li> </ol> | <ol style="list-style-type: none"> <li>2. BP_DST_SA1 (PERC to backplane)</li> <li>4. BP_DST_PB1 (PCIe/NVMe connector)</li> <li>6. BP_PWR_1 (backplane power and signal cable to system board)</li> </ol> |
|---|--|

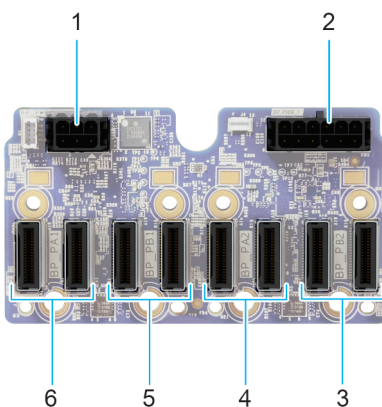

**Figure 56. 6 x E3.S drive backplane**

- |  |  |
|--|--|
| <ol style="list-style-type: none"> <li>1. BP_PWR_CTRL</li> <li>3. BP_DST_PB2 (PCIe/NVMe connector)</li> <li>5. BP_DST_PB1 (PCIe/NVMe connector)</li> </ol> | <ol style="list-style-type: none"> <li>2. BP_PWR_1 (backplane power and signal cable to system board)</li> <li>4. BP_DST_PA2 (PCIe/NVMe connector)</li> <li>6. BP_DST_PA1 (PCIe/NVMe connector)</li> </ol> |
|--|--|

# Removing the drive backplane

## Prerequisites

 **CAUTION:** To prevent damage to the drives and backplane, remove the drives from the system before removing the backplane.

 **CAUTION:** Note the number of each drive and temporarily label them before you remove the drive so that you can reinstall them in the same location.


 **NOTE:** The procedure to remove the backplane is similar for all backplane configurations.

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the drive backplane cover](#).
4. If installed, [remove the air shroud](#).
5. [Remove the cooling fan cage assembly](#).
6. [Remove the drives](#).
7. If required, [remove the rear mounting front PERC module](#).
8. Observe and disconnect the drive backplane cables from the connector on the system board and backplane.

 **NOTE:** Refer to [cable routing](#) section for more information.

## Steps

1. Press the release tab to disengage the drive backplane from the hooks on the system. For the E3.S drive backplane, loosen the captive screws.
2. Lift and pull the drive backplane out of the system.

 **NOTE:** To avoid damaging the backplane, remove the disconnected backplane cables from the cable routing clips before removing the backplane.

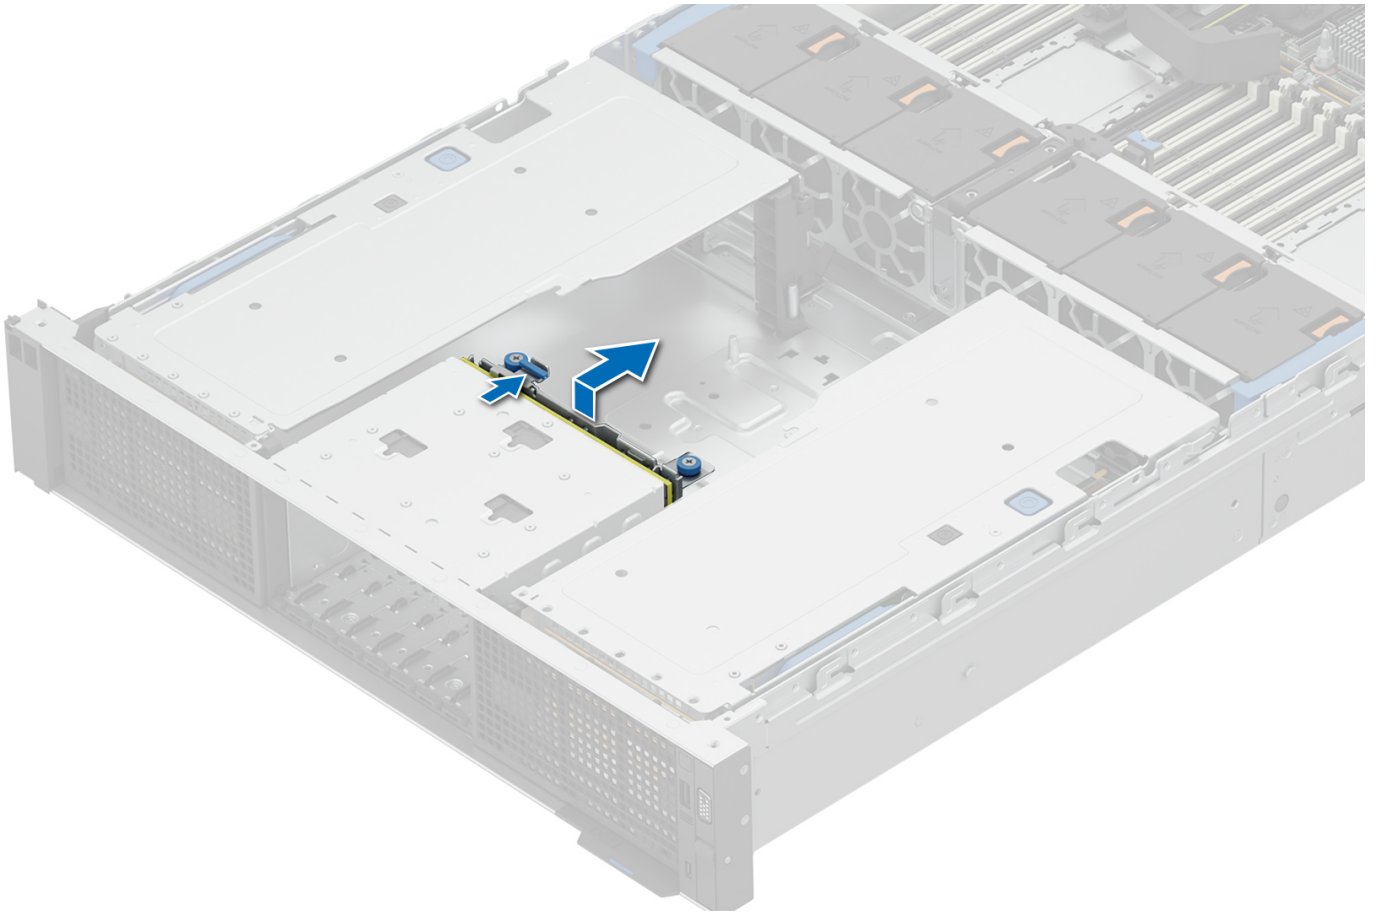


Figure 57. Removing the drive backplane

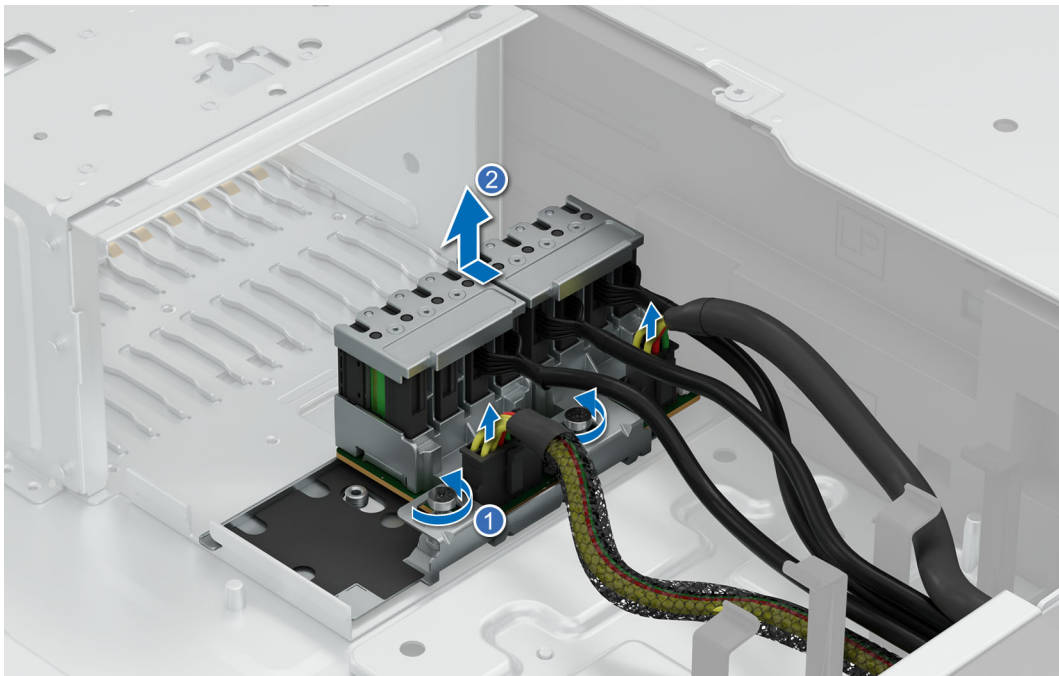


Figure 58. Removing E3.S drive backplane

## Next steps


1. [Replace the drive backplane.](#)


# Installing the drive backplane

## Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the drive backplane cover.](#)
4. If installed, [remove the air shroud.](#)
5. [Remove the cooling fan cage assembly.](#)
6. [Remove the drives.](#)
7. If required, [remove the rear mounting front PERC module.](#)
8. Observe and disconnect the drive backplane cables from the connector on the system board and backplane.

 **NOTE:** Refer to [cable routing](#) section for more information.

 **NOTE:** To avoid damaging the backplane, remove the disconnected backplane cables from the cable routing clips.

 **NOTE:** Route the cables properly when you replace them to prevent the cables from being pinched or crimped.

## Steps

1. Align the slots on the drive backplane with the guides on the system.
2. Slide the drive backplane into the guides and lower the backplane until the blue release tab clicks into place. For E3.S drive backplane, fasten the captive screws.

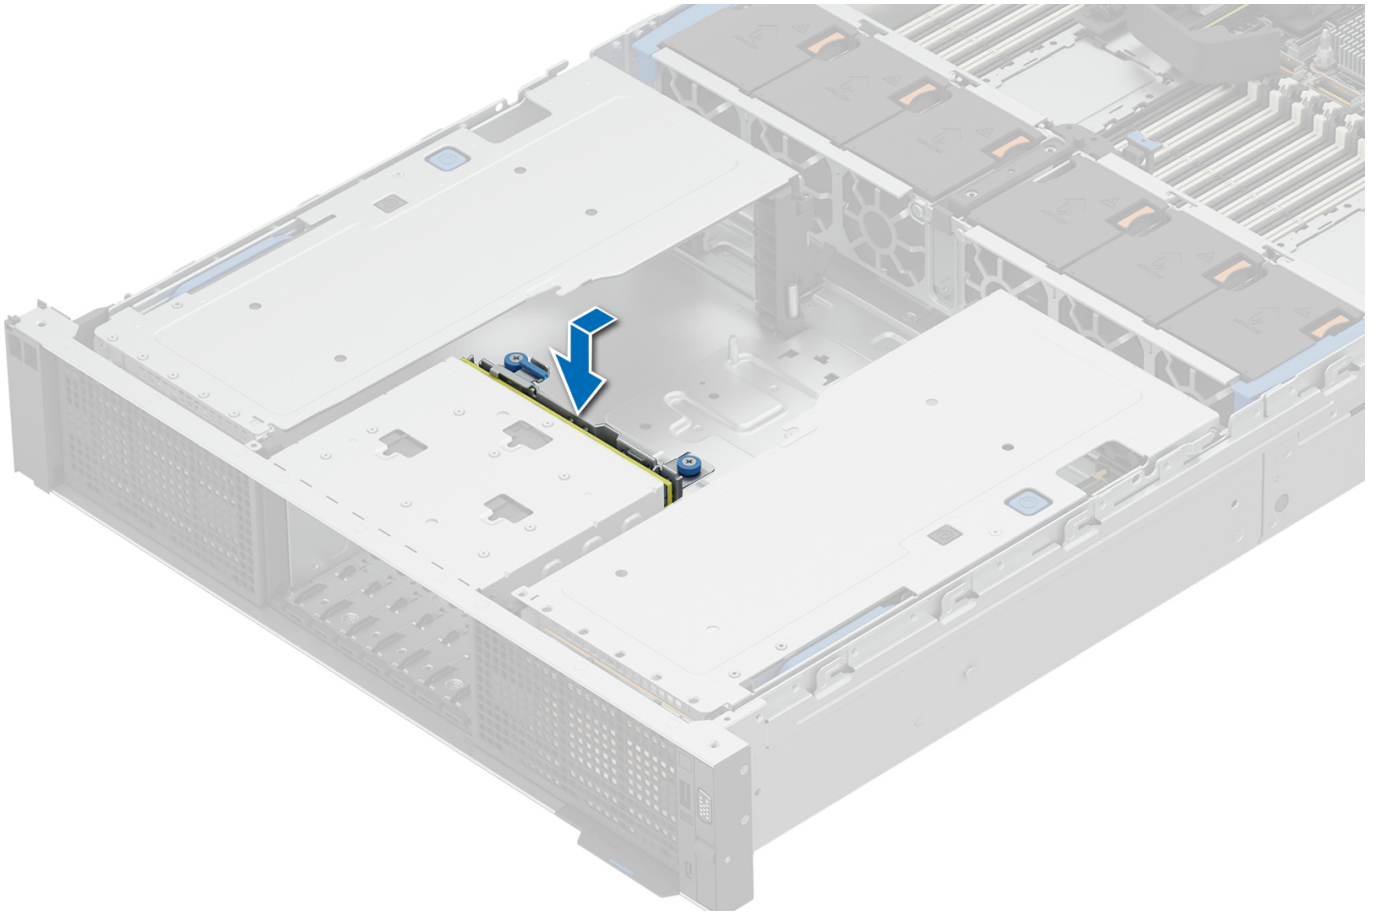


Figure 59. Installing the drive backplane

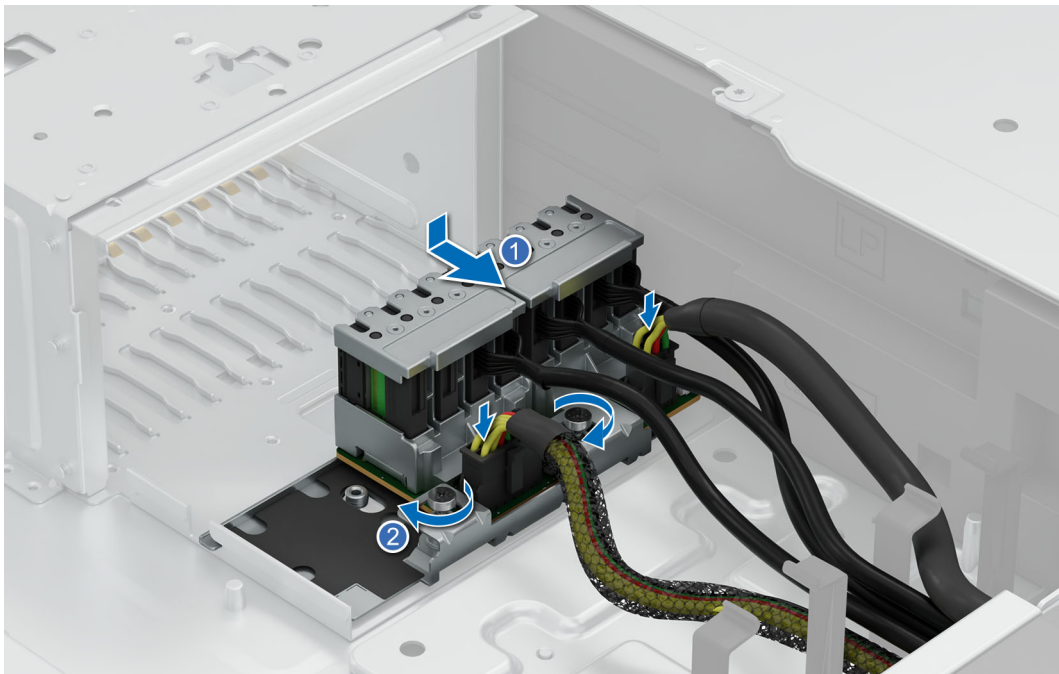
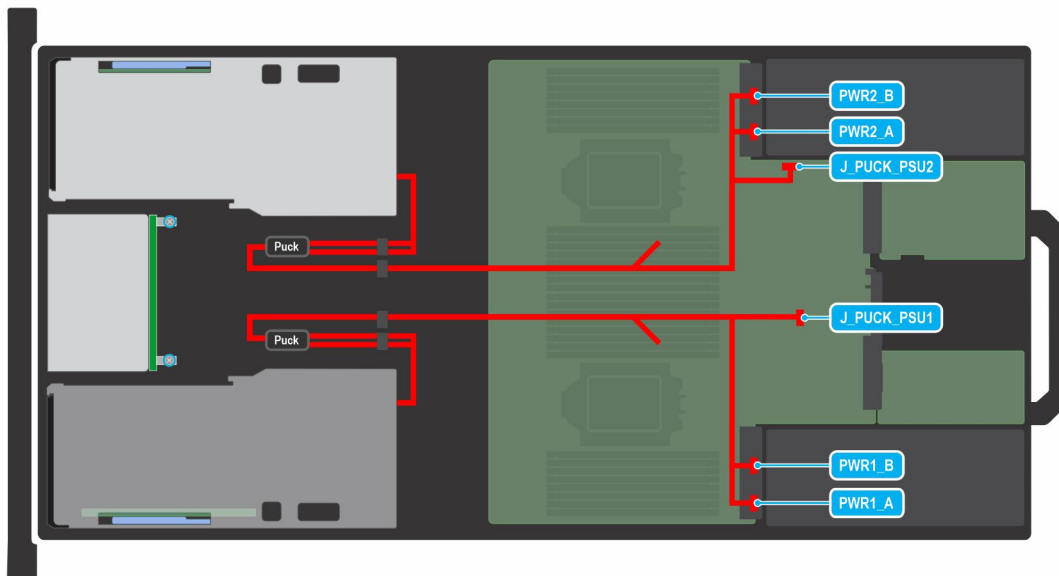


Figure 60. Installing E3.S drive backplane

### Next steps

1. Connect the drive backplane cables to the connectors on the system board and backplane.
2. [Install the drives.](#)
3. If required, [install the rear mounting front PERC module.](#)
4. [Install the cooling fan cage assembly.](#)
5. If removed, [install the air shroud.](#)
6. [Install the drive backplane cover.](#)
7. Follow the procedure listed in [After working inside your system.](#)

## Cable routing

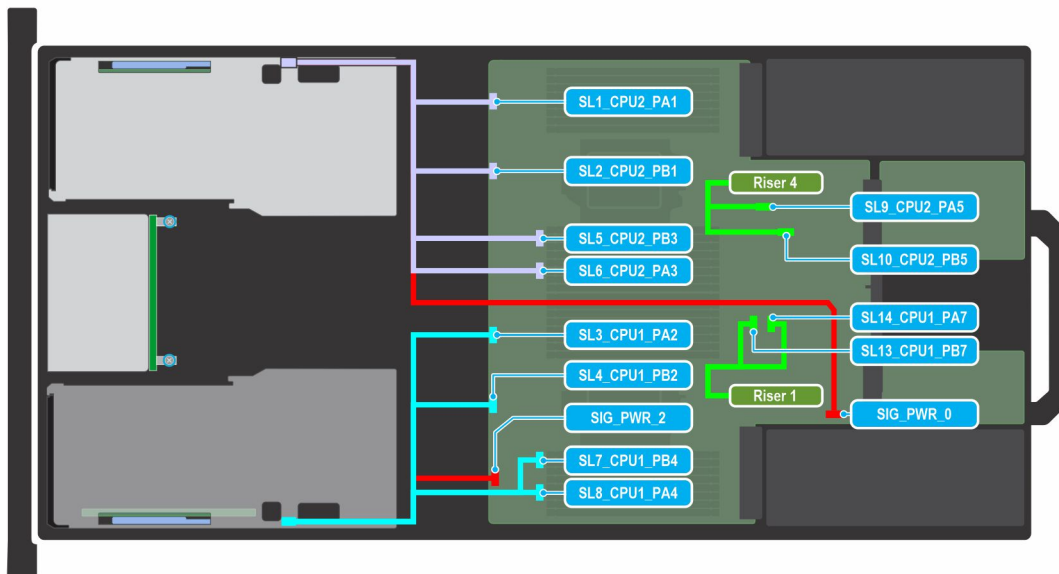


**Figure 61. Cabling for GPU Power**

**NOTE:** Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

**Table 65. Cabling for GPU Power**

Order	From	To
1.	PWR1_A ( system board PSU1) / PWR1_B (system board PSU1)/ J_PUCK_PSU1 (System board PSU 1 signal connector)	Puck (GPU power)
2.	PWR2_A ( system board PSU2) / PWR2_B (system board PSU2)/ J_PUCK_PSU2 (System board PSU 2 signal connector)	Puck (GPU power)

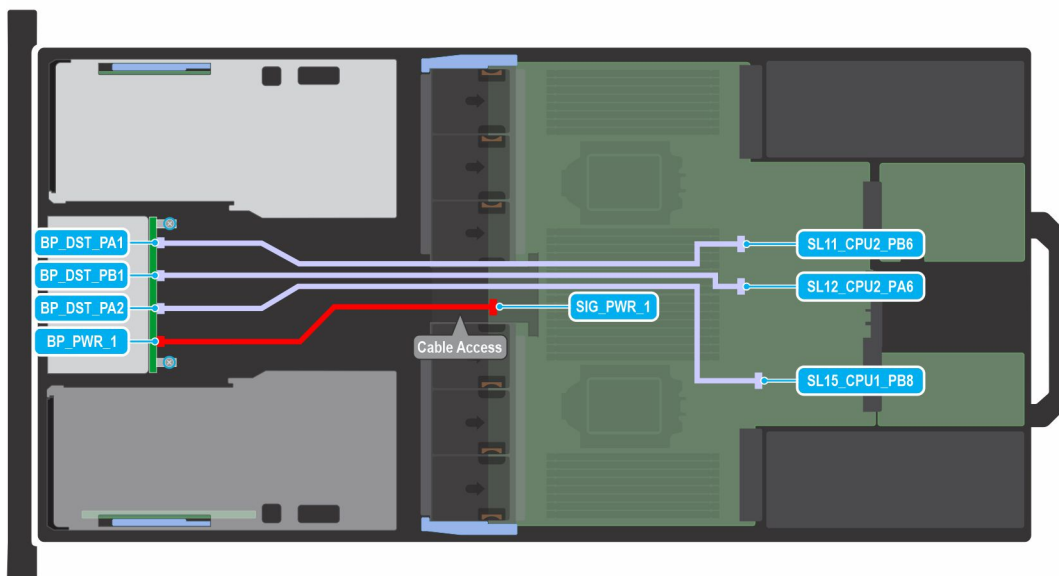


**Figure 62. Cabling for Front GPU riser module and Risers R1 and R4**

**NOTE:** Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

**Table 66. Cabling for Front GPU riser module and Risers R1 and R4**

Order	From	To
1.	SL13_CPU1_PB7 (signal connector on system board) and SL14_CPU1_PA7 (signal connector on system board)	Riser 1
2.	SL9_CPU2_PA5 (signal connector on system board) and SL10_CPU2_PB5 (signal connector on system board)	Riser 4
3.	SL3_CPU1_PA2 (signal connector on system board)/ SL4_CPU1_PB2 (signal connector on system board)/ SL7_CPU1_PB4 (signal connector on system board)/ SL8_CPU1_PA4 (signal connector on system board)/ SIG_PWR_2 (system board power connector)	GPU Riser R (SLOT36/ SLOT38/ RDW)
4.	SL1_CPU2_PA1 (signal connector on system board)/ SL2_CPU2_PB1 (signal connector on system board)/ SL5_CPU2_PB3 (signal connector on system board)/ SL6_CPU2_PA3 (signal connector on system board)/ SIG_PWR_0 (system board power connector)	GPU Riser L (SLOT31/ SLOT33/ LDW)

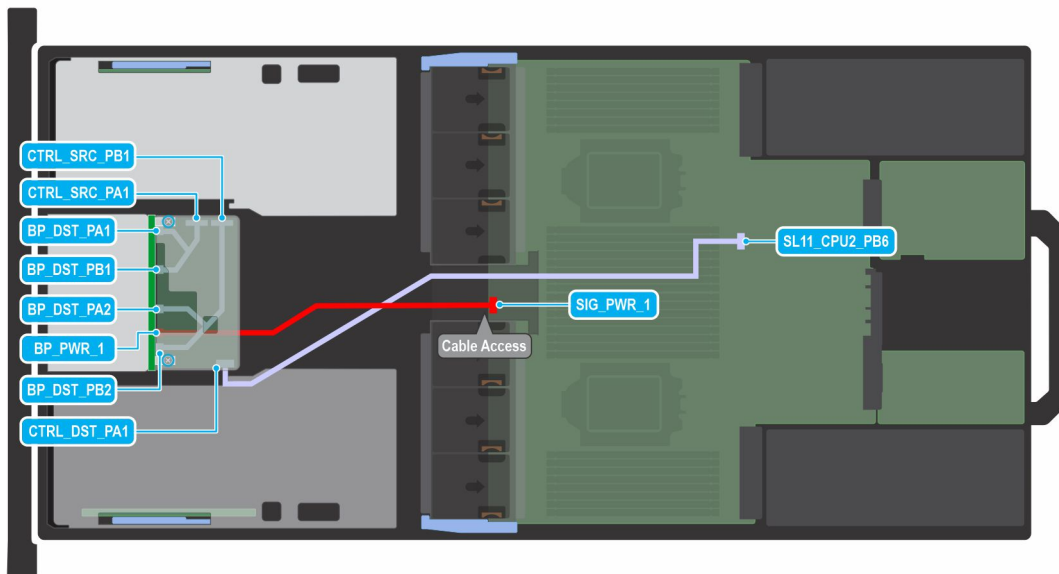


**Figure 63. Configuration 0: 6 x 2.5-inch NVMe GPU**

**NOTE:** Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

**Table 67. Configuration 0: 6 x 2.5-inch NVMe GPU**

Order	From	To
1.	SIG_PWR_1 (system board power connector)	BP_PWR_1 (Front backplane power connector)
2.	SL15_CPU1_PB8 (signal connector on system board)	BP_DST_PA2 (backplane signal connector)
3.	SL11_CPU2_PB6 (signal connector on system board)	BP_DST_PA1 (backplane signal connector)
4.	SL12_CPU2_PA6 (signal connector on system board)	BP_DST_PB1 (backplane signal connector)

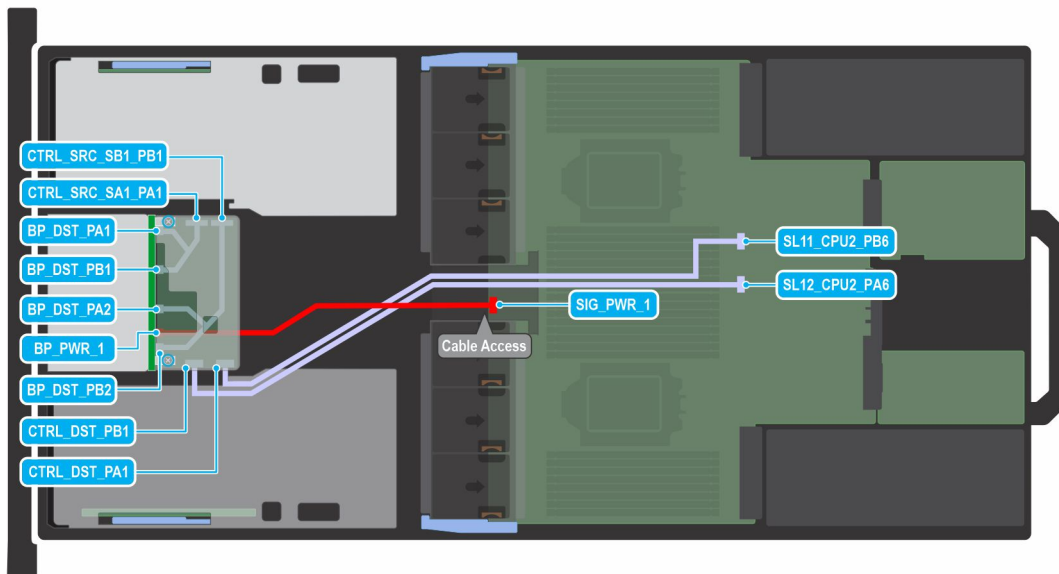


**Figure 64. Configuration 1: 8 x 2.5-inch NVMe RAID fPERC11**

**NOTE:** Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

**Table 68. Configuration 1: 8 x 2.5-inch NVMe RAID fPERC11**

Order	From	To
1.	SIG_PWR_1 (system board power connector)	BP_PWR_1 (Front backplane power connector)
2.	SL11_CPU2_PB6 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3.	CTRL_SRC_PA1 (fPERC controller connector)	BP_DST_PA1 (backplane signal connector) and BP_DST_PB1 (backplane signal connector)
4.	CTRL_SRC_PB1 (fPERC controller connector)	BP_DST_PA2 (backplane signal connector) and BP_DST_PB2 (backplane signal connector)



**Figure 65. Configuration 2: 8 x 2.5-inch NVMe RAID fPERC12**

**NOTE:** Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

**Table 69. Configuration 2: 8 x 2.5-inch NVMe RAID fPERC12**

Order	From	To
1.	SIG_PWR_1 (system board power connector)	BP_PWR_1 (Front backplane power connector)
2.	SL11_CPU2_PB6 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3.	SL12_CPU2_PA6 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)
4.	CTRL_SRC_SA1_PA1 (fPERC controller connector)	BP_DST_PA1 (backplane signal connector) and BP_DST_PB1 (backplane signal connector)
5.	CTRL_SRC_SB1_PB1 (fPERC controller connector)	BP_DST_PA2 (backplane signal connector) and BP_DST_PB2 (backplane signal connector)

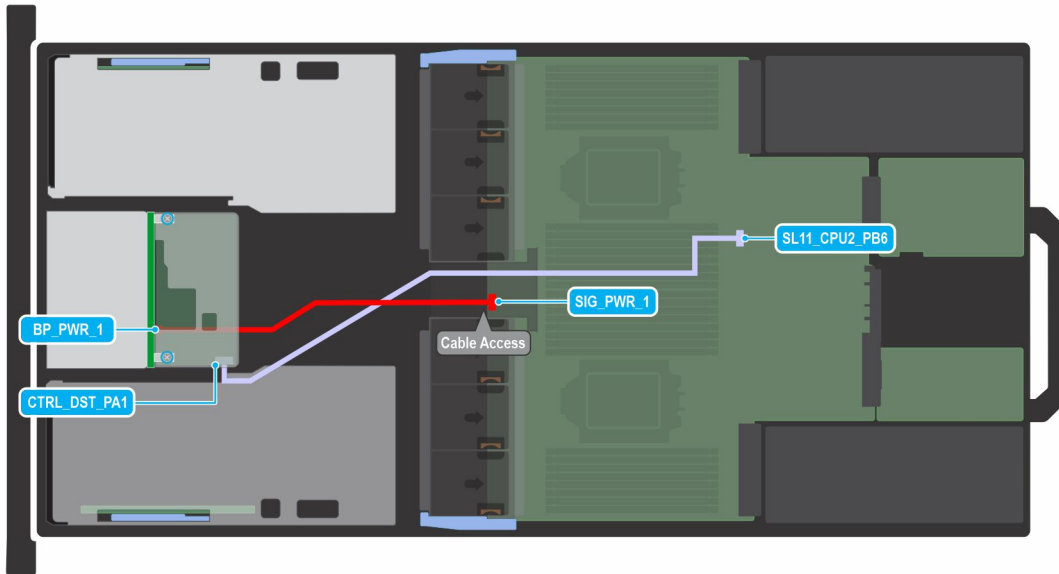


Figure 66. Configuration 3: 8 x 2.5-inch SAS\_SATA fPERC11

**NOTE:** Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 70. Configuration 3: 8 x 2.5-inch SAS\_SATA fPERC11

Order	From	To
1.	SIG_PWR_1 (system board power connector)	BP_PWR_1 (Front backplane power connector)
2.	SL11_CPU2_PB6 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)

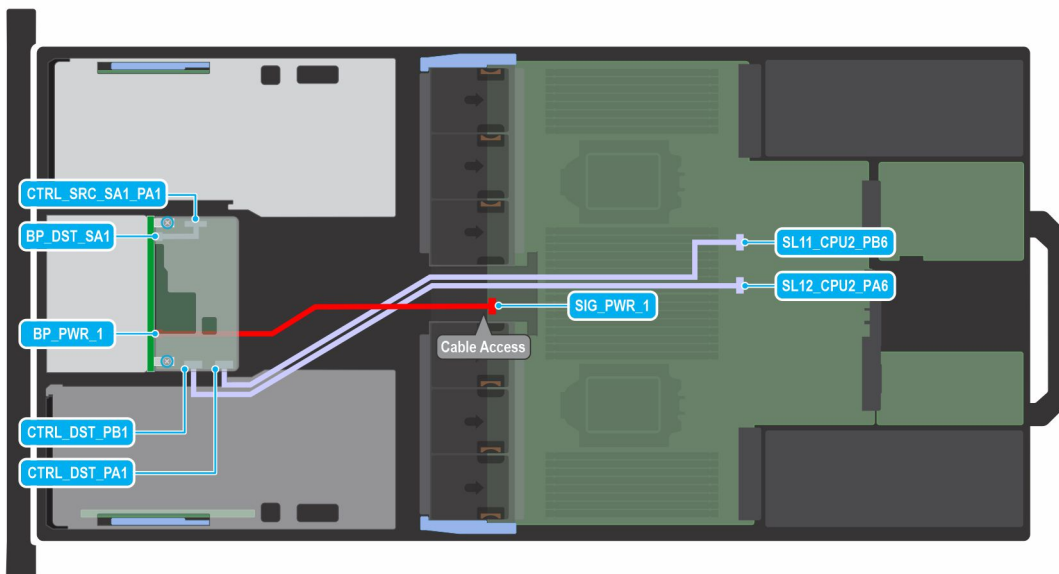
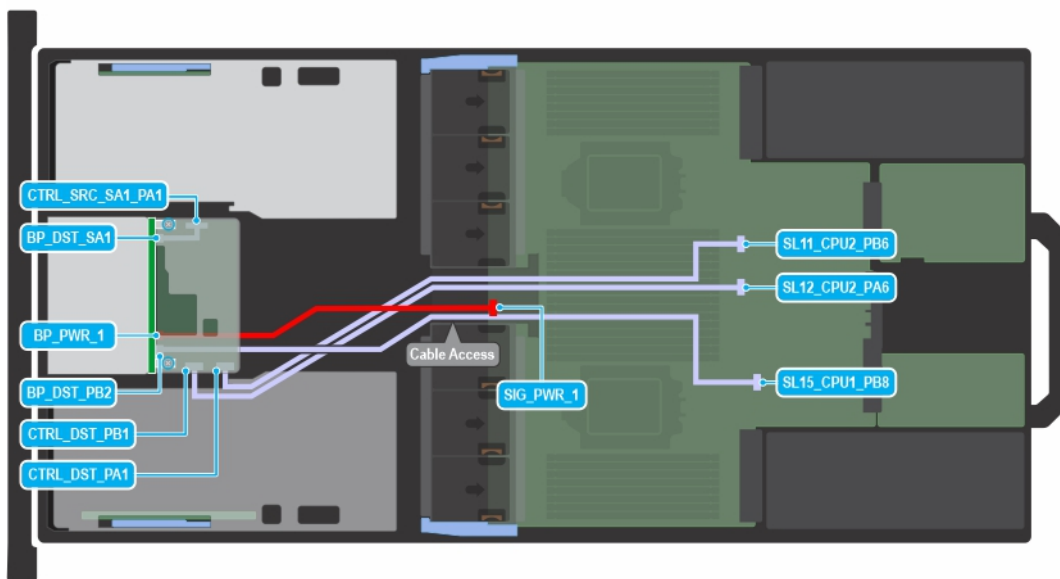


Figure 67. Configuration 4: 8 x 2.5-inch SAS\_SATA fPERC12

**NOTE:** Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

**Table 71. Configuration 4: 8 x 2.5-inch SAS\_SATA fPERC12**

Order	From	To
1.	SIG_PWR_1 (system board power connector)	BP_PWR_1 (Front backplane power connector)
2.	SL11_CPU2_PB6 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3.	SL12_CPU2_PA6 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)
4.	CTRL_SRC_SA1_PA1 (adapter PERC controller connector)	BP_DST_SA1 (backplane expander signal connector)

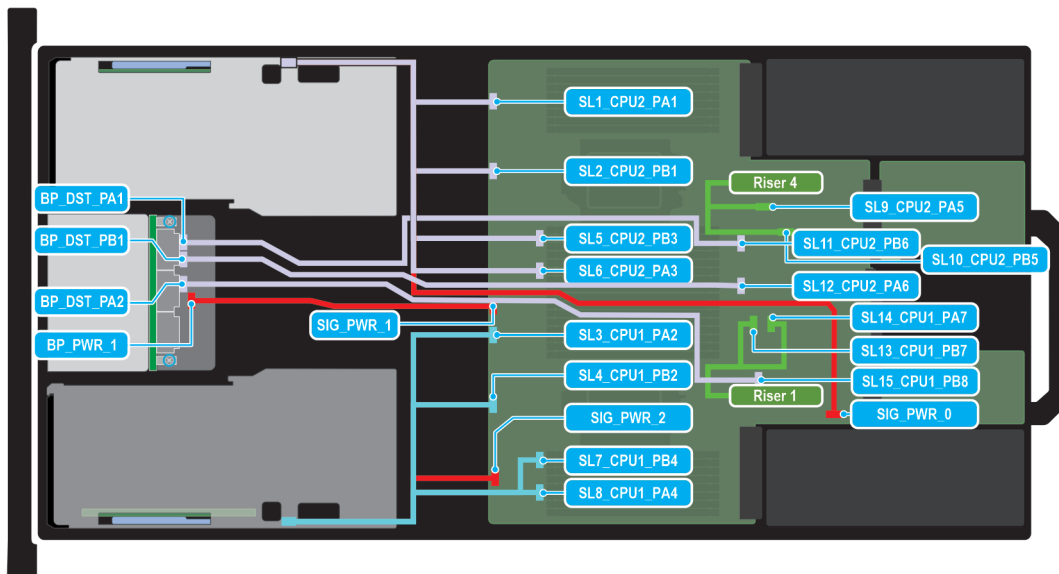


**Figure 68. Configuration 5: 8 x 2.5-inch UPassive SAS fPERC12**

**NOTE:** Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

**Table 72. Configuration 5: 8 x 2.5-inch UPassive SAS fPERC12**

Order	From	To
1.	SIG_PWR_1 (system board power connector)	BP_PWR_1 (Front backplane power connector)
2.	SL11_CPU2_PB6 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3.	SL12_CPU2_PA6 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)
4.	CTRL_SRC_SA1_PA1 (adapter PERC controller connector)	BP_DST_SA1 (backplane expander signal connector)
5.	SL15_CPU1_PB8 (signal connector on system board)	BP_DST_PB2 (backplane signal connector)



**Figure 69. Configuration 6: 6 x E3.S NVMe DW GPU**


**NOTE:** Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

**Table 73. Configuration 6: 6 x E3.S NVMe DW GPU**

Order	From	To
1.	SIG_PWR_1 (system board power connector)	BP_PWR_1 (Front backplane power connector)
2.	SL13_CPU1_PB7 (signal connector on system board) and SL14_CPU1_PA7 (signal connector on system board)	Riser 1
3.	SL9_CPU2_PA5 (signal connector on system board) and SL10_CPU2_PB5 (signal connector on system board)	Riser 4
4.	SL3_CPU1_PA2 (signal connector on system board)/ SL4_CPU1_PB2 (signal connector on system board)/ SL7_CPU1_PB4 (signal connector on system board)/ SL8_CPU1_PA4 (signal connector on system board)/ SIG_PWR_2 (system board power connector)	GPU Riser R (SLOT36/ SLOT38/ RDW)
5.	SL1_CPU2_PA1 (signal connector on system board)/ SL2_CPU2_PB1 (signal connector on system board)/ SL5_CPU2_PB3 (signal connector on system board)/ SL6_CPU2_PA3 (signal connector on system board)/	GPU Riser L (SLOT31/ SLOT33/ LDW)

**Table 73. Configuration 6: 6 x E3.S NVMe DW GPU (continued)**

Order	From	To
	SIG_PWR_0 (system board power connector)	
6.	SL11_CPU2_PB6 (signal connector on system board)	BP_DST_PA1 (backplane signal connector)
7.	SL12_CPU2_PA6 (signal connector on system board)	BP_DST_PB1 (backplane signal connector)
8.	SL15_CPU1_PB8 (signal connector on system board)	BP_DST_PA2 (backplane signal connector)

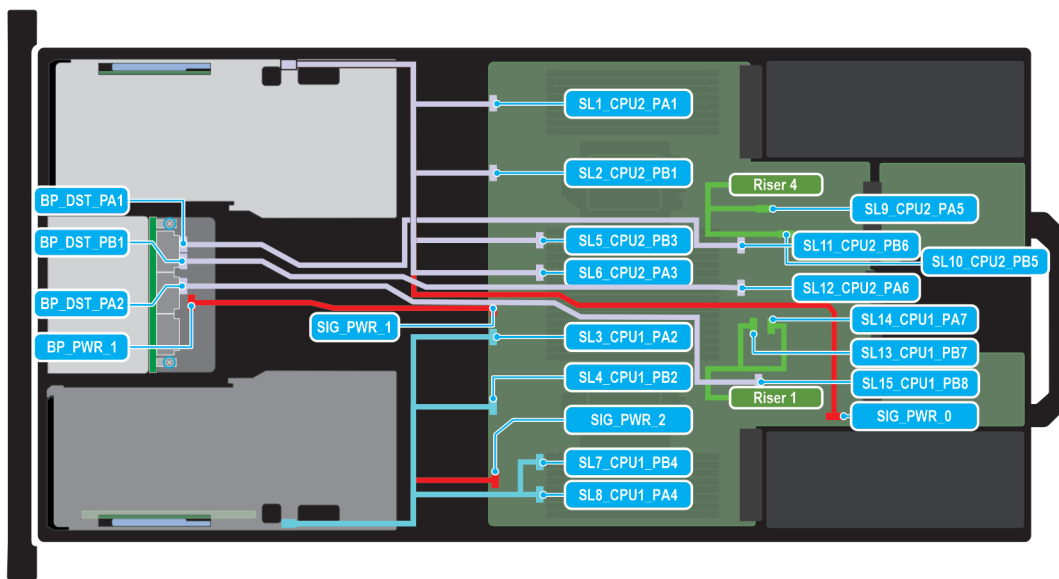

**Figure 70. Configuration 6: 6 x E3.S NVMe SW GPU**


**NOTE:** Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

**Table 74. Configuration 6: 6 x E3.S NVMe SW GPU**

Order	From	To
1.	SIG_PWR_1 (system board power connector)	BP_PWR_1 (Front backplane power connector)
2.	SL13_CPU1_PB7 (signal connector on system board) and SL14_CPU1_PA7 (signal connector on system board)	Riser 1
3.	SL9_CPU2_PA5 (signal connector on system board) and SL10_CPU2_PB5 (signal connector on system board)	Riser 4
4.	SL3_CPU1_PA2 (signal connector on system board)/ SL4_CPU1_PB2 (signal connector on system board)/ SL7_CPU1_PB4 (signal	GPU Riser R (SLOT35/ SLOT36/ SLOT37/ SLOT38/ RSW)

**Table 74. Configuration 6: 6 x E3.S NVMe SW GPU (continued)**

Order	From	To
	connector on system board)/ SL8_CPU1_PA4 (signal connector on system board)/ SIG_PWR_2 (system board power connector)	
5.	SL1_CPU2_PA1 (signal connector on system board)/ SL2_CPU2_PB1 (signal connector on system board)/ SL5_CPU2_PB3 (signal connector on system board)/ SL6_CPU2_PA3 (signal connector on system board)/ SIG_PWR_0 (system board power connector)	GPU Riser L (SLOT31/ SLOT32/ SLOT33/ SLOT34/ LSW)
6.	SL11_CPU2_PB6 (signal connector on system board)	BP_DST_PA1 (backplane signal connector)
7.	SL12_CPU2_PA6 (signal connector on system board)	BP_DST_PB1 (backplane signal connector)
8.	SL15_CPU1_PB8 (signal connector on system board)	BP_DST_PA2 (backplane signal connector)

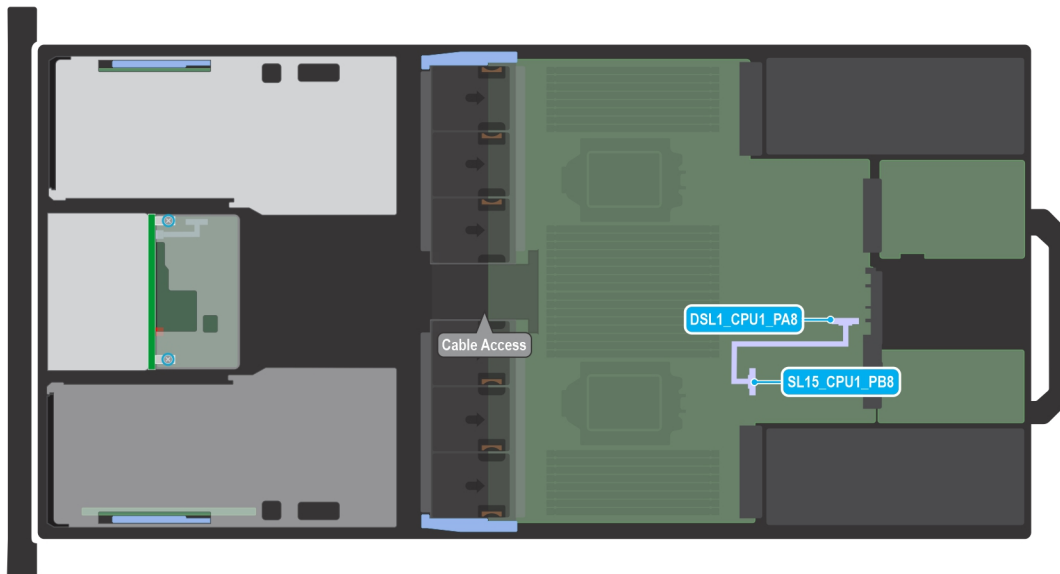

**Figure 71. Cabling for OCP**

**Table 75. Cabling for OCP**


Order	From	To
1.	SL15_CPU1_PB8 (signal connector on system board)	DSL1_CPU1_PA8 (signal connector on system board)

# System memory

## System memory guidelines

The PowerEdge R760xa system supports DDR5 registered DIMMs (RDIMMs). System memory holds the instructions that are started by the processor.

Your system memory is organized into eight channels per processor (two memory sockets per channel), 16 memory sockets per processor and 32 memory sockets per system.

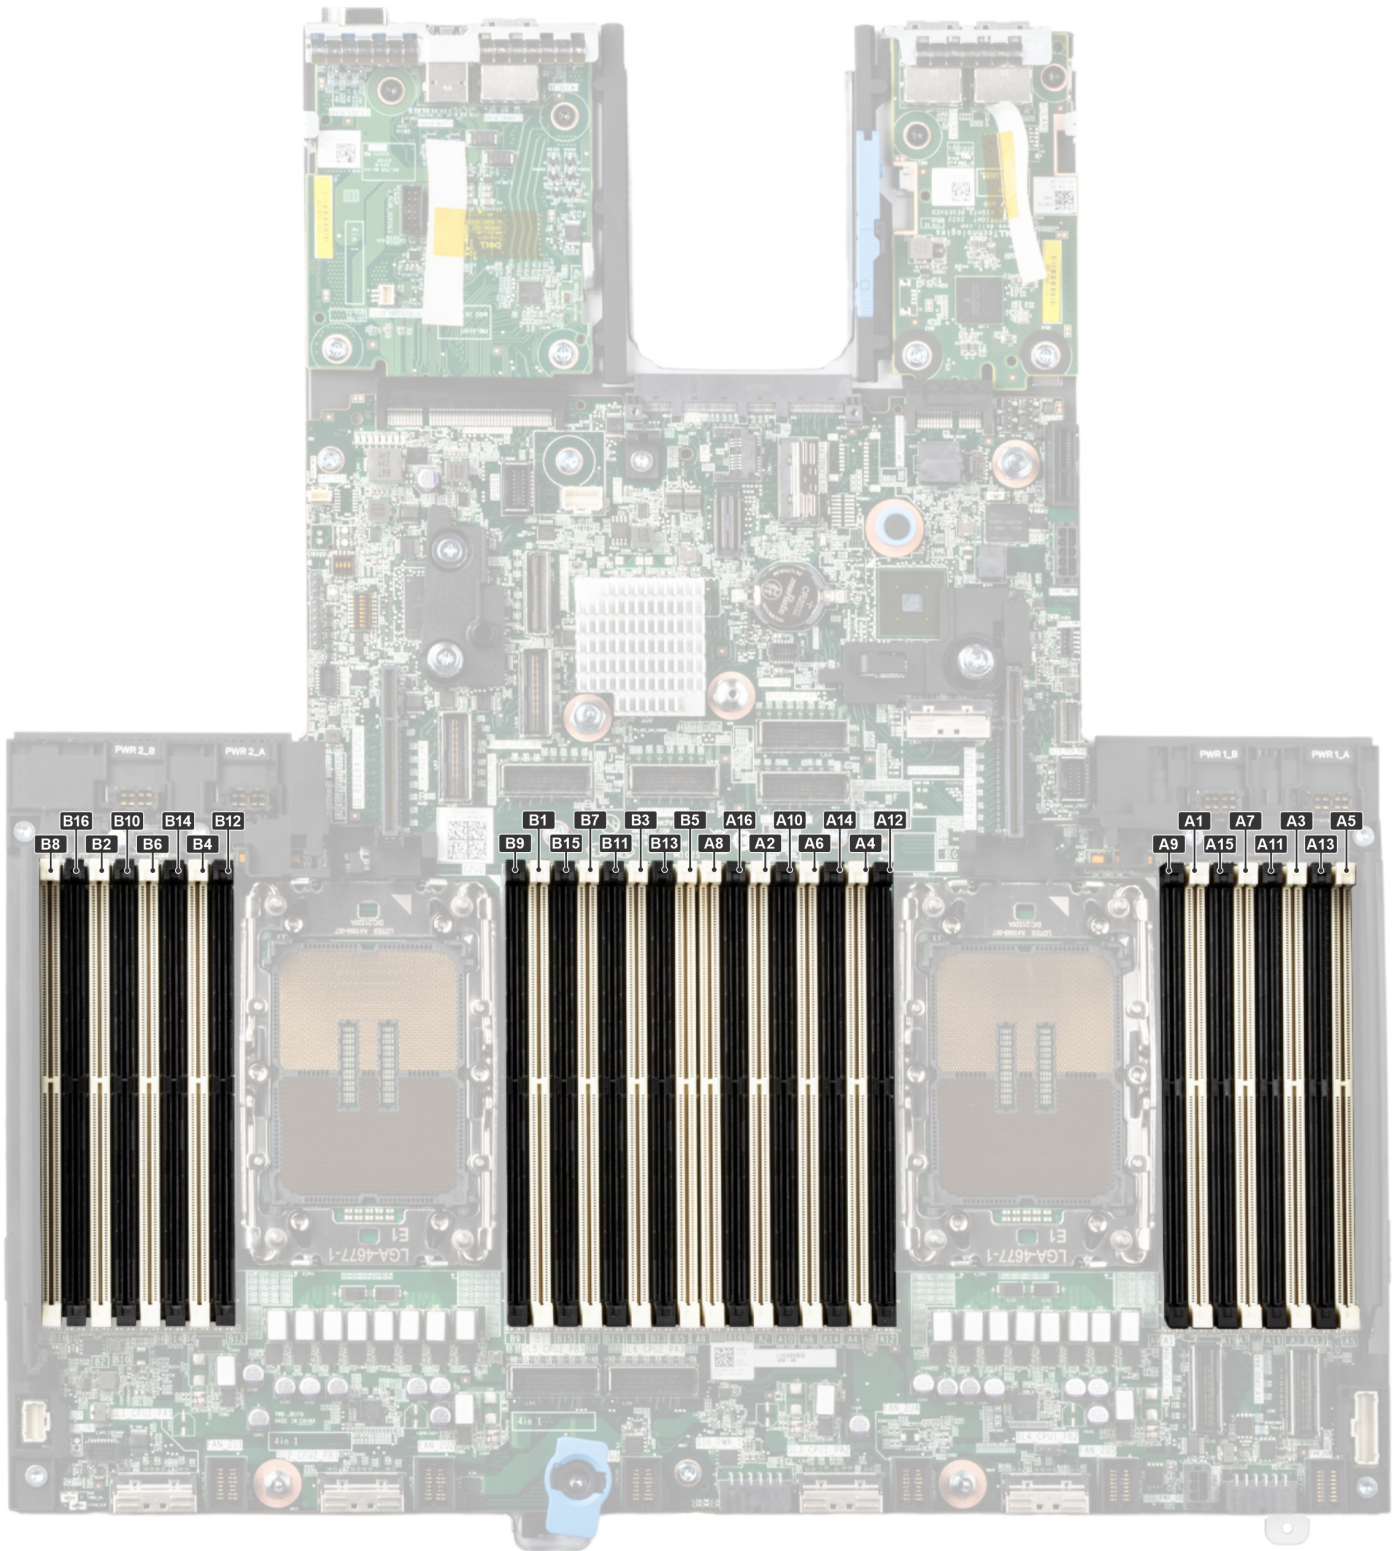

**Figure 72. Memory channels**

Memory channels are organized as follows:

**Table 76. Memory channels**

Processor	Channel A	Channel B	Channel C	Channel D	Channel E	Channel F	Channel G	Channel H
Processor 1	Slots A1 and A9	Slots A7 and A15	Slots A3 and A11	Slots A5 and A13	Slots A4 and A12	Slots A6 and A14	Slots A2 and A10	Slots A8 and A16
Processor 2	Slots B1 and B9	Slots B7 and B15	Slots B3 and B11	Slots B5 and B13	Slots B4 and B12	Slots B6 and B14	Slots B2 and B10	Slots B8 and B16

**Table 77. Supported memory matrix**

DIMM type	Rank	Capacity	DIMM rated voltage and speed	Operating Speed	
				1 DIMM per channel (DPC)	2 DIMMs per channel (DPC)
RDIMM	1 R	16 GB	DDR5 (1.1 V), 4800 MT/s	4800 MT/s	4400 MT/s
	2 R	32 GB, 64 GB	DDR5 (1.1 V), 4800 MT/s	4800 MT/s	4400 MT/s
	4 R	128 GB	DDR5 (1.1 V), 4800 MT/s	4800 MT/s	4400 MT/s
	8 R	256 GB	DDR5 (1.1 V), 4800 MT/s	4800 MT/s	4400 MT/s
	1 R	16 GB	DDR5 (1.1 V), 6400/5600 MT/s	6400/5600 MT/s	4400 MT/s
	2 R	32 GB, 64 GB, 96 GB, 128 GB	DDR5 (1.1 V), 6400/5600 MT/s	6400/5600 MT/s	4400 MT/s
	4 R	128 GB	DDR5 (1.1 V), 6400/5600 MT/s	6400/5600 MT/s	4400 MT/s

**NOTE:** 6400 MT/s, 5600 MT/s RDIMMs are applicable for 5<sup>th</sup> Generation Intel® Xeon® Scalable Processors.

**NOTE:** Quad rank (4R) 128 GB has reached EOL.

**NOTE:** The processor may reduce the performance of the rated DIMM speed.

## General memory module installation guidelines

To ensure optimal performance of your system, observe the following general guidelines when configuring your system memory. If your system's memory configuration fails to observe these guidelines, your system might not boot, stop responding during memory configuration, or operate with reduced memory.

The memory bus may operate at speeds of 6400 MT/s, 5600 MT/s, 4800 MT/s, 4400 MT/s, or 4000 MT/s depending on the following factors:

- System profile selected (for example, Performance, Performance Per Watt Optimized (OS), or Custom [can be run at high speed or lower])
- Maximum supported DIMM speed of the processors
- Maximum supported speed of the DIMMs

**NOTE:** MT/s indicates DIMM speed in MegaTransfers per second.

**NOTE:** Fault Resilient Memory supports only eight and sixteen DIMMs per processor.

# Removing a memory module

## Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the air shroud](#).

**⚠ WARNING:** The memory modules are hot to touch for some time after the system has been powered off. Allow the memory modules to cool before handling them.

## Steps

1. Locate the appropriate memory module socket.
2. To release the memory module from the socket, simultaneously press the ejectors on both ends of the memory module socket to fully open.

**⚠ CAUTION:** Handle each memory module only by the card edges, ensuring not to touch the middle of the memory module or metallic contacts.

3. Lift the memory module away from the system.

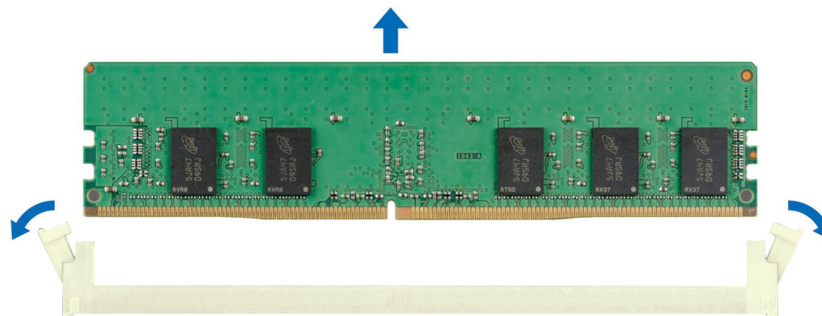


Figure 73. Removing a memory module

## Next steps

Replace the memory module.

# Installing a memory module

## Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the air shroud](#).

## Steps

1. Locate the appropriate memory module socket.

**CAUTION:** Handle each memory module only by the card edges, ensuring not to touch the middle of the memory module or metallic contacts.

2. If a memory module is installed in the socket, remove it.
3. Align the edge connector of the memory module with the alignment key of the memory module socket, and insert the memory module in the socket.


**NOTE:** Ensure the socket ejector latches are fully open, before installing the memory module.

**CAUTION:** To prevent damage to the memory module or the memory module socket during installation, do not bend or flex the memory module; insert both ends of the memory module simultaneously.

**NOTE:** The memory module socket has an alignment key that enables you to install the memory module in the socket in only one orientation.

**CAUTION:** Do not apply pressure at the center of the memory module; apply pressure at both ends of the memory module evenly.

4. Press the memory module with your thumbs until the ejectors firmly click into place. When the memory module is properly seated in the socket, the levers on the memory module socket align with the levers on the other sockets that have memory modules installed.

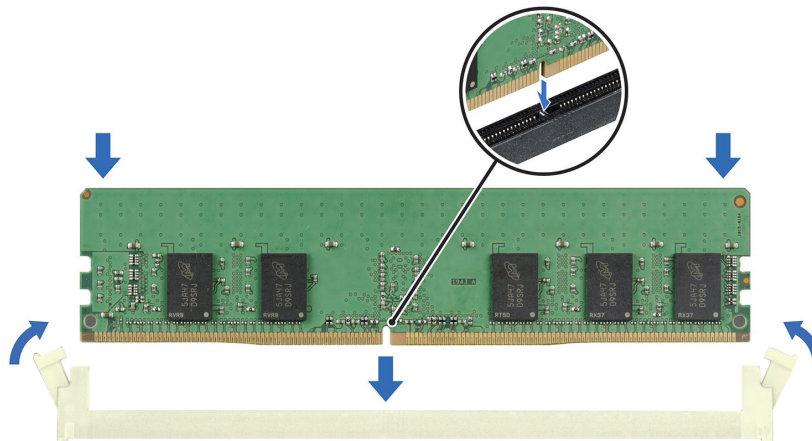

**Figure 74. Installing a memory module**

#### Next steps

1. [Install the air shroud.](#)
2. Follow the procedure listed in [After working inside your system.](#)
3. To verify if the memory module has been installed properly, press F2 and navigate to **System Setup Main Menu > System BIOS > Memory Settings**. In the **Memory Settings** screen, the System Memory Size must reflect the updated capacity of the installed memory.
4. If the System Memory Size is incorrect, one or more of the memory modules may not be installed properly. Ensure that the memory modules are firmly seated in their sockets.
5. Run the system memory test in system diagnostics.


# Processor and heat sink module

This is a service technician replaceable part only.

## Removing the processor and heat sink module


### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the air shroud](#).

 **NOTE:** The heat sink and processor are hot to touch for some time after the system has been powered off. Allow the heat sink and processor to cool down before handling them.

### Steps

1. Ensure all four anti-tilt wires are in the locked position (outward position), and then using a Torx T30 tool, loosen the captive nuts on the processor heat sink module (PHM) in the order that is mentioned below:
  - a. Loosen the first nut three turns.
  - b. Loosen the nut diagonally opposite to the nut loosened first.
  - c. Repeat the procedure for the remaining two nuts.
  - d. Return to the first nut and loosen it completely.
2. Set all the anti-tilt wires to unlocked position (inward position).

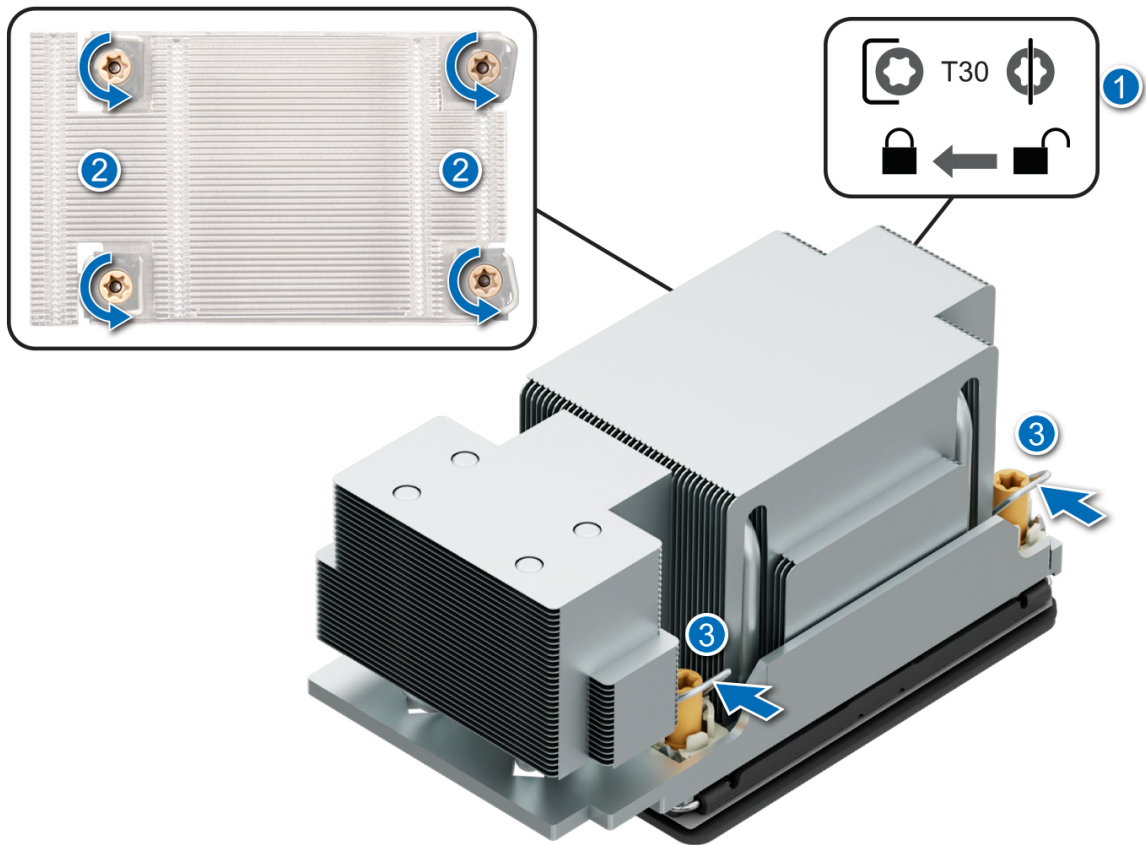

**Figure 75. Removing the processor heat sink module**

3. Lift the PHM from the system and set the PHM aside with the processor side facing up.

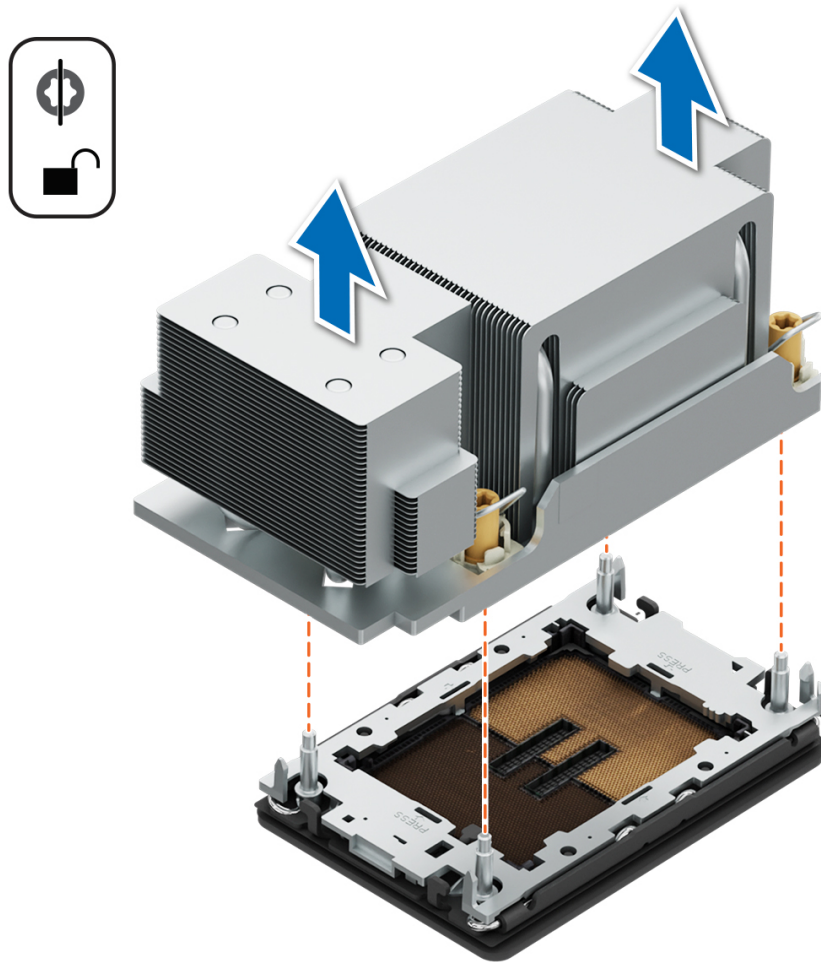


Figure 76. Removing a heat sink

### Next steps

If you are removing a faulty heat sink, [replace the heat sink](#), if not, [remove the processor](#).

## Removing the processor

### Prerequisites

**⚠ WARNING:** Remove the processor from processor and heat sink module (PHM) only if you are replacing the processor or heat sink.


1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the air shroud](#).
4. [Removing the processor and heat sink module](#) or [Removing the liquid cooling module](#).

**⚠ CAUTION:** You may find the CMOS battery loss or CMOS checksum error displayed during the first instance of powering on the system after the processor or system board replacement which is expected. To fix this, simply go to setup option to configure the system settings.

### Steps


1. Place the heat sink with the processor side facing up.

2. Using your thumb, lift up the Thermal Interface Material (TIM) break lever to release the processor from the TIM and retaining clip.
  3. Holding the processor by the edges, lift the processor away from the retaining clip.
- i** **NOTE:** Ensure to hold the retaining clip to the heat sink as you lift the TIM break lever.

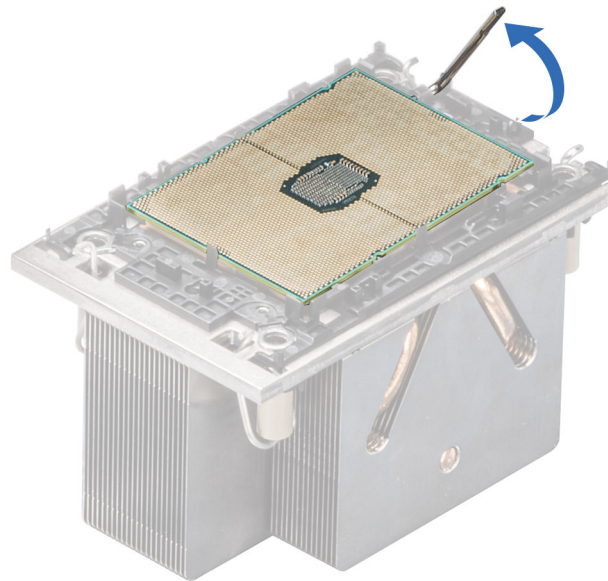

**Figure 77. Lift up the TIM break lever**

4. Using your thumb and index finger, first hold the retaining clip release tab at the pin 1 connector, pull out the tip of the release tab, and then lift the retaining clip partially from the heat sink.
- i** **NOTE:** Ensure to return the TIM break lever back to its original position.
5. Repeat the above procedure at the remaining three corners of the retaining clip.
  6. After all the corners are released from the heat sink, lift the retaining clip from the pin 1 corner of the heat sink.

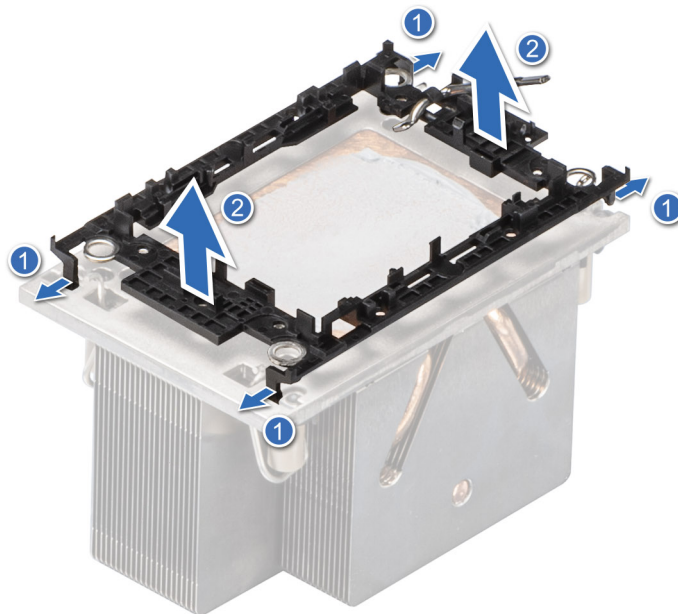

**Figure 78. Removing the retaining clip**

## Next steps

Replace the processor.

# Installing the processor

## Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the air shroud](#).
4. [Remove the processor heat sink module](#) or [Remove the liquid cooling module](#).

## Steps


1. Place the processor in the processor tray.

**i** **NOTE:** Ensure the pin 1 indicator on the processor tray is aligned with the pin 1 indicator on the processor.

2. Place the retaining clip on top of the processor in the processor tray aligning pin 1 indicator on the processor.

**i** **NOTE:** Ensure the pin 1 indicator on the bracket is aligned with the pin 1 indicator on the processor before placing the retaining clip on the processor.


**i** **NOTE:** Before you install the heat sink, ensure to place the processor and retaining clip in the tray.

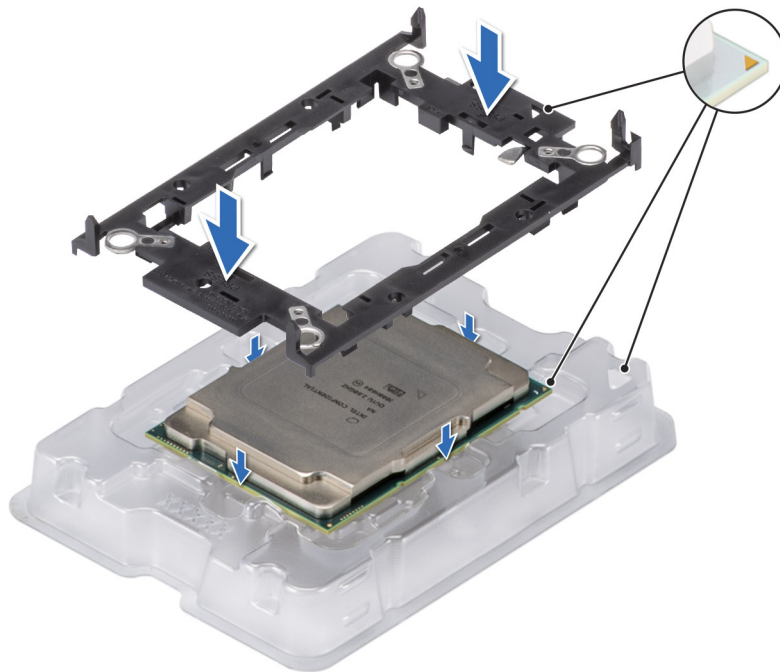

**Figure 79. Installing the retaining clip**

3. Align the processor with retaining clip, by using the fingers press the retaining clip on all the four sides until it clicks into place.

**i** **NOTE:** Ensure the processor is securely latched to the retaining clip.

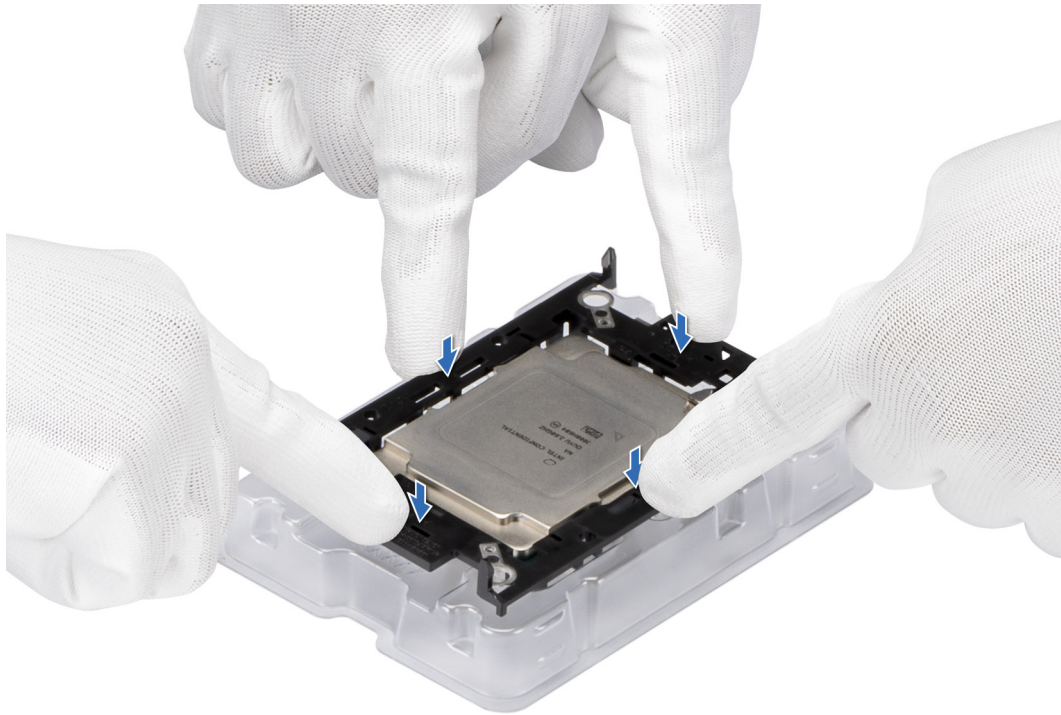


**Figure 80. Press the retaining clip on the four sides**

4. If you are using an existing heat sink, remove the thermal grease from the heat sink by using a clean lint-free cloth.
5. Apply thermal grease in a quadrilateral design on the bottom of the heat sink.


**CAUTION:** Applying too much thermal grease can result in excess grease coming in contact with and contaminating the processor socket.

**NOTE:** The thermal grease syringe is intended for single use only. Dispose the syringe after you use it.

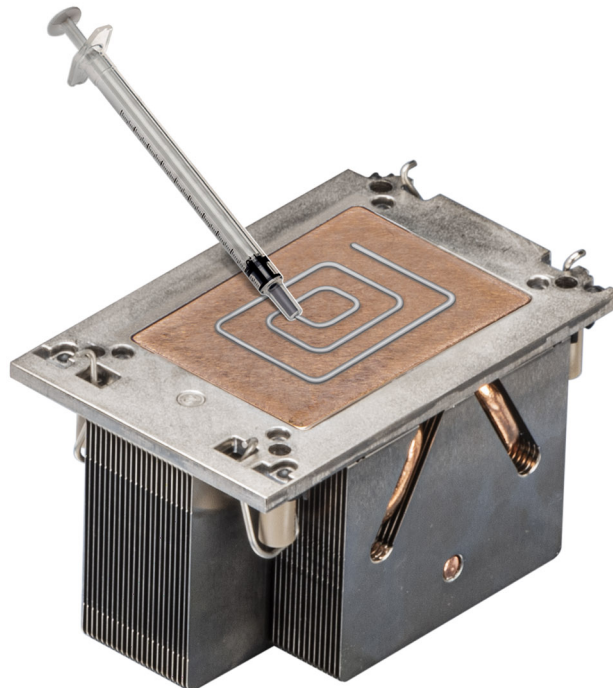

**Figure 81. Applying thermal grease**

6. For new heat sink, remove the Thermal Interface Material (TIM) protective film from the base of heat sink.

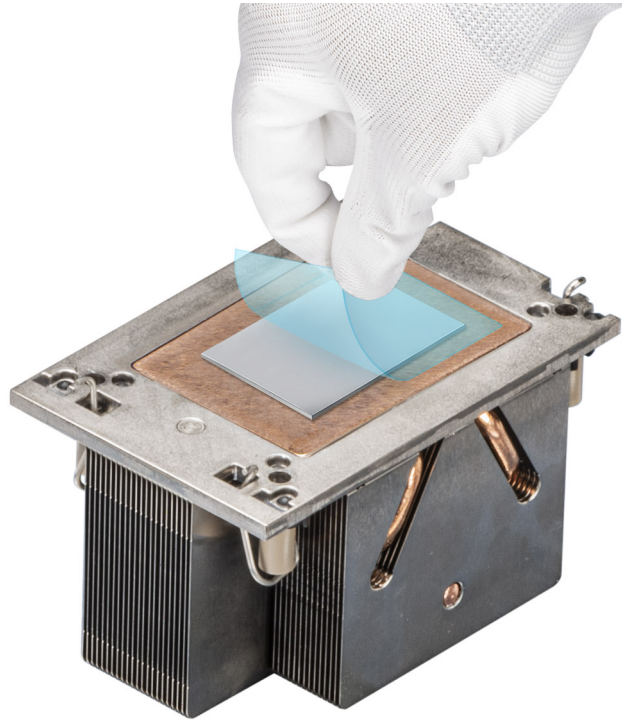


**Figure 82. Removing the Thermal Interface Material (TIM) protective film**

7. Place the heat sink on the processor and press the base of the heat sink until the retaining clip locks onto the heat sink at all the four corners.

**CAUTION:** To avoid damaging the fins on the heat sink, do not press down on the heat sink fins.

**NOTE:**

- Ensure latching features on retaining clip and heat sink are aligned during assembly.
- Ensure that the pin 1 indicator on the heat sink is aligned with the pin 1 indicator on the retaining clip before placing the heat sink onto the retaining clip.

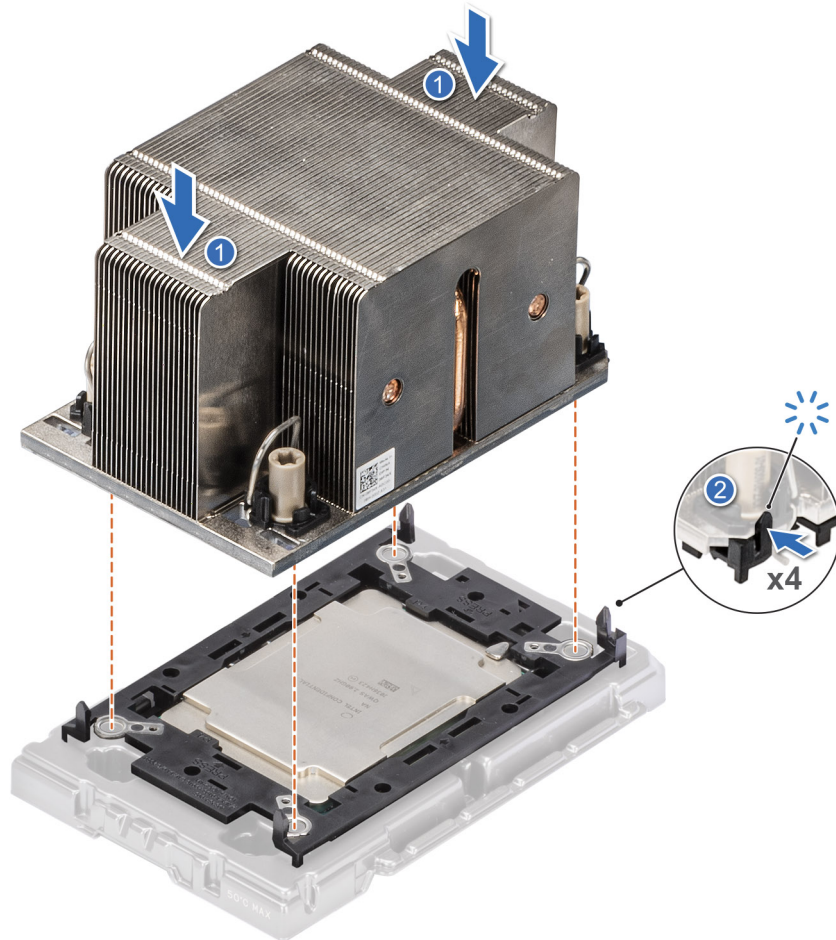

**Figure 83. Installing the heat sink onto the processor**

#### Next steps

1. Install the heat sink module or install the liquid cooling module.
2. Install the air shroud.
3. Follow the procedure listed in [After working inside your system](#).

## Installing the processor and heat sink module

#### Prerequisites

Never remove the heat sink from a processor unless you intend to replace the processor or system board. The heat sink is necessary to maintain proper thermal conditions.


1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the air shroud](#).
4. If installed, remove the processor dust cover.

#### Steps

1. Set the anti-tilt wires to the unlocked position on the heat sink (inward position).
2. Align the pin 1 indicator of the heat sink to the system board, and then place the processor and heat sink on the processor socket.


**CAUTION:** To avoid damaging the fins on the heat sink, do not press down on the heat sink fins.

**NOTE:** Ensure that the PHM is held parallel to the system board to prevent damaging the components.

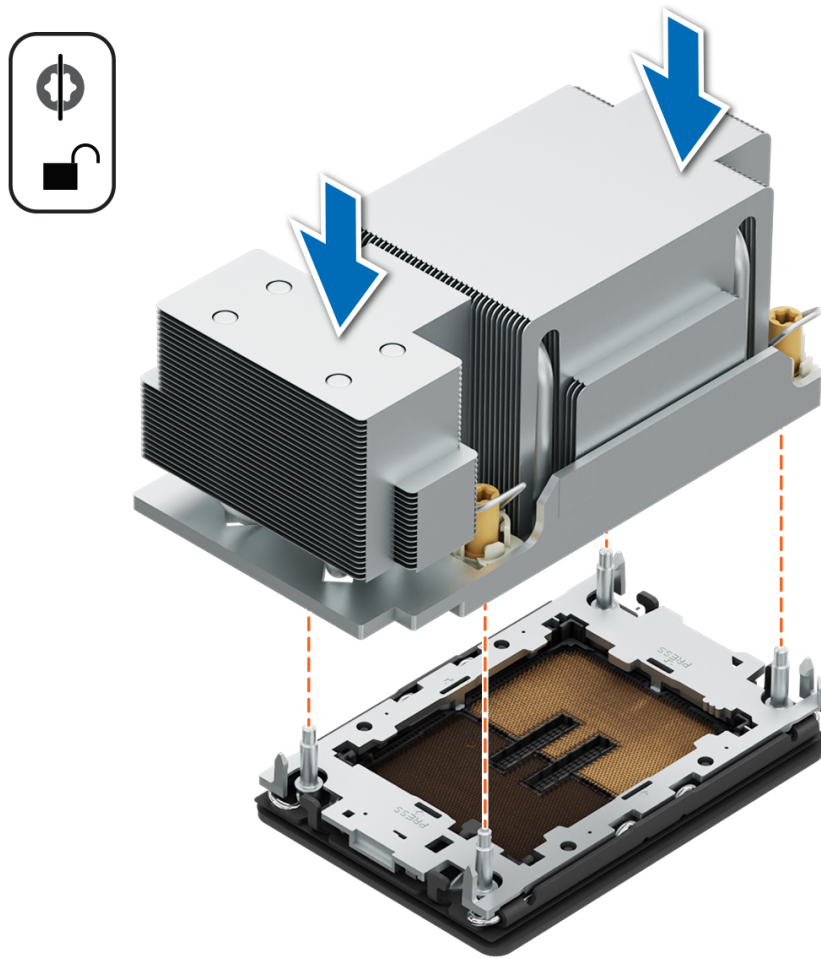

**Figure 84. Installing the processor heat sink**

3. Set the anti-tilt wires to the locked position (outward position), and then using the Torx T30 tool, tighten the captive butts on the PHM in the order below:
  - a. In a random order, tighten the first nut three turns.
  - b. Tighten the nut diagonally opposite to the nut you tighten first.
  - c. Repeat the procedure for the remaining two nuts.
  - d. Return to the nut screw to tighten it completely.
  - e. Check all the nuts to ensure they are firmly secured.

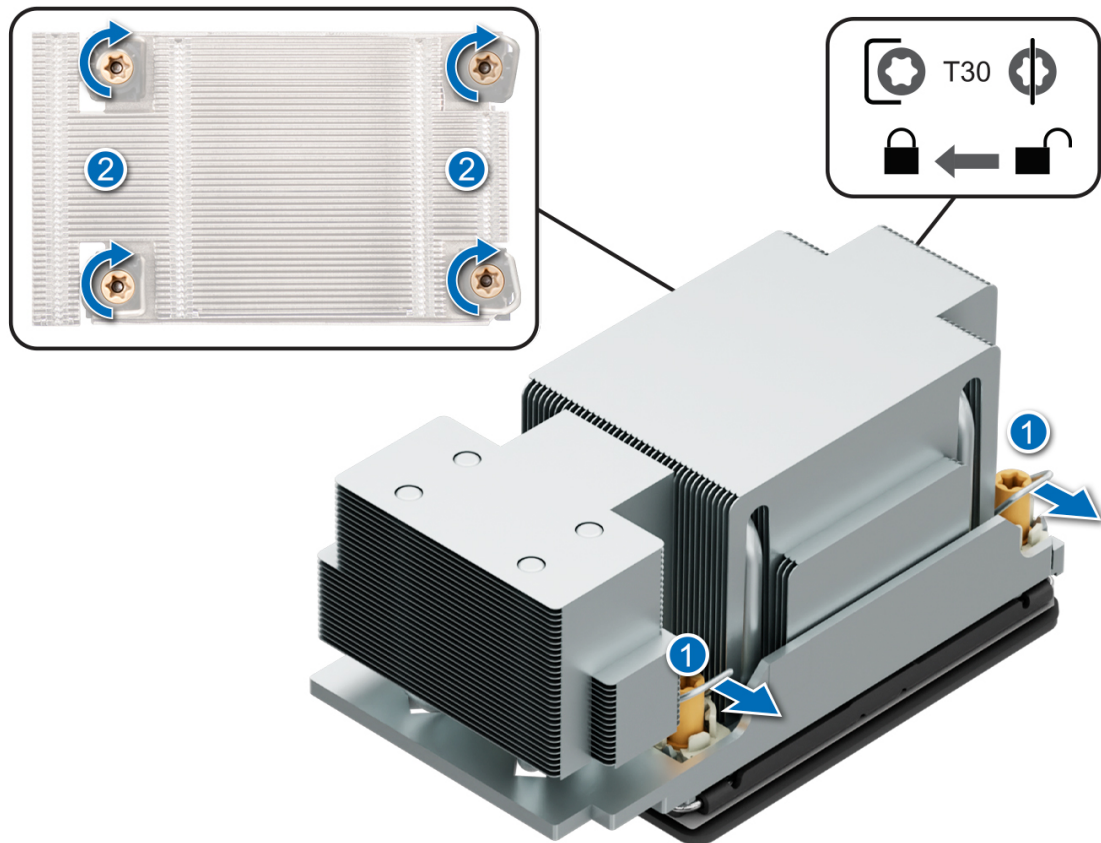

**Figure 85. Set the anti-tilt wires to the locked position and tightening the screws**

#### Next steps

1. [Install the air shroud.](#)
2. Follow the procedure listed in the [After working inside your system.](#)

## Removing the liquid cooling module

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions.](#)
2. Follow the procedure listed in the [Before working inside your system.](#)
3. [Remove the air shroud.](#)
4. [Remove the expansion card riser.](#)

**⚠ WARNING: The liquid cooling (LC) module and processor are too hot to touch for some time after the system has been powered off. Allow the liquid cooling module and processor to cool down before handling them.**


**ℹ NOTE:** Rear I/O (RIO) board is different for the system with liquid cooling heat sink modules.

**ℹ NOTE:** The procedure to remove the processor from the liquid cooling module is same as removing the processor from the PHM.

#### Steps

1. Using a Phillips #2 screw driver, loosen the captive screw on the liquid cooling ring holder.
2. Tilt the liquid cooling ring holder to loosen the liquid cooling tubes.

3. Disconnect the liquid cooling leak detection cable from the LC RIO board.
4. Remove the liquid cooling tubes from the clip and LC RIO board.
5. Slightly lift the liquid cooling tubes surrounding the DIMM slots.
6. Using a Torx #T30 screwdriver, loosen the captive screws on the liquid cooling module.
- (i) **NOTE:** Ensure the anti-tilt wires on the liquid cooling module are in locked position when loosening the captive screws.
7. Set the anti-tilt wires on the liquid cooling module to the unlock position and lift the liquid module from the system.
- (i) **NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

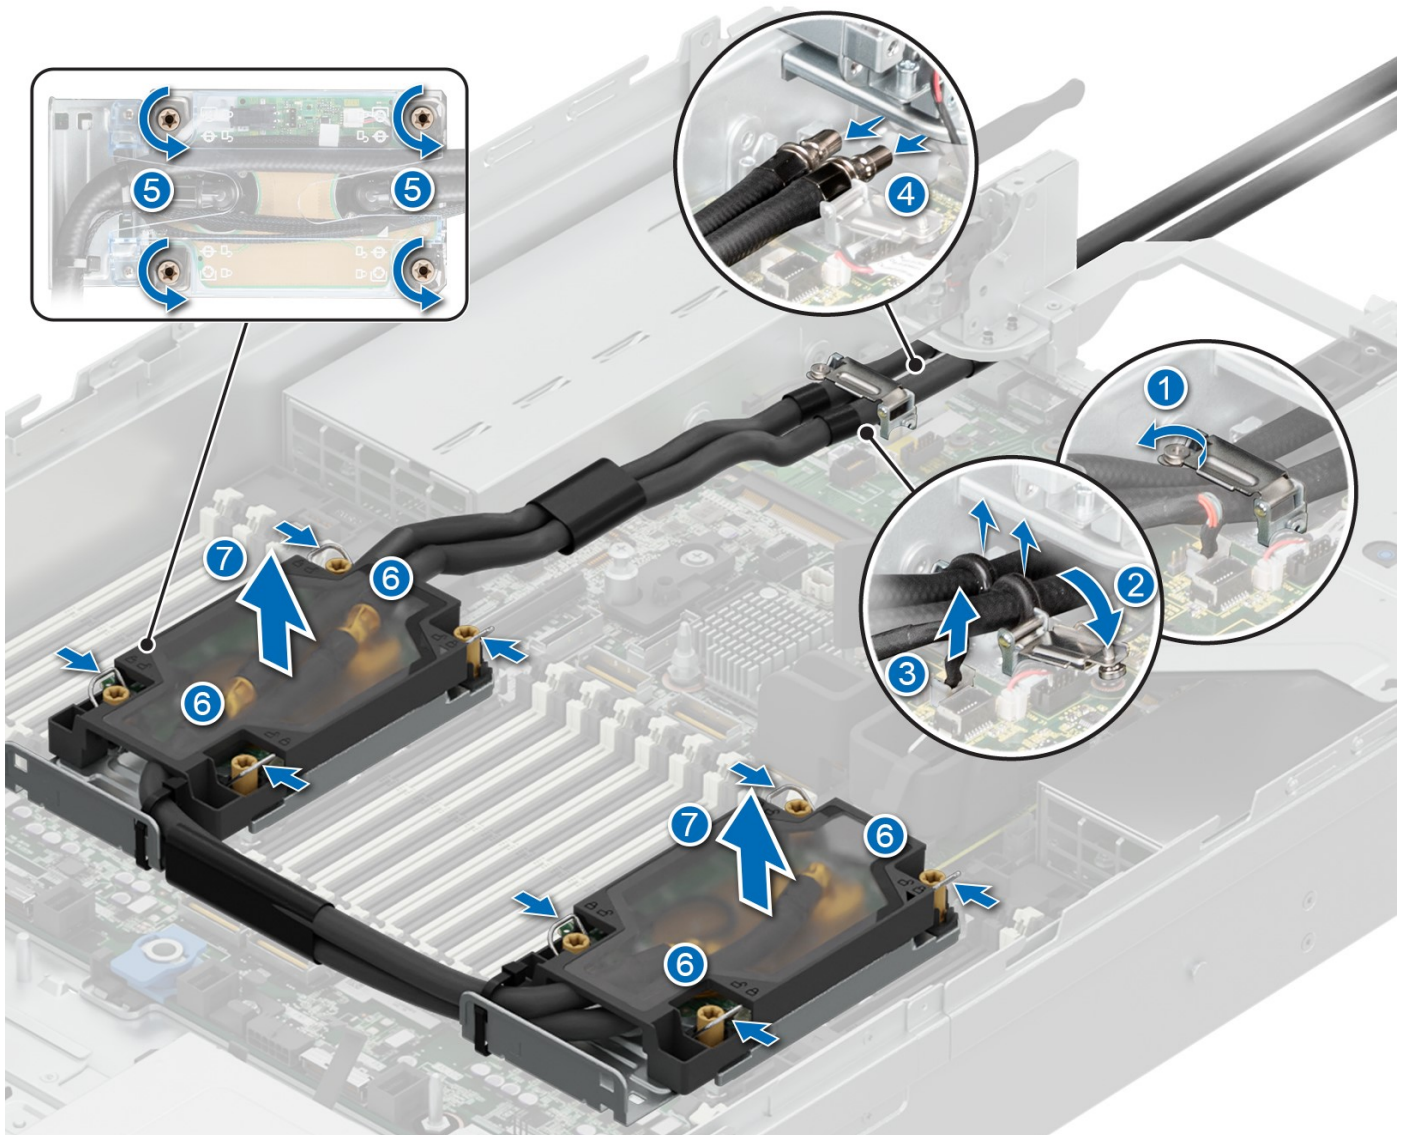

**Figure 86. Removing the liquid cooling module**

**Next steps**


1. If you are removing a faulty liquid cooling module, [replace the liquid cooling modules](#), else [remove the processor](#).


# Installing the liquid cooling module

## Prerequisites

Never uninstall the heat sink from a processor unless you intend to replace the processor or system board. The heat sink is necessary to maintain proper thermal conditions.


1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the air shroud](#).
4. [Remove the expansion card riser](#).
5. If installed, remove the processor dust cover.

 **NOTE:** The procedure to install the processor onto the liquid cooling module is same as installing the processor onto the PHM.


 **NOTE:** Ensure anti-tilt wires on the liquid cooling module are in the unlocked position.

## Steps


1. Align the liquid cooling module with the standoff screws on the system board.

 **NOTE:** Ensure that the liquid cooling tubes and liquid cooling leak detection cable are placed towards the rear of the system.


2. Place the module on the processor slot and set all the anti-tilt wires to locked position (outward position).
3. Route the liquid cooling tubes on the front of the system between DIMM slots and J\_SL connector.
4. Using a Torx #T30 screwdriver, tighten the captive screws (12 in-lbs).
5. The tubes leading towards the rear of the chassis and the liquid cooling leak detection cable are placed in between the PSU 2 and the clip of rear I/O board (RIO).


 **NOTE:** Leak detection cable must be placed first into the clip (underneath the cooling tubes), then place tube 2 and tube 1 into the clip to ensure cable does not interfere with the PCIe risers.

6. Route the rear end of the liquid cooling tubes through the RIO board.

 **NOTE:** Follow the number labels on the liquid cooling tubes and ring holders (1,2).

7. Connect the liquid cooling leak detection cable to the connector on RIO.
8. Align the rubber ring on the tubes with the liquid cooling ring holder.
9. Tilt the liquid cooling ring holder and using a Phillips #2 screwdriver, tighten the captive screw on the liquid cooling ring holder to secure it in place.

 **NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

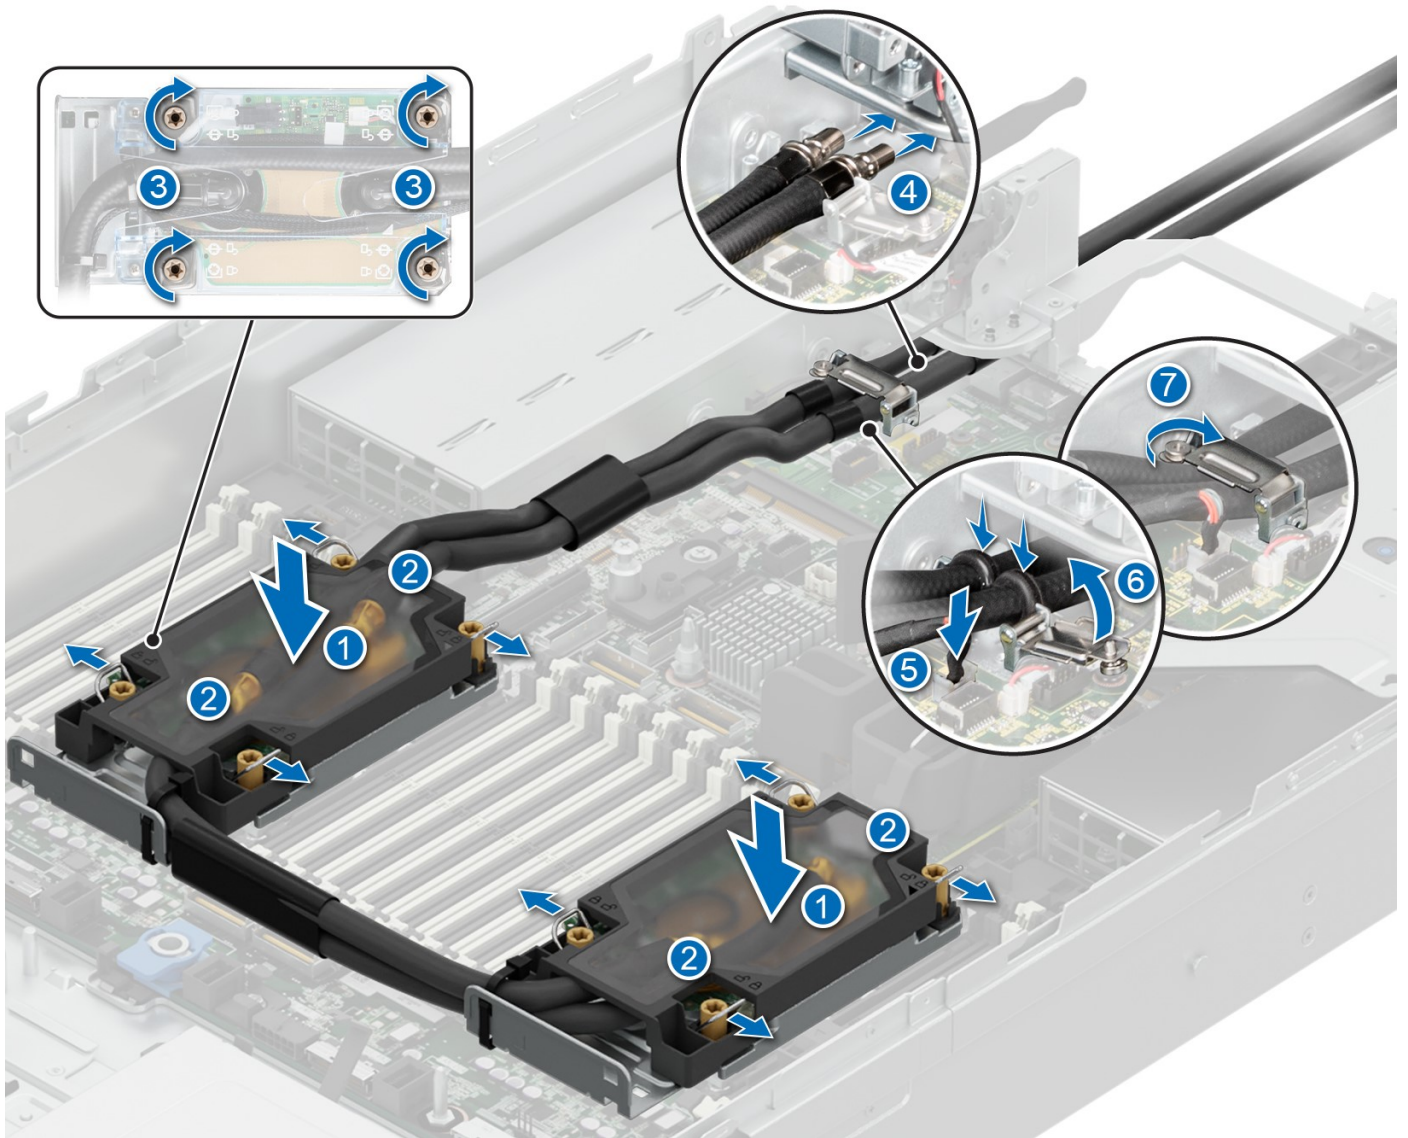

**Figure 87. Installing the liquid cooling module**


### Next steps

1. Install the expansion card riser.
2. Installing the air shroud.
3. Follow the procedure listed in the [After working inside your system](#).

## Expansion cards and expansion card risers

**NOTE:** A system event entry is logged in the iDRAC Lifecycle Controller if an expansion card riser is not supported or missing. It does not prevent your system from getting powered on. However, if a F1/F2 pause occurs with an error message, see *Troubleshooting expansion cards* section in the *Dell PowerEdge Servers Troubleshooting Guide* at [PowerEdge manuals](#).

## Expansion card installation guidelines

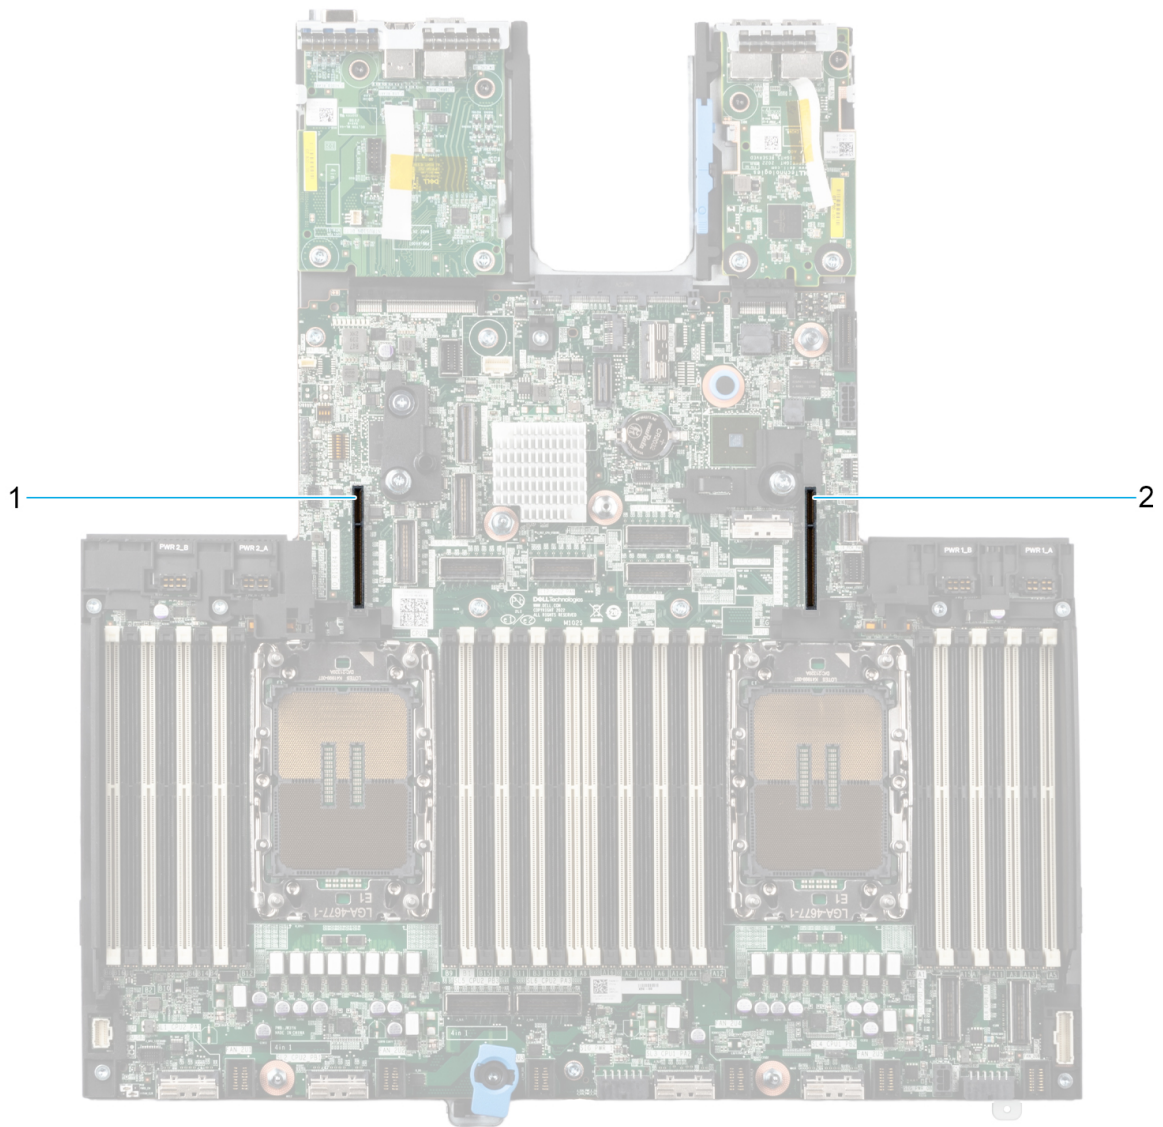

**Figure 88. Expansion card slot connectors**

1. Riser 4
2. Riser 1


The following table describes the expansion card riser configurations:

**Table 78. Riser configurations**

Configurations	Expansion card risers	PCIe Slots	Controlling processor	Height	Length	Slot width
Config 0-1. Without GPU bridge	R1V	1 and 2	Processor 1	Full height	Half length	x16 + x16
	RF1A	36 and 38	Processor 1	Full Height, double width	Full length	x16 + x16
	R4T	7 and 8	Processor 2	Full height	Half length	x16 + x16


**Table 78. Riser configurations (continued)**

Configurations	Expansion card risers	PCIe Slots	Controlling processor	Height	Length	Slot width
4 x16 Rear FH + 4 x16 Front FH DW	RF2A	31 and 33	Processor 2	Full Height, double width	Full length	x16 + x16
Config 0-1. With GPU bridge 4 x16 Rear FH + 4 x16 Front FH DW	R1V	1 and 2	Processor 1	Full height	Half length	x16 + x16
	RF1A	36 and 38	Processor 1	Full Height, double width	Full length	x16 + x16
	R4T	7 and 8	Processor 2	Full height	Half length	x16 + x16
	RF2A	31 and 33	Processor 2	Full Height, double width	Full length	x16 + x16
Config1. 4 x16 Rear FH + 8 x8 Front FH SW	R1V	1 and 2	Processor 1	Full height	Half length	x16 + x16
	R4T	7 and 8	Processor 2	Full height	Half length	x16 + x16
	RF1B	35, 36, 37 and 38	Processor 1	Full Height, single width	Full length	x8 + x8 + x8 + x8
	RF2B	31, 32, 33 and 34	Processor 2	Full Height, single width	Full length	x8 + x8 + x8 + x8

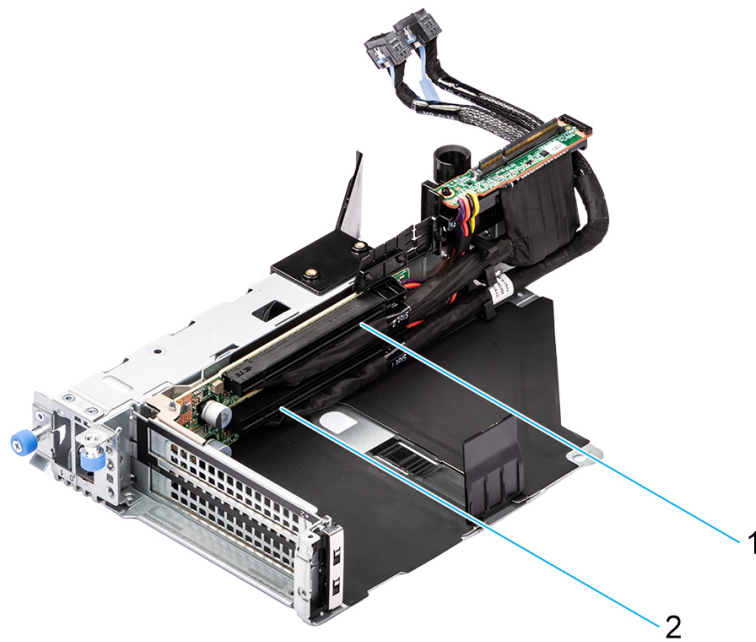


**Figure 89. Riser R1V**

1. Slot 2
2. Slot 1

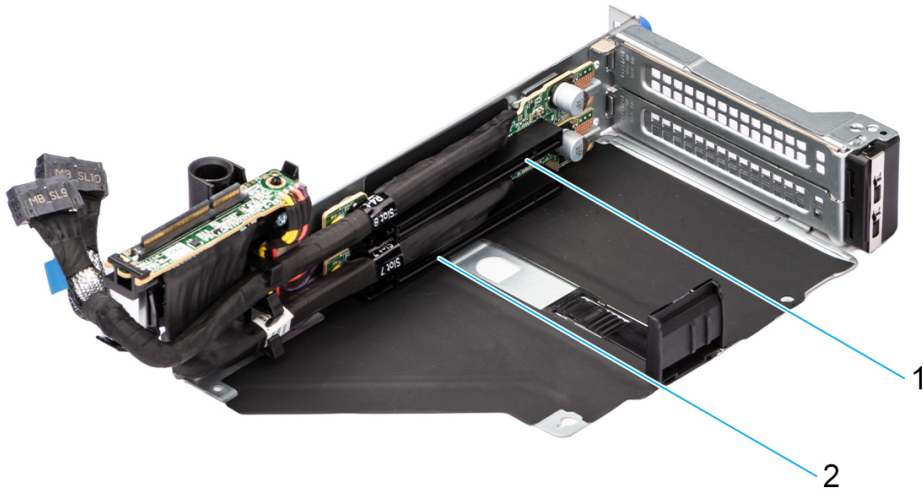


**Figure 90. Riser R4T**

- 1. Slot 8
- 2. Slot 7

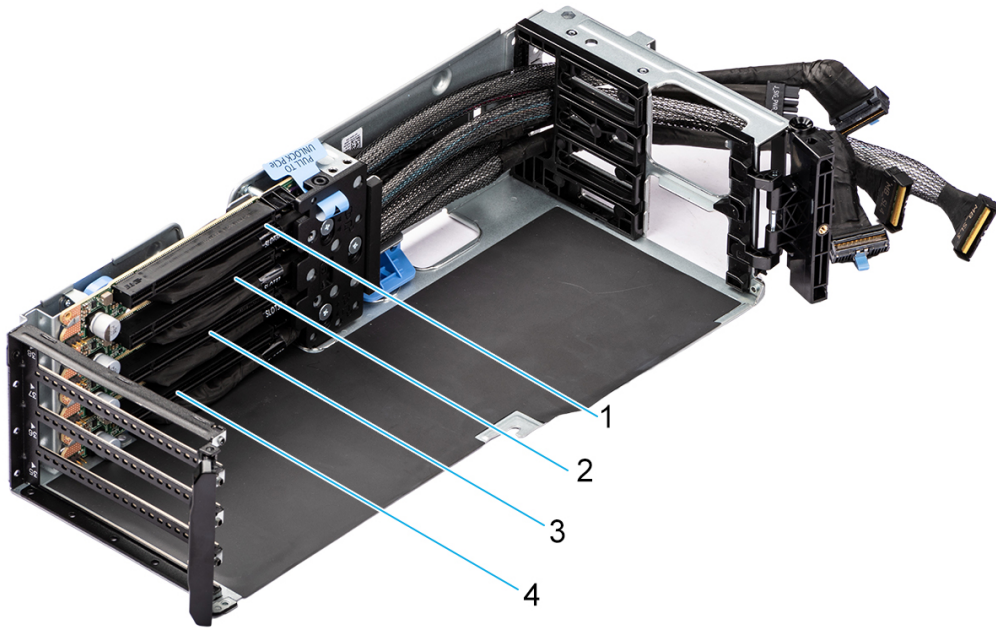


**Figure 91. GPU Right Riser RF1B**

- 1. Slot 38
- 2. Slot 37
- 3. Slot 36
- 4. Slot 35

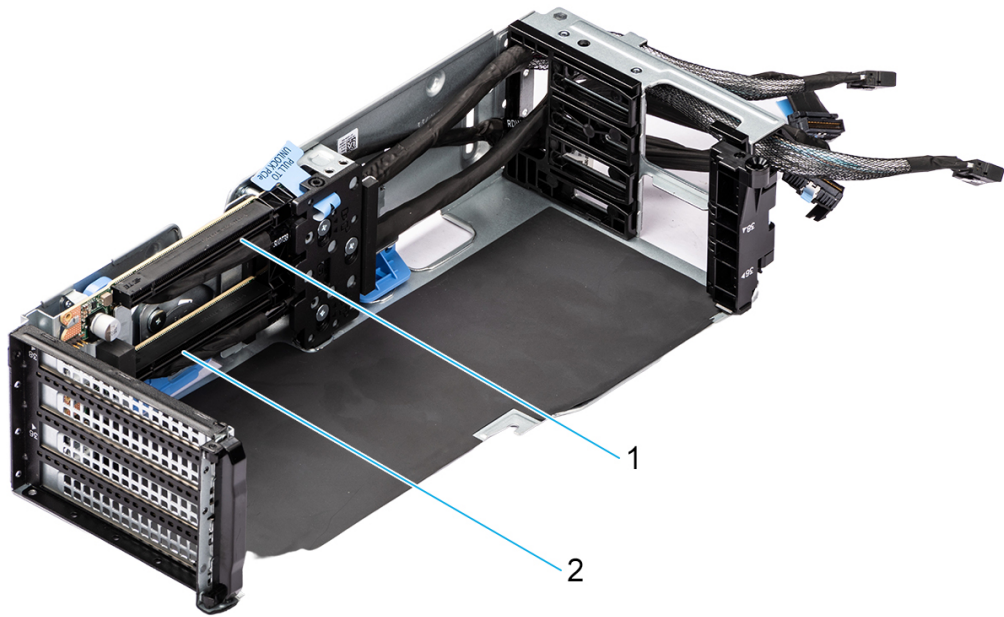


**Figure 92. GPU Right Riser RF1A**

- 1. Slot 38
- 2. Slot 36

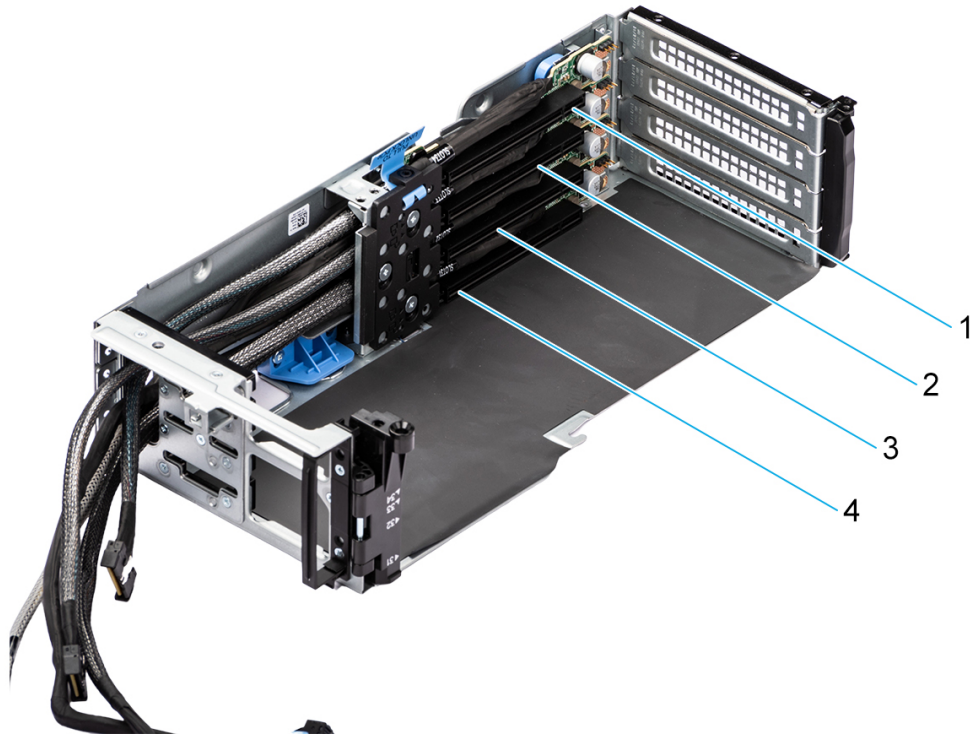

**Figure 93. GPU Left Riser RF2B**

- 1. Slot 34
- 2. Slot 33
- 3. Slot 32
- 4. Slot 31

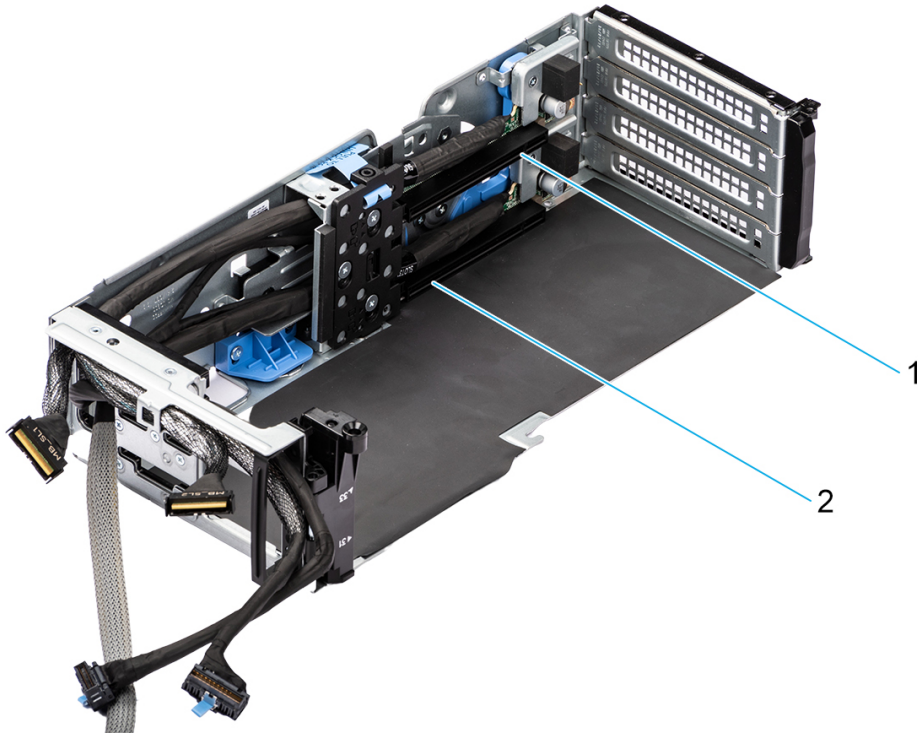

**Figure 94. GPU Left Riser RF2A**

- 1. Slot 33
- 2. Slot 31

**NOTE:** The expansion-card slots are not hot-swappable.

The following table provides guidelines for installing expansion cards to ensure proper cooling and mechanical fit. The expansion cards with the highest priority should be installed first using the slot priority indicated. All the other expansion cards should be installed in the card priority and slot priority order.

**Table 79. Config 0-1. RF1A+RF2A+R1V+R4T Without GPU bridge**

Card Type	Slot Priority	Maximum number of cards
Inventec (VGA)	8	1
Inventec (Serial)	8	1
Mellanox (DPU: 200Gb)	2, 7	2
NVIDIA (DPU: 400Gb)	2, 7, 1	3
NVIDIA(MLNX) (DPU: 25Gb)	2, 7, 1	3
Inventec (LOM Card)	INT	1
Broadcom (OCP: 100Gb)	INT	1
NVIDIA (OCP: 100Gb)	INT	1
Broadcom (OCP: 25Gb)	INT	1
Mellanox (OCP: 25Gb)	INT	1
Intel (OCP: 25Gb)	INT	1
Broadcom (OCP: 25Gb)	INT	1
Broadcom (OCP: 10Gb)	INT	1
Intel (OCP: 10Gb)	INT	1
Broadcom (OCP: 10Gb)	INT	1

**Table 79. Config 0-1. RF1A+RF2A+R1V+R4T Without GPU bridge (continued)**

Card Type	Slot Priority	Maximum number of cards
Intel (OCP: 10Gb)	INT	1
Broadcom (OCP: 1Gb)	INT	1
Intel (OCP: 1Gb)	INT	1
Foxconn (BOSS)	INT	1
Foxconn (Front PERC12)	INT	1
Foxconn (Front PERC11)	INT	1
Foxconn (HBA11)	INT	1
Foxconn (External Adapter) HBA465e	2, 7, 1	1
Foxconn (External Adapter) H965e	2, 7, 1	1
Foxconn (External Adapter) HBA355e	8, 2, 7, 1	4
NVIDIA (GPU) H100/H100 NVL/A40/A100/A800/A30/A16/L40	31, 36, 33, 38	4
Intel (GPU) PVC, 64Gb, 300W	31, 36, 33, 38	4
AMD (GPU) MI210	31, 36, 33, 38	4
NVIDIA (GPU) A2/L4	31, 36, 33, 38, 8, 2, 7, 1	8
Intel (GPU) ATS-M,12Gb,75W	31, 36, 33, 38, 8, 2, 7, 1	8
Mellanox (NIC: NDR200)	8, 2, 7, 1	4
Mellanox (NIC: NDR)	8, 2, 7, 1	4
Mellanox (NIC: HDR100 VPI)	8, 2, 7, 1	4
Mellanox (NIC: 100Gb)	8, 2, 7, 1	4
Broadcom (NIC: 100Gb)	8, 2, 7, 1	4
Intel (NIC: 100Gb)	8, 2, 7, 1	4
Intel (NIC: 25Gb)	8, 2, 7, 1	4
Broadcom (NIC: 25Gb)	8, 2, 7, 1	4
Mellanox (NIC: 25Gb)	8, 2, 7, 1	4
Intel (NIC: 25Gb)	8, 2, 7, 1	4
Broadcom (HBA:FC64)	8, 2, 7, 1	4
Broadcom (HBA: FC32)	8, 2, 7, 1	4
Qlogic (Marvell) (HBA: FC32)	8, 2, 7, 1	4
Broadcom (NIC: 10Gb)	8, 2, 7, 1	4
Intel (NIC: 10Gb)	8, 2, 7, 1	4
Intel (NIC: 1Gb)	8, 2, 7, 1	4
Broadcom (NIC: 1Gb)	8, 2, 7, 1	4

**Table 80. Config 0-1. RF1A+RF2A +R1V+R4T With GPU bridge**

Card Type	Slot Priority	Maximum number of cards
Inventec (VGA)	8	1
Inventec (Serial)	8	1

**Table 80. Config 0-1. RF1A+RF2A +R1V+R4T With GPU bridge (continued)**

<b>Card Type</b>	<b>Slot Priority</b>	<b>Maximum number of cards</b>
Mellanox (DPU: 200Gb)	2, 7	2
NVIDIA (DPU: 400Gb)	2, 7, 1	3
NVIDIA(MLNX) (DPU: 25Gb)	2, 7, 1	3
Inventec (LOM Card)	INT	1
Broadcom (OCP: 100Gb)	INT	1
NVIDIA (OCP: 100Gb)	INT	1
Broadcom (OCP: 25Gb)	INT	1
Mellanox (OCP: 25Gb)	INT	1
Intel (OCP: 25Gb)	INT	1
Broadcom (OCP: 25Gb)	INT	1
Broadcom (OCP: 10Gb)	INT	1
Intel (OCP: 10Gb)	INT	1
Broadcom (OCP: 1Gb)	INT	1
Intel (OCP: 1Gb)	INT	1
Foxconn (BOSS)	INT	1
Foxconn (Front PERC12)	INT	1
Foxconn (Front PERC11)	INT	1
Foxconn (HBA11)	INT	1
Foxconn (External Adapter) HBA465e	2, 7, 1	1
Foxconn (External Adapter) H965e	2, 7, 1	1
Foxconn (External Adapter) HBA355e	8, 2, 7, 1	4
NVIDIA (GPU) H100/H100 NVL/A40/A100/A800/A30	31, 33, 36, 38	4
Intel (GPU) PVC, 64Gb, 300W	31, 33, 36, 38	4
AMD (GPU) MI210	31, 33, 36, 38	4
Mellanox (NIC: NDR200)	8, 2, 7, 1	4
Mellanox (NIC: NDR)	8, 2, 7, 1	4
Mellanox (NIC: HDR100 VPI)	8, 2, 7, 1	4
Mellanox (NIC: 100Gb)	8, 2, 7, 1	4
Broadcom (NIC: 100Gb)	8, 2, 7, 1	4
Intel (NIC: 100Gb)	8, 2, 7, 1	4
Intel (NIC: 25Gb)	8, 2, 7, 1	4
Broadcom (NIC: 25Gb)	8, 2, 7, 1	4
Mellanox (NIC: 25Gb)	8, 2, 7, 1	4
Intel (NIC: 25Gb)	8, 2, 7, 1	4
Broadcom (HBA:FC64)	8, 2, 7, 1	4
Broadcom (HBA: FC32)	8, 2, 7, 1	4
Qlogic (Marvell) (HBA: FC32)	8, 2, 7, 1	4

**Table 80. Config 0-1. RF1A+RF2A +R1V+R4T With GPU bridge (continued)**

Card Type	Slot Priority	Maximum number of cards
Broadcom (NIC: 10Gb)	8, 2, 7, 1	4
Intel (NIC: 10Gb)	8, 2, 7, 1	4
Intel (NIC: 1Gb)	8, 2, 7, 1	4
Broadcom (NIC: 1Gb)	8, 2, 7, 1	4

**Table 81. Config 1. RF1B+RF2B+R1V+R4T**

Card Type	Slot Priority	Maximum number of cards
Inventec (VGA)	8	1
Inventec (Serial)	8	1
Mellanox (DPU: 200Gb)	2, 7	2
NVIDIA (DPU: 400Gb)	2, 7, 1	3
NVIDIA(MLNX) (DPU: 25Gb)	2, 7, 1	3
Inventec (LOM Card)	INT	1
Broadcom (OCP: 100Gb)	INT	1
NVIDIA (OCP: 100Gb)	INT	1
Broadcom (OCP: 25Gb)	INT	1
Mellanox (OCP: 25Gb)	INT	1
Intel (OCP: 25Gb)	INT	1
Broadcom (OCP: 10Gb)	INT	1
Intel (OCP: 10Gb)	INT	1
Broadcom (OCP: 1Gb)	INT	1
Intel (OCP: 1Gb)	INT	1
Foxconn (BOSS)	INT	1
Foxconn (Front PERC12)	INT	1
Foxconn (Front PERC11)	INT	1
Foxconn (HBA11)	INT	1
Foxconn (External Adapter) HBA465e	2, 7, 1	1
Foxconn (External Adapter) H965e	2, 7, 1	1
Foxconn (External Adapter) HBA355e	8, 2, 7, 1	4
NVIDIA (GPU) A2,16Gb	31, 35, 32, 36, 33, 37, 34, 38, 8, 2, 7, 1	12
Intel (GPU) ATS-M,15Gb,75W	31, 35, 32, 36, 33, 37, 34, 38, 8, 2, 7, 1	10
Mellanox (NIC: NDR200)	8, 2, 7, 1	4
Mellanox (NIC: NDR)	8, 2, 7, 1	4
Mellanox (NIC: HDR100 VPI)	8, 2, 7, 1	4
Mellanox (NIC: 100Gb)	8, 2, 7, 1	4
Broadcom (NIC: 100Gb)	8, 2, 7, 1	4
Intel (NIC: 100Gb)	8, 2, 7, 1	4
Intel (NIC: 25Gb)	8, 2, 7, 1	4

**Table 81. Config 1. RF1B+RF2B+R1V+R4T (continued)**

Card Type	Slot Priority	Maximum number of cards
Broadcom (NIC: 25Gb)	8, 2, 7, 1	4
Broadcom (NIC: 25Gb)	8, 2, 7, 1	4
Mellanox (NIC: 25Gb)	8, 2, 7, 1	4
Broadcom (HBA:FC64)	8, 2, 7, 1	4
Broadcom (HBA: FC32)	8, 2, 7, 1	4
Qlogic (Marvell) (HBA: FC32)	8, 2, 7, 1	4
Broadcom (NIC: 10Gb)	8, 2, 7, 1	4
Intel (NIC: 10Gb)	8, 2, 7, 1	4
Intel (NIC: 1Gb)	8, 2, 7, 1	4
Broadcom (NIC: 1Gb)	8, 2, 7, 1	4


## Removing the expansion card risers

### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If applicable, disconnect the cables from the expansion card or system board.

**NOTE:** Only Riser 1 and Riser 4 are supported.

**WARNING:** If BOSS-N1 module is installed, ensure to disconnect the BOSS-N1 power cable before removing riser 3 blank, Riser 1 or Riser 4.

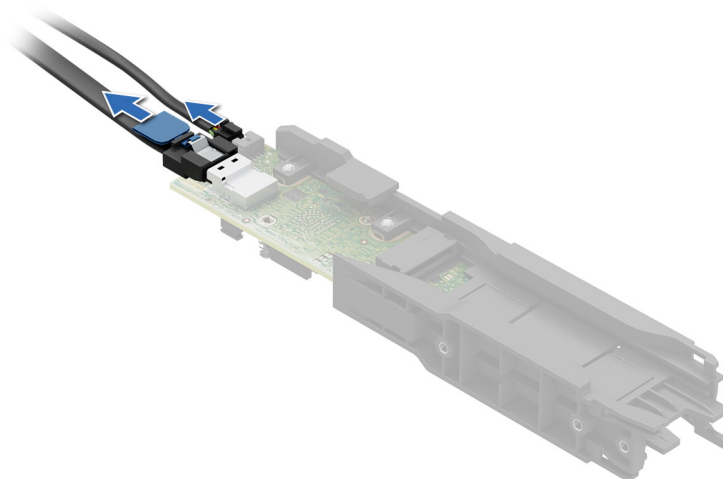

**Figure 95. Disconnecting the BOSS-N1 power cable**

### Steps

1. Loosen the captive screws on the riser.
2. Press the blue release tab or blue button on the riser and holding the edges lift the expansion card riser from the riser connector on the system board.

**NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

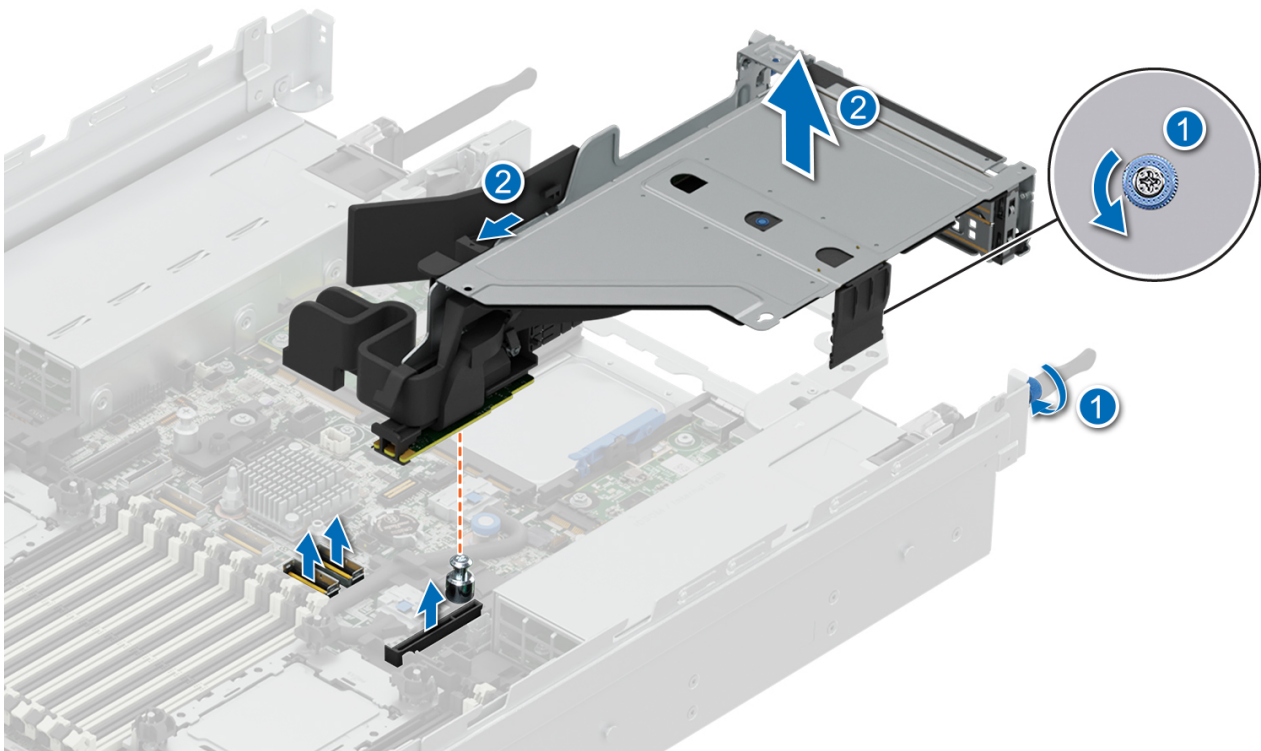


Figure 96. Removing the expansion card riser (Riser 1)


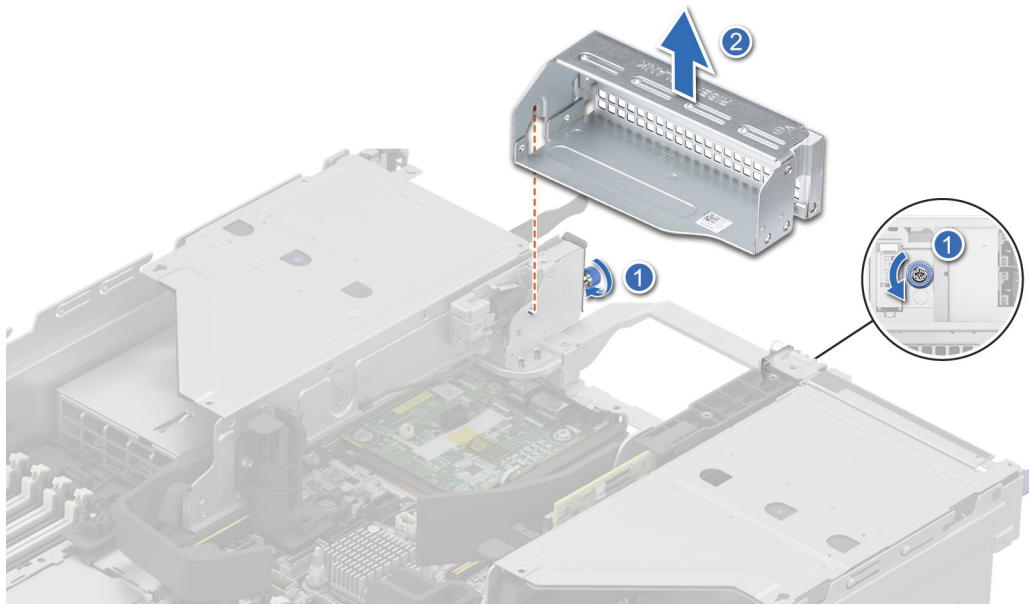



Figure 97. Removing the Riser 3 blank

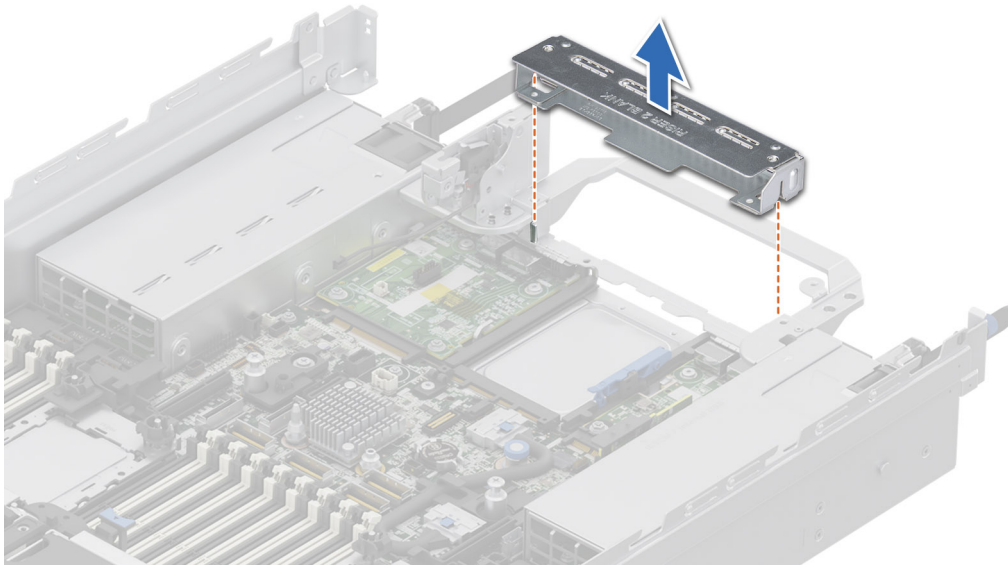

**Figure 98. Removing the expansion card Riser 2 blank**

3. If the risers are not going to be replaced, install riser blanks and tighten the captive screws.

**i** **NOTE:** You must install a filler bracket over an empty expansion card slot to maintain Federal Communications Commission (FCC) certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system.

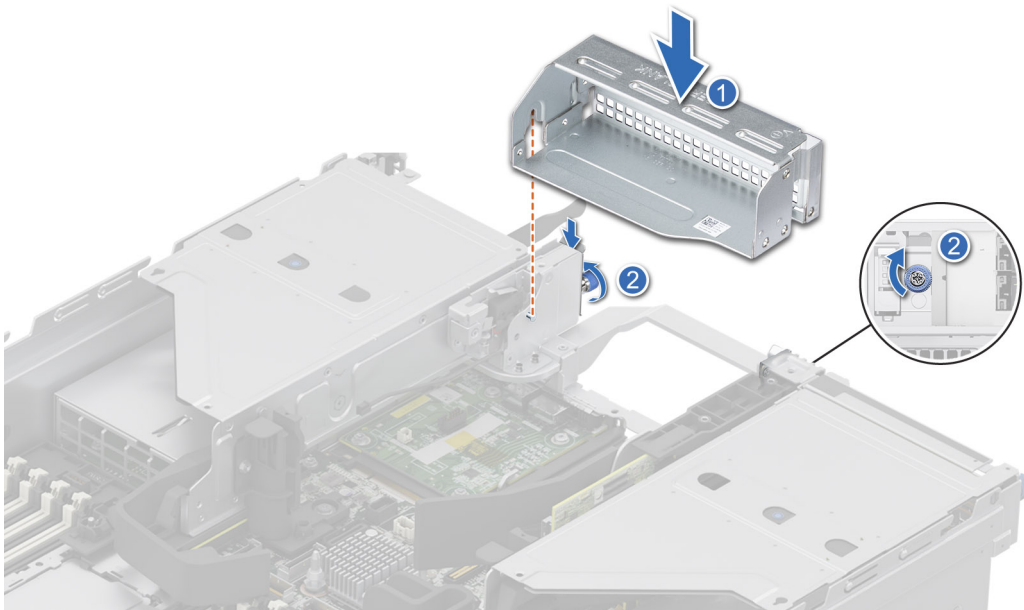

**Figure 99. Installing the Riser 3 blank**

#### **Next steps**

1. [Replace the expansion card riser.](#)

# Installing the expansion card risers

## Prerequisites


1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the air shroud](#).
4. If removed, [install the expansion cards into the expansion card risers](#).

**i** **NOTE:** Install Riser 2 blank and Riser 3 blank before installing Riser 1.

**⚠ CAUTION:** Do not install GPUs, network cards, or other PCIe devices on your system that are not validated and tested by Dell. Damage caused by unauthorized and invalidated hardware installation will null and void the system warranty.

## Steps

1. Holding the edges or the touch points, align the holes on the expansion card riser with the guides on the system board.  
**i** **NOTE:** Store the riser blanks for future use. Filler brackets must be installed in empty expansion card slots to maintain Federal Communications Commission (FCC) certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system
2. Lower the expansion card riser into place and press the touch points until the expansion card riser connector is fully seated on the system board connector.
3. Tighten the captive screws on the risers and system if any.

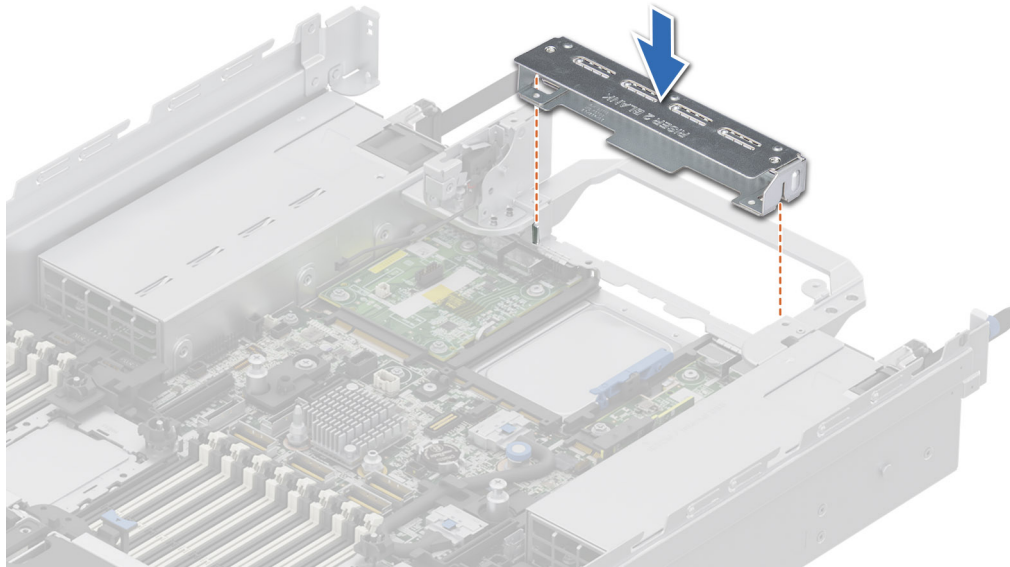

**Figure 100. Installing the expansion card riser blank (Riser 2 blank)**

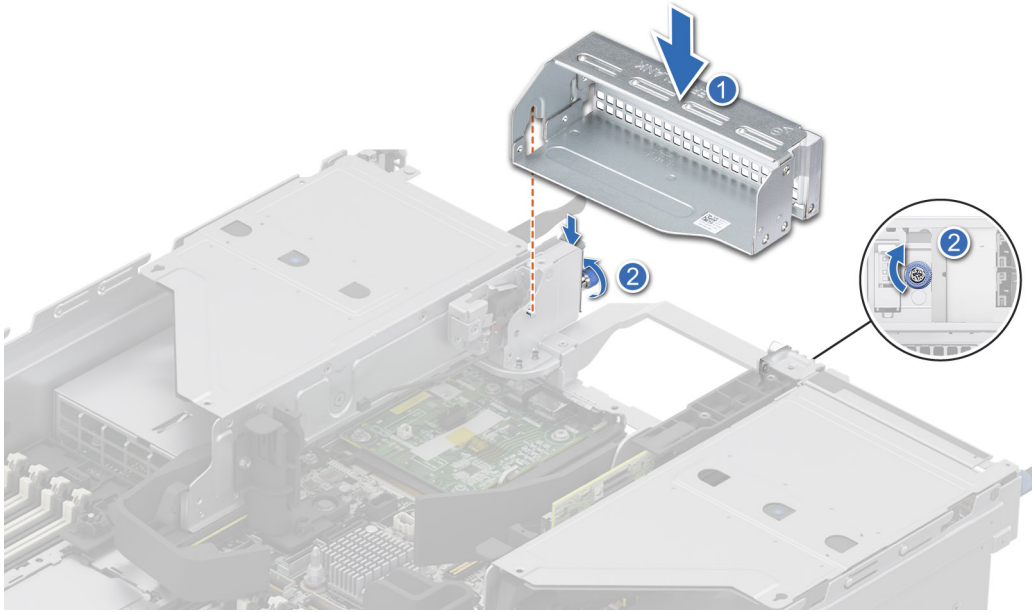


Figure 101. Installing the expansion card riser blank (Riser 3 blank)


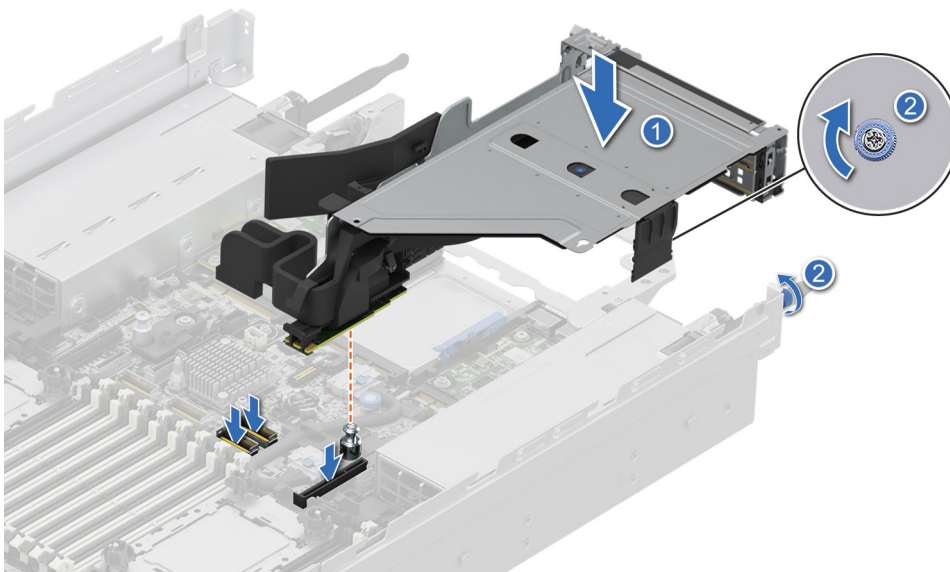


Figure 102. Installing the expansion card riser (Riser 1)

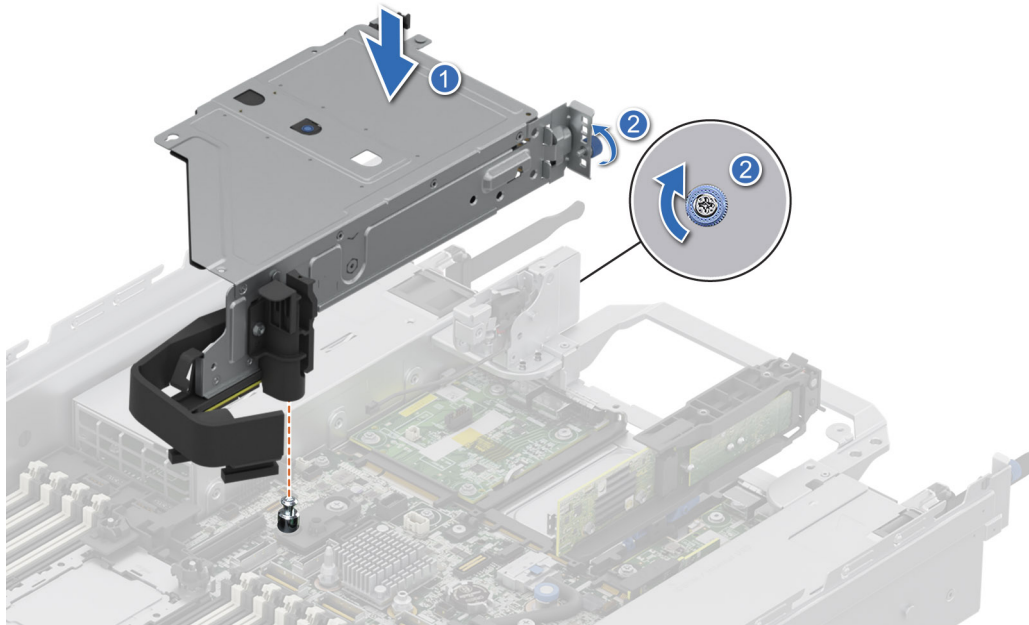

**Figure 103. Installing the expansion card riser (Riser 4)**

#### Next steps

1. If required, re-connect the cables to the expansion card.
2. [Install the air shroud.](#)
3. Follow the procedure listed in [After working inside your system.](#)
4. Install any device drivers required for the card as described in the documentation for the card.

## Removing expansion card from the expansion card riser


#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions.](#)
2. Follow the procedure listed in the [Before working inside your system.](#)
3. If applicable, disconnect the cables from the expansion card.
4. [Remove the air shroud.](#)
5. [Remove the expansion card riser.](#)

#### Steps

1. Pull and lift the expansion card retention latch lock to open.
2. Pull the card holder before removing the card from the riser.
3. Hold the expansion card by the edges, and pull the card from the riser.

**NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

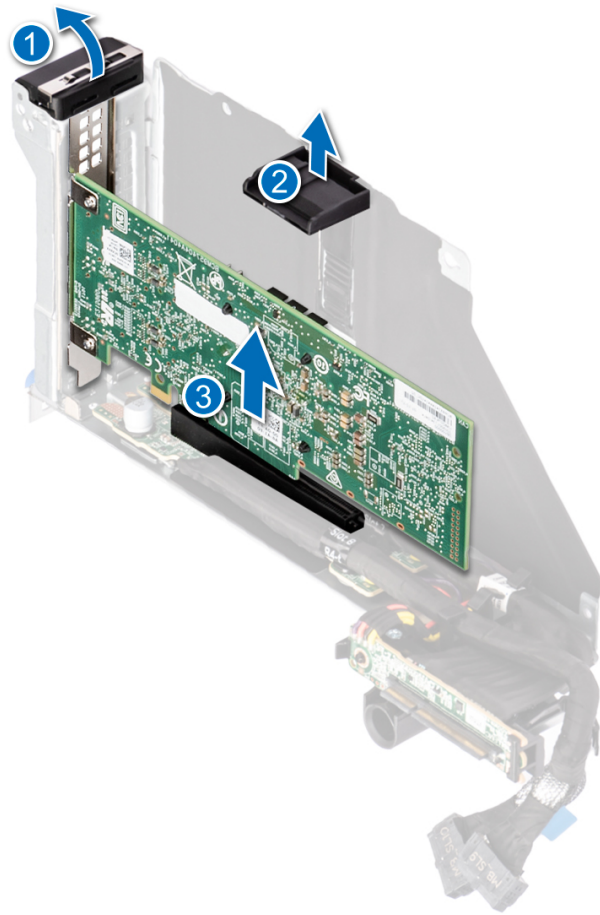

**Figure 104. Removing expansion card from the expansion card riser**

4. If the expansion card is not going to be replaced, install a filler bracket and close the card retention latch.



**Figure 105. Installing the filler bracket**

#### Next steps

1. If applicable, [install an expansion card into the expansion card riser](#).

## Installing an expansion card into the expansion card riser

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the air shroud](#).
4. [Remove the expansion card riser](#).
5. If installing a new expansion card, unpack it and prepare the card for installation.

**NOTE:** For instructions, see the documentation accompanying the card.

#### Steps

1. Pull and lift up the expansion card retention latch lock to open.
2. If installed, remove the filler bracket.


**NOTE:** Store the filler bracket for future use. Filler brackets must be installed in empty expansion card slots to maintain Federal Communications Commission (FCC) certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system.



**Figure 106. Removing the filler bracket**

3. Hold the card by edges, and align the card with the connector on the riser.
4. Insert the card firmly into the expansion card connector until seated.
5. Close the expansion card retention latch.
6. Push the card holder to hold the card in the riser.

**NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

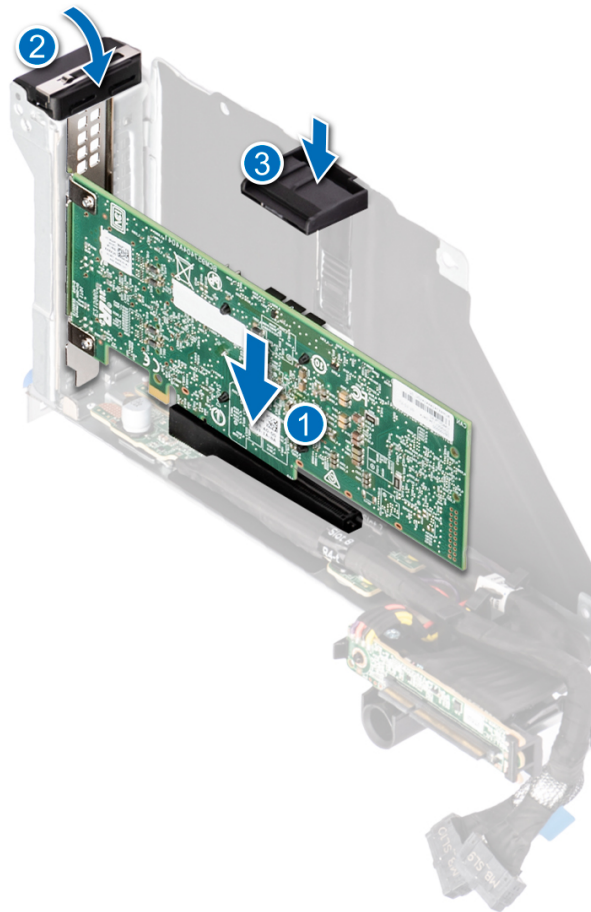

**Figure 107. Installing an expansion card into the expansion card riser**

#### **Next steps**

1. If applicable, connect the cables to the expansion card.
2. [Install the expansion card riser.](#)
3. [Install the air shroud.](#)
4. Follow the procedure listed in [After working inside your system.](#)
5. Install any device drivers required for the card as described in the documentation for the card.

## **Removing the GPU riser module**

The procedure to remove left and right GPU riser module are similar.

#### **Prerequisites**


1. Follow the safety guidelines listed in the [Safety Instructions.](#)
2. Follow the procedure listed in the [Before working inside your system.](#)
3. Disconnect the GPU power, signal cables, and BP/PERC cables from the system board.
4. [Remove the air shroud.](#)
5. [Remove the cooling fan cage assembly.](#)
6. Disconnect the riser board cables from the system board.
7. If installed, [remove the sponges.](#)

#### **Steps**


1. Press the blue button on the GPU riser module, lift handle comes out of GPU riser module.

2. Use both hands, in one hand hold the lift handle, and in other hold the lifting edges to remove GPU riser module out of the system.

**NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

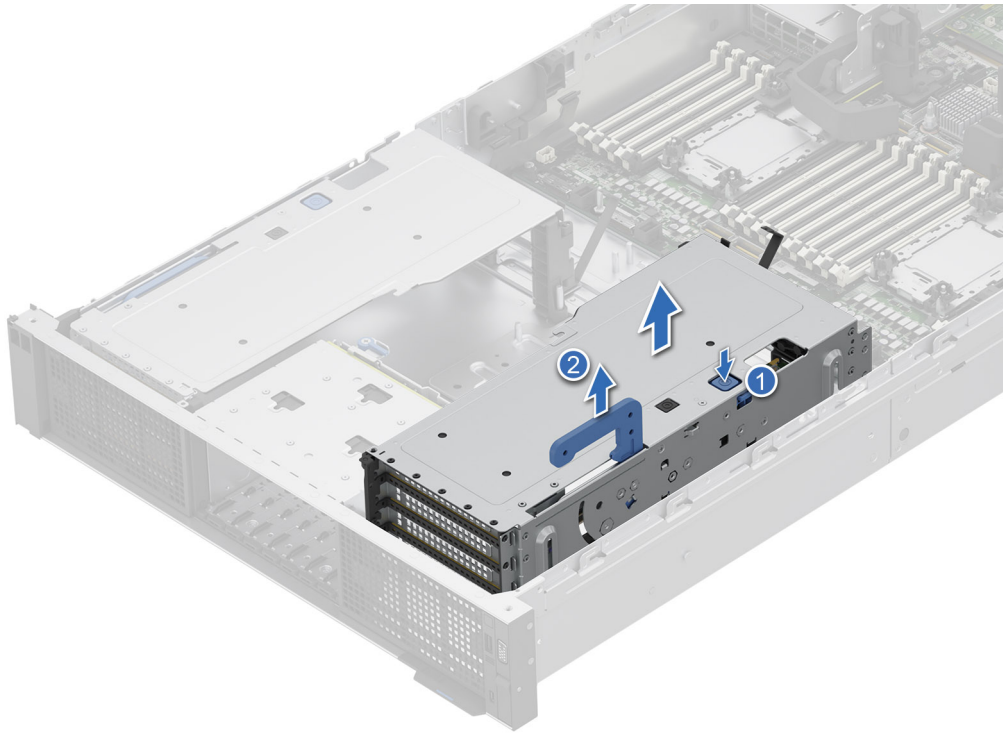

**Figure 108. Removing the right GPU riser module**

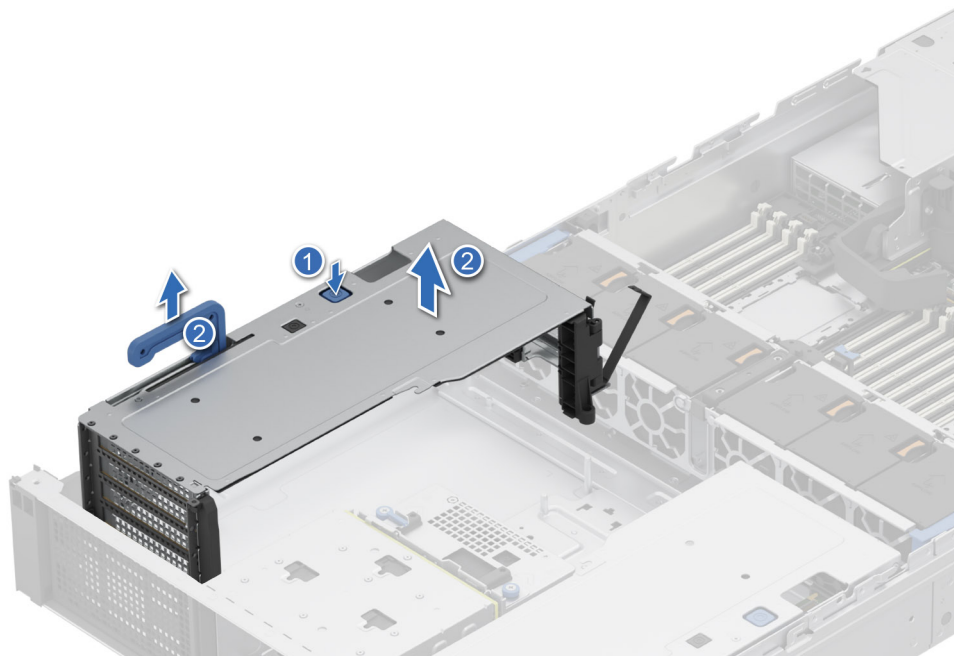

**Figure 109. Removing the left GPU riser module**

#### Next steps

1. Replace the GPU riser module.

# Installing the GPU riser module

The procedure to install left and right GPU riser module are similar.

## Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the air shroud](#).
4. [Remove the cooling fan cage assembly](#).
5. Disconnect the GPU power and signal cables from the system board.
6. [Remove the rear mounting front PERC module](#).
7. If installed, [remove the sponges](#).

## Steps

1. Use both hands to hold the GPU riser module, align the holes on the GPU riser module with the guides on the system side wall and base.
2. Lower the GPU riser module into system and press the touch points until the GPU riser module is firmly seated into the system.
3. Rotate to close the GPU lift handle into the GPU riser module.


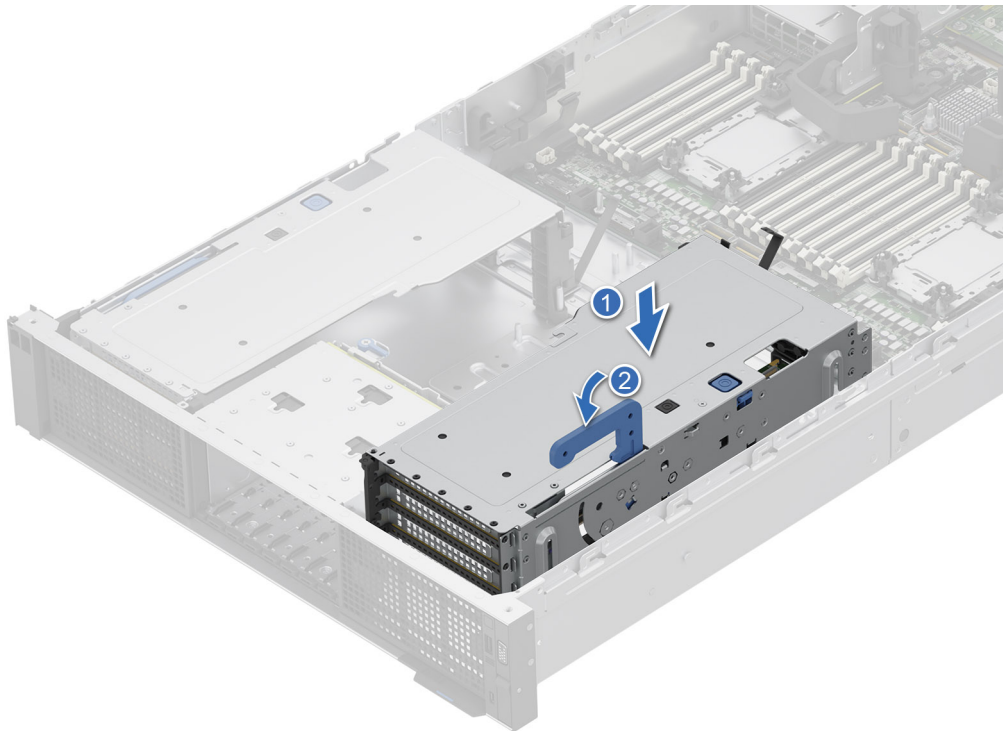


Figure 110. Installing the right GPU riser module

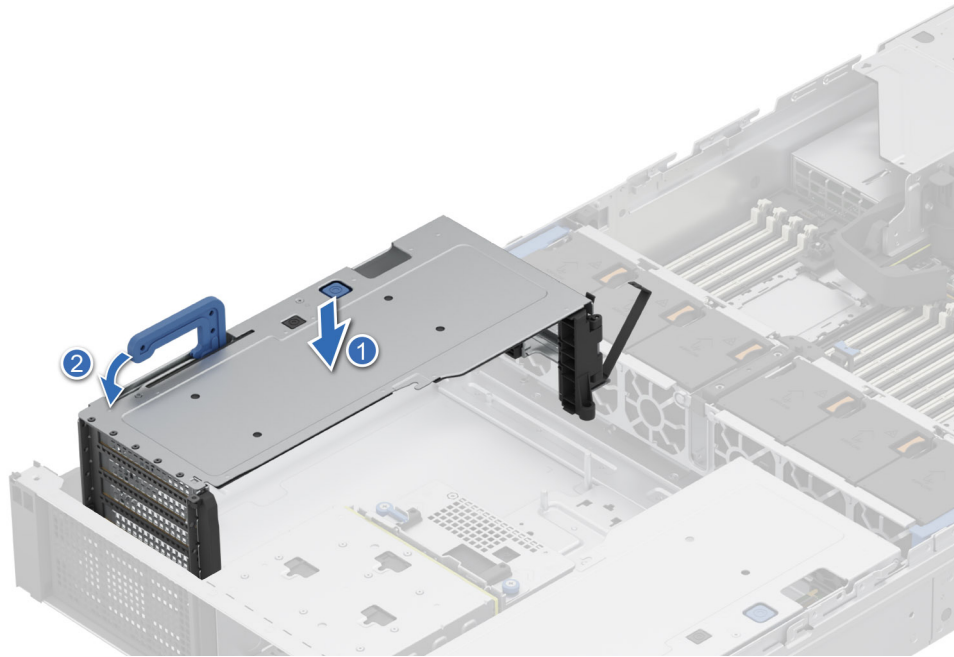

**Figure 111. Installing the left GPU riser module**

### Next steps

1. If removed, [install the sponges](#).
2. Connect the riser board power and signal cables to the system board.
3. [Install the cooling fan cage assembly](#).
4. [Install the air shroud](#).
5. Connect the GPU power, signal, and BP/PERC cables to the system board.
6. Follow the procedure listed in [After working inside your system](#).

## Removing the GPU


### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If installed, [remove the sponges](#).
4. [Remove the GPU riser module](#).
5. If installed, [remove the bridge cards](#).

### Steps

1. To remove the GPU from GPU riser module:
  - a. Disconnect the GPU power cable from the GPU card.
  - b. Open the GPU card holder latches on both ends of the riser.
  - c. Pull the hockey stick by the pull tape.
  - d. Hold the GPU card by the edges and pull the card from the riser.

**NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

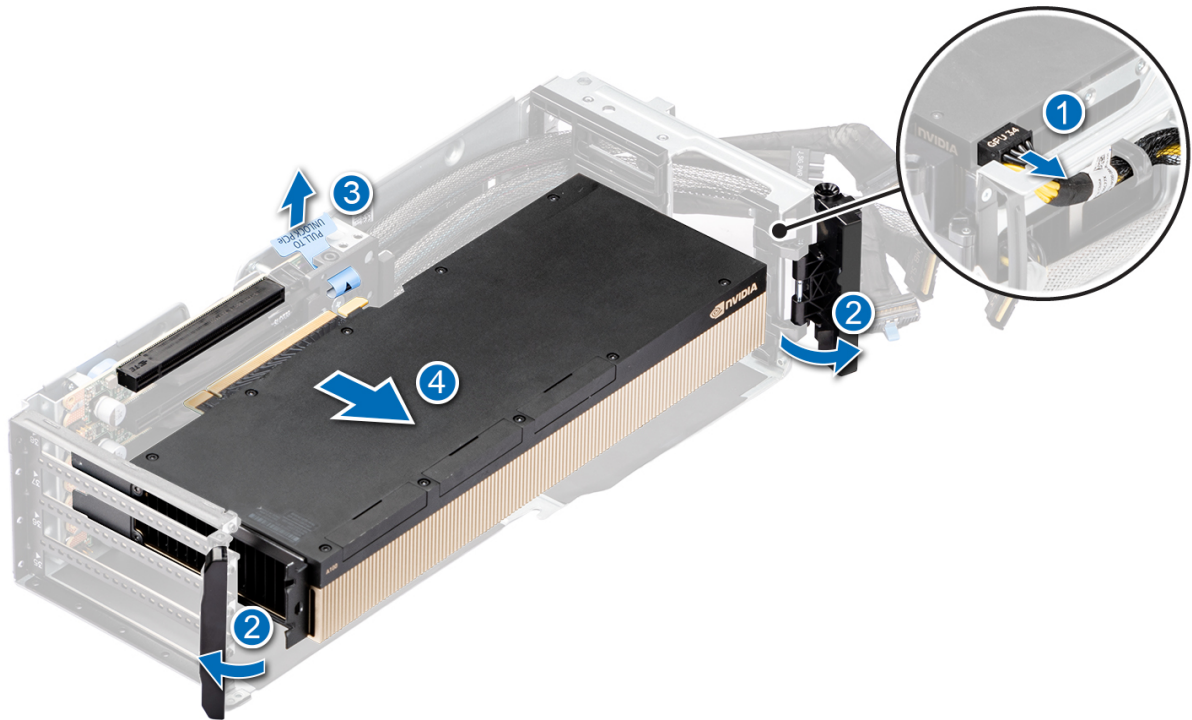


**Figure 112. Removing the GPU**

2. If you are not replacing the GPU card, install a GPU blank if the adjacent card is double-width card. Install filler blank, if the adjacent card is not double-width card.

**i** **NOTE:** You must install a GPU blank over an empty GPU card slot to maintain Federal Communications Commission (FCC) certification of the system. The blanks also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system. The GPU blank is necessary to maintain proper thermal conditions.

3. To install the GPU blank:
  - a. Align the connector on the GPU blank with the connector on the riser.
  - b. Insert the GPU blank into the riser until firmly seated.
  - c. Close the GPU card holder latches on both ends of the riser.
  - d. Pull hockey stick by pull tape to assemble the GPU blank into position.

**i** **NOTE:** Place the unused GPU power cable in the riser module bracket.

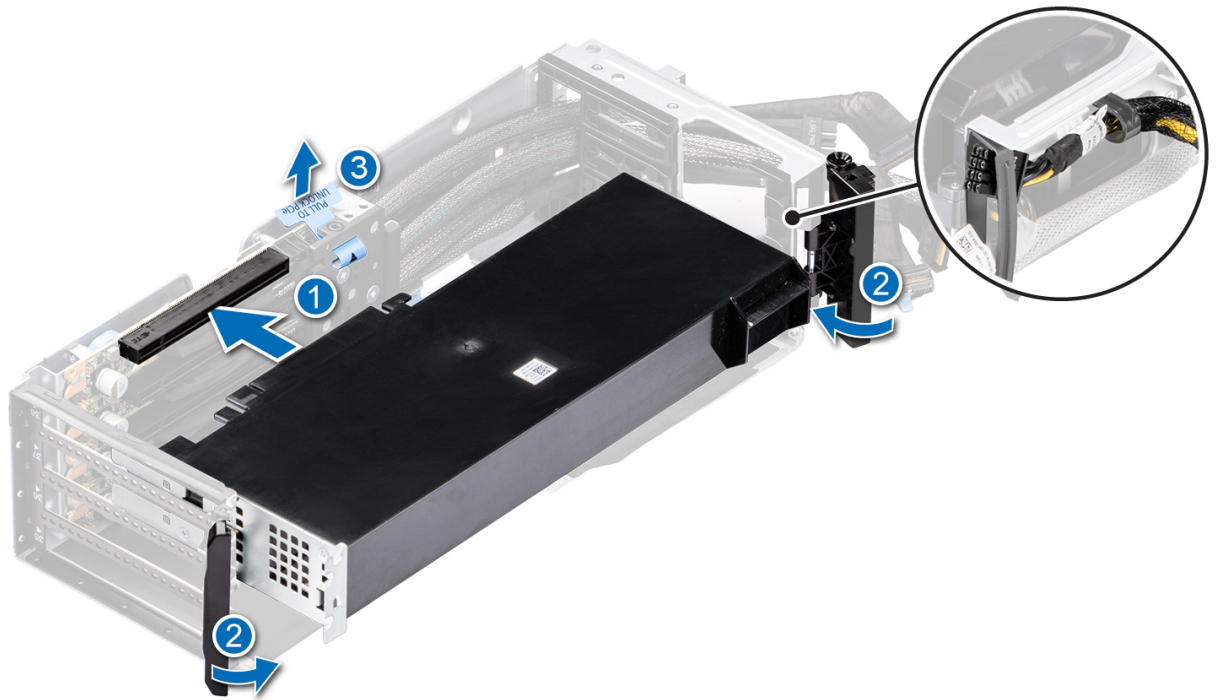

**Figure 113. Installing the GPU blank**

#### Next steps

1. [Replace the GPU.](#)

## Installing the GPU

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. If installed, [remove the sponges](#).
4. [Remove the GPU riser module](#).
5. If installed, [remove the bridge cards](#).
6. If installing a new GPU card, unpack it and prepare the card for installation.


**NOTE:** For instructions, see the documentation accompanying the card.

**CAUTION:** Do not install GPUs, network cards, or other PCIe devices on your system that are not validated and tested by Dell. Damage caused by unauthorized and invalidated hardware installation will null and void the system warranty.

#### Steps

1. If installed, remove the GPU blank:
  - a. Open the GPU card holder latches on both ends of the riser.
  - b. Pull hockey stick by the pull tape.
  - c. Hold the GPU blank by the edges and pull the card from the riser.

**NOTE:** Store the GPU blank for future use. GPU blank must be installed in empty expansion card slots to maintain Federal Communications Commission (FCC) certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system.

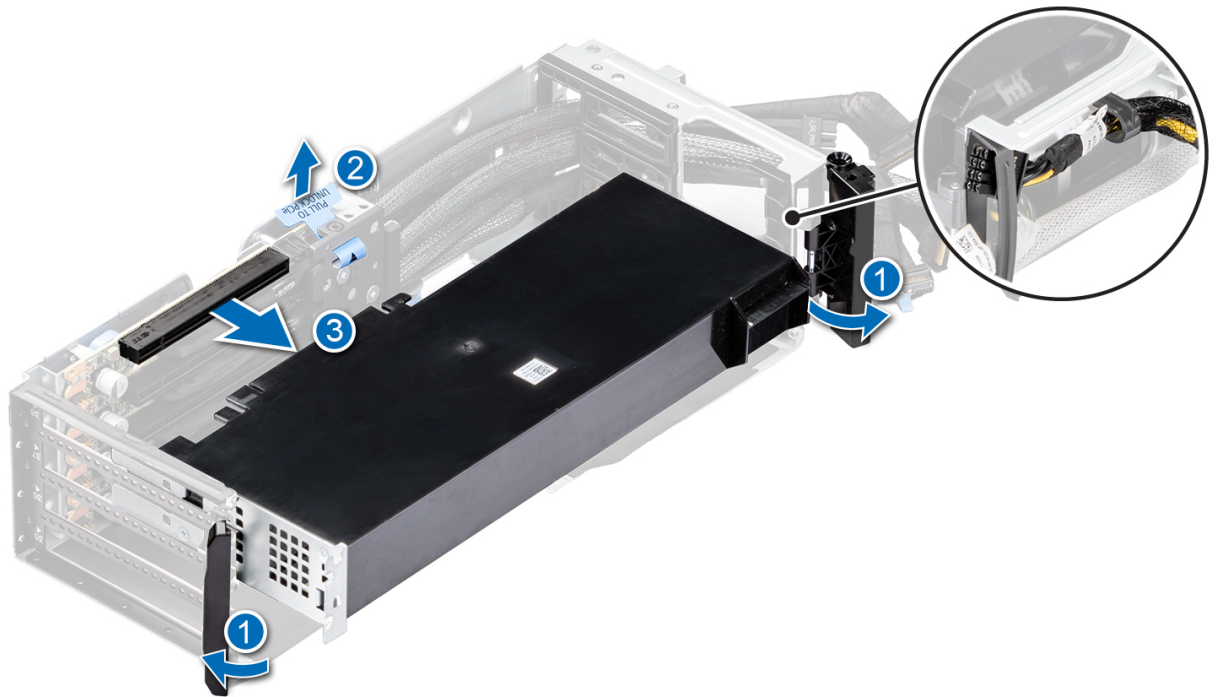

**Figure 114. Removing the GPU blank**

2. To install the GPU on GPU riser module:
  - a. Align the connector on the GPU with the connector on the riser.
  - b. Insert the GPU into the riser until firmly seated.
  - c. Close the GPU card holder latches on both ends of the riser.
  - d. Pull hockey stick by the pull tape, to assemble the GPU card into GPU riser.
  - e. Connect the GPU power cable to the GPU card.

**NOTE:** For the SW GPU card to be installed, GPU card holder is required see [Installing the GPU riser module card holder](#).

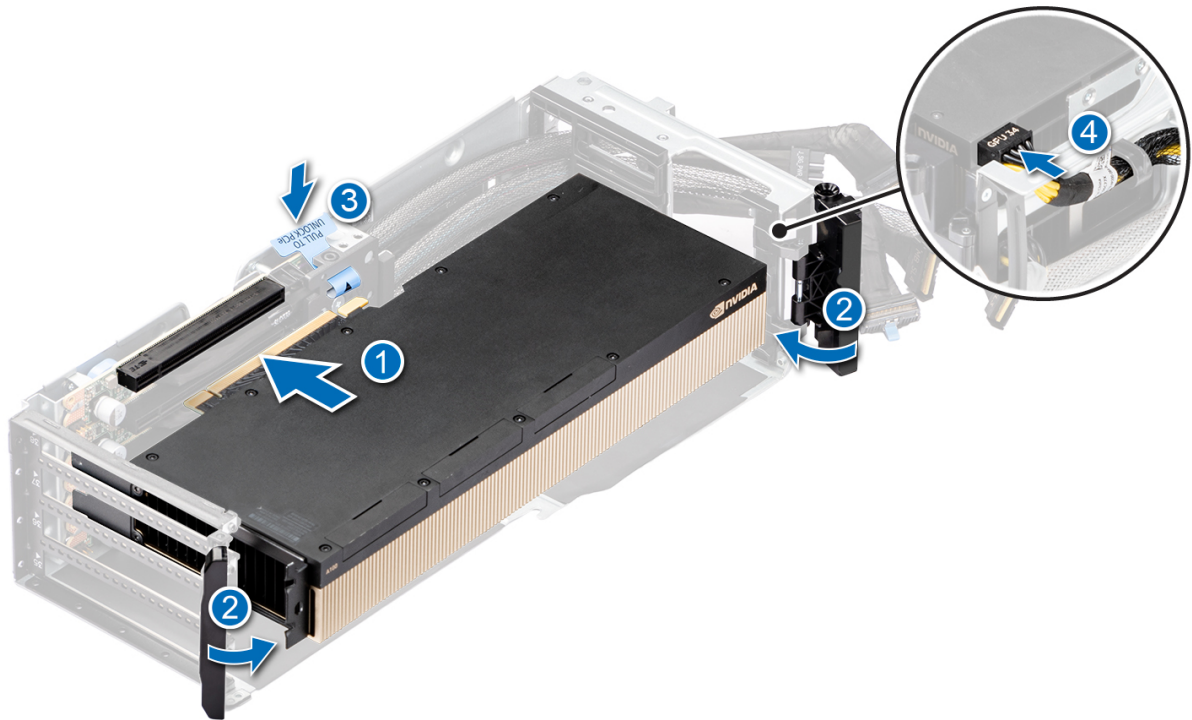


Figure 115. Installing GPU on GPU riser module

#### Next steps

1. If removed, [install the bridge cards](#).
2. [Install the GPU riser module](#).
3. If removed, [install the sponges](#).
4. Follow the procedure listed in [After working inside your system](#).

## Removing the sponges

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the rear mounting front PERC module](#).

**NOTE:** Observe the cable routing before disconnecting the cables.

4. Sponges are required only for GPUs with bridge cards.

#### Steps

Using the hole on the sponge, lift the sponge out of the system.

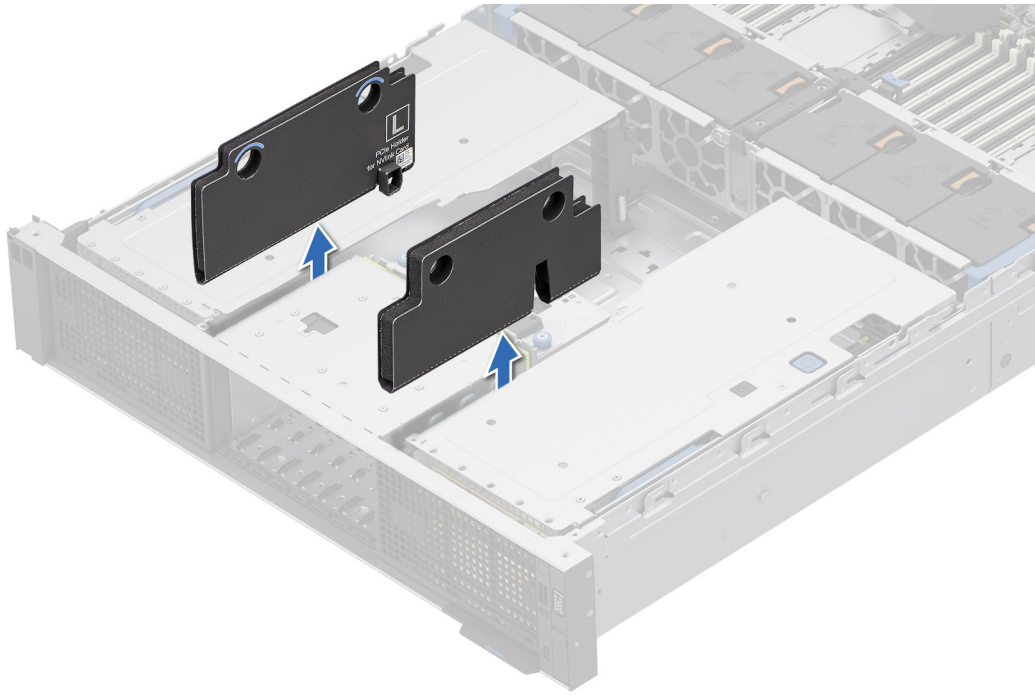


Figure 116. Removing the sponges

#### Next steps

1. [Replace the sponges.](#)

## Installing the sponges

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the rear mounting front PERC module.](#)

**NOTE:** Observe the cable routing before disconnecting the cables.

4. Sponges are required only for GPUs with bridge cards.

#### Steps

Holding the edges, align the sponge and insert between the drive cage and GPU riser module.

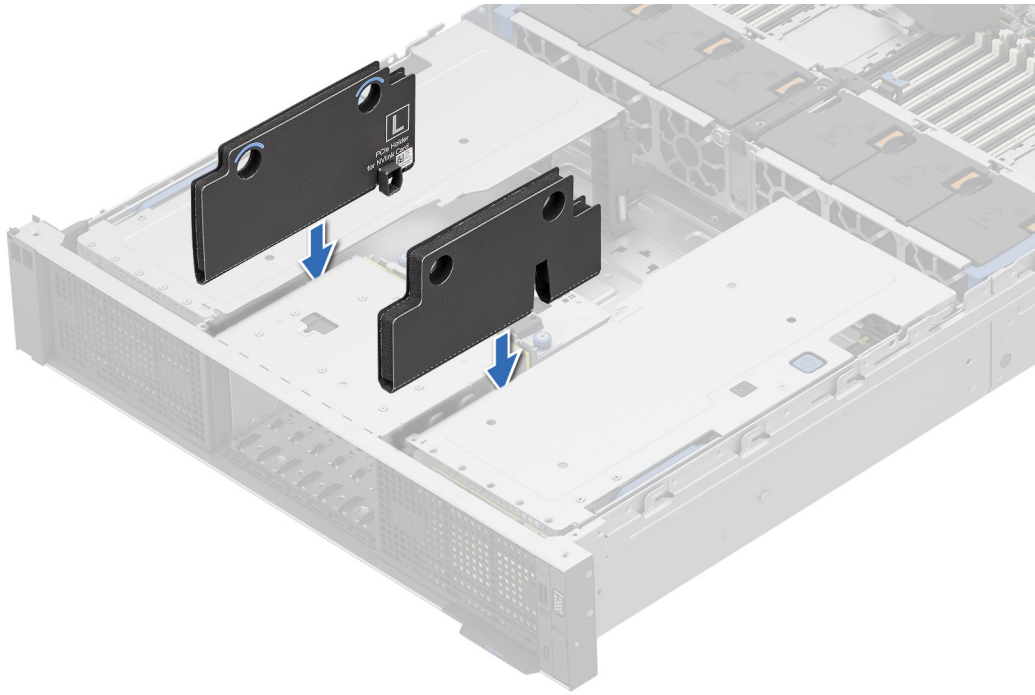


Figure 117. Installing the sponge

#### Next steps

1. [Install the rear mounting front PERC module.](#)
2. Follow the procedure listed in [After working inside your system.](#)

## Removing the Bridge Cards

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions.](#)
2. Follow the procedure listed in the [Before working inside your system.](#)
3. [Remove the rear mounting front PERC module.](#)


**NOTE:** Observe the cable routing before disconnecting the cables.

4. [Remove the sponges.](#)
5. [Remove the GPU riser module.](#)
6. Number of bridge cards vary as per the GPU.
7. Slot priority for GPU card installation without bridge cards: slot 31, slot 36, slot 33, and slot 38.
8. Slot priority for GPU card installation with bridge cards: slot 31, slot 33, slot 36, and slot 38.

**NOTE:** For more information about supported GPU cards and their slot priority, see [expansion card installation guidelines.](#)

#### Steps

1. Holding the edges, pull the bridge cards out of the GPU cards.

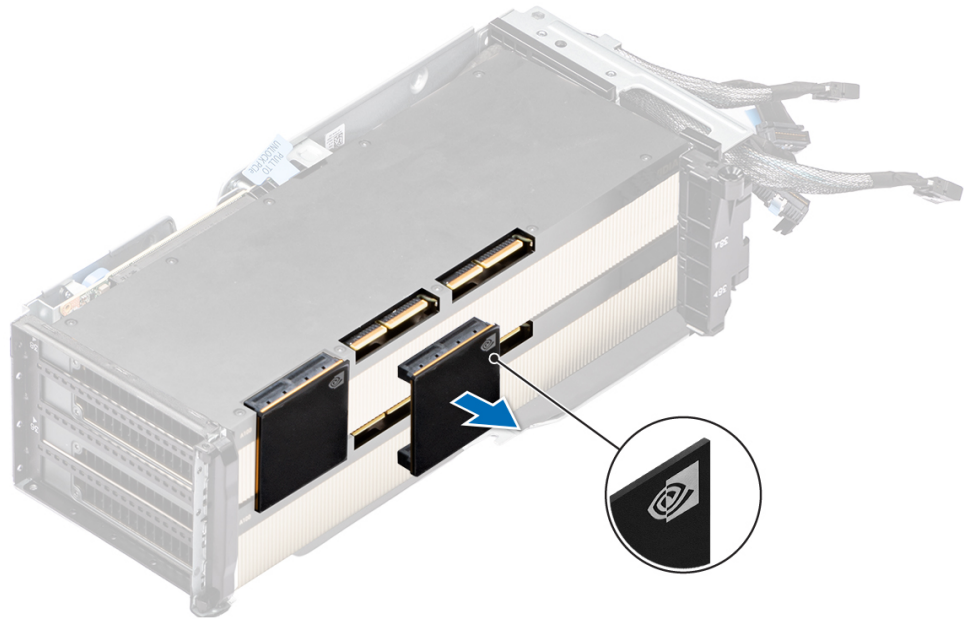

**Figure 118. Removing the bridge cards**

2. If you are not replacing the bridge cards, Install the cover into the GPU card.



**Figure 119. Installing the cover**

#### Next steps

1. [Replace the bridge cards.](#)

## Installing the Bridge Cards

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the rear mounting front PERC module.](#)

**NOTE:** Observe the cable routing before disconnecting the cables.

4. [Remove the sponges.](#)
5. [Remove the GPU riser module.](#)

6. If installed, take out the GPU card and remove the slot cover on the GPU card.

**i** **NOTE:** Store the slot cover for future use, install if not using bridge cards.

7. Number of bridges vary as per the GPU.

**i** **NOTE:** For more information about supported GPU cards and their slot priority, see [expansion card installation guidelines](#).

### Steps

1. If installed, remove the cover from the GPU card.

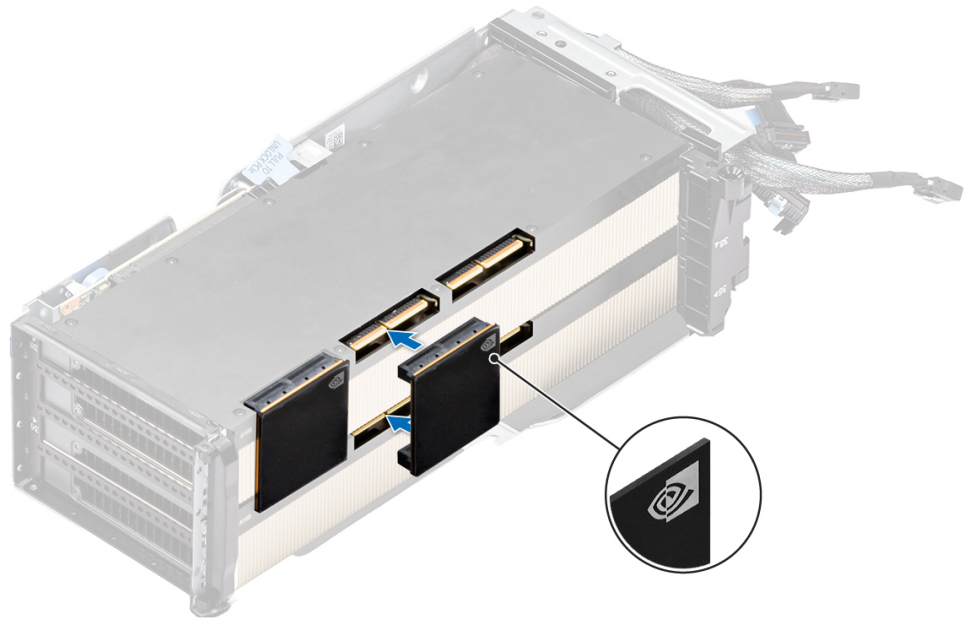


**Figure 120. Removing the cover**

**i** **NOTE:** Store the cover for future use.

2. Align the bridge cards with the slot on the GPU cards.

3. Press the bridge cards, until firmly seated on the GPU cards.



**Figure 121. Installing the Bridge Cards**

#### Next steps

1. Install the GPU riser module.
2. Install the sponges.
3. Install the rear mounting front PERC module.
4. Follow the procedure listed in [After working inside your system](#).

## Removing the GPU riser module card holders


#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. Remove the GPU riser module.

**i** **NOTE:** Your system has only half height (HH) GPU card holder.

#### Steps

Loosen the captive screw and pull out the HH GPU card holder from the GPU riser module.

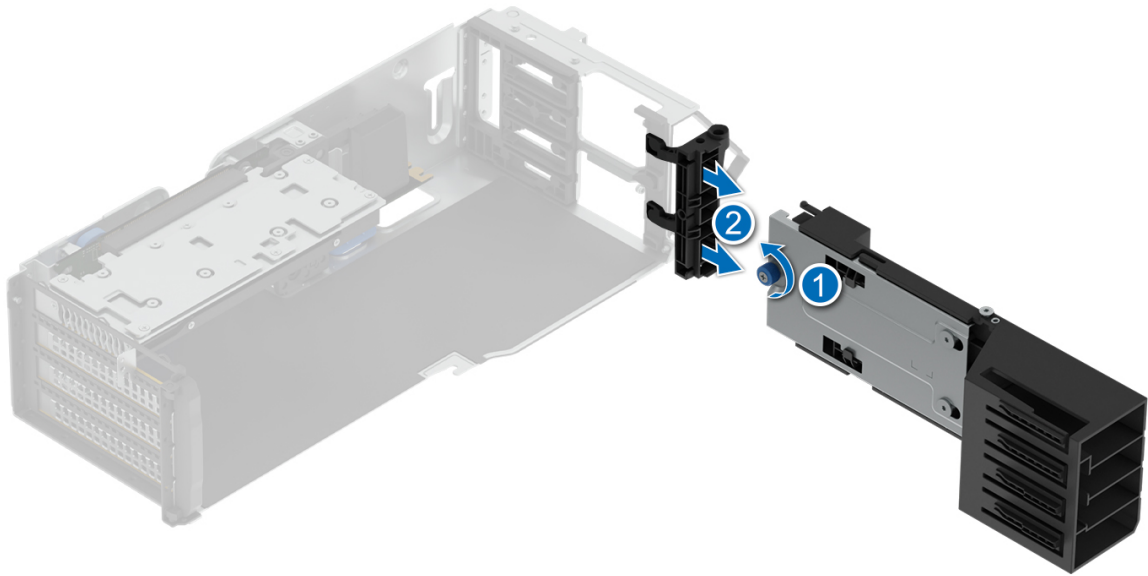

**Figure 122. Removing the HH card holder**

#### Next steps

1. [Replace the GPU riser module holders.](#)

## Installing the GPU riser module card holders


#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the GPU riser module.](#)

**NOTE:** Your system has only half height (HH) GPU card holder.

#### Steps

Insert the HH GPU card holder into the GPU riser module and tighten the captive screw.

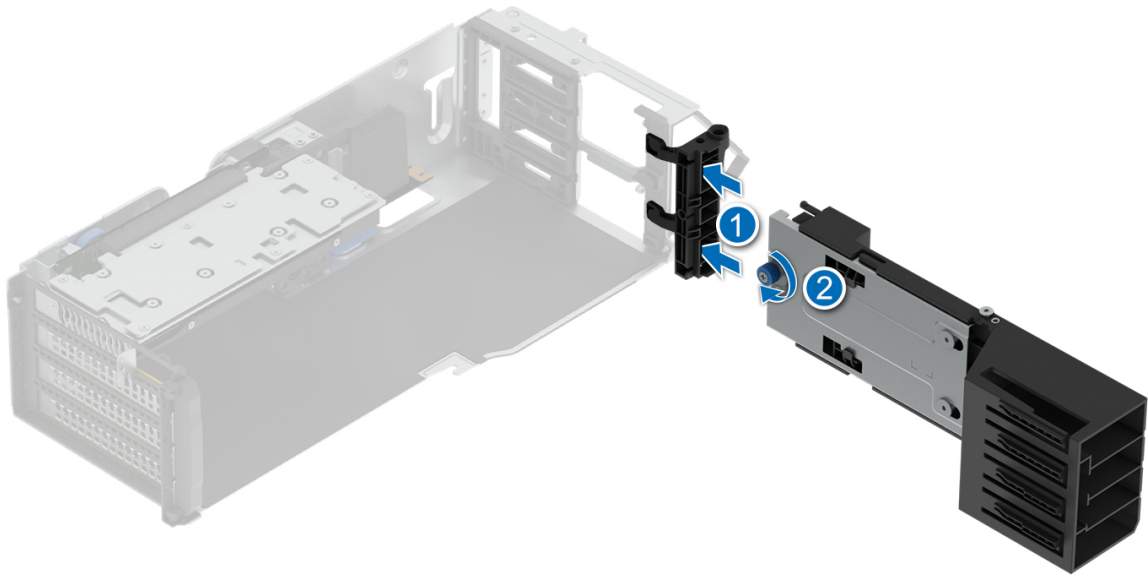

**Figure 123. Installing the HH card holder**

#### **Next steps**

1. Install the SW GPU card, into the GPU riser and push the hockey stick, see [Installing the GPU](#).
2. Push the card holder into closed position.
3. [Install the GPU riser module](#).
4. Follow the procedure listed in [After working inside your system](#).

## **Optional serial COM port**

This is a service technician replaceable part only.


### **Removing the serial COM port**

#### **Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the air shroud](#).

#### **Steps**

1. Loosen the captive screws on the system.
2. Press the blue release tab or blue button on the riser and holding the edges lift the expansion card riser from the riser connector on the system board.
3. Disconnect the serial COM port cable from the rear I/O board.
4. Open the latch on the expansion card riser and slide the serial COM port out of the expansion card riser.

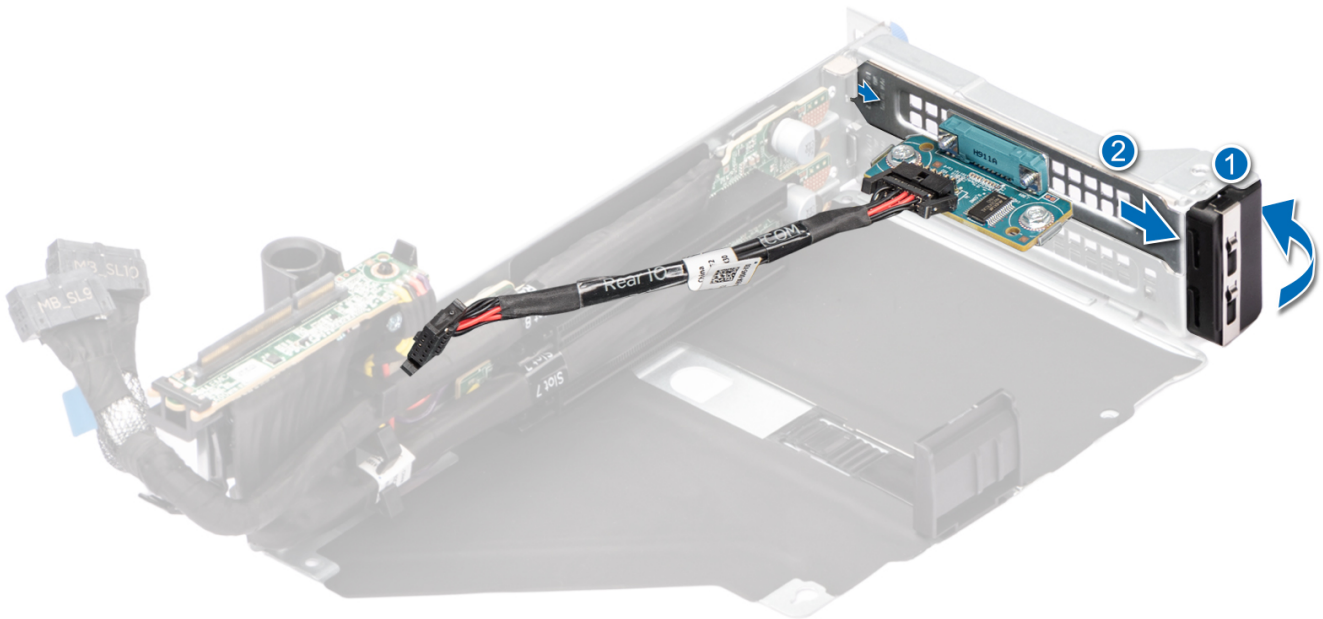

**Figure 124. Removing the Serial COM port**

5. Install the filler bracket if not replacing the serial COM port.

#### **Next steps**

1. [Replace the serial COM port.](#)


## **Installing the serial COM port**

#### **Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the air shroud.](#)

#### **Steps**

1. Open the latch on the expansion card riser and remove the filler bracket from the expansion card riser.
2. Slide the serial COM port into the expansion card riser and close the latch.

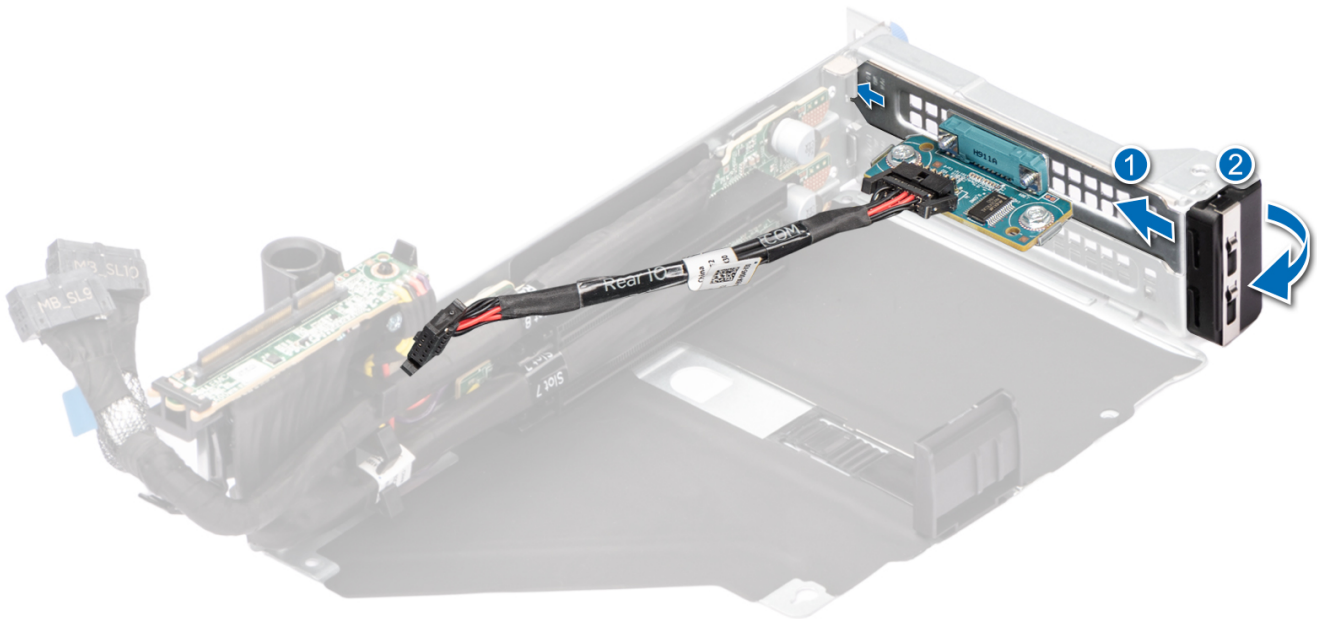

**Figure 125. Installing the Serial COM port**

3. Connect the serial COM port cable to the rear I/O board.
4. Holding the edges or the touch points, align the holes on the expansion card riser with the guides on the system board.
5. Lower the expansion card riser into place and press the touch points until the expansion card riser connector is fully seated on the system board connector.
6. Tighten the captive screws on the system.

#### **Next steps**

1. [Install the air shroud.](#)
2. Follow the procedure listed in [After working inside your system.](#)

## **Optional VGA port for liquid cooling module**

### **Removing the VGA port**

#### **Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions.](#)
2. Follow the procedure listed in the [Before working inside your system.](#)
3. [Remove the air shroud.](#)

#### **Steps**

1. Loosen the captive screws on the system.
2. Press the blue release tab or blue button on the riser and holding the edges lift the expansion card riser from the riser connector on the system board.

3. Disconnect the VGA port cable from the liquid cooling (LC) rear I/O board.
4. Open the latch on the expansion card riser and slide the VGA port out of the expansion card riser.



**Figure 126. Removing the VGA port**

5. Install the filler bracket if not replacing the VGA port.

#### **Next steps**

1. [Replace the VGA port.](#)

## **Installing the VGA port**

#### **Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the air shroud](#).

**NOTE:** VGA port is supported only in slot 8 of the expansion card riser.

#### **Steps**

1. Open the latch on the expansion card riser and remove the filler bracket from the expansion card riser.
2. Slide the VGA port into the expansion card riser and close the latch.



**Figure 127. Installing the VGA port**

3. Connect the VGA port cable to the LC rear I/O board.
4. Holding the edges or the touch points, align the holes on the expansion card riser with the guides on the system board.
5. Lower the expansion card riser into place and press the touch points until the expansion card riser connector is fully seated on the system board connector.
6. Tighten the captive screws on the system.

**Next steps**

1. [Install the air shroud.](#)
2. Follow the procedure listed in [After working inside your system.](#)

## Optional BOSS-N1 module


### Removing the BOSS-N1 module blank

**Prerequisites**

Follow the safety guidelines listed in the [Safety Instructions](#).

**Steps**

Use a screwdriver to push out the blank from the BOSS-N1 module bay.

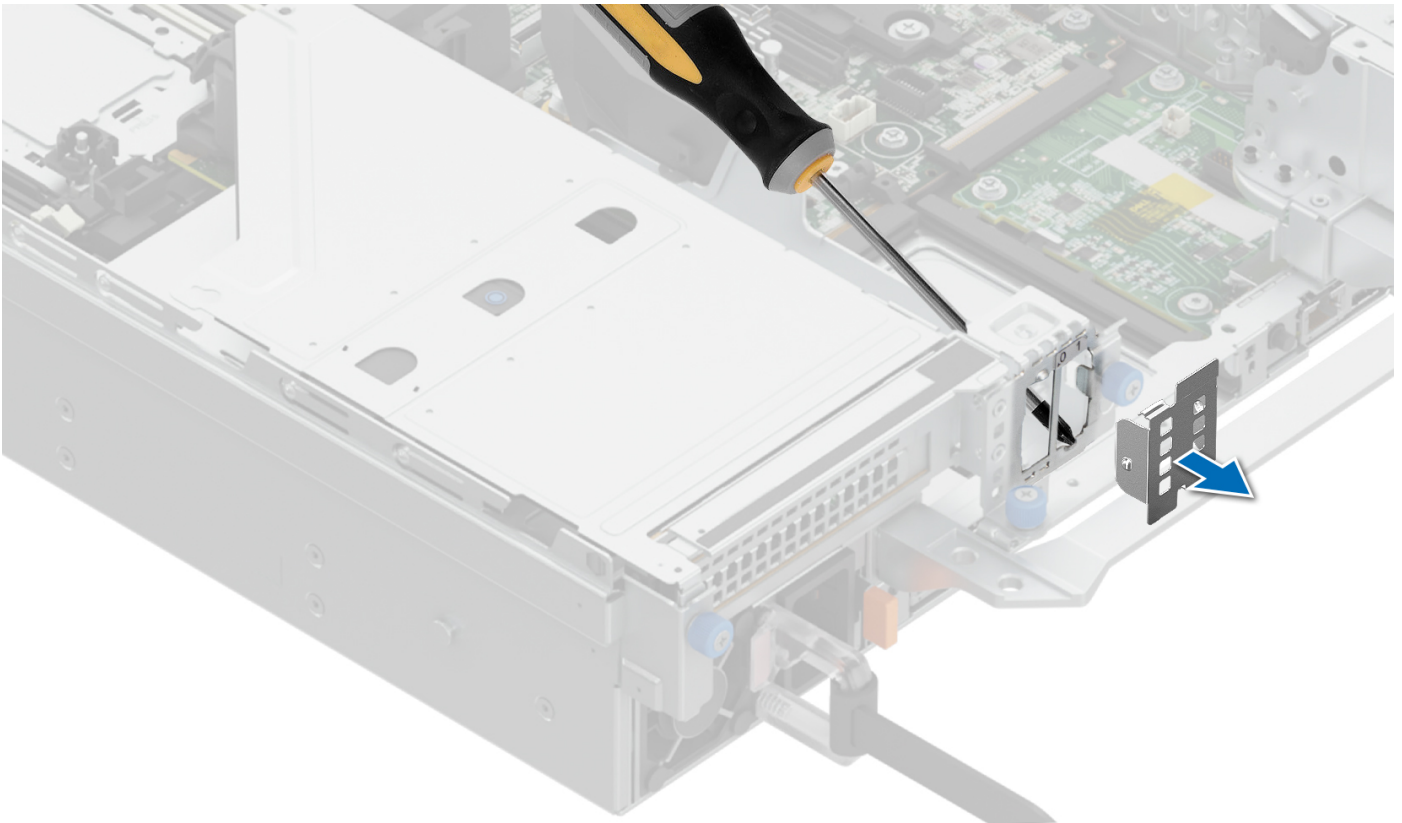

**Figure 128. Removing the BOSS-N1 module blank**

**Next steps**

1. [Replace the BOSS-N1 module blank](#) or install BOSS-N1 module.

## Installing the BOSS-N1 module blank

**Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions](#).

**Steps**

Align the blank with the BOSS-N1 module bay and push it into the bay until it clicks into place.

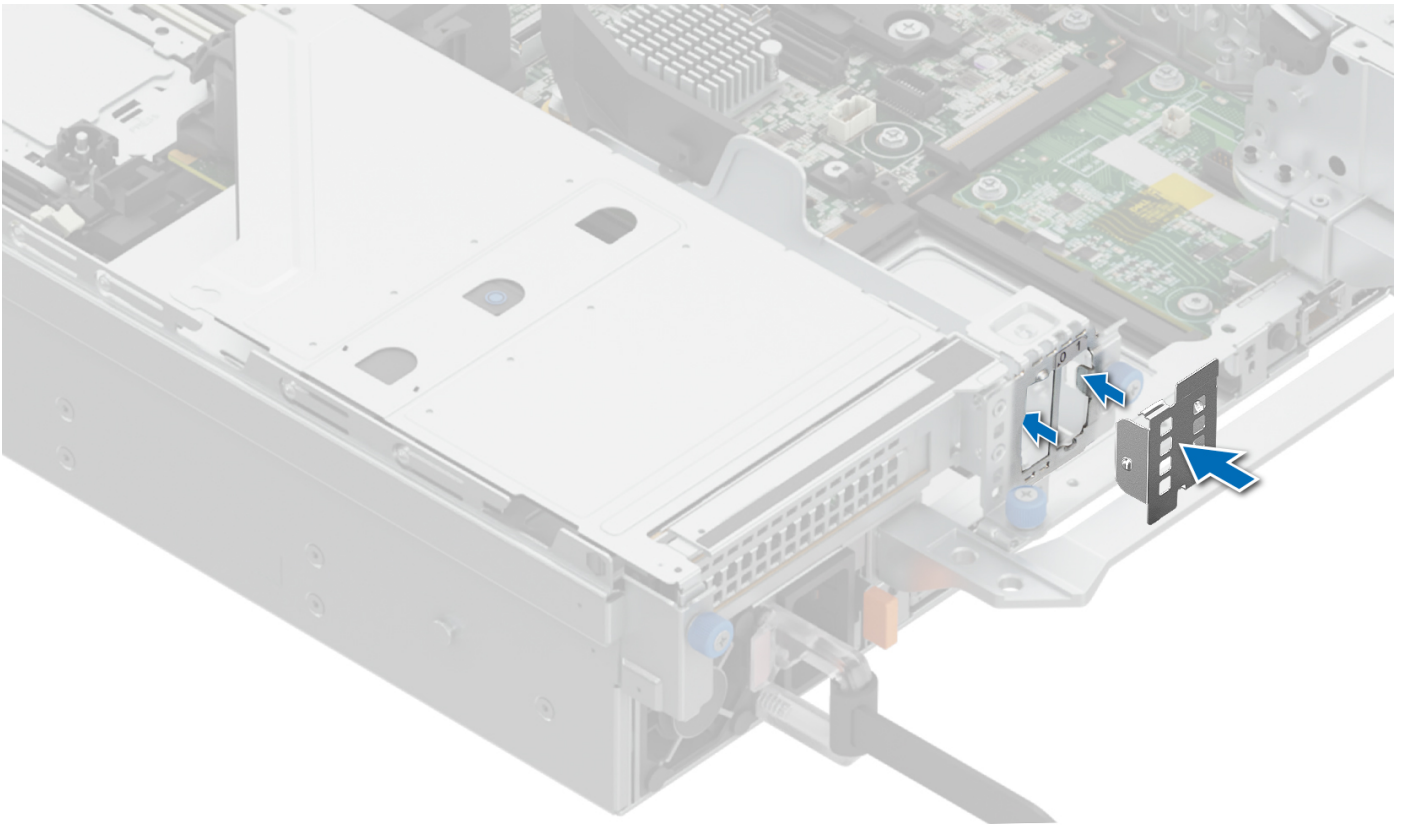


Figure 129. Installing the BOSS-N1 module blank


## Removing the BOSS-N1 card carrier blank

### Prerequisites

Follow the safety guidelines listed in the [Safety Instructions](#).

### Steps

Press and pull the BOSS-N1 card carrier blank out from the BOSS-N1 module.

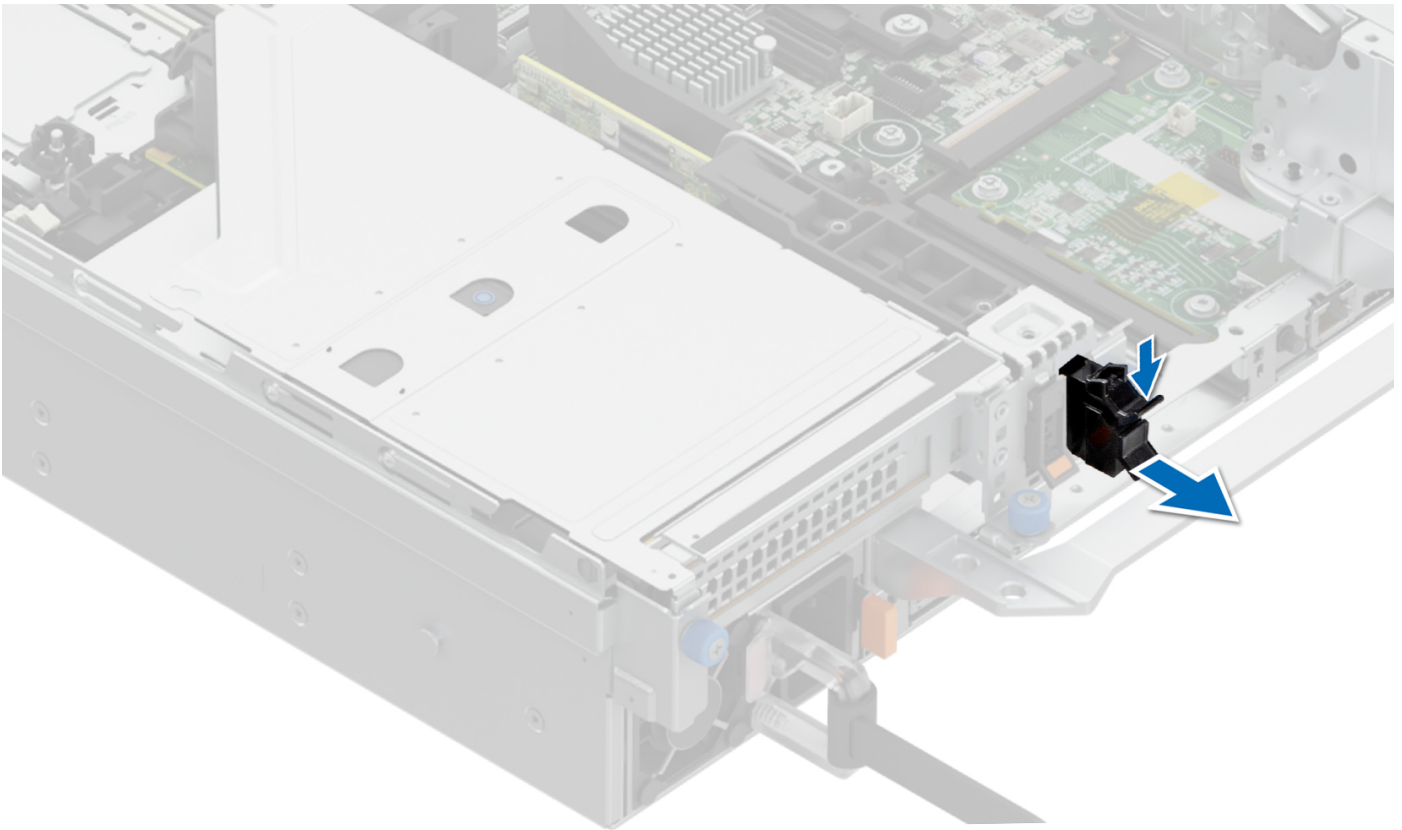

**Figure 130. Removing the BOSS-N1 card carrier blank**

**Next steps**

1. [Replace the BOSS-N1 card carrier blank](#) or install BOSS-N1 card carrier.


## Installing the BOSS-N1 card carrier blank

**Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions](#).

**Steps**

Align the blank with the BOSS-N1 module bay and push it into the bay until it clicks into place.

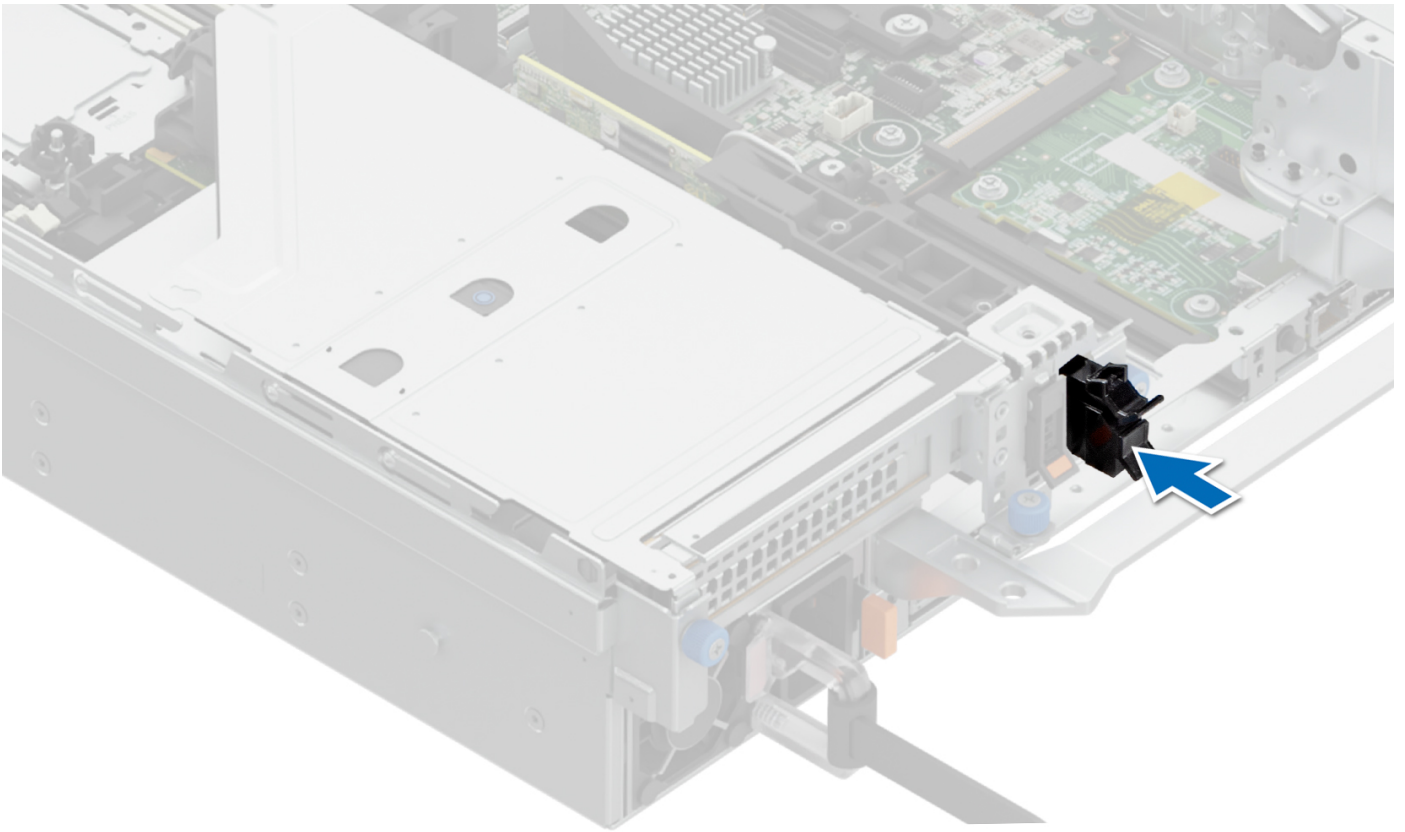

**Figure 131. Installing the BOSS-N1 card carrier blank**


## Removing the BOSS-N1 module

### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).


### Steps

1. Pull and lift the BOSS-N1 card carrier retention latch lock to open.
2. Slide the BOSS-N1 card carrier out.

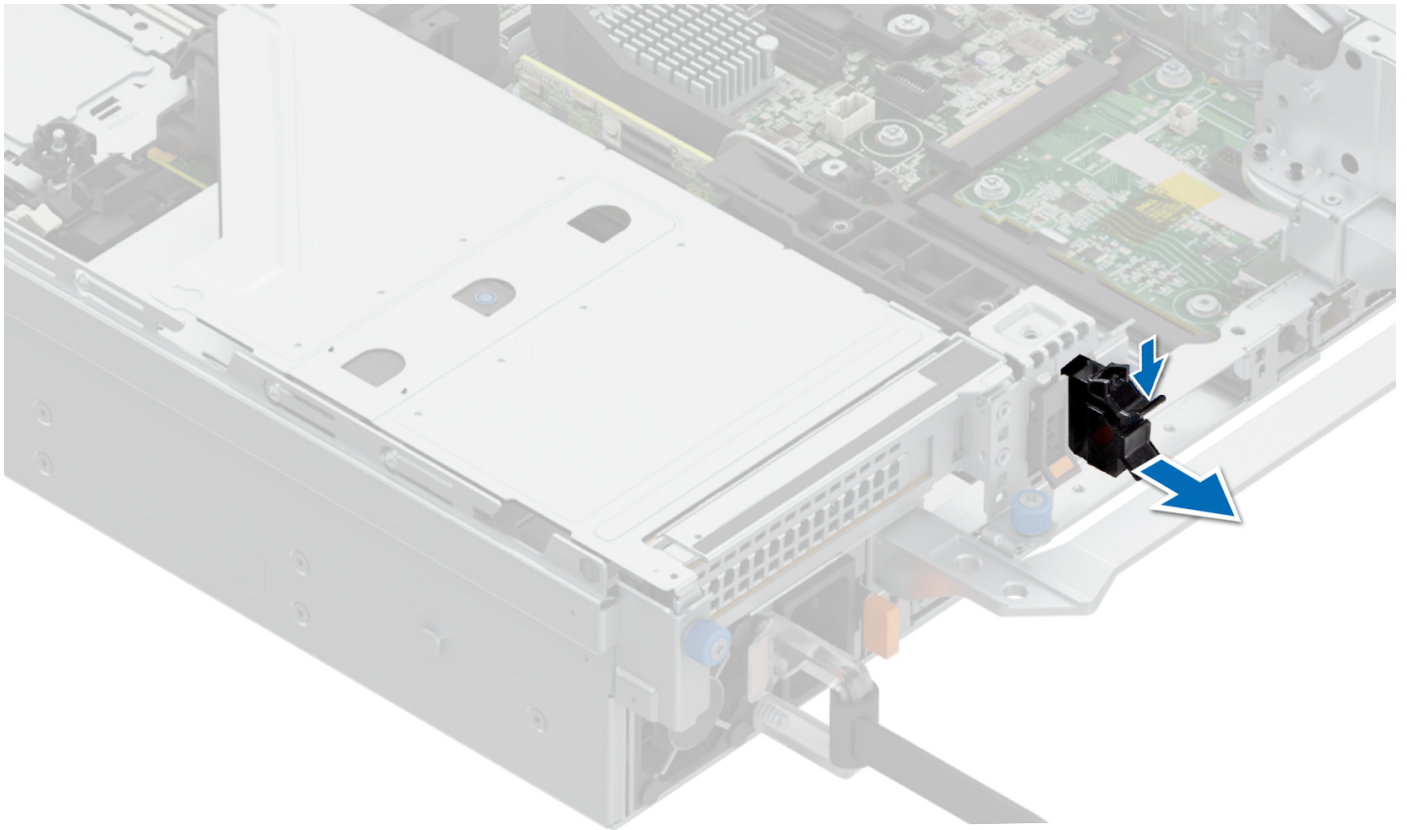

**Figure 132. Removing the BOSS-N1 card carrier**

3. Using the Phillips #1 screwdriver remove the M3 x 0.5 x 4.5 mm screw that secures the M.2 SSD to the BOSS-N1 card carrier.
4. Slide the M.2 SSD out from the BOSS-N1 card carrier.

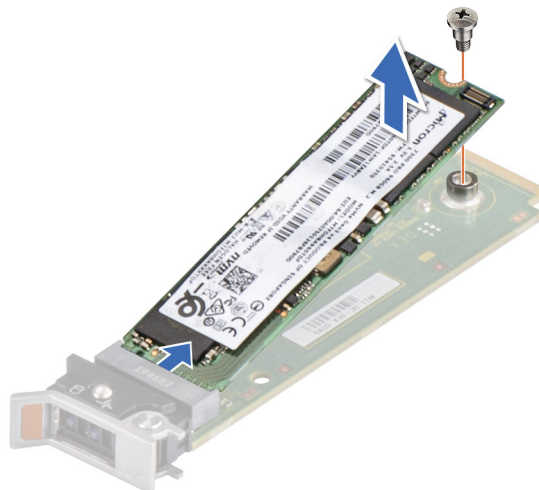


**Figure 133. Removing the M.2 SSD**

5. Disconnect the BOSS-N1 power and signal cable from the system board.


**⚠ WARNING: Ensure to disconnect the BOSS-N1 power cable before removing the Riser 1.**

6. Using the Phillips #1 screwdriver remove the M3 x 0.5 x 4.5 mm screw that secures the BOSS-N1 module on Riser 1.
7. Slide the BOSS-N1 module towards the front of the chassis and lift the module.

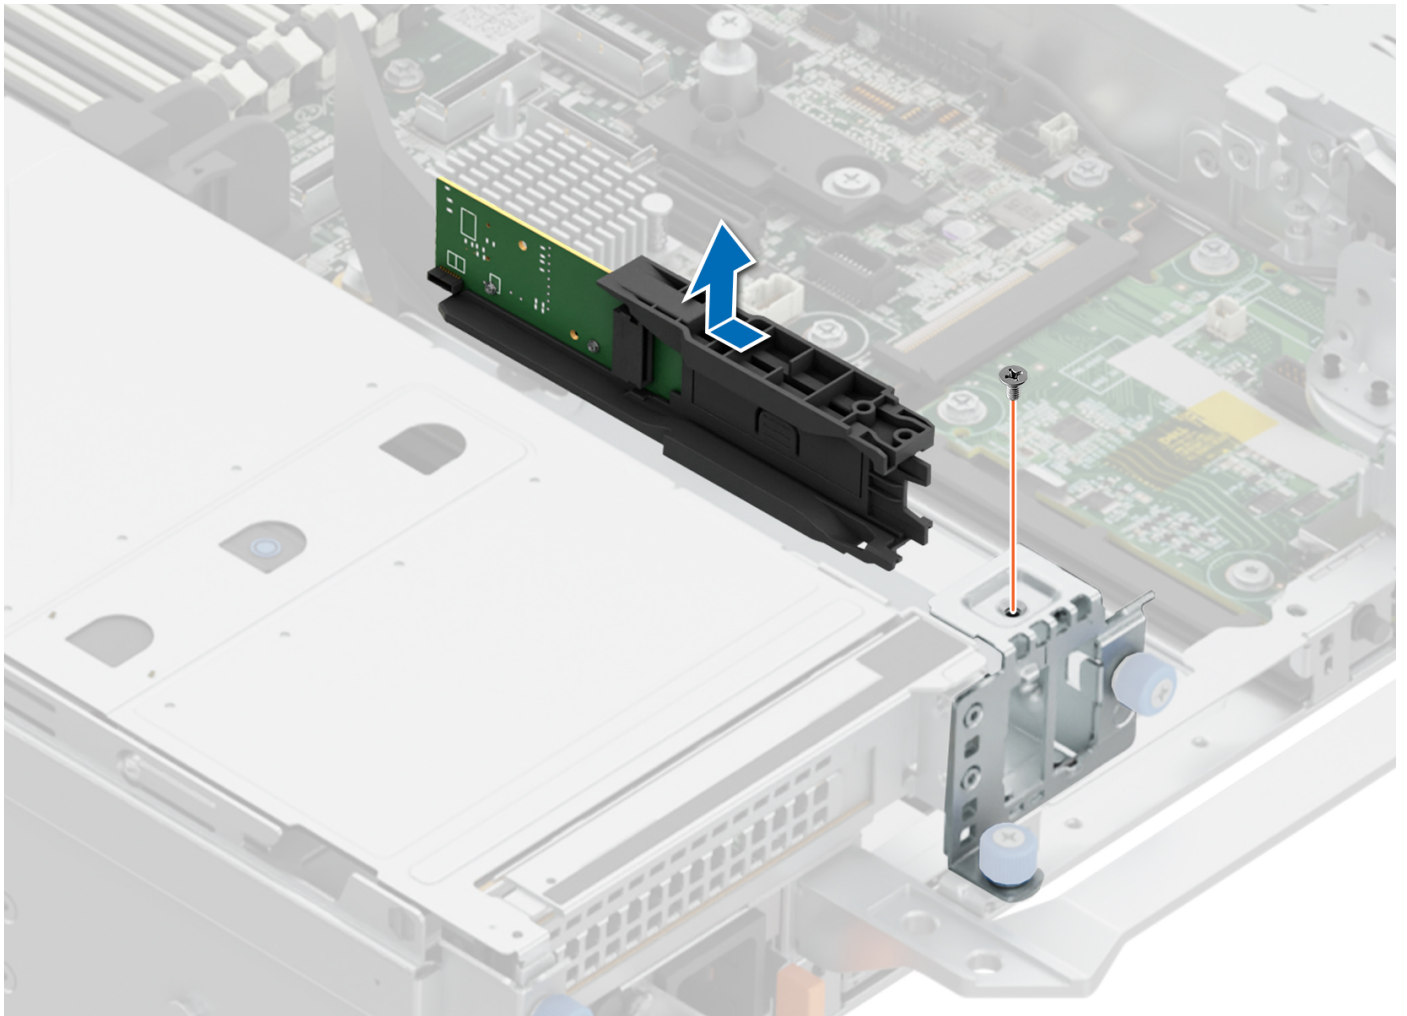

**Figure 134. Removing the BOSS-N1 module**

8. Remove the BOSS-N1 power and signal cable from the BOSS-N1 module.

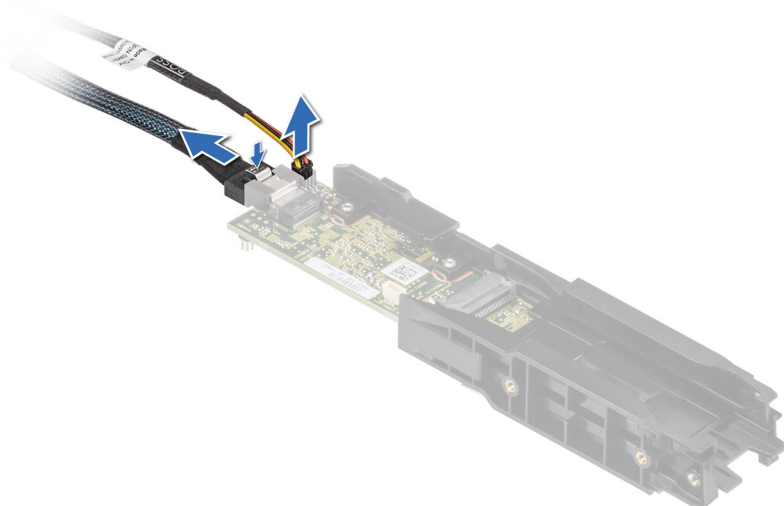

**Figure 135. Removing the BOSS-N1 power and signal cable from the BOSS-N1 module**

### Next steps

1. [Replace the BOSS-N1 module](#) or [Install the BOSS-N1 card blank](#).


## Installing the BOSS-N1 module

### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).


### Steps

1. Connect the BOSS-N1 power and signal cables to the connectors on the BOSS-N1 module.

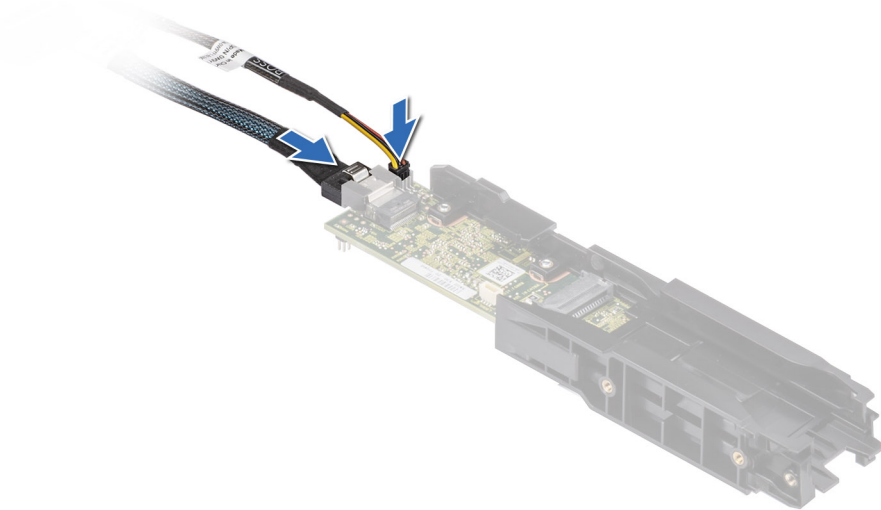


**Figure 136. Connecting the BOSS-N1 power and signal cables to the BOSS-N1 module**

2. Align the BOSS-N1 module at an angle with the controller card module slot.
3. Insert the BOSS-N1 module and push the module horizontally towards the rear of the system until firmly seated.
4. Using the Phillips #1 screwdriver, secure the BOSS-N1 module with the M3 x 0.5 x 4.5 mm screw.
5. Connect the BOSS-N1 power and signal cable to the connectors on the system board.

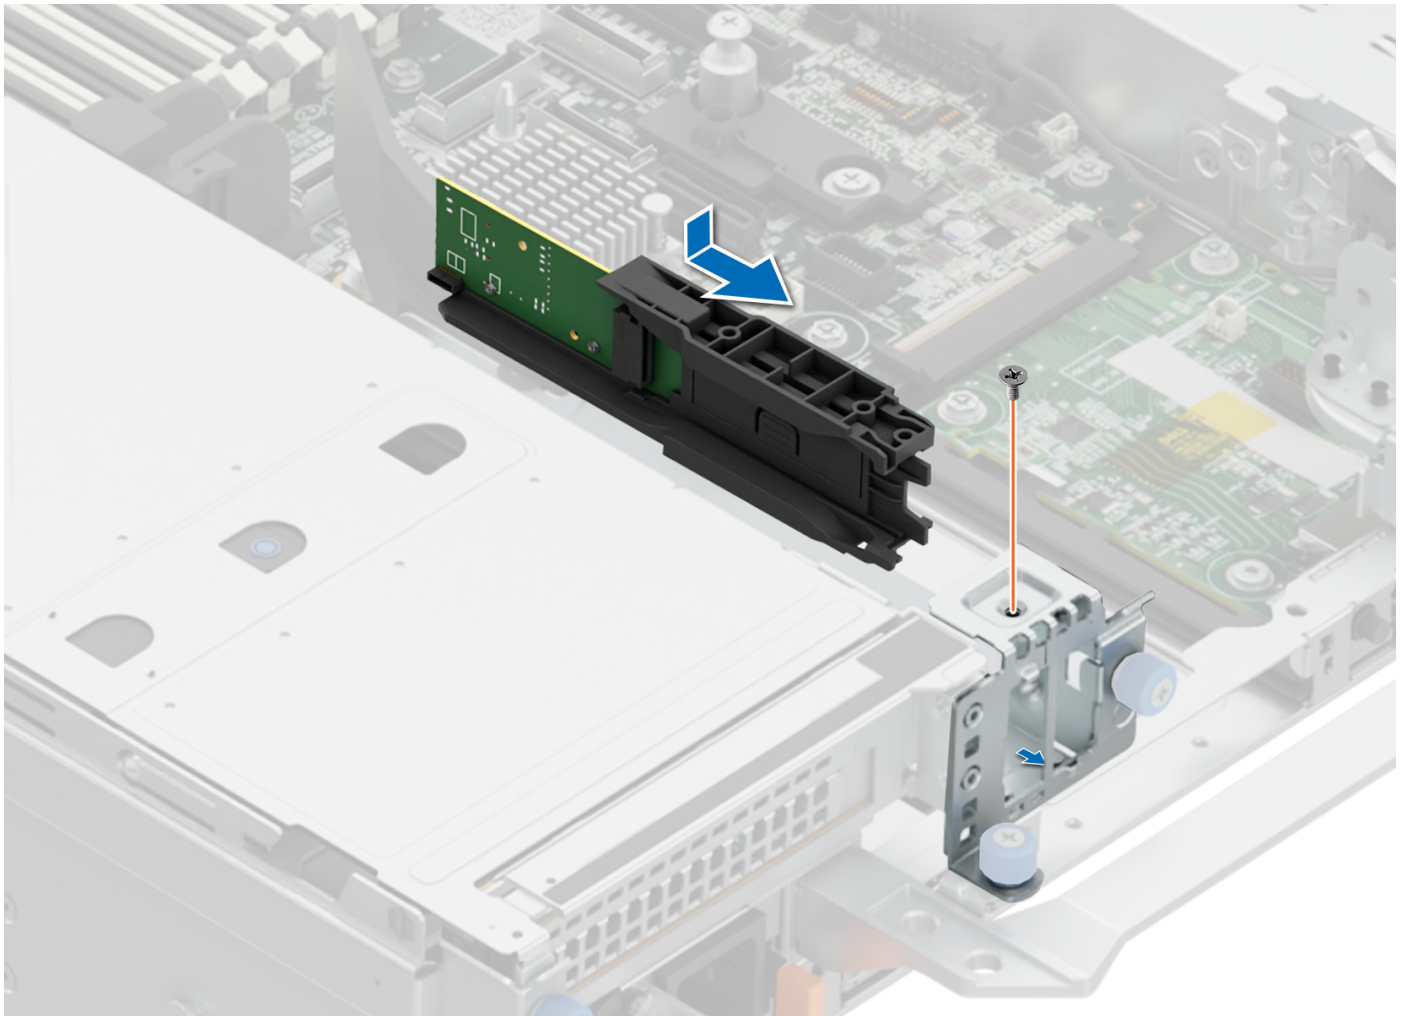

**Figure 137. Installing the BOSS-N1 module**


6. Align the M.2 SSD at an angle with the BOSS-N1 card carrier.
7. Insert the M.2 SSD until it is firmly seated in the BOSS-N1 card carrier.
8. Using the Phillips #1 screwdriver, secure the M.2 SSD on the BOSS-N1 card carrier with the M3 x 0.5 x 4.5 mm screw.

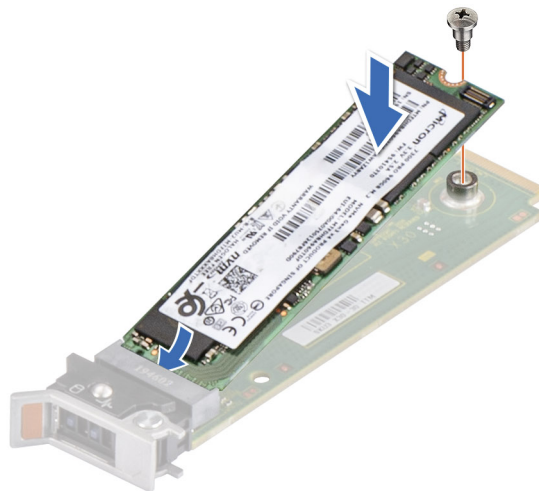

**Figure 138. Installing the M.2 SSD**

9. Slide the BOSS-N1 card carrier into the BOSS-N1 module slot.

10. Close the BOSS-N1 card carrier release latch to lock the carrier in place.

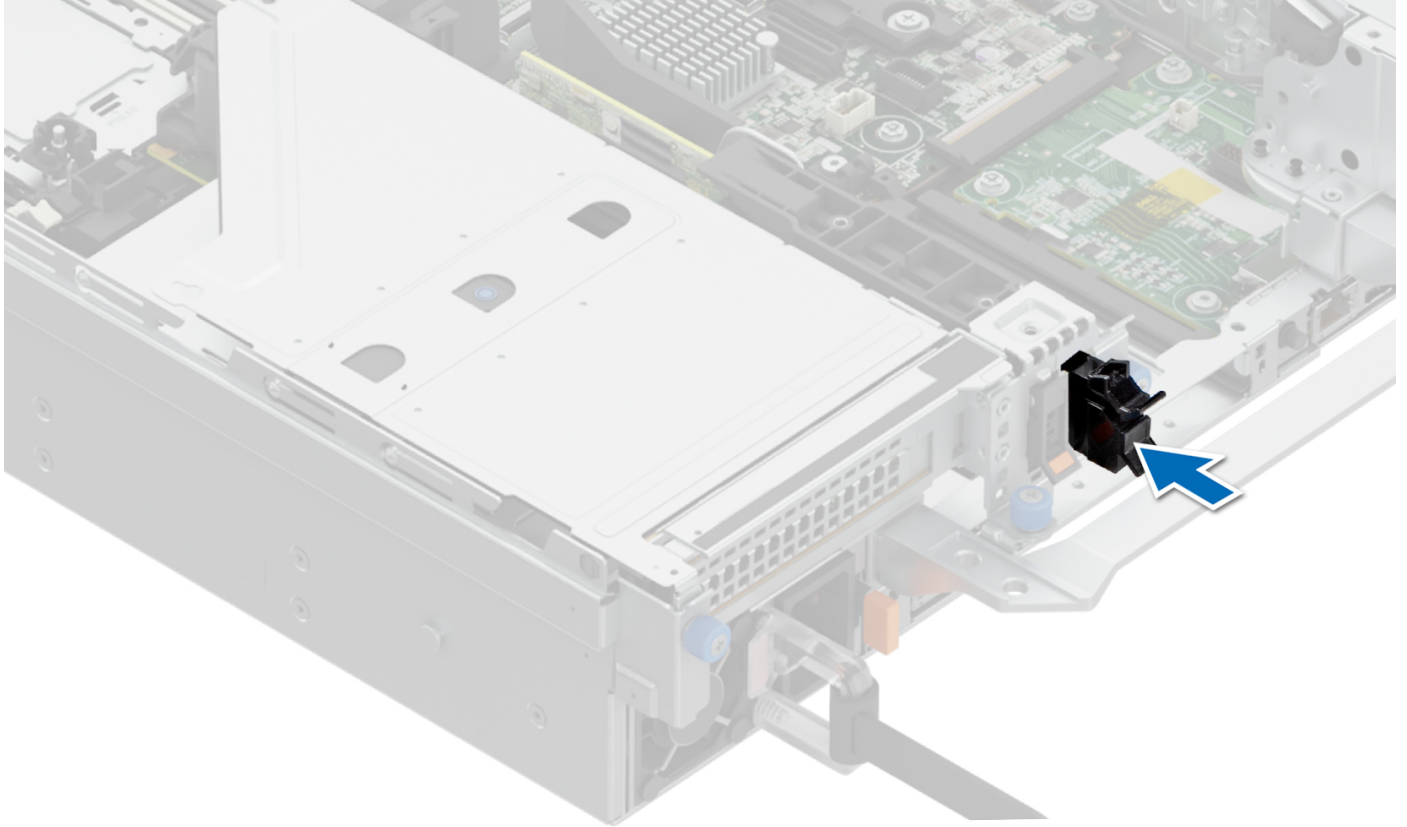

**Figure 139. Installing the BOSS-N1 card carrier**

#### **Next steps**

1. Follow the procedure listed in the [After working inside your system.](#)


## **Removing the BOSS-N1 shroud**

#### **Prerequisites**

Follow the safety guidelines listed in the [Safety Instructions.](#)

#### **Steps**

1. Remove the screw on the BOSS-N1 shroud.

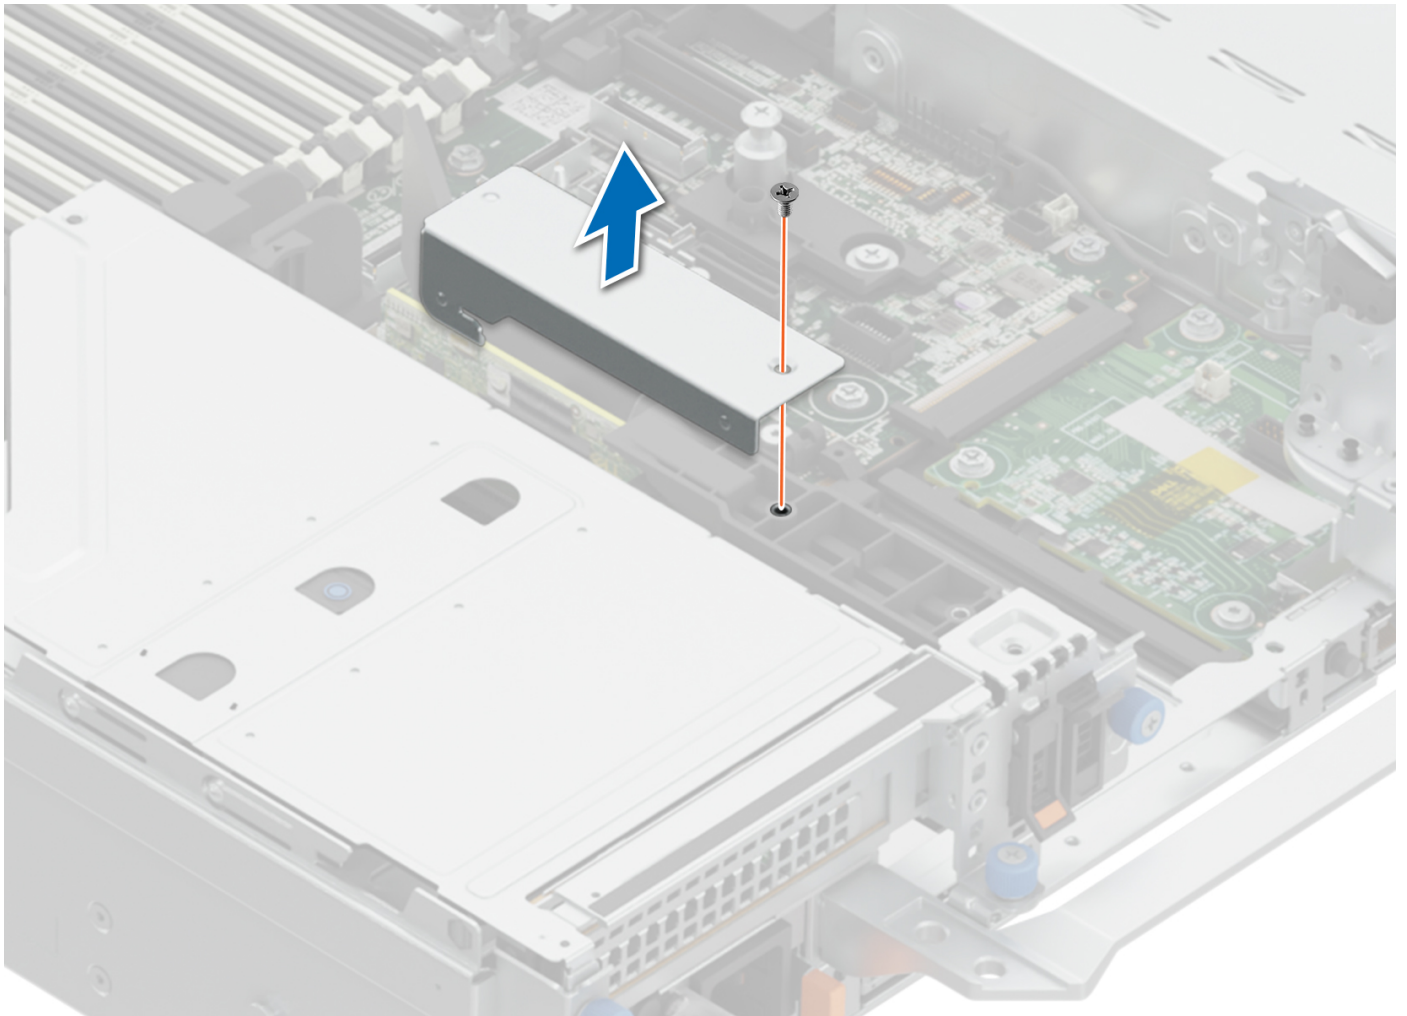

**Figure 140. Removing the BOSS-N1 shroud**

2. Pull the BOSS-N1 shroud from the BOSS module.

#### **Next steps**

1. [Installing the BOSS-N1 shroud.](#)


## **Installing the BOSS-N1 shroud**

#### **Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

#### **Steps**

1. Align the slot on the BOSS-N1 shroud with the BOSS module.

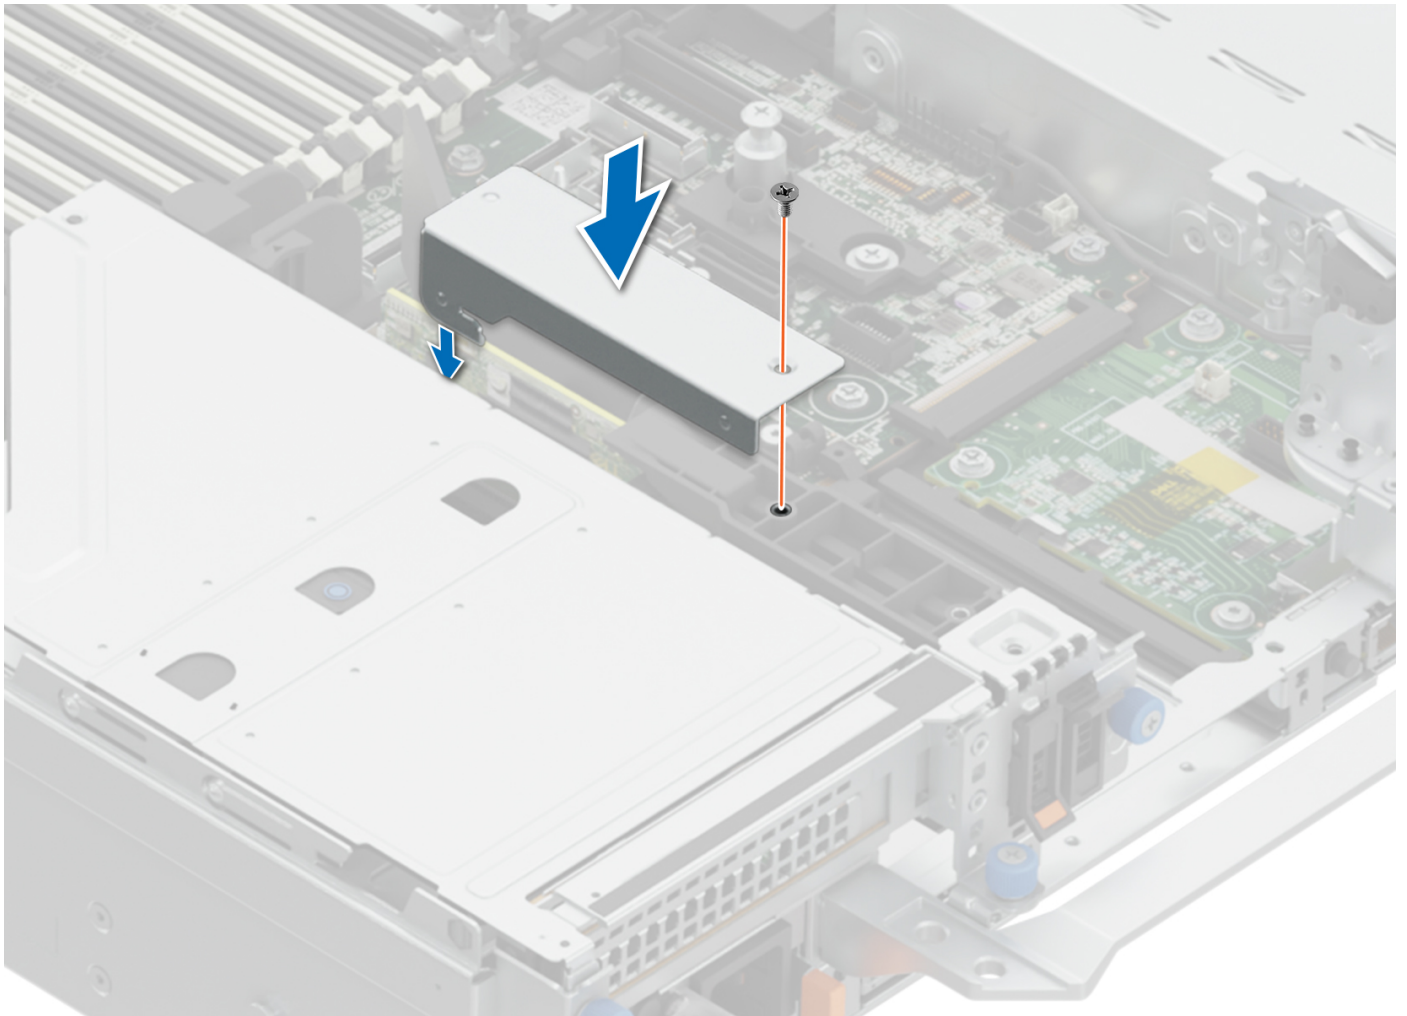

**Figure 141. Installing the BOSS-N1 shroud**

2. Push the BOSS-N1 shroud into hook on cage and fasten screw to fix the BOSS shroud.

#### **Next steps**

1. Follow the procedure listed in [After working inside your system](#).

## **System battery**

This is a service technician replaceable part only.

## **Replacing the system battery**


#### **Prerequisites**

**⚠ WARNING:** There is a danger of a new battery exploding if it is incorrectly installed. Replace the battery only with the same or equivalent type that is recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions. See the Safety instructions. that came with your system for more information.

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If applicable, disconnect the power or data cables from the expansion cards.
4. [Remove the expansion card risers](#).

## Steps

1. To remove the battery:
  - a. Use a plastic scribe to pry out the system battery.

 **CAUTION:** To avoid damage to the battery connector, you must firmly support the connector while installing or removing a battery.

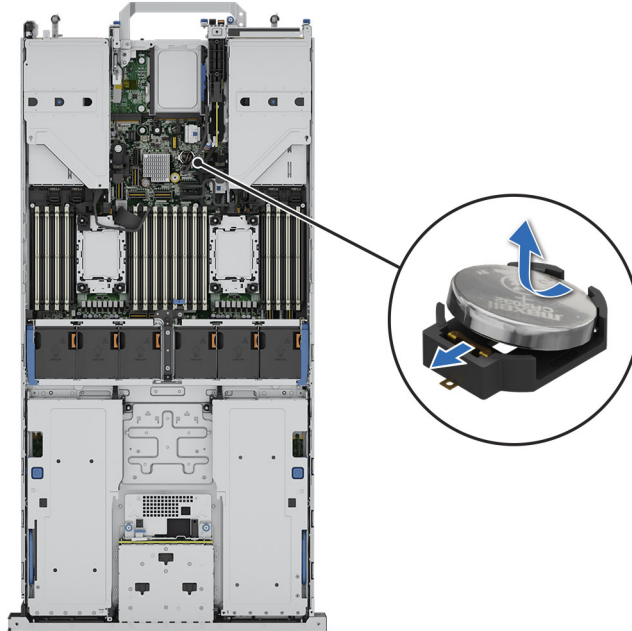


Figure 142. Removing the system battery

2. To install a new system battery:
  - a. Hold the battery with the positive side facing up and slide it under the securing tabs.
  - b. Press the battery into the connector until it snaps into place.

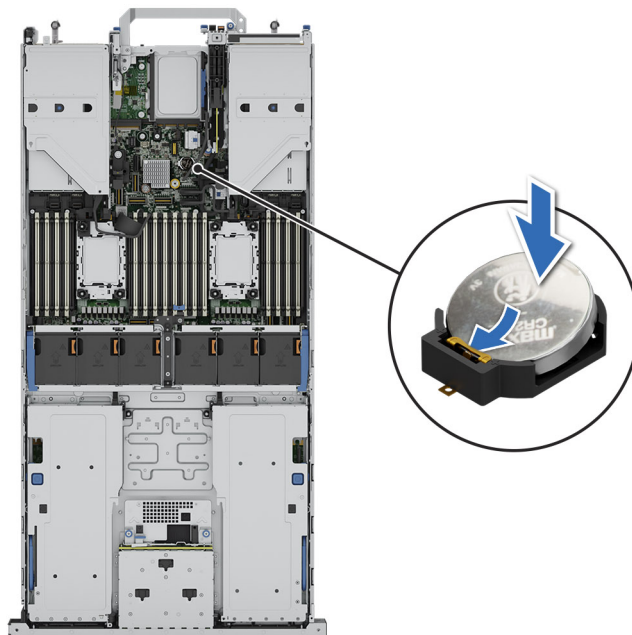



Figure 143. Installing the system battery

### Next steps


1. [Install the expansion card risers.](#)
2. If applicable, connect the cables to one or more expansion cards.
3. Follow the procedure listed in [After working inside your system.](#)
4. Confirm that the battery is operating properly, by performing the following steps:
  - a. Enter the System Setup, while booting, by pressing F2.
  - b. Enter the correct time and date in the System Setup **Time** and **Date** fields.
  - c. **Exit** the System Setup.
  - d. To test the newly installed battery, remove the system from the enclosure for at least an hour.
  - e. Reinstall the system into the enclosure after an hour.
  - f. Enter the System Setup and if the time and date are still incorrect, see [Getting help](#) section.

## Optional internal USB card

 **NOTE:** To locate the internal USB port on the system board, see the [System board jumpers and connectors](#) section.

## Removing the internal USB card


### Prerequisites

 **CAUTION:** To avoid interference with other components in the server, the maximum permissible dimensions of the USB memory key are 15.9 mm wide x 57.15 mm long x 7.9 mm high.

1. Follow the safety guidelines listed in the [Safety Instructions.](#)
2. Follow the procedure listed in the [Before working inside your system.](#)
3. [Remove the expansion card risers.](#)

### Steps

1. Holding the blue tag, lift the internal USB card to disconnect from the connector on the system board.
2. Remove the USB memory key from the internal USB card.

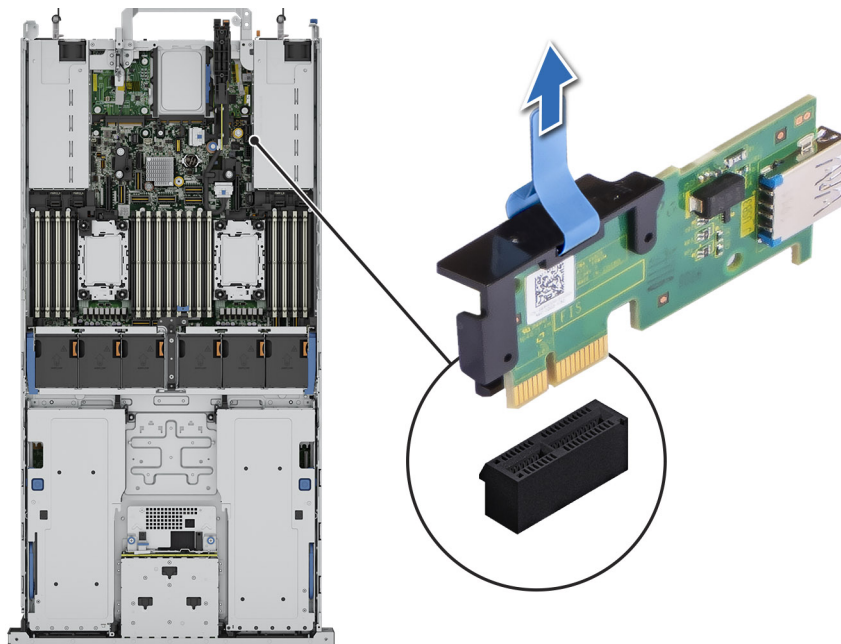

**Figure 144. Removing the internal USB card**

### Next steps

1. [Replace the internal USB card.](#)

## Installing the internal USB card

### Prerequisites


1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the expansion card risers.](#)

### Steps

1. Connect the USB key to the internal USB card.

**i** **NOTE:** For information on the exact location of internal USB card on system board, see [System board jumpers and connectors](#) section.

2. Align the internal USB card with the connector on the system board and press firmly until the internal USB card is seated.

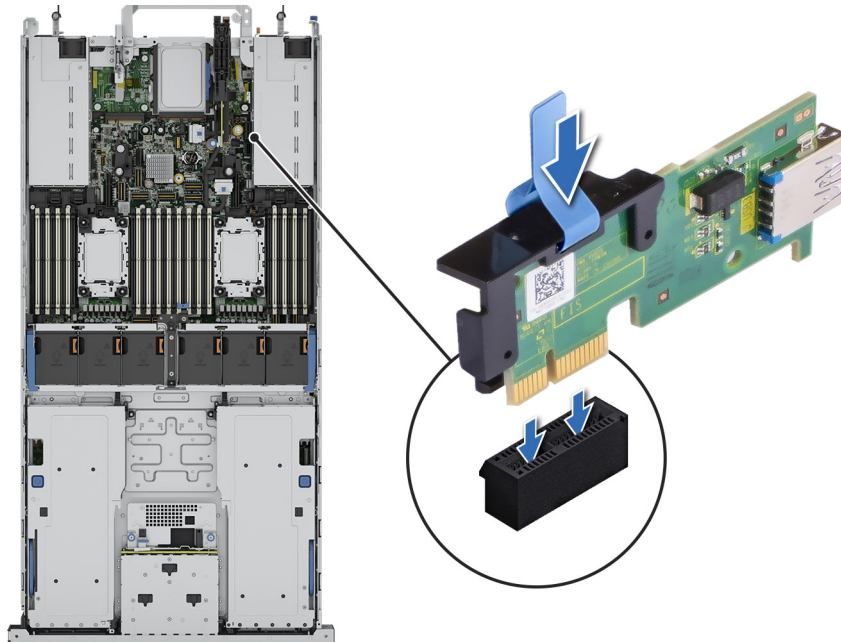

**Figure 145. Installing the internal USB card**

### Next steps

1. [Install the expansion card risers.](#)
2. Follow the procedure listed in [After working inside your system](#).
3. While booting, press F2 to enter **System Setup** and verify that the system detects the USB memory key.

# Intrusion switch

This is a service technician replaceable part only.

## Removing the intrusion switch module

### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the expansion card risers](#).

**i** **NOTE:** Ensure that you note the routing of the cables as you remove them from the system board. Route the cables properly when you replace them to prevent cables from being pinched or crimped.

### Steps

1. Disconnect the intrusion switch cable from the connector on the rear I/O board.
2. Using a Phillips #1 screwdriver, loosen the screw on the intrusion switch module.
3. Slide the intrusion switch module out of the slot on the system.

**i** **NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

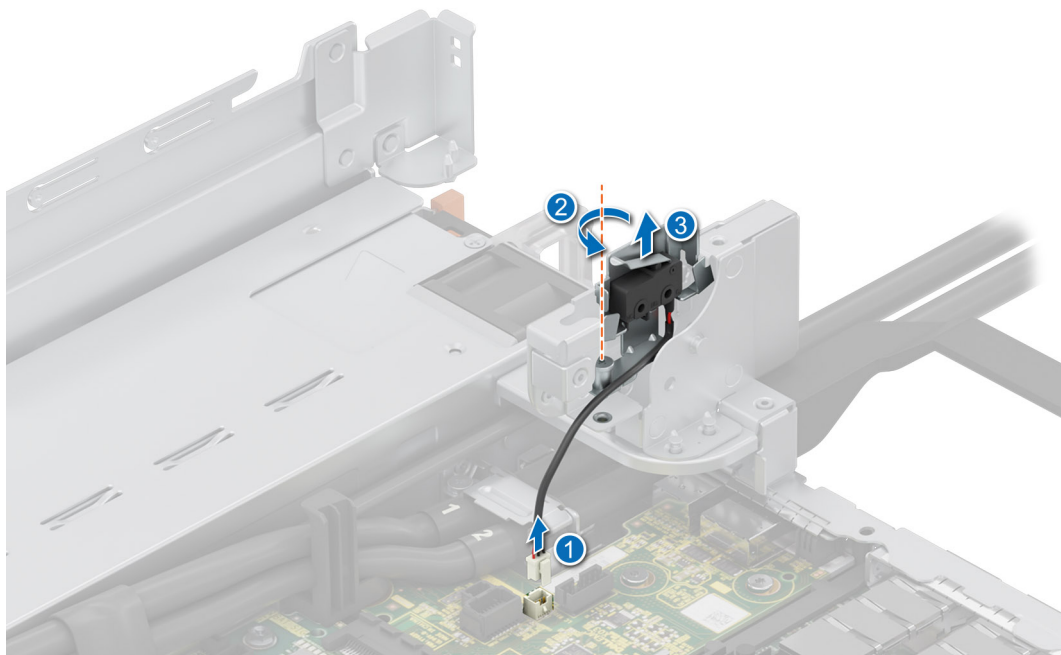


Figure 146. Removing the intrusion switch module

### Next steps

1. [Replace the intrusion switch module](#).

## Installing the intrusion switch module

### Prerequisites


1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

3. [Remove the expansion card risers.](#)

**NOTE:** Ensure that you note the routing of the cables as you remove them from the system board. Route the cables properly when you replace them to prevent cables from being pinched or crimped.

**Steps**

1. Align the guides on the intrusion switch module with the standoffs on the system.
2. Slide the intrusion switch module into the slot in the system until firmly seated.
3. Using a Phillips #1 screwdriver, tighten the screw on the intrusion switch module.
4. Connect the intrusion switch cable to the connector on the rear I/O board.

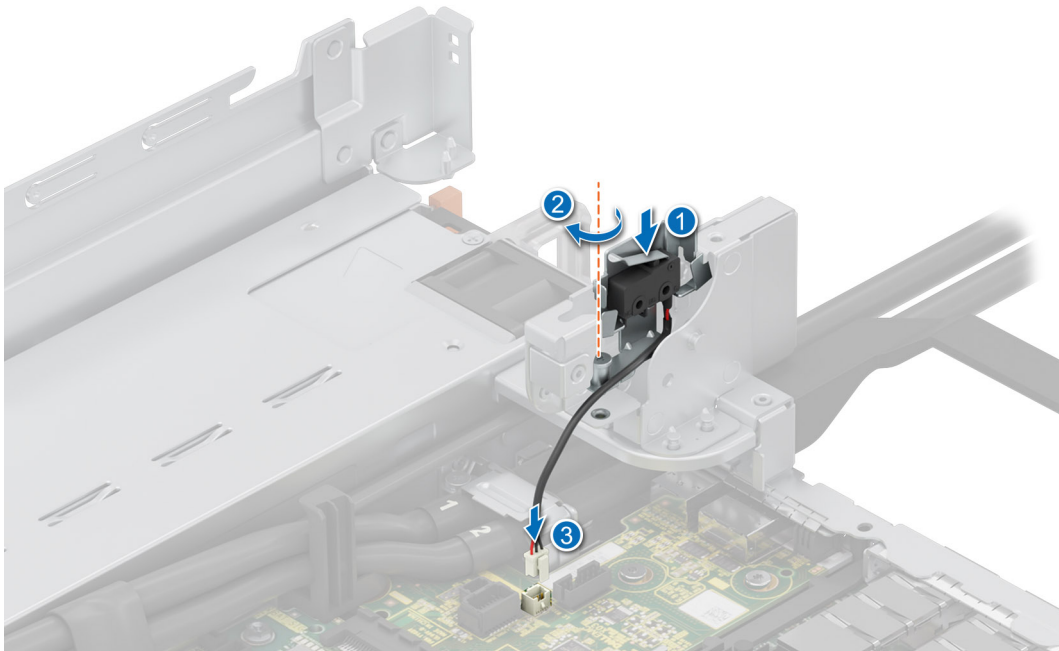

**Figure 147. Installing the intrusion switch module**

**Next steps**

1. [Install the expansion card risers.](#)
2. Follow the procedure listed in [After working inside your system.](#)

## Optional OCP NIC card


### Removing the OCP card

**Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions.](#)
2. Follow the procedure listed in the [Before working inside your system.](#)
3. [Remove the expansion card risers.](#)


**Steps**

1. Open the blue latch to disengage the OCP card.
2. Push the OCP card towards the rear end of the system to disconnect from the connector on the system board.
3. Slide the OCP card out of the slot on the system.

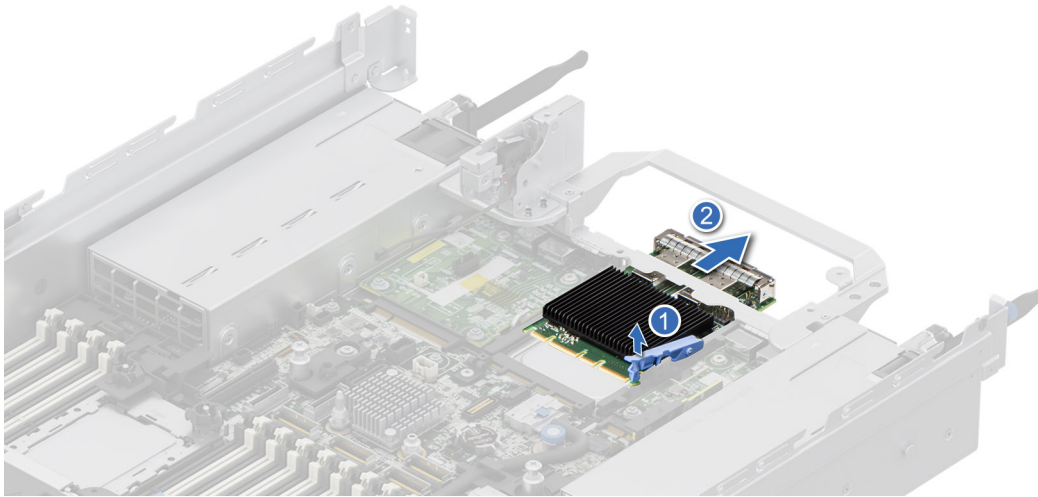

**Figure 148. Removing the OCP card**

4. If the OCP card is not going to be replaced, install a filler bracket.

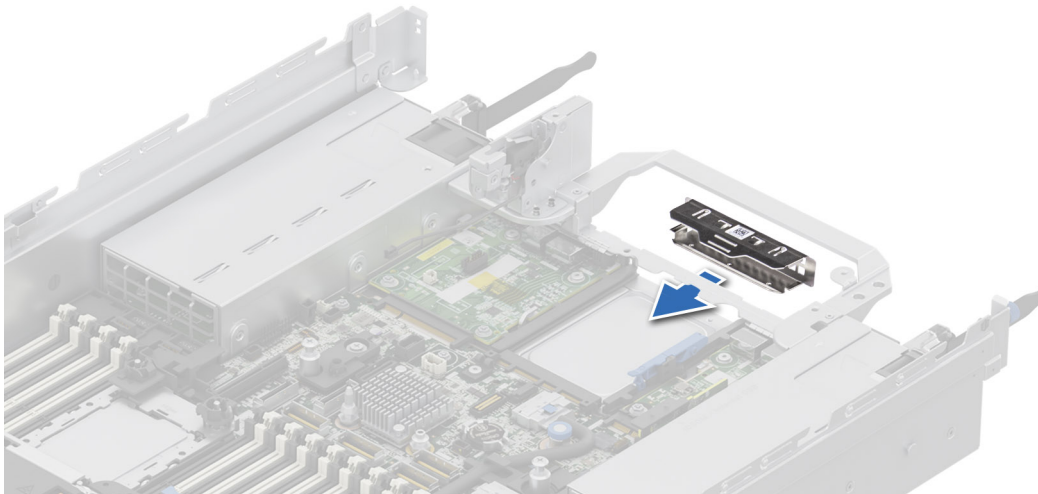

**Figure 149. Installation of filler bracket**

### **Next steps**

1. [Replace the OCP card.](#)


## **Installing the OCP card**

### **Prerequisites**

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system.](#)
3. [Remove the expansion card risers.](#)


### **Steps**

1. If installed, remove the filler bracket.

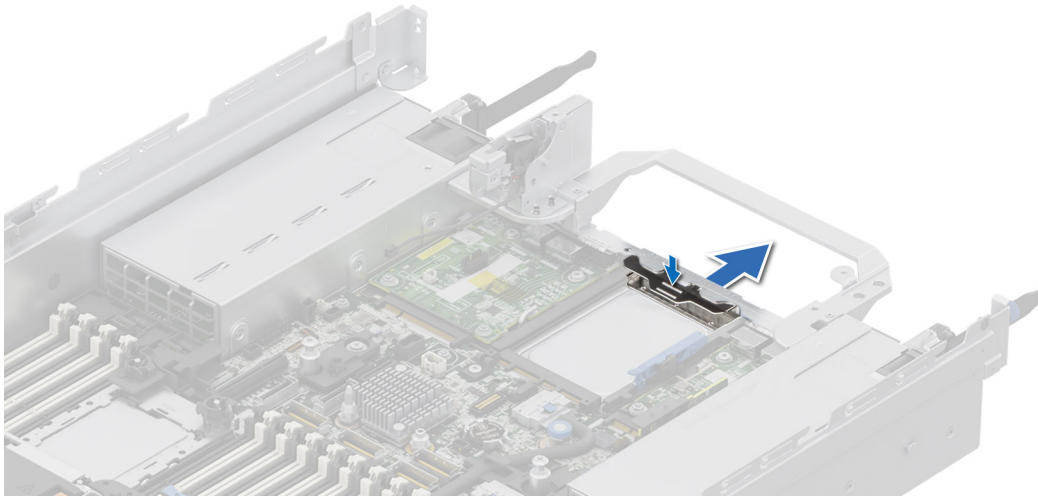

**Figure 150. Removal of filler bracket**


2. Align the OCP shroud with the Riser 2 blank and install it in the system.

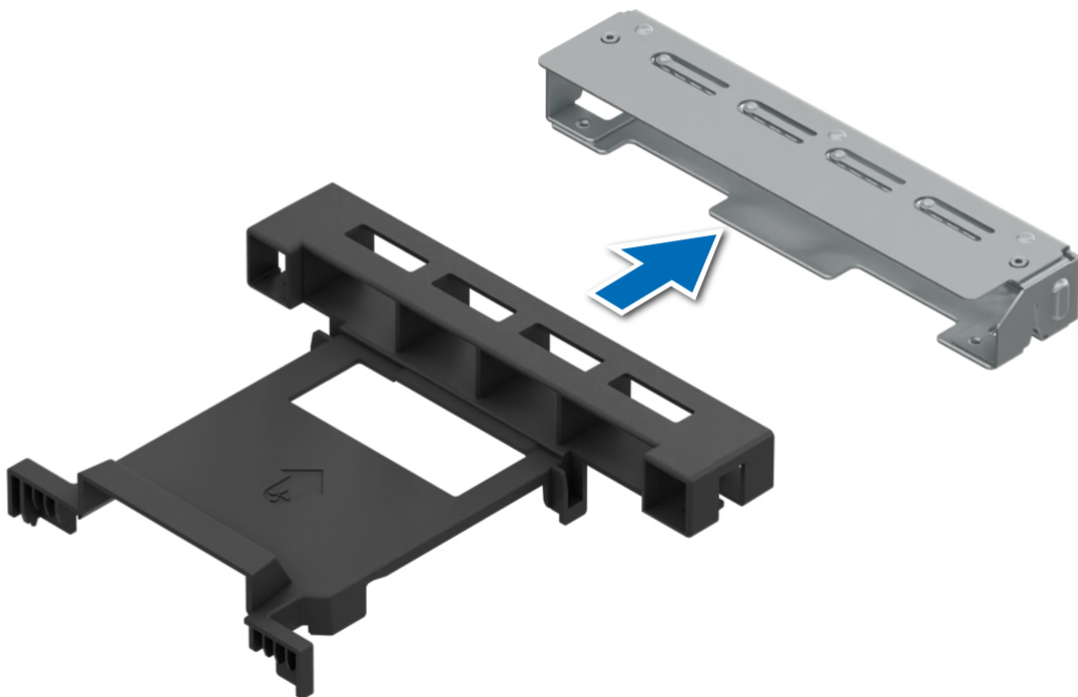

**Figure 151. Placing the OCP shroud in the Riser 2 blank**

3. Open the blue latch on the system board.
4. Slide the OCP card into the slot in the system.
5. Push until the OCP card is connected to the connector on the system board.
6. Close the latch to lock the OCP card to the system.

**NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

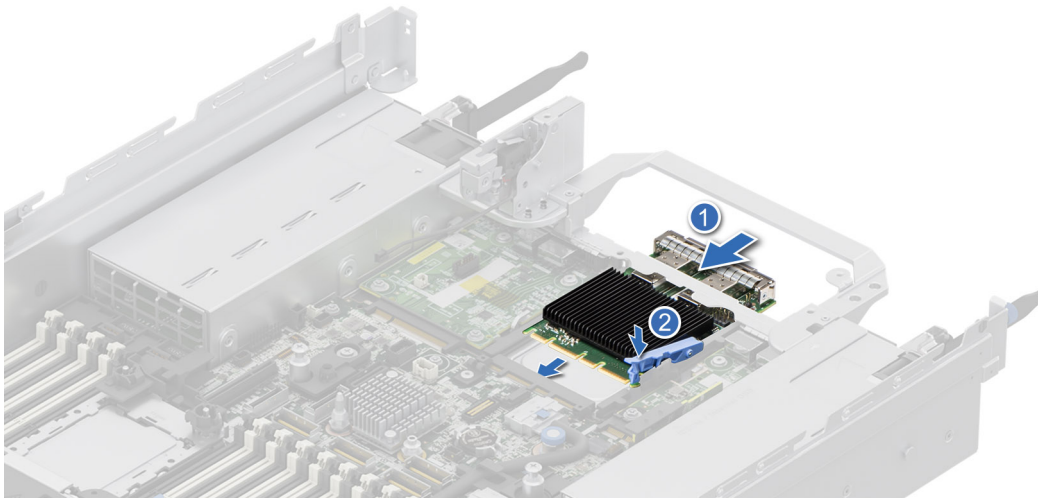

**Figure 152. Installing the OCP card**

#### Next steps

**NOTE:** A 100 GbE OCP card of PCIe width x16 can be inserted in the system by connecting the OCP cable from SL15\_CPU1\_PB8 to DSL1\_CPU1\_PA8 on the system board.

**NOTE:** Refer to [cable routing](#) section for more information.

1. [Install the expansion card risers.](#)
2. Follow the procedure listed in [After working inside your system.](#)

## Power supply unit

**NOTE:** While replacing the hot swappable PSU, after next server boot; the new PSU automatically updates to the same firmware and configuration of the replaced one. For more information about the Part replacement configuration, see the [Lifecycle Controller User's Guide at iDRAC Manuals](#)

## Hot spare feature

Your system supports the hot spare feature that significantly reduces the power overhead associated with the power supply unit (PSU) redundancy.

When the hot spare feature is enabled, one of the redundant PSUs is switched to the sleep state. The active PSU supports 100 percent of the system load, thus operating at higher efficiency. The PSU in the sleep state monitors output voltage of the active PSU. If the output voltage of the active PSU drops, the PSU in the sleep state returns to an active output state.

If having both PSUs active is more efficient than having one PSU in the sleep state, the active PSU can also activate the sleeping PSU.

The default PSU settings are as follows:

- If the load on the active PSU is more than 50 percent of PSU rated power wattage, then the redundant PSU is switched to the active state.

- If the load on the active PSU falls below 20 percent of PSU rated power wattage, then the redundant PSU is switched to the sleep state.

You can configure the hot spare feature by using the iDRAC settings. For more information, see the *iDRAC User's Guide* available at [PowerEdge manuals](#).

## Removing a power supply unit blank

### Prerequisites

Follow the safety guidelines listed in the [Safety Instructions](#).

### Steps

Pull the blank out of the system.

**CAUTION:** To ensure proper system cooling, the PSU blank must be installed in the second PSU bay in a non-redundant configuration. Remove the PSU blank only if you are installing a second PSU.

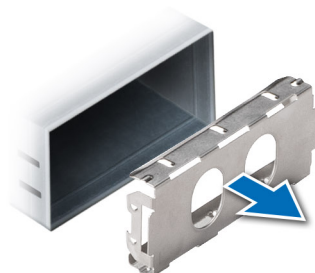


Figure 153. Removing a power supply unit blank

### Next steps

1. [Replace the PSU blank](#) or [install the PSU](#).

## Installing a power supply unit blank

### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).

**NOTE:** Install the power supply unit (PSU) blank only in the second PSU bay.

2. If required, [Remove the PSU](#).

### Steps

Align the PSU blank with the PSU bay and push it into the PSU bay until it clicks into place.

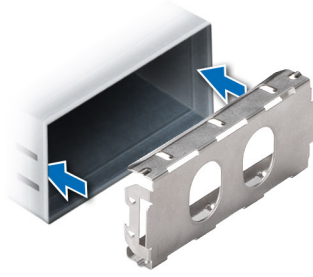


Figure 154. Installing a power supply unit blank

## Removing a power supply unit

### Prerequisites

**CAUTION:** The system requires one power supply unit (PSU) for normal operation. On power-redundant systems, remove and replace only one PSU at a time in a system that is powered on.

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Disconnect the power cable from the power outlet and from the PSU you intend to remove.
3. Remove the cable from the strap on the PSU handle.
4. Unlatch and lift or remove the optional cable management accessory if it interferes with the PSU removal.

**NOTE:** For information about the cable management when the PSU is removed or installed while the system is in a rack, see the system's cable management arm documentation at [PowerEdge Manuals](#).

### Steps

Press the release latch and holding the PSU handle, slide the PSU out of the bay.

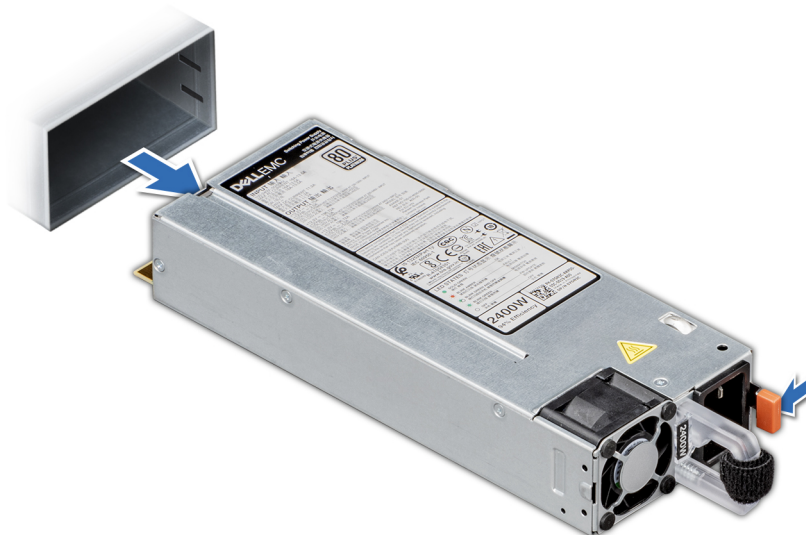


Figure 155. Removing a power supply unit

### Next steps

1. [Replace the PSU](#) or [Install the PSU blank](#).

# Installing a power supply unit

## Prerequisites


1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. For systems that support redundant PSU, ensure that both the PSUs are of the same type and have the same maximum output power.

**i** **NOTE:** The maximum output power (shown in watts) is listed on the PSU label.

3. Remove the PSU blank.

## Steps

Slide the PSU into the PSU bay until the release latch snaps into place.

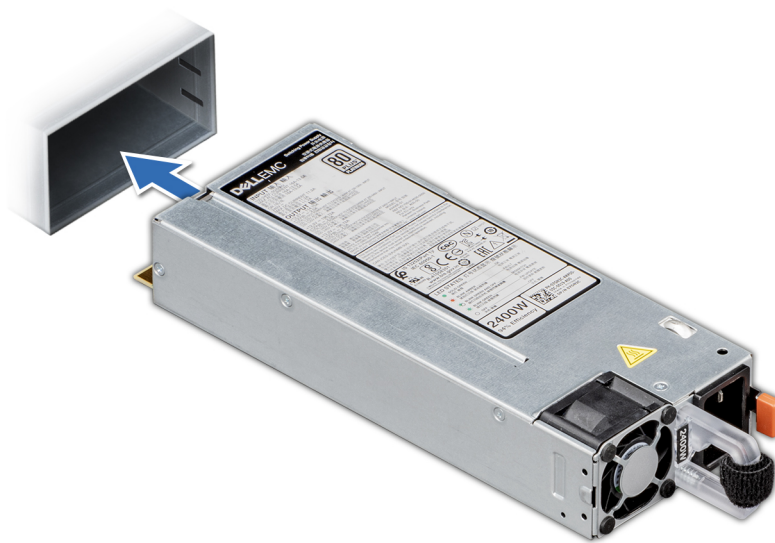

**Figure 156. Installing a power supply unit**

## Next steps

1. If you have unlatched or removed the cable management accessory, re-install or relatch it. For information about the cable management when the PSU is removed or installed while the system is in the rack, see the system's cable management accessory documentation at [PowerEdge Manuals](#).
2. Connect the power cable to the PSU, and plug the cable into a power outlet.

**⚠ CAUTION:** When connecting the power cable to the PSU, secure the cable to the PSU with the strap.

**i** **NOTE:** When installing, hot swapping, or hot adding a new PSU, wait for 15 seconds for the system to recognize the PSU and determine its status. The PSU redundancy may not occur until discovery is complete. The PSU status indicator turns green to indicate that the PSU is functioning properly.

# Trusted Platform Module

This is a service technician replaceable part only.


## Upgrading the Trusted Platform Module

### Removing the TPM

#### Prerequisites

##### NOTE:

- Ensure that your operating system supports the version of the TPM module being installed.
- Ensure that you download and install the latest BIOS firmware on your system.
- Ensure that the BIOS is configured to enable UEFI boot mode.

 **CAUTION:** After the TPM plug-in module is installed, it is cryptographically bound to that specific system board. When the system is powered on, any attempt to remove an installed TPM plug-in module breaks the cryptographic binding, and the removed TPM cannot be installed on another system board. Ensure any keys you have stored on the TPM have been securely transferred.

#### Steps

1. Locate the TPM connector on the system board.
2. Press to hold the module down and remove the screw using the security Torx 8-bit shipped with the TPM module.
3. Slide the TPM module out from its connector.
4. Push the plastic rivet away from the TPM connector and rotate it 90° counterclockwise to release it from the system board.
5. Pull the plastic rivet out of its slot on the system board.

### Installing the TPM

#### Steps

1. To install the TPM, align the edge connectors on the TPM with the slot on the TPM connector.
2. Insert the TPM into the TPM connector such that the plastic rivet aligns with the slot on the system board.
3. Press the plastic rivet until the rivet snaps into place.
4. Replace the screw that secures the TPM to the system board.

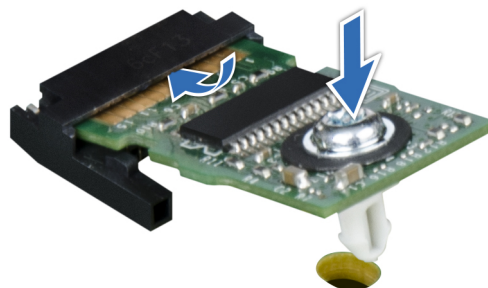


Figure 157. Installing the TPM

## Initializing TPM for users

### Steps

1. Initialize the TPM.  
For more information, see [Initializing the TPM for users](#).
2. The **TPM Status** changes to **Enabled, Activated**.

## Initializing the TPM 1.2 for users

### Steps

1. While booting your system, press F2 to enter System Setup.
2. On the **System Setup Main Menu** screen, click **System BIOS > System Security Settings**.
3. From the **TPM Security** option, select **On with Preboot Measurements**.
4. From the **TPM Command** option, select **Activate**.
5. Save the settings.
6. Restart your system.

## Initializing the TPM 2.0 for users

### Steps


1. While booting your system, press F2 to enter System Setup.
2. On the **System Setup Main Menu** screen, click **System BIOS > System Security Settings**.
3. From the **TPM Security** option, select **On**.
4. Save the settings.
5. Restart your system.

## System board

This is a service technician replaceable part only.

## Removing the system board

### Prerequisites

 **CAUTION:** If you are using the Trusted Platform Module (TPM) with an encryption key, you may be prompted to create a recovery key during program or System Setup. Be sure to create and safely store this recovery key. If you replace this system board, you must supply the recovery key when you restart your system or program before you can access the encrypted data on your drives.

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. Remove the following components:
  - a. [Air shroud](#)
  - b. [Cooling fan cage assembly](#)
  - c. [Side wall bracket](#)
  - d. [Memory modules](#)
  - e. [Processor and heat sink module](#) or [Liquid cooling module](#)
  - f. [BOSS-N1 module](#) (if installed)
  - g. [Serial COM port](#) (if installed)
  - h. [VGA port](#) (if installed)

- i. Expansion card risers
- j. Internal USB card (if installed)
- k. OCP card (if installed)
- l. Intrusion switch module
- m. Power supply units (PSU)
- n. Disconnect all cables from the system board.

 **CAUTION:** Take care not to damage the system identification button while removing the system board from the system.

### Steps

1. Using the system board holder and plunger, slide the system board towards the front of the system.
2. Lift the system board out of the chassis.

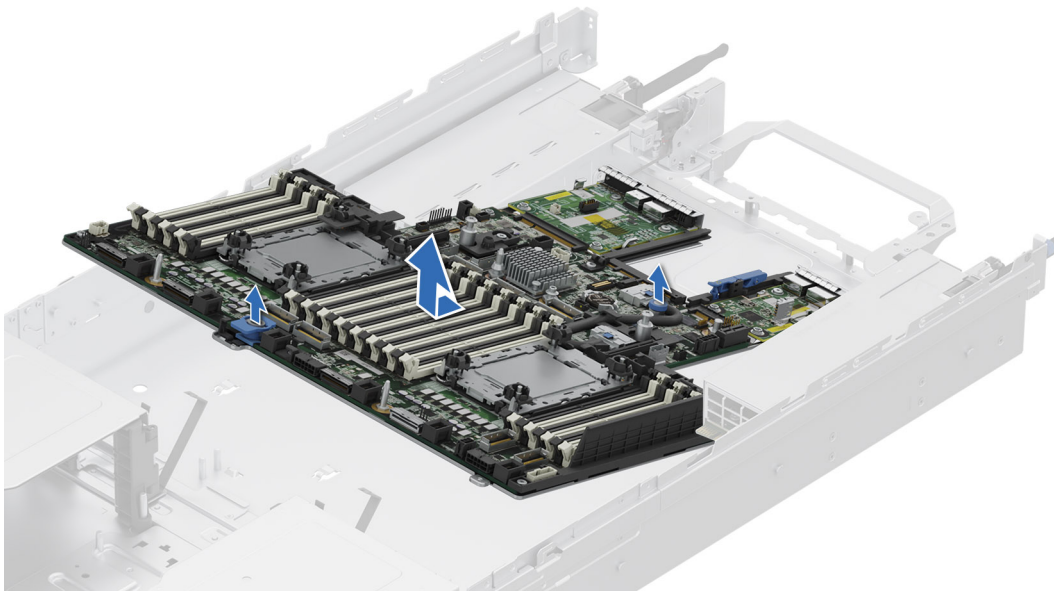



Figure 158. Removing the system board

### Next steps

1. Install the system board.

## Installing the system board


### Prerequisites

 **NOTE:** Before replacing the system board, replace the old iDRAC MAC address label in the Information tag with the iDRAC MAC address label of the replacement system board

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. If you are replacing the system board, remove all the components that are listed in the [removing the system board](#) section.


### Steps

1. Unpack the new system board assembly.

 **CAUTION:** Do not lift the system board by holding a memory module, processor, or other components.

**CAUTION:** Take care not to damage the system identification button while placing the system board into the chassis.

2. Holding the system board holder and plunger, lower the system board into the system.
3. Slide the system board towards the rear of the chassis until the connectors are firmly seated in the slots.

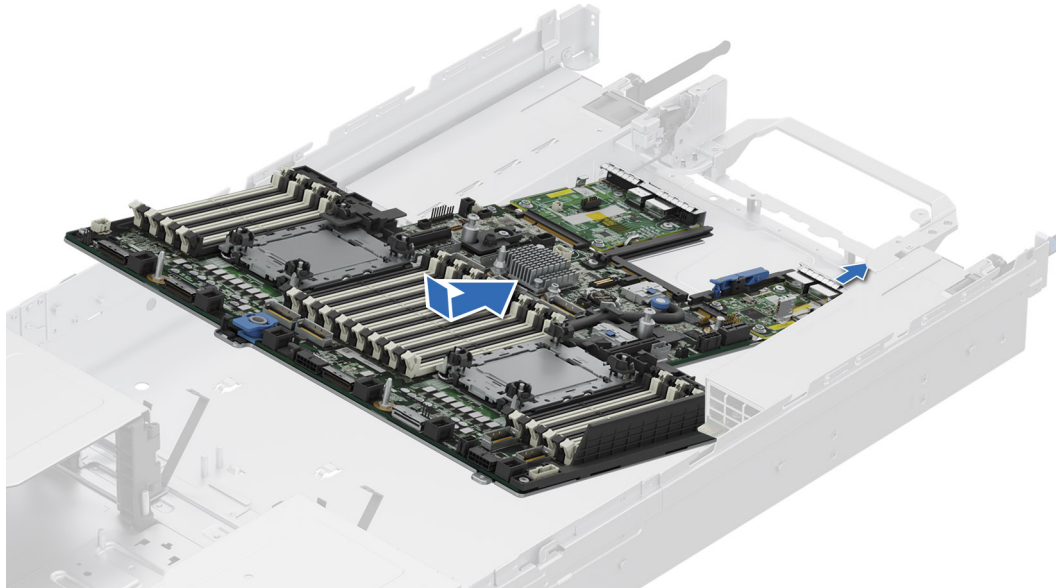

**Figure 159. Installing the system board**

#### Next steps


1. Replace the following components:
  - a. [Trusted Platform Module \(TPM\)](#)

**NOTE:** The TPM Module must be replaced only while installing new system board.

- b. [Internal USB card \(if removed\)](#)
  - c. [OCP card \(if removed\)](#)
  - d. [Intrusion switch module](#)
  - e. [Processor and heat sink or Liquid cooling module](#)
  - f. [Memory modules](#)
  - g. [BOSS-N1 module \(if removed\)](#)
  - h. [Serial COM port \(if removed\)](#)
  - i. [VGA port \(if removed\)](#)
  - j. [Expansion card risers](#)
  - k. [Side wall bracket](#)
  - l. [Cooling fan cage assembly](#)
  - m. [Air shroud](#)
  - n. [Power supply units \(PSU\)](#)
2. Reconnect all cables to the system board.

**NOTE:** Ensure that the cables inside the system are routed along the chassis wall and secured using the cable securing bracket.

3. Ensure that you perform the following steps:
  - a. Use the Easy Restore feature to restore the Service Tag. See the [Restoring the system using Easy Restore](#) section.
  - b. If the service tag is not backed up in the backup flash device, enter the system service tag manually. See the [Manually update the Service Tag by using System Setup](#) section.
  - c. Update the BIOS and iDRAC versions.

 **NOTE:** Reenable the Trusted Platform Module (TPM). See the [Upgrading the Trusted Platform Module](#) section.

4. If you are not using Easy restore, import your new or existing iDRAC Enterprise license. For more information, see the [Integrated Dell Remote Access Controller User's Guide](#).
5. Follow the procedure listed in [After working inside your system](#).



## Restoring the system using Easy Restore

The Easy Restore feature enables you to restore your service tag, license, UEFI configuration, and the system configuration data after replacing the system board. All data is backed up in a backup flash device automatically. If BIOS detects a new system board, and the service tag in the backup flash device, BIOS prompts the user to restore the backup information.

### About this task

Below is a list of options/steps available:

#### Steps

1. Restore the service tag, license, and diagnostics information, press **Y**
2. Navigate to the Lifecycle Controller based restore options, press **N**
3. Restore data from a previously created **Hardware Server Profile**, press **F10**  
 **NOTE:** When the restore process is complete, BIOS prompts to restore the system configuration data.
4. Restore data from a previously created **Hardware Server Profile**, press **F10**
5. To restore the system configuration data, press **Y**
6. To use the default configuration settings, press **N**  
 **NOTE:** After the restore process is complete, system reboots.

## LOM card, MIC card, and rear I/O board

### Removing the LOM card and rear I/O board

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the system board](#).

 **NOTE:** The procedure to remove the liquid cooling rear I/O board and rear I/O board is same.

#### Steps

1. Using a Phillips # 2 screwdriver, remove the screws that secure the LAN on Motherboard (LOM) card and rear I/O board to the system board.
2. Holding the edges, pull the LOM card or rear I/O board to disconnect from the connector on the system board.


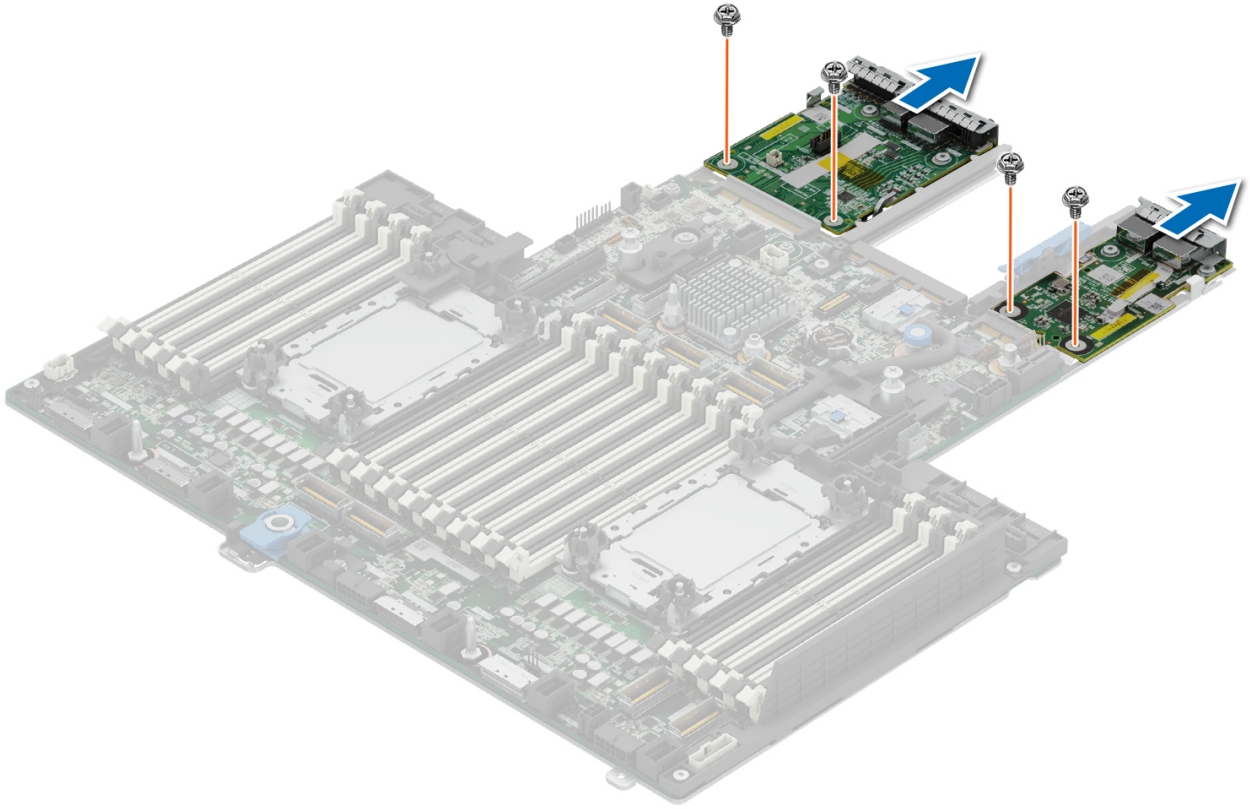


Figure 160. Removing the LOM card and rear I/O board

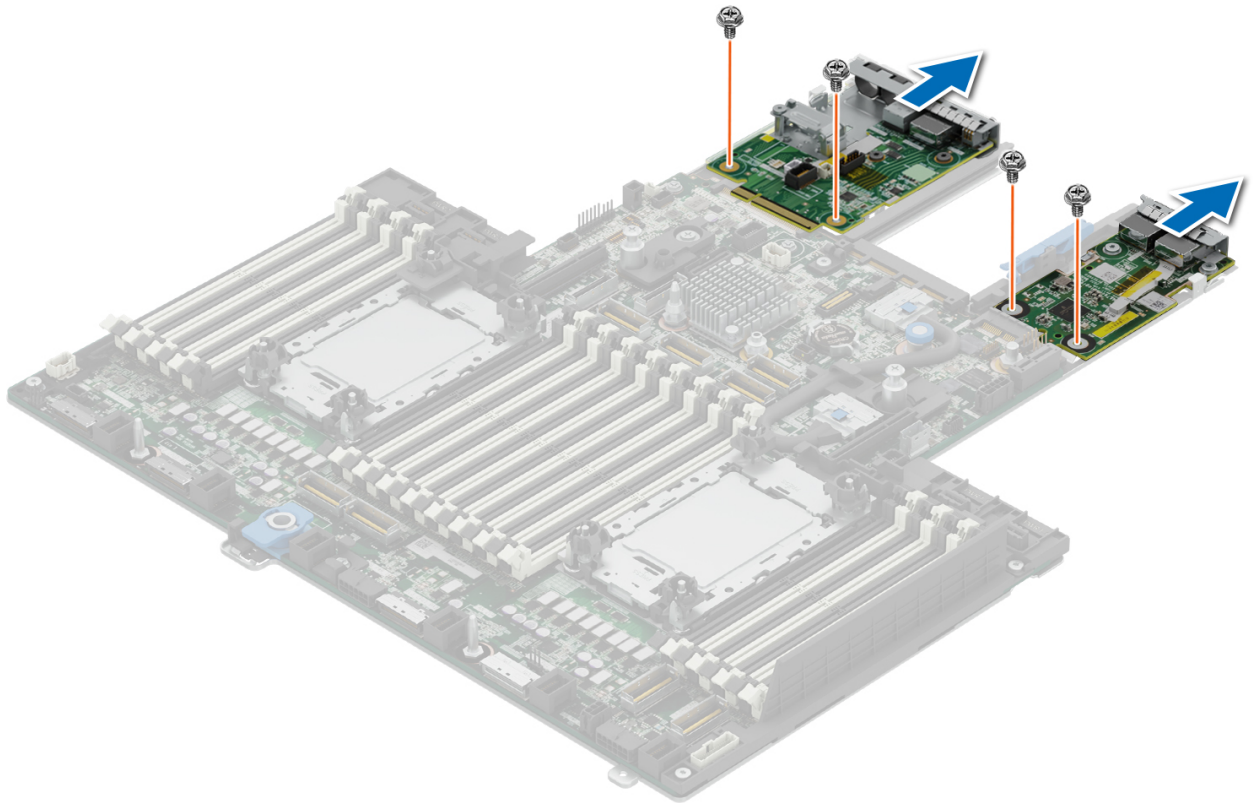

**Figure 161. Removing liquid cooling rear I/O board**

#### Next steps

1. [Replace the LOM card and rear I/O board.](#)

## Installing the LOM card and rear I/O board

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the system board.](#)

**i** **NOTE:** The procedure to install the liquid cooling rear I/O board and rear I/O board is same.

#### Steps

1. Align the connectors and slots on the LOM card or rear I/O board with the connector and standoffs on the system board.
2. Press the LOM card or rear I/O board until firmly seated on the system board connector.
3. Using a Phillips #2 screwdriver, secure the LOM card or rear I/O board to the system board with screws.


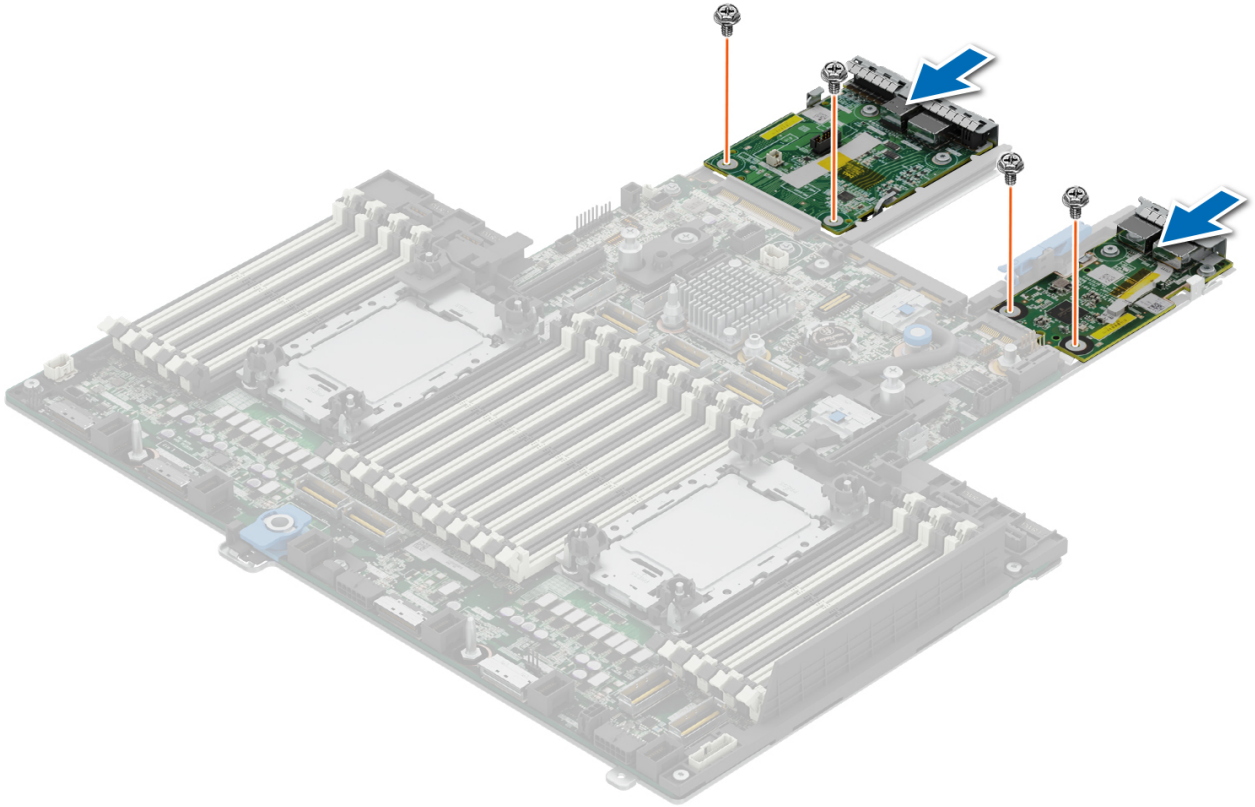


Figure 162. Installing the LOM card and rear I/O board

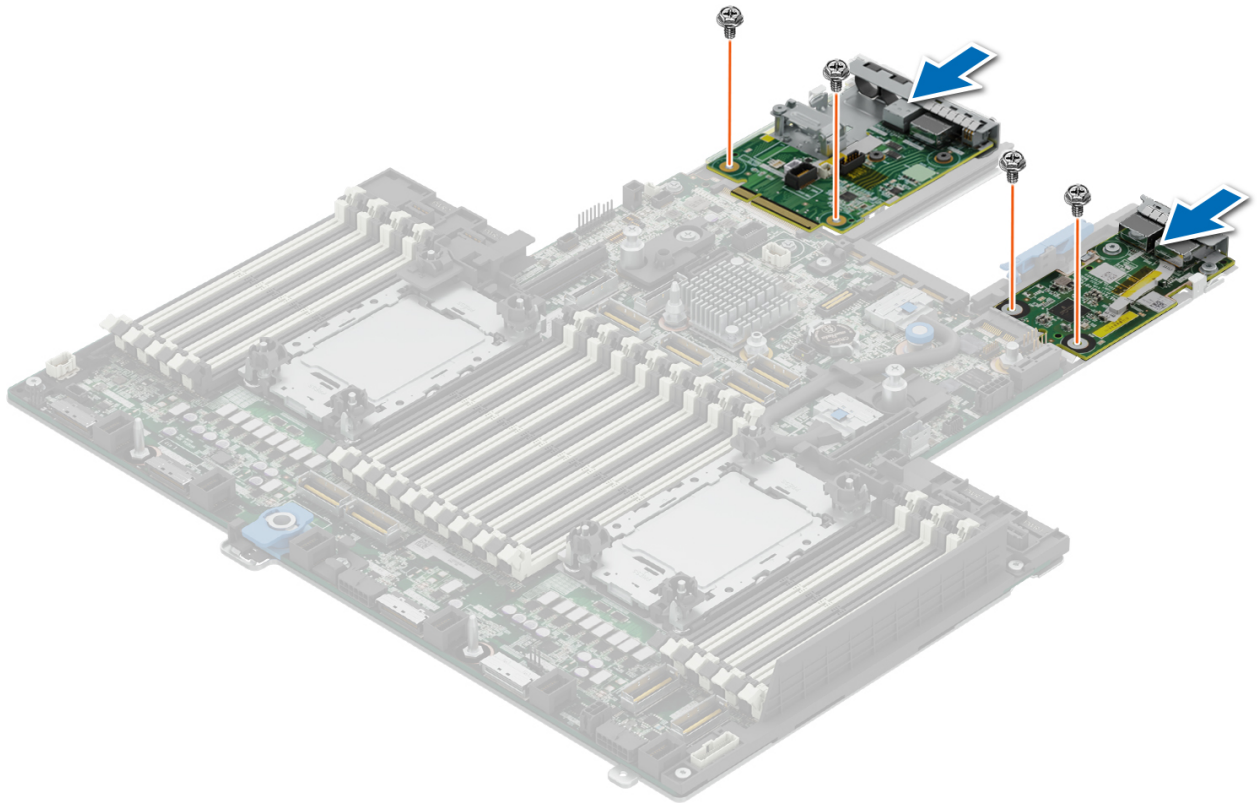

**Figure 163. Installing the liquid cooling rear I/O board**

#### Next steps

1. [Install the system board.](#)
2. Follow the procedure listed in [After working inside your system.](#)

## Control panel

This is a service technician replaceable part only.

## Removing the right control panel

#### Prerequisites


1. Follow the safety guidelines listed in the [Safety Instructions.](#)
2. Follow the procedure listed in the [Before working inside your system.](#)
3. [Remove the drive backplane cover.](#)
4. If installed, [remove the air shroud.](#)
5. [Remove the cooling fan cage assembly.](#)
6. [Remove the side wall bracket.](#)

#### Steps

1. Using the Phillips #1 screwdriver, remove the screws that secures the right control panel and cable cover to the system.
2. Remove the cable cover away the system.
3. Disconnect the right control panel cable and the VGA cable from the connectors on the system board.
4. Holding the cable, slide the right control panel out of the system.

**NOTE:** Observe the routing of the cable as you remove the right control panel from the system.

**NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

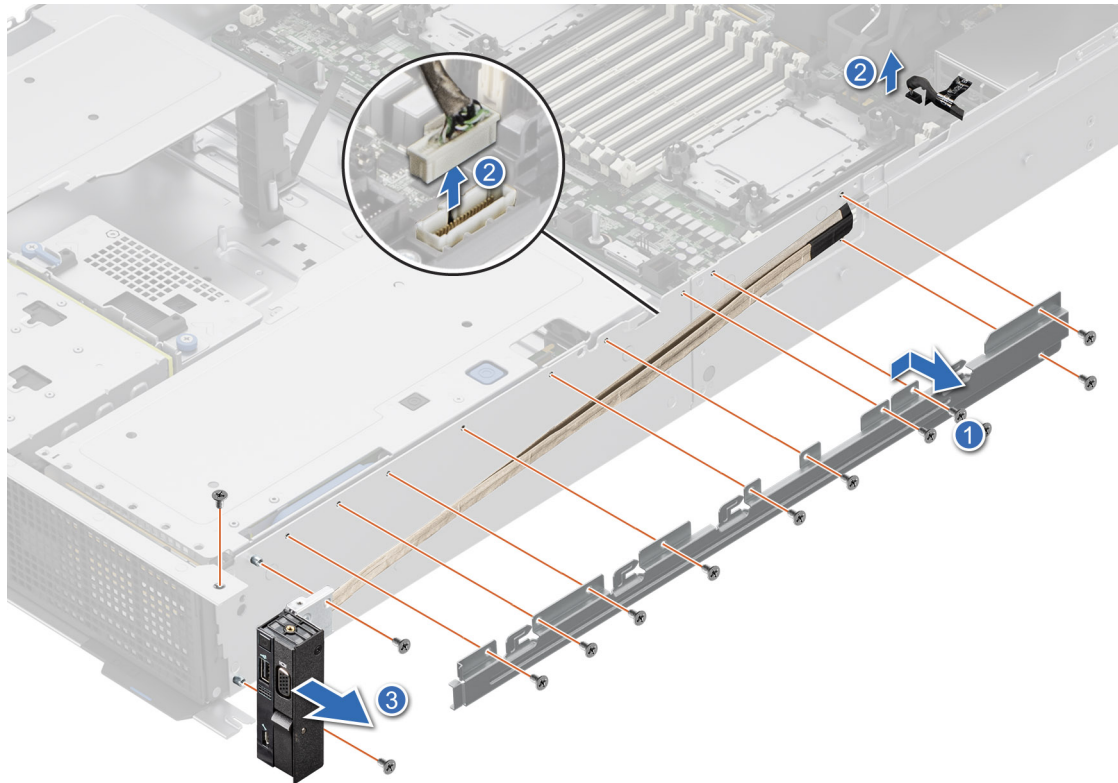

**Figure 164. Removing the right control panel**

#### Next steps

1. [Replace the right control panel.](#)

## Installing the right control panel

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the drive backplane cover.](#)
4. If installed, [remove the air shroud.](#)
5. [Remove the cooling fan cage assembly.](#)
6. [Remove the side wall bracket.](#)


#### Steps

1. Align and slide the right control panel into the slot on the system.
2. Route the right control panel cable through the side wall of the system.
3. Align and slide the right control panel cable cover in the slot on the system.

**NOTE:** Route the cable properly to prevent the cable from being pinched or crimped.

4. Connect the right control panel cable and VGA cable to the connectors on the system board.
5. Using the Phillips #1 screwdriver, tighten the screws that secures the right control panel and the cable cover to the system.

**NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

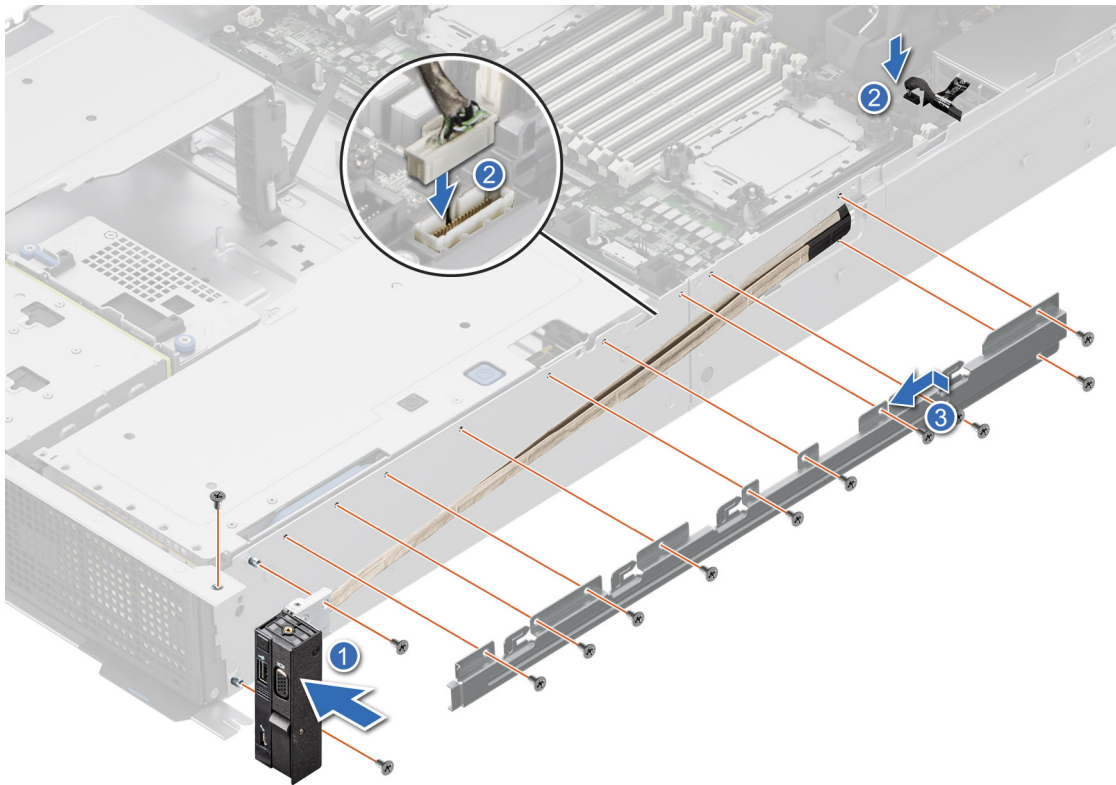

**Figure 165. Installing the right control panel**

#### Next steps

1. Install the side wall bracket.
2. Install the cooling fan cage assembly.
3. Install the drive backplane cover.
4. Install the air shroud.
5. Follow the procedure listed in [After working inside your system](#).

## Removing the left control panel

#### Prerequisites


1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the drive backplane cover](#).
4. If installed, [remove the air shroud](#).
5. [Remove the cooling fan cage assembly](#).
6. [Remove the side wall bracket](#).

#### Steps

1. Using the Phillips #1 screwdriver, remove the screws that secures the left control panel and the cable cover to the system.
2. Remove the cable cover away the system.
3. Disconnect the control panel cable from the connector on the system board.
4. Holding the cable, slide the left control panel out of the system.

**NOTE:** Observe the routing of the cable as you remove the right control panel from the system.

**NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

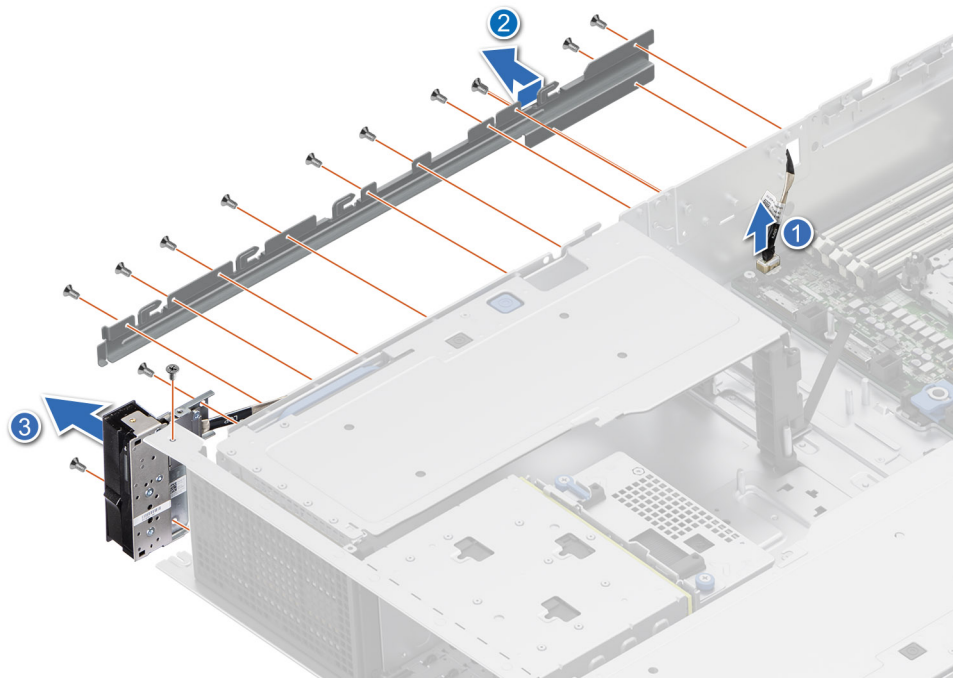

**Figure 166. Removing the left control panel**

#### Next steps

1. [Replace the left control panel.](#)

## Installing the left control panel

#### Prerequisites

1. Follow the safety guidelines listed in the [Safety Instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the drive backplane cover.](#)
4. If installed, [remove the air shroud.](#)
5. [Remove the cooling fan cage assembly.](#)
6. [Remove the side wall bracket.](#)


#### Steps

1. Align and slide the left control panel in the slot on the system.
2. Route the left control panel cable through the side wall of the system.
3. Align and slide the left control panel cable cover in the slot on the system.

**NOTE:** Route the cable properly to prevent the cable from being pinched or crimped.

4. Connect the left control panel cable to the connector on the system board.
5. Using the Phillips #1 screwdriver, tighten the screws to secure the left control panel and the cable cover to the system.

**NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

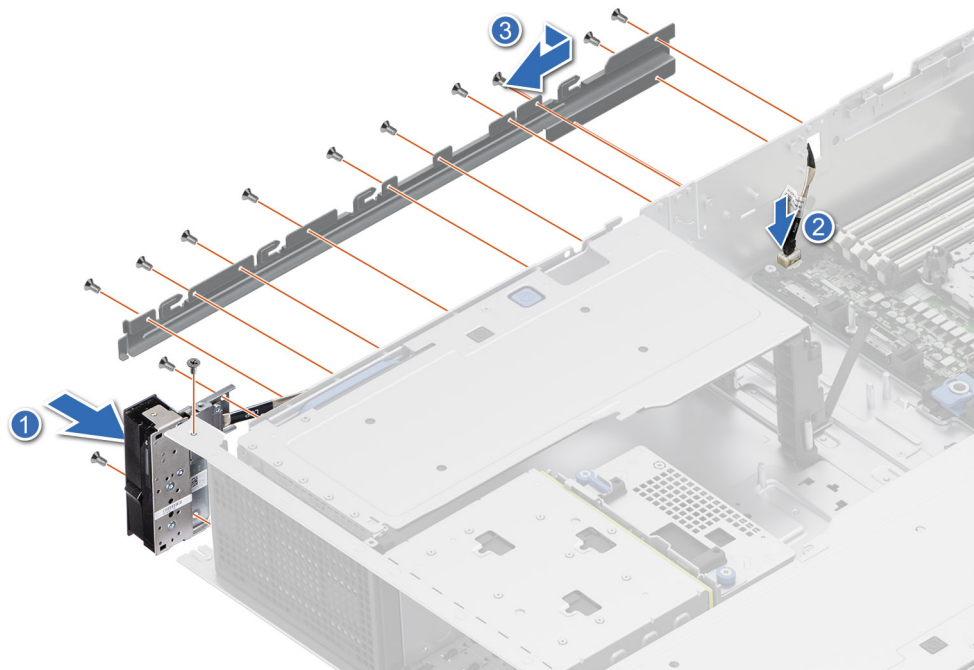

**Figure 167. Installing the left control panel**


**Next steps**

1. Install the side wall bracket.
2. Install the cooling fan cage assembly.
3. Install the drive backplane cover.
4. Install the air shroud.
5. Follow the procedure listed in [After working inside your system](#).

# Upgrade Kits

The table lists the available After Point Of Sale [APOS] kits.

**Table 82. Upgrade kits**

Kits	Related links to service instructions
Bezel	See : <a href="#">Installing the front bezel</a>
M.2 NVMe SSD	See : <a href="#">Installing the M.2 SSD module</a>
BOSS-N1	See : <a href="#">Installing the BOSS-N1 module</a>
GPU	See : <a href="#">GPU kit</a>
Hard drives SSD	See : <a href="#">Installing the drive into the drive carrier</a>
Memory	See : <a href="#">Installing a memory module</a>
Network cards (Standard PCIe adapter LP/FH)	See : <a href="#">Installing the LOM card and rear I/O board</a>
Network cards (OCP)	See : <a href="#">Installing the OCP card</a>
PCIe SSD card	See : <a href="#">Installing the drive carrier</a>
Power cords	Offered, but without special service instructions
Power supplies	See : <a href="#">Installing a power supply unit</a>
Quick sync	Offered, but without special service instructions
TPM	See : <a href="#">Upgrading the Trusted Platform Module</a>
Processor enablement thermal kits	See : <a href="#">Installing the processor</a>
Internal USB 3.0 card	See : <a href="#">Installing the internal USB card</a>
Serial COM port daughter card	See : <a href="#">Installing the serial COM port</a>
Cables	Offered, but without special service instructions
Heat sink	See : <a href="#">Installing the processor and heat sink module</a>
Risers	See : <a href="#">Installing the expansion card risers</a>
Rail	Offered, but without special service instructions
CMA	Offered, but without special service instructions  <b>NOTE:</b> CMA is not supported in Direct Liquid Cooling configuration.

## Topics:

- [BOSS-N1 module kit](#)
- [GPU kit](#)
- [Internal USB card kit](#)
- [Serial COM port kit](#)
- [VGA port kit](#)

## BOSS-N1 module kit

The BOSS-N1 module supports up to two M.2 SSDs.

Before you begin the installation or removal process, follow the [Safety Instructions](#) and [before working inside your system](#) instructions.

**Table 83. BOSS-N1 module kit components**


Components in kit	R760xa (quantity)
BOSS-N1 controller card module	1
BOSS-N1 card carrier	1 or 2*
M.2 NVMe SSD	1 or 2*
M.2 NVMe SSD capacity label	1 or 2†
BOSS-N1 card carrier blank	1
M3 x 0.5 x 4.5 mm screws	2
BOSS-N1 power cable for Riser 1 (220 mm)	1
BOSS-N1 signal cable for Riser 1 (170 mm)	1

**NOTE:** \*The quantity depends on the purchase order.


**NOTE:** †The quantity depends on the BOSS-N1 card carrier

To remove the BOSS blank:

1. Power off the system and [remove the system cover](#).
2. Use a screwdriver to push out the blank from the BOSS-N1 module bay.

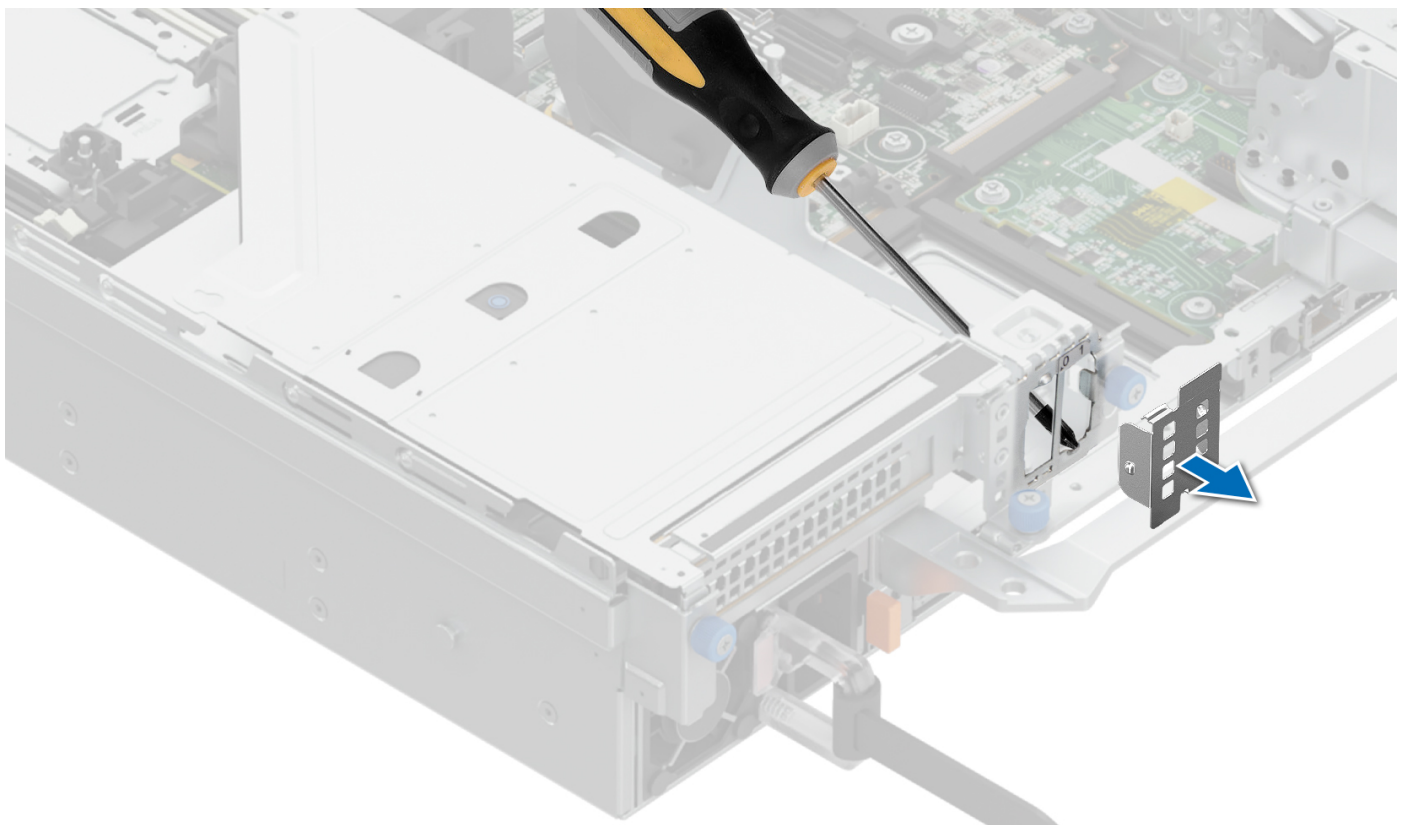

**Figure 168. Removing the BOSS-N1 module blank**

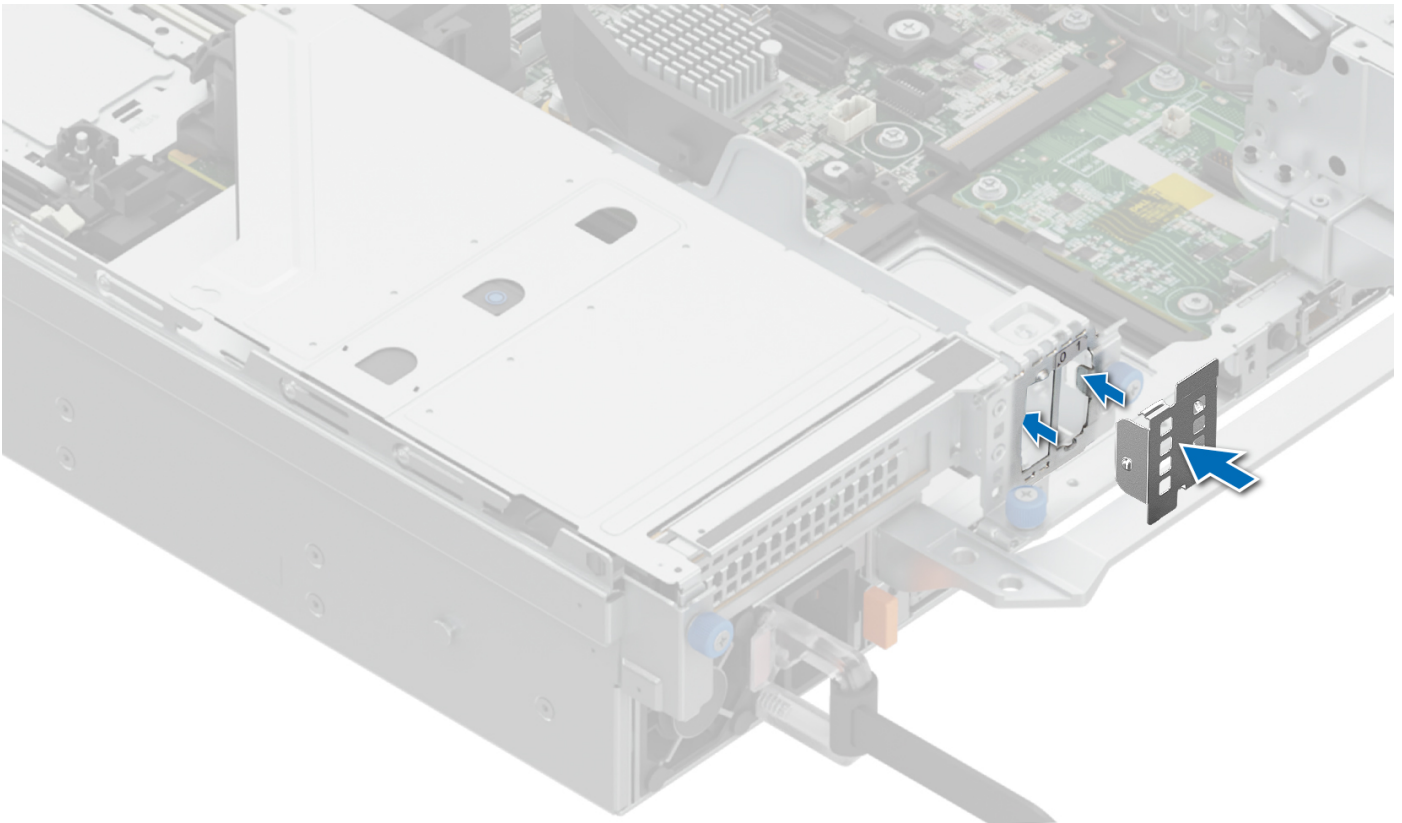

**Figure 169. Installing the BOSS-N1 module blank**

To install the BOSS-N1 module:

1. Install the BOSS-N1 module. To install the BOSS-N1 , see [installing the BOSS-N1 module](#) steps 1 to 5.
2. Install the M.2 SSD. To install the M.2 SSD, see [installing the BOSS-N1 module](#) steps 6 to 10.

**i** **NOTE:** Installing the BOSS-N1 card carrier does not require the system to be powered off. System shutdown is only required when installing the BOSS-N1 module.

To remove the BOSS-N1 module:

1. Power off the system and [remove the system cover](#).
2. Remove the M.2 SSD. To remove the M.2 SSD, see [removing the BOSS-N1 module](#) steps 1 to 4.
3. Remove the BOSS-N1 module. To remove the BOSS-N1 module, see [removing the BOSS-N1 module](#) steps 5 to 8.
4. Install the BOSS blank.

**i** **NOTE:** Removal of the BOSS-N1 card carrier does not require the system to be powered off. System shutdown is only required when removing the BOSS-N1 module.

**i** **NOTE:** Disconnect the BOSS signal cable and the BOSS power cable before lifting the controller card module from the system.

# GPU kit

The GPU kits of different types are available for the customer. Depending on the kit ordered, the respective components will be available.

**CAUTION:** Do not install GPUs, network cards, or other PCIe devices on your system that are not validated and tested by Dell. Damage caused by unauthorized and invalidated hardware installation will null and void the system warranty.

**WARNING:** Consumer-Grade GPU should not be installed or used in the Enterprise Server products.

**Table 84. Components in the full length (FL) GPU kit**

Components	GPU FL kit	
	Details	Quantity
Risers	Riser configuration (RC) 0 and 1	RC 0: R1V (HL) + RF1A (FL)^ + R4T (HL) + RF2A^ (FL) RC 1: R1V (HL)+ R4T (HL) + RF1B (FL) + RF2B (FL)
Fans	STD fan	6
Cables	Power cable	2 x 4 (8-position) or 2 x 6 + 1 x 4 (12-position + 4-sideband)
FL - Full Length, HL - Half Length, HPR - High Performance, RC - Riser configuration		

You may not need all the components in the kit for GPU installation. For information about riser configurations, see the [expansion card installation guidelines](#) section.

**NOTE:** ^ RF1A and RF2A support Double Width (DW) GPU.

Before you begin, follow the [Safety Instructions](#) and [before working inside your system](#) instructions.

1. Use the existing heat sink, cooling fans and air shroud.

**NOTE:** For more information about supported cooling fans matrix, see the thermal restriction section in [Technical specifications](#).

2. If required, [install NVLink sponges](#) and [install NVLink bridges](#).
3. [Install the GPU](#) into front GPU riser module or [Install the GPU](#) into expansion card riser.

**NOTE:** Mixing of different GPUs are not allowed.

**NOTE:** See [expansion card installation guidelines](#) to know about risers and slots that support GPU.

**NOTE:** For information on riser slot location on the system board, see the [System board jumpers and connectors](#) topic.



4. If applicable, connect the power cables to the GPU. To know the connectors for GPU on the system board, see the [System board jumpers and connectors](#) topic.

**NOTE:** Refer to the GPU power cable matrix to know about the requirement of cable for the GPU.

**Table 85. GPU power cable matrix**

Category	Description	Type	Vendor	Cable	Cable quantity
GPU	NVIDIA A16, A30, A40, A100	FH and FL	NVIDIA	CPU type 2 x 4 (8-position)	2 each for RF1A and RF2A

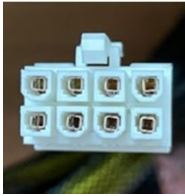**Table 85. GPU power cable matrix (continued)**

Category	Description	Type	Vendor	Cable	Cable quantity
					
GPU	NVIDIA H100 and L40	FH and FL	NVIDIA	12VH type 2 x 6 + 1 x 4 (12-position + 4-sideband) 	2 each for RF1A and RF2A
HH - Half Height, HL - Half Length, FH - Full Height, FL - Full Length					

5. [Install the GPU riser module or expansion card riser](#). See GPU kit components table for supported GPU risers.

6. [Install the air shroud](#).

After installing, follow the [after working inside the system](#) instructions.

## Internal USB card kit

The internal USB card kit contains one internal USB card. For installation of internal USB card, see [installing the internal USB card](#) section.

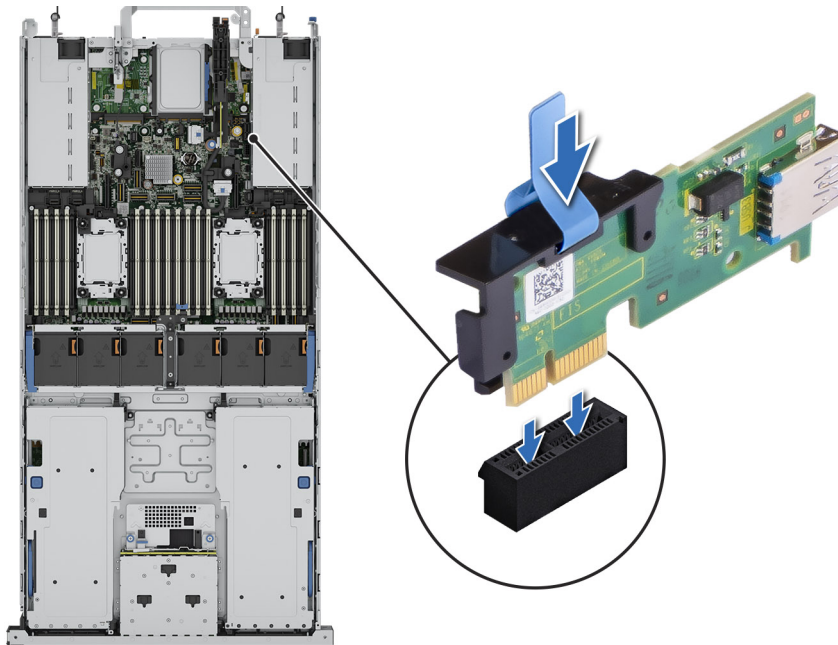


Figure 170. Internal USB card port information

## Serial COM port kit

The serial COM port kit contains the components listed in the table.

Table 86. Serial COM port kit

Components	Quantity
Serial COM port card	1
Cable	1

For installation procedure of the serial COM port, see [Installing the serial COM port](#) in the serial COM port section.

## VGA port kit

The VGA port kit contains the components listed in the table.

Table 87. VGA port kit

Components	Quantity
VGA port card	1
Cable	1

For installation procedure of the VGA port, see [installing the VGA port](#) in the VGA port section.

# Jumpers and connectors

This topic provides some basic and specific information about jumpers and switches. It also describes the connectors on the various boards in the system. Jumpers on the system board help to disable the system and reset the passwords. To install components and cables correctly, you must know the connectors on the system board.

**Topics:**

- [System board jumpers and connectors](#)
- [System board jumper settings](#)
- [Disabling a forgotten password](#)

# System board jumpers and connectors

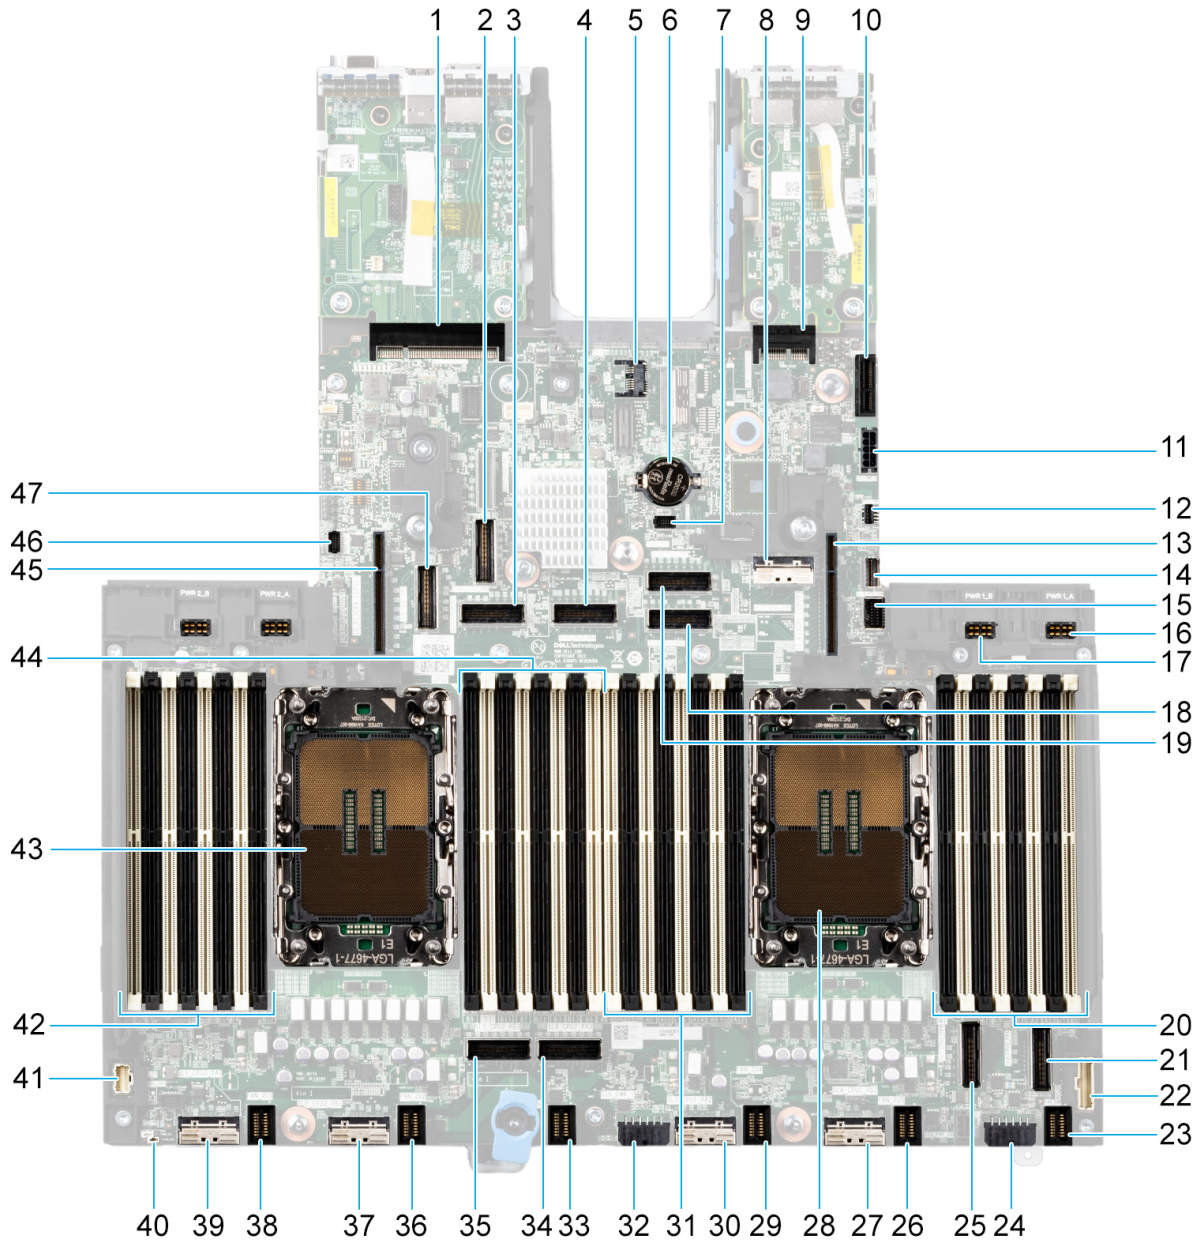


Figure 171. System board jumpers and connectors

Table 88. System board jumpers and connectors

Item	Connector	Description
1.	Rear_I/O_connector	Rear I/O connector
2.	SL10_CPU2_PB5	PCIe connector 10
3.	SL11_CPU2_PB6	PCIe connector 11
4.	SL12_CPU2_PA6	PCIe connector12
5.	TPM	TPM connector
6.	BATTERY	Coin cell battery

**Table 88. System board jumpers and connectors (continued)**

<b>Item</b>	<b>Connector</b>	<b>Description</b>
7.	PSU 1 PUCK Sideband Signal	PSU 1 PUCK Sideband Signal
8.	SL15_CPU1_PB8	PCIe connector15
9.	LOM_Connector	LOM connector
10.	Internal USB connector	Internal USB connector
11.	PWR Connector 0	Power Connector 0
12.	BOSS card power	BOSS card power
13.	IO_RISER1 (CPU1)	Riser 1
14.	SL16_PCH_PA9	PCIe connector 16
15.	FRONT_VIDEO	Front VGA
16.	PWR1_A	For power cable
17.	PWR1_B	For Riser 1 GPU power
18.	SL13_CPU1_PB7	PCIe connector13
19.	SL14_CPU1_PB7	PCIe connector 14
20.	A9, A1, A15, A7, A11, A3, A13, A5	DIMMs for CPU 1 channels A, B, C, D
21.	SL8_CPU1_PA4	PCIe connector 8
22.	RGT_CP	Right control panel connector
23.	FAN_2U6	Fan 6 connector
24.	SIG_PWR_2	Power connector 2
25.	SL7_CPU1_PB4	PCIe connector 7
26.	FAN_2U5	Fan 5 connector
27.	SL4_CPU1_PB2	PCIe connector 4
28.	CPU 1	Processor 1
29.	FAN_2U4	Fan 4 connector
30.	SL3_CPU1_PA2	PCIe connector 3
31.	A8, A16, A2, A10, A6, A14, A4, A12	DIMMs for CPU 1 channels H, G, F, E
32.	SIG_PWR_1	Power connector 1
33.	FAN_2U3	Fan 3 connector
34.	SL6_CPU2_PA3	PCIe connector 6
35.	SL5_CPU2_PB3	PCIe connector 5
36.	FAN_2U2	Fan 2 connector
37.	SL2_CPU2_PB1	PCIe connector 2
38.	FAN_2U1	Fan 1 connector
39.	SL1_CPU2_PA1	PCIe connector 1
40.	PWRD_EN and NVRAM_CLR	Jumper
41.	LFT_CP	Left control panel connector
42.	B9, B1, B15, B7, B11, B3, B13, B5	DIMM for CPU 2 channels A, B, C, D
43.	CPU 2	Processor 2


 

 
**Table 88. System board jumpers and connectors (continued)**

Item	Connector	Description
44.	B8, B16, B2, B10, B6, B14, B4, B12	DIMMs for CPU 2 channels H, G, F, E
45.	IO_RISER4 (CPU2)	Riser 4 requires Processor 2
46.	PSU2_SIG	PUCK sideband signal
47.	SL9_CPU2_PA5	PCIe connector 9

## System board jumper settings

For information about resetting the password jumper to disable a password, see the [Disabling a forgotten password](#) section.

**Table 89. System board jumper settings**

Jumper	Setting	Description
PWRD_EN	 2 4 6 (default)	The BIOS password feature is enabled.
	 2 4 6	The BIOS password feature is disabled. The BIOS password is now disabled and you are not allowed to set a new password.
NVRAM_CLR	 1 3 5 (default)	The BIOS configuration settings are retained at system boot.
	 1 3 5	The BIOS configuration settings are cleared at system boot.

**CAUTION:** You should be cautious when changing the BIOS settings. The BIOS interface is designed for advanced users. Any changes in the setting might prevent your system from starting correctly and may even result in data loss.

## Disabling a forgotten password

The software security features of the system include a system password and a setup password. The password jumper enables or disables password features and clears any password(s) currently in use.

### Prerequisites

**CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that are shipped with your product.

### Steps

- Power off the system and all attached peripherals. Disconnect the system from the electrical outlet, and disconnect the peripherals.
- [Remove the system cover.](#)
- Move the jumper on the system board from pins 2 and 4 to pins 4 and 6.
- [Replace the system cover.](#)
  - NOTE:** The existing passwords are not disabled (erased) until the system boots with the jumper on pins 4 and 6. However, before you assign a new system and/or setup password, you must move the jumper back to pins 2 and 4.
  - NOTE:** If you assign a new system and/or setup password with the jumper on pins 4 and 6, the system disables the new password(s) the next time it boots.
- Reconnect the peripherals and connect the system to the electrical outlet, and then power on the system.

6. Power off the system.
7. [Remove the system cover.](#)
8. Move the jumper on the system board from pins 4 and 6 to pins 2 and 4.
9. [Replace the system cover.](#)
10. Reconnect the peripherals and connect the system to the electrical outlet, and then power on the system.
11. Assign a new system and/or setup password.


# System diagnostics and indicator codes

The diagnostic indicators on the system front panel display system status during system startup.

## Topics:

- Status LED indicators
- System health and system ID indicator codes
- iDRAC Quick Sync 2 indicator codes
- iDRAC Direct LED indicator codes
- LCD panel
- NIC indicator codes
- Power supply unit indicator codes
- Drive indicator codes
- Using system diagnostics

## Status LED indicators

 **NOTE:** The indicators display solid amber if any error occurs.

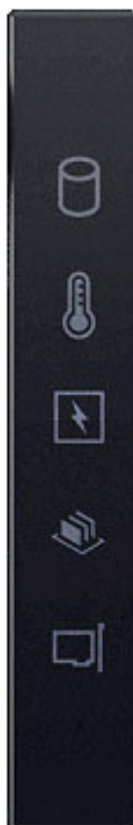







Figure 172. Status LED indicators

**Table 90. Status LED indicators and descriptions**

Icon	Description	Condition	Corrective action
	Drive indicator	The indicator turns solid amber if there is a drive error.	<ul style="list-style-type: none"> <li>• Check the System Event Log to determine if the drive has an error.</li> <li>• Run the appropriate Online Diagnostics test. Restart the system and run embedded diagnostics (ePSA).</li> <li>• If the drives are configured in a RAID array, restart the system, and enter the host adapter configuration utility program.</li> </ul>
	Temperature indicator	The indicator turns solid amber if the system experiences a thermal error (for example, the ambient temperature is out of range or there is a fan failure).	<p>Ensure that none of the following conditions exist:</p> <ul style="list-style-type: none"> <li>• A cooling fan has been removed or has failed.</li> <li>• System cover, air shrouds, or back filler bracket has been removed.</li> <li>• Ambient temperature is too high.</li> <li>• External airflow is obstructed.</li> </ul> <p>If the problem persists, see the <a href="#">Getting help</a> section.</p>
	Electrical indicator	The indicator turns solid amber if the system experiences an electrical error (for example, voltage out of range, or a failed power supply unit (PSU) or voltage regulator).	<p>Check the System Event Log or system messages for the specific issue. If it is due to a problem with the PSU, check the LED on the PSU. Reseat the PSU.</p> <p>If the problem persists, see the <a href="#">Getting help</a> section.</p>
	Memory indicator	The indicator turns solid amber if a memory error occurs.	<p>Check the System Event Log or system messages for the location of the failed memory. Reseat the memory module.</p> <p>If the problem persists, see the <a href="#">Getting help</a> section.</p>
	PCIe indicator	The indicator turns solid amber if a PCIe card experiences an error.	<p>Restart the system. Update any required drivers for the PCIe card. Reinstall the card.</p> <p>If the problem persists, see the <a href="#">Getting help</a> section.</p> <p><b>NOTE:</b> For more information about the supported PCIe cards, see the <a href="#">Expansion cards and expansion card risers</a> &gt; Expansion card installation guidelines section.</p>

# System health and system ID indicator codes

The system health and system ID indicator is located on the left control panel of the system.



Figure 173. System health and system ID indicator

Table 91. System health and system ID indicator codes

System health and system ID indicator code	Condition
Solid blue	Indicates that the system is powered on, is healthy, and system ID mode is not active. Press the system health and system ID button to switch to system ID mode.
Blinking blue	Indicates that the system ID mode is active. Press the system health and system ID button to switch to system health mode.
Solid amber	Indicates that the system is in fail-safe mode. If the problem persists, see the <a href="#">Getting help</a> section.
Blinking amber	Indicates that the system is experiencing a fault. Check the System Event Log for specific error messages. <a href="#">EEMI guide</a>

# iDRAC Quick Sync 2 indicator codes

iDRAC Quick Sync 2 module (optional) is located on the left control panel front IO panel of the system.



**Table 92. iDRAC Quick Sync 2 indicators and descriptions**

iDRAC Quick Sync 2 indicator code	Condition	Corrective action
Off (default state)	Indicates that the iDRAC Quick Sync 2 feature is powered off. Press the iDRAC Quick Sync 2 button to power on the iDRAC Quick Sync 2 feature.	If the LED fails to power on, reseal the left control panel flex cable and check. If the problem persists, see the <a href="#">Getting help</a> section.
Solid white	Indicates that iDRAC Quick Sync 2 is ready to communicate. Press the iDRAC Quick Sync 2 button to power off.	If the LED fails to power off, restart the system. If the problem persists, see the <a href="#">Getting help</a> section.
Blinks white rapidly	Indicates data transfer activity.	If the indicator continues to blink indefinitely, see the <a href="#">Getting help</a> section.
Blinks white slowly	Indicates that firmware update is in progress.	If the indicator continues to blink indefinitely, see the <a href="#">Getting help</a> section.
Blinks white five times rapidly and then powers off	Indicates that the iDRAC Quick Sync 2 feature is disabled.	Check if iDRAC Quick Sync 2 feature is configured to be disabled by iDRAC. If the problem persists, see the <a href="#">Getting help</a> section. <a href="#">PowerEdge manuals</a> or <i>Dell OpenManage Server Administrator User's Guide</i> at <a href="#">OpenManage Manuals</a> .
Solid amber	Indicates that the system is in fail-safe mode.	Restart the system. If the problem persists, see the <a href="#">Getting help</a> section.
Blinking amber	Indicates that the iDRAC Quick Sync 2 hardware is not responding properly.	Restart the system. If the problem persists, see the <a href="#">Getting help</a> section.

# iDRAC Direct LED indicator codes

The iDRAC Direct LED indicator lights up to indicate that the port is connected and is being used as a part of the iDRAC subsystem.

You can configure iDRAC Direct by using a USB to micro USB (type AB) cable, which you can connect to your laptop or tablet. Cable length should not exceed 3 feet (0.91 meters). Performance could be affected by cable quality. The following table describes iDRAC Direct activity when the iDRAC Direct port is active:

**Table 93. iDRAC Direct LED indicator codes**

iDRAC Direct LED indicator code	Condition
Solid green for two seconds	Indicates that the laptop or tablet is connected.
Blinking green (on for two seconds and off for two seconds)	Indicates that the laptop or tablet connected is recognized.
LED Indicator off	Indicates that the laptop or tablet is unplugged.

# LCD panel

The LCD panel provides system information, status, and error messages to indicate if the system is functioning correctly or requires attention. The LCD panel is used to configure or view the iDRAC IP address of the system. For more information about the event and error messages that are generated by the system firmware and agents that monitor system components, go to [EEMI guide](#).

The LCD panel is available only on the optional front bezel. The optional front bezel is hot pluggable.

The status and conditions of the LCD panel are outlined here:

- The LCD backlight is white during normal operating conditions.
- If there is an issue, the LCD backlight turns amber and displays an error code followed by descriptive text.

**NOTE:** If the system is connected to a power source and an error is detected, the LCD turns amber regardless of whether the system is powered on or off.

- When the system powers off and there are no errors, the LCD enters the standby mode after five minutes of inactivity. Press any button on the LCD to power it on.
- If the LCD panel stops responding, remove the bezel and reinstall it.

If the problem persists, see [Getting help](#).

- The LCD backlight remains off if LCD messaging is powered off using the iDRAC utility, the LCD panel, or other tools.

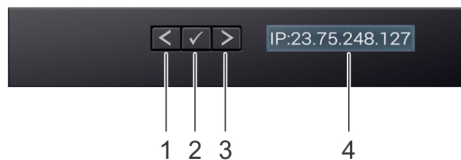


Figure 174. LCD panel features


Table 94. LCD panel features



Item	Button or display	Description
1	Left	Moves the cursor back in one-step increments.
2	Select	Selects the menu item that is highlighted by the cursor.
3	Right	Moves the cursor forward in one-step increments.  During message scrolling: <ul style="list-style-type: none"> <li>• Press and hold the right button to increase scrolling speed.</li> <li>• Release the button to stop.</li> </ul> <b>NOTE:</b> The display stops scrolling when the button is released. After 45 seconds of inactivity, the display starts scrolling.
4	LCD display	Displays the system information, status, and error messages or iDRAC IP address.

## Viewing Home screen


The **Home** screen displays user-configurable information about the system. This screen is displayed during normal system operation when there are no status messages or errors. When the system turns off and there are no errors, the LCD enters the standby mode after five minutes of inactivity. Press any button on the LCD to turn it on.

### Steps

1. To view the **Home** screen, press one of the three navigation buttons (Select, Left, or Right).
2. To navigate to the **Home** screen from another menu, complete the following steps:
  - a. Press and hold the navigation button till the up arrow  is displayed.

- b. Navigate to the **Home** icon  using the up arrow .
- c. Select the **Home** icon.
- d. On the **Home** screen, press the **Select** button to enter the main menu.


## Setup menu

 **NOTE:** When you select an option in the Setup menu, you must confirm the option before proceeding to the next action.

**Table 95. Setup menu**

Option	Description
iDRAC	Select <b>DHCP</b> or <b>Static IP</b> to configure the network mode. If <b>Static IP</b> is selected, the available fields are <b>IP</b> , <b>Subnet (Sub)</b> , and <b>Gateway (Gtw)</b> . Select <b>Setup DNS</b> to enable DNS and to view domain addresses. Two separate DNS entries are available.
Set error	Select <b>SEL</b> to view LCD error messages in a format that matches the IPMI description in the SEL. This enables you to match an LCD message with an SEL entry. Select <b>Simple</b> to view LCD error messages in a simplified user-friendly description. For information about the event and error messages generated by the system firmware and agents that monitor system components go to <a href="#">EEMI guide</a> .
Set home	Select the default information to be displayed on the <b>Home</b> screen. See <a href="#">View Home menu</a> section for the options and option items that can be set as the default on the <b>Home</b> screen.

## View menu


 **NOTE:** When you select an option in the View menu, you must confirm the option before proceeding to the next action.

**Table 96. View menu**

Option	Description
iDRAC IP	Displays the <b>IPv4</b> or <b>IPv6</b> addresses for iDRAC9. Addresses include <b>DNS (Primary and Secondary)</b> , <b>Gateway</b> , <b>IP</b> , and <b>Subnet</b> (IPv6 does not have Subnet).
MAC	Displays the MAC addresses for <b>iDRAC</b> , <b>iSCSI</b> , or <b>Network</b> devices.
Name	Displays the name of the <b>Host</b> , <b>Model</b> , or <b>User String</b> for the system.
Number	Displays the <b>Asset tag</b> or the <b>Service tag</b> for the system.
Power	Displays the power output of the system in BTU/hr or Watts. The display format can be configured in the <b>Set home</b> submenu of the <b>Setup</b> menu.
Temperature	Displays the temperature of the system in Celsius or Fahrenheit. The display format can be configured in the <b>Set home</b> submenu of the <b>Setup</b> menu.

## NIC indicator codes

Each NIC on the back of the system has indicators that provide information about the activity and link status. The activity LED indicator indicates if data is flowing through the NIC, and the link LED indicator indicates the speed of the connected network.

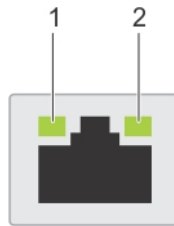

**Figure 175. NIC indicator codes**

1. Link LED indicator
2. Activity LED indicator

**Table 97. NIC indicator codes**

NIC indicator codes	Condition
Link and activity indicators are off.	Indicates that the NIC is not connected to the network.
Link indicator is green, and activity indicator is blinking green.	Indicates that the NIC is connected to a valid network at its maximum port speed, and data is being sent or received.
Link indicator is amber, and activity indicator is blinking green.	Indicates that the NIC is connected to a valid network at less than its maximum port speed, and data is being sent or received.
Link indicator is green, and activity indicator is off.	Indicates that the NIC is connected to a valid network at its maximum port speed, and data is not being sent or received.
Link indicator is amber, and activity indicator is off.	Indicates that the NIC is connected to a valid network at less than its maximum port speed, and data is not being sent or received.
Link indicator is blinking green, and activity is off.	Indicates that the NIC identity is enabled through the NIC configuration utility.

## Power supply unit indicator codes

AC and DC power supply units (PSUs) have an illuminated translucent handle that serves as an indicator. The indicator shows if power is present or if a power fault has occurred.



**Figure 176. PSU status indicator**

1. PSU handle
2. Socket
3. Release latch

**Table 98. AC and DC PSU status indicator codes**

Power indicator codes	Condition
Green	Indicates that a valid power source is connected to the PSU and the PSU is operational.
Blinking amber	Indicates an issue with the PSU.
Not powered on	Indicates that the power is not connected to the PSU.
Blinking green	<p>Indicates that the firmware of the PSU is being updated.</p> <p><b>⚠ CAUTION: Do not disconnect the power cord or unplug the PSU when updating firmware. If firmware update is interrupted, the PSUs will not function.</b></p>
Blinking green and powers off	<p>When hot-plugging a PSU, it blinks green five times at a rate of 4 Hz and powers off. This indicates a PSU mismatch due to efficiency, feature set, health status, or supported voltage.</p> <p><b>⚠ CAUTION: If two PSUs are installed, both the PSUs must have the same type of label; for example, Extended Power Performance (EPP) label. Mixing PSUs from previous generations of PowerEdge servers is not supported, even if the PSUs have the same power rating. This results in a PSU mismatch condition or failure to power on the system.</b></p> <p><b>⚠ CAUTION: If two PSUs are used, they must be of the same type and have the same maximum output power.</b></p> <p><b>⚠ CAUTION: When correcting a PSU mismatch, replace the PSU with the blinking indicator. Swapping the PSU to make a matched pair can result in an error condition and an unexpected system shutdown. To change from a high output configuration to a low output configuration or vice versa, you must power off the system.</b></p> <p><b>⚠ CAUTION: AC PSUs support both 240 V and 120 V input voltages with the exception of Titanium PSUs, which support only 240 V. When two identical PSUs receive different input voltages, they can output different wattages, and trigger a mismatch.</b></p>

## Drive indicator codes

The LEDs on the drive carrier indicate the state of each drive. Each drive carrier has two LEDs: an activity LED (green) and a status LED (bicolor, green/amber). The activity LED blinks whenever the drive is accessed.



**Figure 177. Drive indicators**

1. Drive activity LED indicator
2. Drive status LED indicator
3. Drive capacity label

**NOTE:** If the drive is in the Advanced Host Controller Interface (AHCI) mode, the status LED indicator does not power on.

**NOTE:** Drive status indicator behavior is managed by Storage Spaces Direct. Not all drive status indicators may be used.

**Table 99. Drive indicator codes**

Drive status indicator code	Condition
Blinks green twice per second	Indicates that the drive is being identified or preparing for removal.
Not powered on	Indicates that the drive is ready for removal. <b>NOTE:</b> The drive status indicator remains off until all drives are initialized after the system is powered on. Drives are not ready for removal during this time.
Blinks green, amber, and then powers off	Indicates that there is an unexpected drive failure.
Blinks amber four times per second	Indicates that the drive has failed.
Blinks green slowly	Indicates that the drive is rebuilding.


**Table 99. Drive indicator codes (continued)**

Drive status indicator code	Condition
Solid green	Indicates that the drive is online.
Blinks green for three seconds, amber for three seconds, and then powers off after six seconds	Indicates that the rebuild has stopped.

## Using system diagnostics

If you experience an issue with the system, run the system diagnostics before contacting Dell for technical assistance. The purpose of running system diagnostics is to test the system hardware without using additional equipment or risking data loss. If you are unable to fix the issue yourself, service and support personnel can use the diagnostics results to help you solve the issue.

## Dell Embedded System Diagnostics

 **NOTE:** The Dell Embedded System Diagnostics is also known as Enhanced Pre-boot System Assessment (ePSA) diagnostics.

The Embedded System Diagnostics provide a set of options for particular device groups or devices allowing you to:

- Run tests automatically or in an interactive mode
- Repeat tests
- Display or save test results
- Run thorough tests to introduce additional test options to provide extra information about the failed device(s)
- View status messages that inform you if tests are completed successfully
- View error messages that inform you of issues encountered during testing

## Running the Embedded System Diagnostics from Boot Manager

Run the Embedded System Diagnostics (ePSA) if your system does not boot.

### Steps

1. When the system is booting, press F11.
2. Use the up arrow and down arrow keys to select **System Utilities > Launch Diagnostics**.
3. Alternatively, when the system is booting, press F10, select **Hardware Diagnostics > Run Hardware Diagnostics**.  
The **ePSA Pre-boot System Assessment** window is displayed, listing all devices detected in the system. The diagnostics starts executing the tests on all the detected devices.

## Running the Embedded System Diagnostics from the Dell Lifecycle Controller

### Steps

1. When the system is booting, press F10.
2. Select **Hardware Diagnostics → Run Hardware Diagnostics**.  
The **ePSA Pre-boot System Assessment** window is displayed, listing all devices detected in the system. The diagnostics start executing the tests on all the detected devices.

## System diagnostic controls

Table 100. System diagnostic controls

Menu	Description
<b>Configuration</b>	Displays the configuration and status information of all detected devices.
<b>Results</b>	Displays the results of all tests that are run.
<b>System health</b>	Provides the current overview of the system performance.
<b>Event log</b>	Displays a time-stamped log of the results of all tests run on the system. This is displayed if at least one event description is recorded.

# Getting help

## Topics:

- [Recycling or End-of-Life service information](#)
- [Contacting Dell Technologies](#)
- [Accessing system information by using QR code](#)
- [Receiving automated support with Secure Connect Gateway \(SCG\)](#)

## Recycling or End-of-Life service information

Take back and recycling services are offered for this product in certain countries. If you want to dispose of system components, visit [How to Recycle](#) and select the relevant country.

## Contacting Dell Technologies

Dell provides online and telephone based support and service options. If you do not have an active internet connection, you can find Dell contact information on your purchase invoice, packing slip, bill or Dell product catalog. The availability of services varies depending on the country and product, and some services may not be available in your area. To contact Dell for sales, technical assistance, or customer service issues follow these steps:

### Steps

1. Go to [Dell Support](#).
2. Select your country from the drop-down menu on the lower right corner of the page.
3. For customized support:
  - a. Enter the system Service Tag in the **Enter a Service Tag, Serial Number, Service Request, Model, or Keyword** field.
  - b. Click **Search**.  
The support page that lists the various support categories is displayed.
4. For general support:
  - a. Select your product category.
  - b. Select your product segment.
  - c. Select your product.  
The support page that lists the various support categories is displayed.
5. For contact details of Dell Global Technical Support:
  - a. Click [Contact Technical Support](#).
  - b. The **Contact Technical Support** page is displayed with details to call, chat, or e-mail the Dell Global Technical Support team.

## Accessing system information by using QR code

You can use the QR code located on the Express service tag in the front of the R760xa system, to access information about PowerEdge R760xa. There is also another QR code for accessing product information on the back of the system cover.

### Prerequisites

Ensure that your smart phone or tablet has a QR code scanner installed.

The QR code includes the following information about your system:

- How-to videos
- Reference materials, including the Installation and Service Manual, and mechanical overview
- The system service tag to quickly access the specific hardware configuration and warranty information
- A direct link to Dell to contact technical support and sales teams

#### Steps

1. Go to [PowerEdge Manuals](#), and navigate to your specific product or
2. Use your smart phone or tablet to scan the model-specific QR code on your system.

## QR code for PowerEdge R760xa system resources



Figure 178. QR code for PowerEdge R760xa system

## Receiving automated support with Secure Connect Gateway (SCG)

Dell Secure Connect Gateway (SCG) is an optional Dell Services offering that automates technical support for your Dell server, storage, and networking devices. By installing and setting up a Secure Connect Gateway (SCG) application in your IT environment, you can receive the following benefits:

- Automated issue detection — Secure Connect Gateway (SCG) monitors your Dell devices and automatically detects hardware issues, both proactively and predictively.
- Automated case creation — When an issue is detected, Secure Connect Gateway (SCG) automatically opens a support case with Dell Technical Support.
- Automated diagnostic collection — Secure Connect Gateway (SCG) automatically collects system state information from your devices and uploads it securely to Dell. This information is used by Dell Technical Support to troubleshoot the issue.
- Proactive contact — A Dell Technical Support agent contacts you about the support case and helps you resolve the issue.


The available benefits vary depending on the Dell Service entitlement purchased for your device. For more information about Secure Connect Gateway (SCG), go to [secureconnectgateway](#).

## Documentation resources

This section provides information about the documentation resources for your system.

To view the document that is listed in the documentation resources table:

- From the Dell support site:
  1. Click the documentation link that is provided in the Location column in the table.
  2. Click the required product or product version.

 **NOTE:** To locate the model number, see the front of your system.

3. On the Product Support page, click **Documentation**.
- Using search engines:
    - Type the name and version of the document in the search box.

**Table 101. Additional documentation resources for your system**

Task	Document	Location
Setting up your system	<p>For more information about installing and securing the system into a rack, see the Rail Installation Guide included with your rail solution.</p> <p>For information about setting up your system, see the <i>Getting Started Guide</i> document that is shipped with your system.</p>	<a href="#">PowerEdge Manuals</a>
Configuring your system	<p>For information about the iDRAC features, configuring and logging in to iDRAC, and managing your system remotely, see the Integrated Dell Remote Access Controller User's Guide.</p> <p>For information about understanding Remote Access Controller Admin (RACADM) subcommands and supported RACADM interfaces, see the RACADM CLI Guide for iDRAC.</p> <p>For information about Redfish and its protocol, supported schema, and Redfish Eventing implemented in iDRAC, see the Redfish API Guide.</p> <p>For information about iDRAC property database group and object descriptions, see the Attribute Registry Guide.</p> <p>For information about Intel QuickAssist Technology, see the Integrated Dell Remote Access Controller User's Guide.</p>	<a href="#">PowerEdge Manuals</a>
	For information about earlier versions of the iDRAC documents.	<a href="#">iDRAC Manuals</a>

**Table 101. Additional documentation resources for your system (continued)**

Task	Document	Location
	To identify the version of iDRAC available on your system, on the iDRAC web interface, click <b>?</b> > <b>About</b> .	
	For information about installing the operating system, see the operating system documentation.	<a href="#">Operating System Manuals</a>
	For information about updating drivers and firmware, see the Methods to download firmware and drivers section in this document.	<a href="#">Drivers</a>
Managing your system	For information about systems management software offered by Dell, see the Dell OpenManage Systems Management Overview Guide.	<a href="#">PowerEdge Manuals</a>
	For information about setting up, using, and troubleshooting OpenManage, see the Dell OpenManage Server Administrator User's Guide.	<a href="#">OpenManage Manuals</a>
	For information about installing and using Dell Secure Connect Gateway, see the Dell Secure Connect Gateway Enterprise User's Guide.	<a href="#">serviceability tools</a>
	For information about partner programs enterprise systems management, see the OpenManage Connections Enterprise Systems Management documents.	<a href="#">OpenManage Manuals</a>
Working with the Dell PowerEdge RAID controllers (if applicable)	For information about understanding the features of the Dell PowerEdge RAID controllers (PERC), Software RAID controllers, or BOSS card and deploying the cards, see the Storage controller documentation.	<a href="#">Storage Controller Manuals</a>
Understanding event and error messages	For information about the event and error messages that are generated by the system firmware and agents that monitor system components, see the EEMI guide.	<a href="#">EEMI guide</a>
Troubleshooting your system	For information about identifying and troubleshooting the PowerEdge server issues, see the Server Troubleshooting Guide.	<a href="#">PowerEdge Manuals</a>