




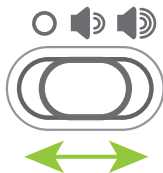 
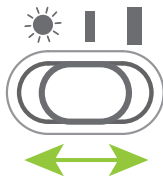 
Squeeze Glo Worm's cloud to activate lights/sound features.  
Squeeze again to turn off.

Open seam on back to access electronic switches.






### 3 Modes

-  **GLOW ONLY:**  
Slide switch to left position for 10 minutes of lights and no sound.
-  **SHORT-PLAY:**  
Slide switch to middle position to activate glow and one tune.
-  **LONG-PLAY:**  
Slide switch to right position for 10 minutes of music and glowing.



### Volume Control

-  **OFF** No lights or sounds.
-  **LOW Volume**
-  **HIGH Volume**

To preserve the battery, switch off Glo Worm when not in use.



-  **LULLABIES**  
Rock a Bye Baby  
You are My Sunshine  
Twinkle Twinkle Little Star  
Sheep May Safely Graze  
Brahms' Lullaby  
Gymnopédie 



For more fun, visit [playmonster.com](http://playmonster.com) | If you have questions, please contact us. [playmonster.com/contact-us](http://playmonster.com/contact-us) | 800-524-4263 | Weekdays 8am to 5pm CST

© 2024 PlayMonster Group LLC, 1400 E. Inman Pkwy., Beloit, WI 53511 USA. Made in China. All rights reserved. Parts and colors may vary from those shown. **GLO WORM** and **PLAYSKOOL** are trademarks of Hasbro and are used with permission. © 2024 Hasbro

Instructions must be retained since they contain important information.



Lullaby  
**GLO  
WORM**

 
23234  
24219



**CAUTION:**

POSSIBLE SUFFOCATION HAZARD. Never place toy in crib or playpen with sleeping baby.

## To Install Batteries

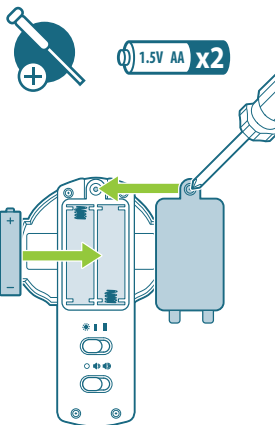 


1. Open seam on back to access electronic unit.
2. Remove the electronic unit from the back of the toy.
3. Use a Phillips/cross head screwdriver (not included) to open electronic unit and install batteries.

## Machine Washable

Remove sound unit and close fabric fastener securely before washing. Place in pillowcase; tie closed. Machine wash separately, cold water, gentle cycle, no bleach, tumble dry low.

**DO NOT WASH TOY WITH ELECTRONICS INSIDE!**

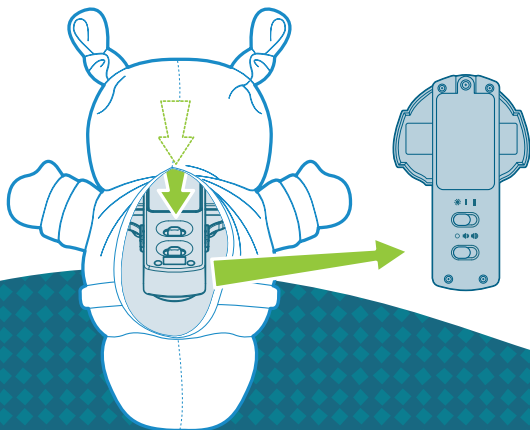

**FCC STATEMENT:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## IMPORTANT: BATTERY INFORMATION

Retain this information for future reference. Batteries should be replaced by an adult.

### CAUTION:

#### 1. TO AVOID BATTERY LEAKAGE




- a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by
  - b. matching the + and – polarity markings.
  - c. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
  - d. Remove exhausted or dead batteries from the product.
  - e. Remove batteries if product is not to be played with for a long time.
  - f. Do not short-circuit the supply terminals.
- g. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**
2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

 
Squeeze Glo Worm's cloud to activate lights/sound features.  
Squeeze again to turn off.

Open seam on back to access electronic switches.






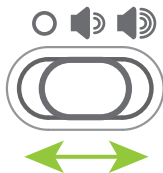 
### 3 Modes

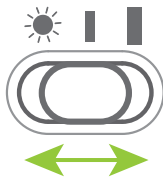-  **GLOW ONLY:**  
Slide switch to left position for 10 minutes of lights and no sound.
-  **SHORT-PLAY:**  
Slide switch to middle position to activate glow and one tune.
-  **LONG-PLAY:**  
Slide switch to right position for 10 minutes of music and glowing.



### Volume Control

-  **OFF** No lights or sounds.
-  **LOW Volume**
-  **HIGH Volume**



To preserve the battery, switch off Glo Worm when not in use.



-  **LULLABIES**  
Rock a Bye Baby  
You are My Sunshine  
Twinkle Twinkle Little Star  
Sheep May Safely Graze  
Brahms' Lullaby  
Gymnopédie 



For more fun, visit [playmonster.com](http://playmonster.com) | If you have questions, please contact us. [playmonster.com/contact-us](http://playmonster.com/contact-us) | 800-524-4263 | Weekdays 8am to 5pm CST

© 2024 PlayMonster Group LLC, 1400 E. Inman Pkwy., Beloit, WI 53511 USA. Made in China. All rights reserved. Parts and colors may vary from those shown. **GLO WORM** and **PLAYSKOOL** are trademarks of Hasbro and are used with permission. © 2024 Hasbro

Instructions must be retained since they contain important information.



Lullaby  
**GLO  
WORM**

23234  
24219



**CAUTION:**

POSSIBLE SUFFOCATION HAZARD. Never place toy in crib or playpen with sleeping baby.