

IMPORTANT: BATTERY INFORMATION

Retain this information for future reference. Batteries should be replaced by an adult.

CAUTION:

- 1. TO AVOID BATTERY LEAKAGE**
 - a. Always follow the instructions carefully.
 - b. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
 - c. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 - d. Remove exhausted or dead batteries from the product.
 - e. Remove batteries if product is not to be played with for a long time.
 - f. Do not short-circuit the supply terminals.
 - g. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**
- 2.** Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.



PlayMonster

For more fun, visit playmonster.co.uk

If you have questions, please contact us: <https://playmonster.co.uk/pages/customer-service>
Call: **01628 488944** between 09.00 and 17.30, Monday to Thursday, or 09:00 - 15:00 on Fridays, excluding bank holidays. You can also email customerservice@playmonster.co.uk.

Designed by: PlayMonster Group LLC | Manufactured by: PlayMonster UK Ltd.

Artisan, Hillbottom Road High Wycombe, HP12 4HJ. United Kingdom TEL: +44 (0) 1628 488944. Please retain our address for future reference. PlayMonster UK Ltd. Made in China.

PLAYSKOOL, ELEFUN and HASBRO and all related trademarks and logos are trademarks of Hasbro, Inc. ©2024 Hasbro. Authorised Representative and Responsible Person in the EU (for the purposes of Toy Safety Directive): Delphic HSE (Europe) B.V., The Base B, Evert van de Beekstraat 104, Schipol, 1118CN, Netherlands. Instructions must be retained since they contain important information.



PLAYSKOOL

9M+



24612

ELEFUN BUSY BALL POPPER



CAUTION: ADULT ASSEMBLY REQUIRED.
PHILLIPS/CROSS HEAD SCREWDRIVER
(NOT INCLUDED) NEEDED.

Assembly

- 1 Attach Ears into to slot on left side.
- 2 Pivot Ears to right. SNAP into right slot.
- 3 Insert Stabiliser.

 


To Install Batteries




1.5V D x4

- Open the bottom to access the battery compartment.
- Remove the screw(s) with a Mini Phillip screwdriver.
- Open the lid and insert 4 "D" batteries.
- Close the lid and insert the screws.

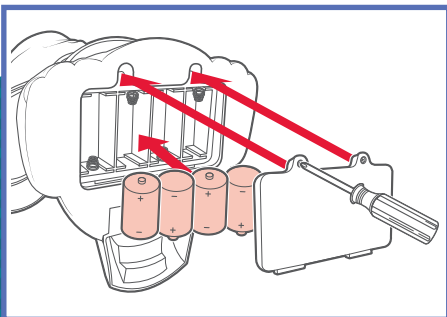


Play

 - 1 Slide **ON/OFF switch** on toy foot to ON.
 - 2 Insert **balls**.
 - 3 Press **music button** to activate tunes and air.
- NOTE:** Only use balls included in this product.
- NOTE:** When storing toy, turn the ON/OFF switch to OFF to prevent accidental activation. If batteries begin to lose power, balls will pop at slower rate. For best results, replace batteries when this starts to happen.

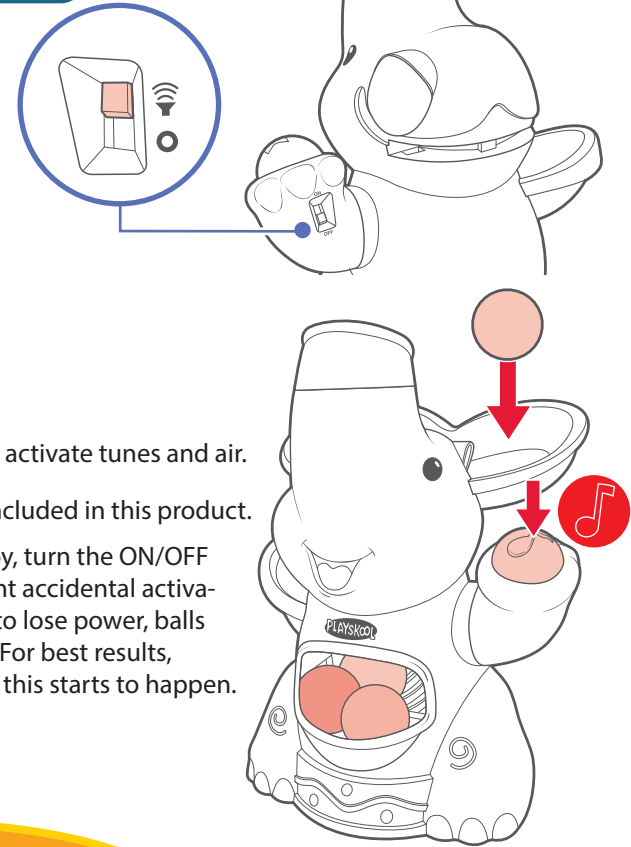


Adjust the trunk direction for
4 Ways to Play!

 
Continuous

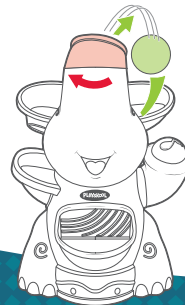

Put & Take

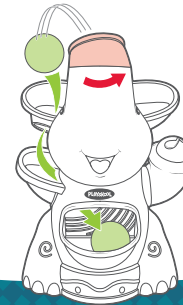 

Surprise

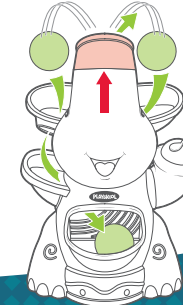 

Ball Chase

