

CRUX

**10" x 14" Smokeless Grill & Griddle with Glass Lid
Instruction Manual**

Styled for Life
Designed & Engineered in New York City

Thank You for choosing
CRUX

We hope your new CRUX
small kitchen appliance will add
sleek elegance to your kitchen



Table of Contents

Important Safeguards.....	2-3
Additional Important Safeguards.....	3-4
Notes on the Plug.....	4
Notes on the Cord.....	5
Plasticizer Warning.....	5
Electric Power.....	5
Life is Busy.....	6
Getting to Know your 10"x14" Smokeless Grill & Griddle.....	7
Temperature Control Probe.....	8
Before Using for the First Time.....	8
Operating Instructions.....	9-10
Time/Temperature Chart.....	11
USDA Cooking Guidelines.....	11
User Maintenance Instructions.....	12
Care & Cleaning Instructions.....	12
Hints For Care and Use of Non Stick Surface.....	13
Steps For Stain Removal and Proper Care of Your Non Stick Coating.....	13
Recipes.....	14-16
Warranty.....	17-18

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles or knobs. Use oven mitts or potholders.
3. To protect against electrical shock, do not immerse cord or plugs or temperature control probe in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children.
6. Turn unit Off and unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- 
- 
9. Do not use outdoors.
 10. Do not let cord hang over the edge of table or counter, or touch hot surfaces.
 11. Do not place on or near a hot gas or electric burner, or in a heated oven.
 12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
 13. Always attach temperature control probe to appliance first, then plug cord in the wall outlet.
To disconnect, turn temperature control probe to OFF, then remove plug from wall outlet.
 14. Do not use appliance for other than intended use.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other injury to persons or damage to property.

CAUTION: This appliance is hot during operation and retains heat for some time after turning OFF. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the appliance while it is operating or while it is hot.

1. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120 V AC electrical outlet only.
3. If this appliance begins to malfunction during use, turn unit Off and immediately unplug the cord. Then remove the temperature control probe. Do not use or attempt to repair the malfunctioning appliance.
4. Do not leave this appliance unattended during use.
5. To prevent fire hazards; the grill plate must be placed in the proper position when plugged in.
6. **WARNING: To prevent personal injury or property damage, the drip pan must be in place during cooking.**

NOTES ON THE PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

NOTES ON THE CORD


- A. A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used :
 1. The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance;
 2. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord;
 3. The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.

PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating to the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top. Failure to do so may cause the finish to darken; permanent blemishes may occur or stains can appear.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.





Life is Busy

Keep it simple in the kitchen with CRUX.

Who says you need to ditch your loft to enjoy the perks of a summer BBQ? The CRUX Smokeless Grill's powerful embedded heating system brings the heat to your kitchen without the extra smoke, so you can enjoy your BBQ favorites no matter the weather. The science is simple, the integrated heating element and cooling oil tray allow for healthy and smoke-less grilled food.


Grill up steaks and burgers all year round for your friends and family thanks to the grill's 10"x14" cooking surface. The state of the art Non Stick Coating with the removable temperature probe and easily adjustable dial offer a quick preheat for grilling, all while the handles remain cool to the touch. Toss the cooking plate into the dishwasher and remove drip dray for a no fuss clean up. **Keep on grillin'.**

Keep it simple in the kitchen with CRUX. Committed to efficiency, ease of use, and sleek design, our entire line of appliances was developed to make your life simpler. High quality products that get the job done, all while looking great on your countertop. It's never been easier to cook, host, or take on culinary adventures



Getting to Know your 10" x 14" Smokeless & Griddle with Glass Lid

Product may vary slightly from illustrations

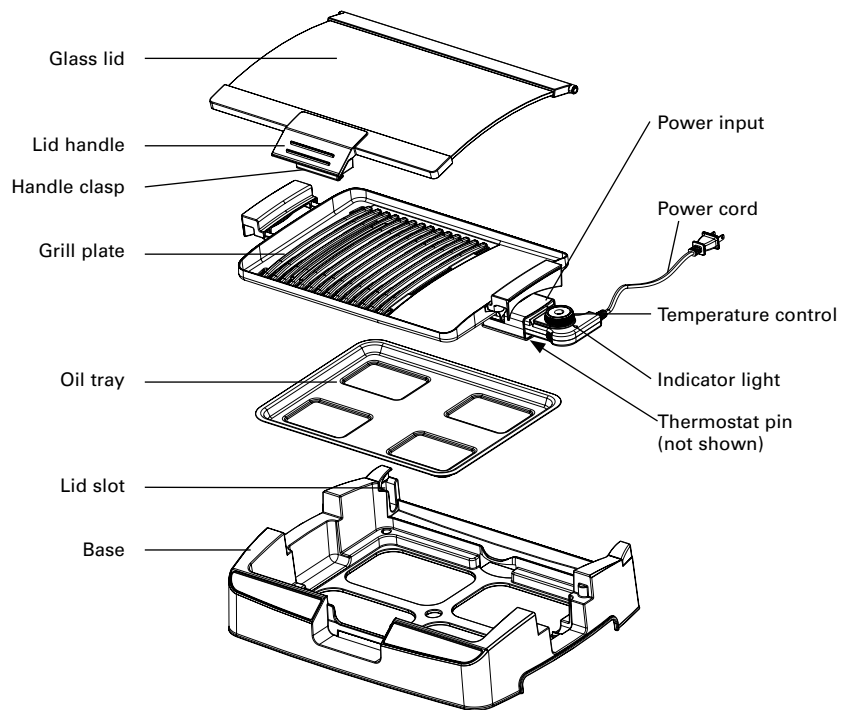

Temperature Control Probe

1. The temperature control probe is the nerve center and brain of the electric Grill. Treat it carefully. Dropping or banging it could change its calibration and make the temperature settings inaccurate.
2. Rotate the dial to select the temperature as called for in the recipe.
3. The indicator light on the temperature control probe will illuminate as soon as the dial is rotated. The light will go out once the selected temperature has been reached.
4. Allow the smokeless grill & griddle to cool before removing the temperature control probe.
5. To clean the temperature control probe, simply wipe down with a soft, damp cloth. Make sure you dry it thoroughly before using again.
NOTE: The temperature control probe is not submersible.
CAUTION: Use the temperature control probe supplied with this Grill only. The use of any other temperature control probe may cause fire, electric shock, or injury.

Before Using for the First Time


1. Carefully unpack the Grill and remove all packaging materials.
2. Place the non-stick Grill on a clean, flat working surface.
NOTE: Some countertop and table surfaces, such as Corian® and other surfaces, are not designed to withstand the prolonged heat generated by this Grill. We recommend placing a hot pad or trivet under the Grill beforehand to avoid possible damage to the surface. Be sure the sides and back of the Grill are at least 4 inches away from any walls, cabinets, or objects on the counter or table.
3. Before first use, see Hints For Care and Use of Non-Stick Surface and Care & Cleaning Instructions sections of this Instruction Manual.
4. Before cooking in the Grill for the first time, wash the non-stick Grill in mild dishwashing soap, wipe and allow to dry.
5. Place the drip pan inside the grill base and add water. Then, place the grill plate over in a way that it locks in place between the gaps.
6. Turn the temperature control knob on probe to OFF position and attach securely in place.
7. Coat the non-stick surface with vegetable oil before heating. If necessary, remove excess oil with paper towel.

Operating Instructions


Warning:

- Do not move the appliance when it is in operation.
- **Caution with hot surface!** Always carry the handle at both side and open glass lid with lid handle. Always allow the appliance cool down completely before any cleaning.
- **Hazard of injury and burns!** Grill plate, glass lid, accessories and food are hot during use. For protection, we recommend using grill gloves and grill cutlery.

Figure 1

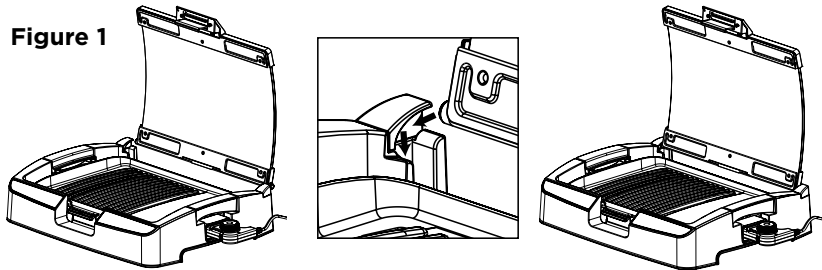


1. Open glass lid by slightly pushing lid handle clasp and pull up. Allow glass lid stand upright in lid slot.(Fig.1)
2. Make sure oil tray is installed in the base.
3. Slowly place grill plate on base by holding both handgrips.
4. Apply some cooking oil on grill plate.
5. Insert thermostat pin into power input.
6. Plug the appliance to an earthed wall socket.
7. Switch on by turning temperature control to set desired temperature level. Indicator light is on.
8. After several minutes, indicator light will be off when it reaches set temperature.
9. Carefully place food on grill plate and use spatula to flip or move food.

- 
10. Switch off by turn temperature control anti-clockwise to OFF when cooking is done.
 11. Unplug the appliance after use. Remove temperature control from the grill.
 12. Cover with glass lid to keep food warm.

Caution: Do not reuse the oil from the oil tray.

Note: This appliance is not intended to thaw or cook frozen food. All food must be properly defrosted before being prepared on this appliance.

Notes:

- Defrost food before cooking. Cut food in small pieces to make cooking faster.
 - During cooking, indicator might lights on and off from time to time which means thermostat is in the process of regulating operation temperature.
 - To protect non-stick coated plate, please observe the following notes:
 - Prior to initial use, pour once some oil on a kitchen tissue and treat the upper side of the grill plate.
 - Never cut with a knife or a similar object on the grill plate.
 - Do not put aluminium trays or foil, pans, pots etc. on the grill plate.
 - Do not use the grill plate for flammable food.
 - Do not use metal grill cutlery or pointed and edgy objects for placing the food on the grill, turning or removing it.
- 

Time/Temperature Chart

FOOD	TEMPERATURE	TIME	DIRECTIONS
Chicken	350 °F	20-25 min.	Rotate halfway into cooking time
Bacon	325 - 350 °F	8-14 min.	Set to appropriate temperature - turn as required
Sausage	325 - 350 °F	20-30 min.	Set to appropriate temperature - turn as required
French Toast	350 °F	6-10 min.	Rotate halfway into cooking time
Hamburger	350 °F	3-14 min.	Rotate halfway into cooking time
Ham Slices	350 °F	14-18 min.	Rotate halfway into cooking time
Sandwiches	350 °F	6-10 min.	Butter outside and brown both sides
Pork Chops	350 °F	20-30 m.	Brown both sides then reduce temperature to 325 °F. Rotate halfway into cooking time
Steaks	400 °F - Rare 400 °F - Medium 400 °F - Well	4-6 min. 7-12 min. 13-18 min.	Rotate halfway into cooking time

USDA Cooking Guidelines

NOTE: The United States Department of Agriculture recommends that meat and poultry be cooked to the following internal temperatures to be sure any harmful bacteria has been killed. Ground turkey and chicken should be cooked to an internal temperature of 165 °F / 74 °C and ground beef, veal, lamb and pork be cooked to an internal temperature 160 °F / 71 °C. Whole chicken and turkey should be cooked to an internal temperature of 180 °F / 82 °C; 170 °F / 77 °C for the breast. Goose and duck should be cooked to an internal temperature of 180 °F / 82 °C. Fresh beef, veal and lamb, etc., should be cooked to an internal temperature of at least 145 °F / 63 °C. Fresh pork should be cooked to an internal temperature of at least 160 °F / 71 °C. When re-heating meat and poultry products, they should also be cooked to an internal temperature of 165 °F / 74 °C.

User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

Care & Cleaning Instructions

CAUTION: Do not immerse the cord, plug or temperature control probe in water or any other liquid.

CAUTION: To avoid accidental burns, allow your Grill to cool thoroughly before cleaning.

1. When cooking is completed, turn unit Off and unplug cord from wall outlet.
Allow Grill to cool.
2. Remove temperature control probe from Grill.
CAUTION: The probe may become hot after use. Allow to cool before handling.
3. If necessary, wipe temperature control case and probe with a damp, soft cloth.
Dry temperature control probe completely. Set aside.
CAUTION: The temperature control probe is not submersible.
4. Remove oil tray; empty contents. Wash Grill plate and oil tray in soapy water; rinse and dry thoroughly.
CAUTION: the content in the oil tray may become hot. Allow the oil tray and the content to cool before removing it from the unit for cleaning.
5. To wash by hand, wash grill plate with hot soapy water. Dry with towel.
CAUTION: Probe and probe receptacle must be completely dry before use.
6. For stubborn food particles, loosen with a plastic cleaning pad. Avoid hard scouring on the non-stick finish as this may cause surface scratches. Do not use steel wool, scouring pads, or abrasive cleaners on any part of the Grill. Clean this grill after each use.



Hints For Care and Use of Non Stick Surface

- To avoid scratching the non-stick surface, do not stack objects on the grill cooking plates.
CAUTION: DO NOT USE COOKING SPRAYS. THEY CAN CAUSE A BUILD-UP ON THE COOKING PLATES AND MAY AFFECT THE NON-STICK PERFORMANCE OF THE PRODUCT.
- Use medium to low heat for best cooking results. Very high temperatures can cause discoloration and shorten the life span of any non-stick surface. If higher temperatures are necessary, preheat on medium heat for a few minutes.
- For best results and preserve the non-stick coating longer, use nylon, plastic, wooden or rubber utensils. Never cut food on the Grill.
- Remove stubborn stains with a plastic scouring pad and mild dish washing liquid; DO NOT USE STEEL WOOL as it will damage the non-stick surface of the cooking plates.
- The grill plate and lid are dishwasher safe. For best results, place in the top rack of your dishwasher to clean.

Steps For Stain Removal and Proper Care of Your Non Stick Coating

1. Identify stained areas on the cooking surface and sprinkle some baking soda on the stains.
2. Moisten the baking soda to get a paste like texture by adding some water.
3. Let the paste stand for a few minutes on the stains (not more than an hour).
4. Rub with a soft damp cloth or lightly scrub with a plastic scouring pad, wipe clean and dry thoroughly.
NOTE: Do not rub vigorously when using a plastic scouring pad and NEVER use a metal scouring pad as this may damage the non-stick coating.
5. Repeat the cycle once again if necessary. The performance and non-stick property of the coating will not be affected due to stains.



Recipes

Grilled Corn with Chipotle and Lime Aioli

Servings: 4

Prep time: 5 minutes / Cook time: 15 minutes

- 4 ears of corn
- 2 cups mayonnaise
- Juice of 1 lime
- 1/2 jalapeno, seeded and minced
- 2 garlic cloves, minced
- 1 chipotle pepper in adobo sauce, minced
- 1/4 teaspoon ground cumin
- 2 tablespoons butter, melted
- Salt and pepper to taste

1. Preheat the Smokeless Grill. Turn the dial to 400 °F to preheat.
2. Brush the ears of corn with butter and place on the grill. Grill for 15 minutes, turning every 5 minutes.
3. Add 1 cup of mayonnaise, the juice of one lime, and the minced jalapeno to a small bowl. Add salt and pepper to taste and mix well.
4. Add the remaining cup of mayonnaise to another small bowl with the minced chipotle and the ground cumin. Add salt and pepper and mix well.
5. Serve the grilled corn with both aioli and wedges of lime on the side.

Recipes

Grilled Chicken, Avocado and Asparagus Power Bowl

Servings 2

Prep time: 5 minutes / Cook time: 30 min

- 2 avocados, halved
- 2 chicken breasts
- 10-12 asparagus spears
- 5 cups baby spinach
- 2 tablespoons flaxseeds
- 3 tablespoons balsamic vinegar
- 3 tablespoons extra virgin olive oil
- 1 honey
- 1/2 teaspoon Dijon mustard
- 1/2 teaspoon garlic powder
- Salt and pepper to taste

1. Preheat the Smokeless Grill. Turn the dial to 350 °F to preheat.
2. Add the balsamic vinegar, olive oil, honey, Dijon mustard, garlic powder, salt and pepper to a mason jar. Shake well and set aside.
3. Brush the chicken breasts with olive oil and season with salt and pepper.
4. Place the chicken on the grill and cook for 20 minutes, flipping halfway.
5. At the 15 minute mark, brush the avocado with olive oil and grill for 5 minutes.
6. Remove the chicken and avocado. Brush asparagus with olive oil and grill for 10-12 minutes or until tender.
7. Place half of the baby spinach in a bowl. Add one chicken breast, two avocado halves, and half of the asparagus. Sprinkle one tablespoon of the flaxseeds. Repeat for the second bowl.
8. Shake the dressing once more and drizzle onto both bowls.

Recipes

Lamb Skewers With Grilled Zucchini, Kalamata Olives, and Crumbled Feta

Serves 3-4

Prep time: 1 hour minutes / Cook time:

- 1 pound of lamb, 1" cubes
 - 1 tablespoon fresh thyme, minced
 - 1 tablespoon dried oregano
 - Juice of one lemon
 - 2 tablespoons extra virgin olive oil
 - 2 large zucchini, cut into 1/2" slices length wise
 - 3/4 cup Kalamata olives, sliced
 - 3/4 cup crumbled feta
 - Salt and pepper
1. Add the cubed lamb, thyme, oregano, lemon, olive oil, salt and pepper to a resealable plastic bag. Shake the bag to mix the marinade and set aside for at least an hour.
 2. Meanwhile, soak wooden skewers in water.
 3. Preheat the Smokeless Grill. Turn the dial to 375 °F to preheat.
 4. Add 3-4 cubes of lamb to each skewer and grill for 10-12 minutes, turning halfway through.
 5. Remove the lamb skewers. Brush olive oil on the zucchini, season with salt and pepper, and grill for 2 minutes on each side.
 6. Serve the skewers and grilled zucchini on a plate and top off with the crumbled feta and sliced Kalamata olives.

Limited Two-Year Warranty

SENSIO Inc. hereby warrants that for a period of **TWO YEARS** from the date of purchase, this product will be free from mechanical defects in material and workmanship, and for 90 days in respect to non-mechanical parts. At its sole discretion, SENSIO Inc. will either repair or replace the product found to be defective, or issue a refund on the product during the warranty period.

The warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt, as proof of purchase is required to obtain warranty validation. Retail stores selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.

Exclusions:

The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified SENSIO Inc. personnel. Also, the warranty does not cover Acts of God such as fire, floods, hurricanes, or tornadoes.

SENSIO Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty.

Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, and therefore, the above exclusions or limitations may not apply to you. The warranty covers specific legal rights which may vary by state, province and/or jurisdiction.

How To Obtain Warranty Service:

You must contact Customer Service at our toll-free number: 1-866-832-4843. A Customer Service Representative will attempt to resolve warranty issues over the phone. If the Customer Service Representative is unable to resolve the problem, you will be provided with a case number and asked to return the product to SENSIO Inc. Attach a tag to the product that includes: your name, address, daytime contact telephone number, case number, and description of the problem.

Also, include a copy of the original sales receipt. Carefully package the tagged product with the sales receipt, and send it (with shipping and insurance prepaid) to SENSIO Inc.'s address. SENSIO Inc. shall bear no responsibility or liability for the returned product while in transit to SENSIO Inc.'s Customer Service Center.

CRUX












For customer service questions or comments
1-866-832-4843

For Recipes and Cooking tips
cruxkitchen.com

 [crux.kitchen](https://www.instagram.com/crux.kitchen)  [cruxkitchen](https://www.facebook.com/cruxkitchen)  [cruxkitchen](https://twitter.com/cruxkitchen)  [cruxkitchen](https://www.pinterest.com/cruxkitchen)  [CRUX kitchen](https://www.youtube.com/CRUXkitchen)

Sensio Inc.
New York, NY 10016/USA

17168 Rev. 3