



**Hewlett Packard**  
Enterprise

## **HPE ProLiant XL675d Gen10 Plus Server User Guide**

Part Number: P39409-001  
Published: November 2020  
Edition: 1

# HPE ProLiant XL675d Gen10 Plus Server User Guide

## Abstract

This document is for the person who installs, administers, and troubleshoots servers and storage systems. Hewlett Packard Enterprise assumes you are qualified in the servicing of computer equipment and trained in recognizing hazards in products with hazardous energy levels.

Part Number: P39409-001

Published: November 2020

Edition: 1

© Copyright 2020 Hewlett Packard Enterprise Development LP

## Notices

The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Confidential computer software. Valid license from Hewlett Packard Enterprise required for possession, use, or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Links to third-party websites take you outside the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for information outside the Hewlett Packard Enterprise website.

## Acknowledgments

Microsoft<sup>®</sup> and Windows<sup>®</sup> are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

NVIDIA<sup>®</sup> is a registered trademark of NVIDIA Corporation in the U.S. and other countries.

AMD<sup>™</sup> is a trademark of Advanced Micro Devices, Inc.

SD<sup>®</sup>, and microSD<sup>®</sup> are trademarks or registered trademarks of SD-3C in the United States, other countries or both.

All third-party marks are property of their respective owners.

## Table of contents

- Component identification
  - Front panel components
  - Front panel LEDs and buttons
    - UID button functionality
    - Front panel LED power fault codes
  - Front panel pass-thru board components
  - Rear panel components
  - System board module components
    - System board components
      - System maintenance switch descriptions
      - DIMM label identification
      - DIMM slot locations
      - Processor and socket components
    - PCIe switch board components
  - System board storage interposer components
  - SXM4 GPU tray components
  - PCIe GPU tray components
  - Power supply LED
  - Fan module numbering
  - Drives
    - Supported drives
    - HPE Smart Drive
  - Drive bay numbering
  - Storage controller components
    - HPE NS204i-p NVMe OS Boot Device components
    - HPE NS204i-p NVMe OS Boot Device LED definitions
- Operations
  - Power up the server
  - Power down the server
  - Power capping
  - Extend the chassis from the rack
  - Open the chassis front door
  - Close the chassis front door
  - Remove the midplane panel
  - Remove the GPU tray from the chassis
  - Remove the system board module from the chassis
  - Install the system board module from the chassis
  - Remove the system board module access panel
  - Install the system board module access panel
  - Remove the PCIe switch board
  - Install the PCIe switch board
  - Remove the enclosure midplane

- Remove the riser cage
- Setup
  - HPE support services
  - Compiling the documentation
  - Initial system installation
    - HPE Installation Service
    - Setting up the server
      - General site planning
      - Operational requirements
        - Site requirements
        - Space and airflow requirements
        - Temperature requirements
        - Power requirements
        - Electrical grounding requirements
      - Server warnings and cautions
      - Safety and regulatory compliance
      - Determining power and cooling configurations
        - Power requirements
        - Hot-plug power supply calculations
      - Electrostatic discharge
      - Identifying the contents of the shipping carton
      - Installation overview
        - Installing the chassis into the rack
          - Installing the product in the rack
        - Installing hardware options
        - Operating system
          - Installing the operating system with Intelligent Provisioning
        - POST screen options
        - Registering the server
- Hardware options installation
  - Hewlett Packard Enterprise product QuickSpecs
  - Hardware option installation guidelines
  - Installing a power supply
  - Installing a fan module
  - Transceiver option
    - Transceiver warnings and cautions
    - Installing a transceiver
  - Drive options
    - Supported configurations
    - Installing a hot-plug drive
  - Installing a drive backplane option
  - Memory options
    - DIMM population information
    - DIMM-processor compatibility

- Memory speed tables
- Installing a DIMM
- Riser and riser cage options
  - Supported PCIe form factors
  - Installing a PCIe riser cage
  - Installing a PCIe riser board
- Storage controller options
  - Installing a type -a storage controller
  - Installing an expansion board or a type -p storage controller
- Installing the HPE NS204i-p NVMe OS Boot Device option
- GPU options
  - Installing a GPU tray
  - SXM4 GPU options
    - Installing an SXM4 GPU
  - PCIe GPU options
    - Installing a PCIe GPU
      - Configuring PCIe GPU slots
    - Installing a GPU bridge
- Installing the system board module into the chassis
- Installing a rear serial port interface
- Installing a processor and heatsink option
- HPE Smart Storage Battery
  - Installing an HPE Smart Storage Battery
- HPE Trusted Platform Module 2.0 Gen10 Plus option
  - Overview
  - HPE Trusted Platform Module 2.0 guidelines
  - Installing and enabling the HPE TPM 2.0 Gen10 Plus option
    - Installing the Trusted Platform Module board
      - Preparing the server for installation
      - Installing the TPM board and cover
      - Preparing the server for operation
    - Enabling the Trusted Platform Module
      - Enabling the Trusted Platform Module as TPM 2.0
      - Enabling the Trusted Platform Module as TPM 1.2
    - Retaining the BitLocker recovery key/password
- Cabling
  - Cabling guidelines
  - Front I/O cabling
  - Display port cabling
  - Rear serial port interface cabling
  - Fan cabling
  - PCIe pass-thru board cabling
  - Drive-controller-backplane configuration cabling
    - Gen10 Plus 8 SFF SAS/SATA Standard backplane cabling


- 8 embedded SATA configuration cabling
  - 8 SAS/SATA with E208i-a/E408i-a controller configuration cabling
  - 8 + 8 SAS/SATA with P816i-a controller configuration cabling
  - Gen10 Plus 8 SFF NVMe U.3 Premium backplane cabling
    - 7 4xNVMe with embedded x32 PCIe Gen4 on system board with E208i-a or P408i-a controller configuration cabling
    - 2 embedded SATA + 6 4xNVMe with embedded x32 PCIe Gen4 from switch output on PCIe switch board configuration cabling
    - 2 SAS/SATA + 6 4xNVMe with embedded x32 PCIe Gen4 from switch output on PCIe switch board with E208i-a or P408i-a controller configuration cabling
- HPE Smart Storage Battery cabling
- Drive backplane power cabling
  - Gen10 Plus 8 SFF SAS/SATA Standard backplane power cabling
  - Gen10 Plus 8 SFF NVMe U.3 Premium backplane power cabling
- GPU power cabling
  - 10 double-width NVIDIA A100 PCIe GPU to PCIe GPU board power cabling
  - 10 double-width AMD MI100 PCIe GPU to PCIe GPU board power cabling
- System block diagrams
  - SXM GPU configuration
  - PCIe GPU configuration
- Software and configuration utilities
  - Server mode
  - Product QuickSpecs
  - Active Health System Viewer
    - Active Health System
      - Active Health System data collection
      - Active Health System Log
  - HPE iLO 5
    - iLO Federation
    - iLO Service Port
    - iLO RESTful API
    - RESTful Interface Tool
    - iLO Amplifier Pack
  - Integrated Management Log
  - Intelligent Provisioning
    - Intelligent Provisioning operation
  - Management security
  - Scripting Toolkit for Windows and Linux
  - UEFI System Utilities
    - Secure Boot
    - Launching the Embedded UEFI Shell
  - HPE Smart Storage Administrator
  - HPE InfoSight for servers
  - USB support
    - External USB functionality

- Redundant ROM support
  - Safety and security benefits
- Keeping the system current
  - Updating firmware or system ROM
    - Service Pack for ProLiant
      - Smart Update Manager
    - Updating firmware from the System Utilities
      - Integrated Smart Update Tools
    - Updating the firmware from the UEFI Embedded Shell
    - Online Flash components
  - Drivers
  - Software and firmware
  - Operating system version support
  - HPE Pointnext Portfolio
  - Proactive notifications
- Troubleshooting
  - NMI functionality
  - Troubleshooting resources
- System battery replacement
  - System battery information
  - Removing and replacing the system battery
- Specifications
  - Server mechanical specifications
  - Power supply specifications
    - HPE 3000 W 200–277 VAC Platinum Hot-plug Power Supply
    - HPE 54 V Out 3000 W 200–277 VAC Hot-plug Power Supply
- Websites
- Support and other resources
  - Accessing Hewlett Packard Enterprise Support
  - Accessing updates
  - Customer self repair
  - Remote support
  - Warranty information
  - Regulatory information
  - Documentation feedback

## Component identification

This chapter describes the external and internal server features and components.


### Front panel components

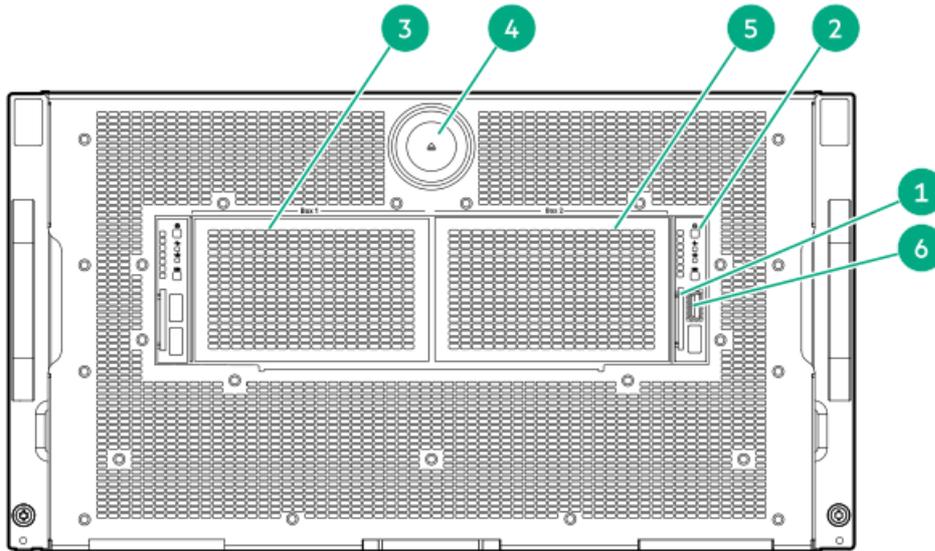

Item	Description
1	Serial number/iLO information pull tab
2	Power switch module
3	Drive box 1
4	Chassis front door lever button
5	Drive box 2
6	Dedicated iLO management port

### Front panel LEDs and buttons



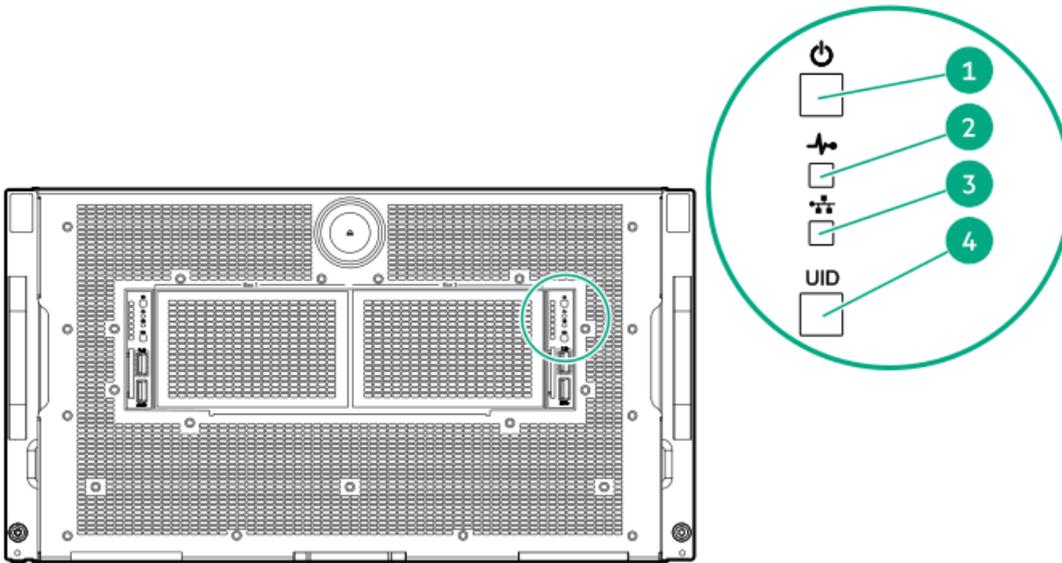

Item	Description	Status
1	Power on/Standby button and system power LED <sup>1</sup>	Solid green = System on Flashing green = Performing power on sequence Solid amber = System in standby, or power on denied Off = No power present <sup>2</sup>
2	Health LED <sup>1, 3</sup>	Solid green = Normal Flashing amber = System degraded Flashing red = System critical <sup>4</sup>
3	NIC status LED <sup>1</sup>	Solid green = Link to network Flashing green = Network active Flashing red = System critical
4	UID button LED <sup>1</sup>	Solid blue = Activated Flashing blue = Remote management or firmware upgrade in progress Off = Deactivated

<sup>1</sup> When all four LEDs described in this table flash simultaneously, a power fault has occurred.

<sup>2</sup> Facility power is not present, power cord is not attached, no power supplies are installed, power supply failure has occurred, or the power button cable is disconnected.

<sup>3</sup> NIC LEDs are not supported for NICs installed in PCIe slots.

<sup>4</sup> If the health LED indicates a degraded or critical state, review the system IML or use iLO to review the system health status.

When all four LEDs described in this table flash simultaneously, a power fault has occurred. For more information, see [Front panel LED power fault codes](#).

## UID button functionality


The UID button can be used to display the Server Health Summary when the server will not power on. For more information, see the latest HPE iLO 5 User Guide on the [Hewlett Packard Enterprise website](#).

## Front panel LED power fault codes

The following table provides a list of power fault codes, and the subsystems that are affected. Not all power faults are used by all servers.

Subsystem	LED behavior
System board	1 flash
Processor	2 flashes
Memory	3 flashes
Riser board PCIe slots	4 flashes
FlexibleLOM	5 flashes
Storage controllers	6 flashes
System board PCIe slots	7 flashes
Power backplane or storage backplane	8 flashes
Power supply	9 flashes

## Front panel pass-thru board components

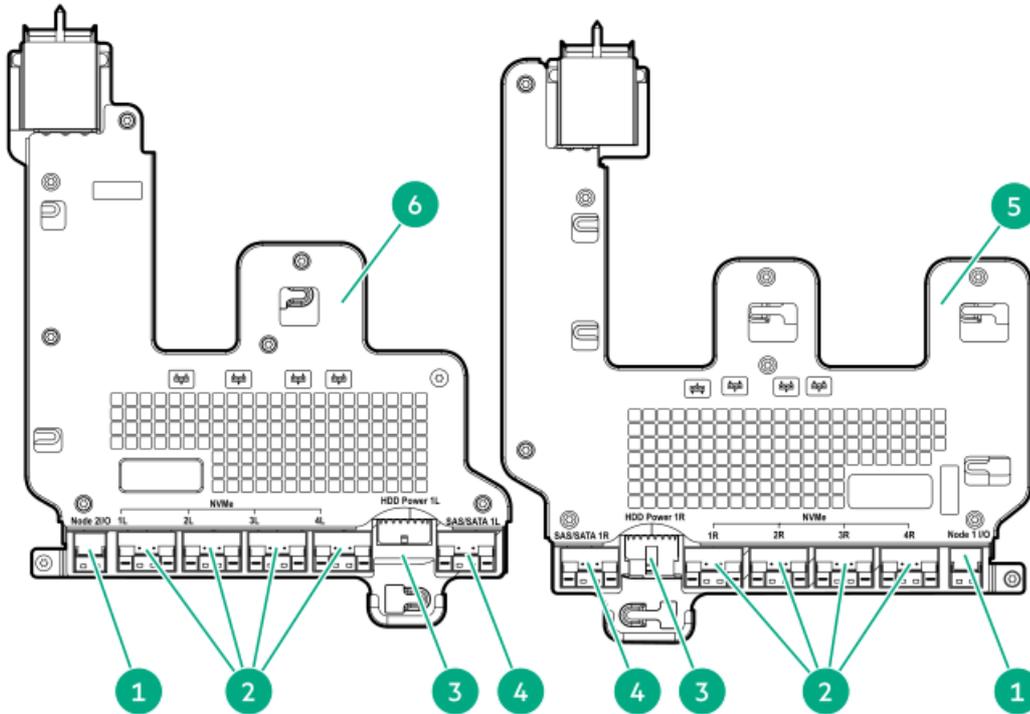


Item	Description
1	Front I/O cable connector
2	Drive cable connectors 1 to 4
3	Drive backplane power cable connector

Item	Description
4	Drive SAS/SATA cable connector
5	Front panel pass-thru board 1 (Drive box 2 I/O)
6	Front panel pass-thru board 2 (Drive box 1 I/O)

## Rear panel components


### SXM4 GPU configuration

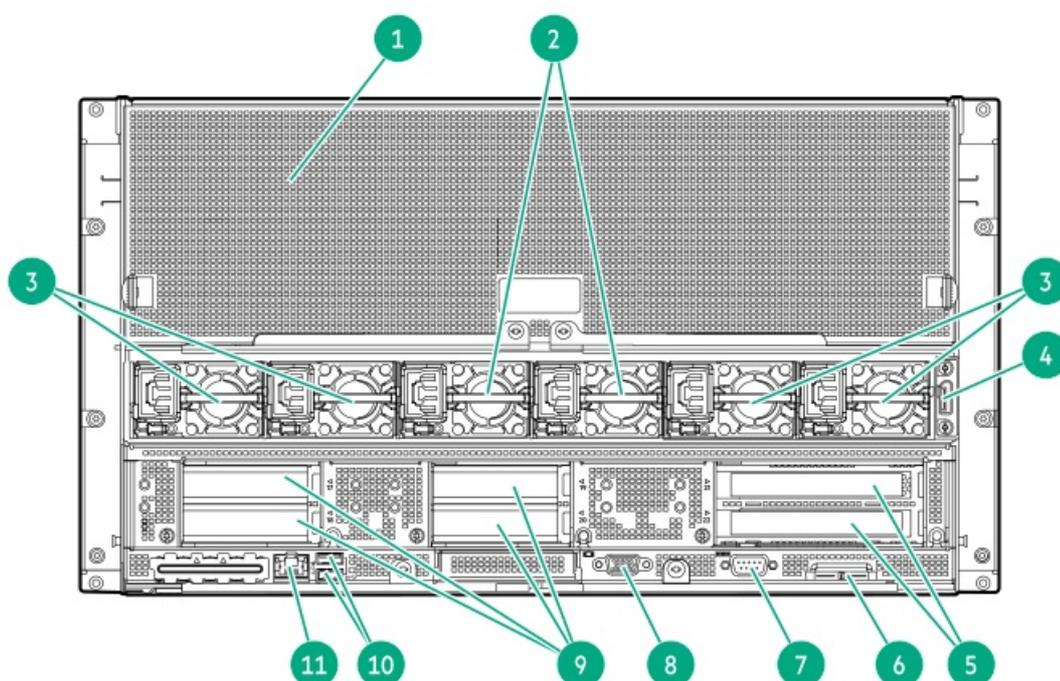

Item	Description
1	SXM4 GPU tray
2	12 V power supplies (2)
3	54 V power supplies (4)
4	APM 2.0 connector
5	PCIe4 x16 half length/full height expansion slots 21 and 22 (tertiary riser cage)
6	Serial number/iLO information pull tab
7	Optional serial port
8	Video connector

Item	Description
9	PCIe4 x16 low-profile expansion slots 17 to 21 (primary and secondary riser cages)
10	USB 3.1 Gen1 connectors (2)
11	Dedicated iLO management port

## PCIe GPU configuration

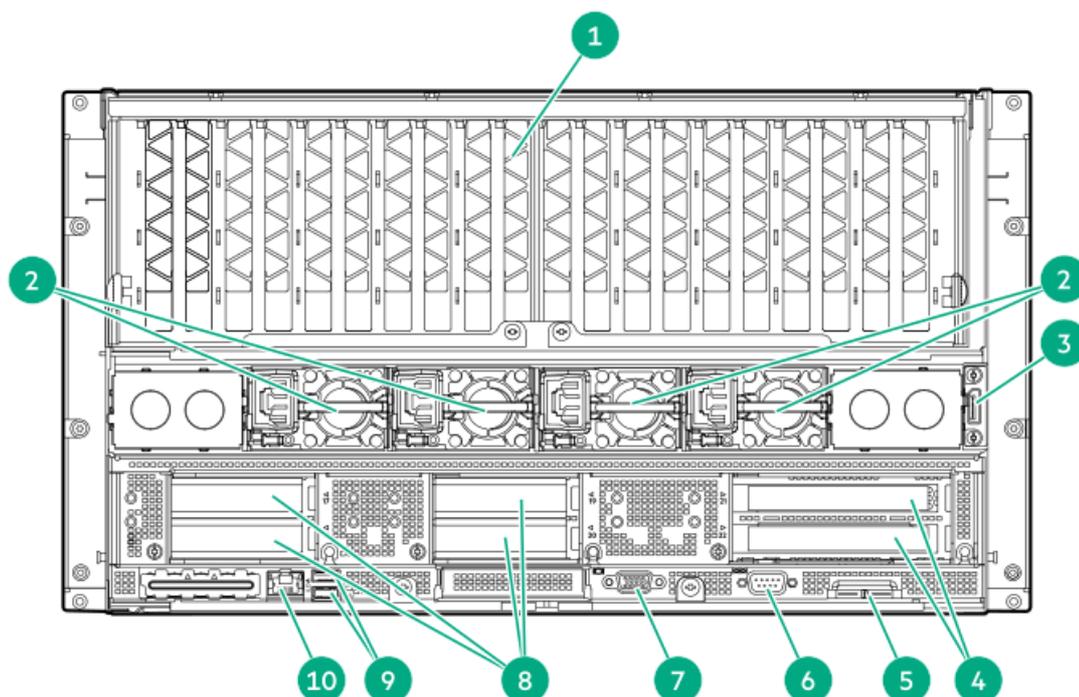


Item	Description
1	PCIe GPU tray s
2	12 V power supplies (4)
3	APM 2.0 connector
4	PCIe4 x16 half length/full height expansion slots 21 and 22 (tertiary riser cage)
5	Serial number/iLO information pull tab
6	Optional serial port
7	Video connector
8	PCIe4 x16 low-profile expansion slots 17 to 21 (primary and secondary riser cages)
9	USB 3.1 Gen1 connectors (2)
10	Dedicated iLO management port

## System board module components

The system board module consists of a system board and a PCIe switch board.

## System board components

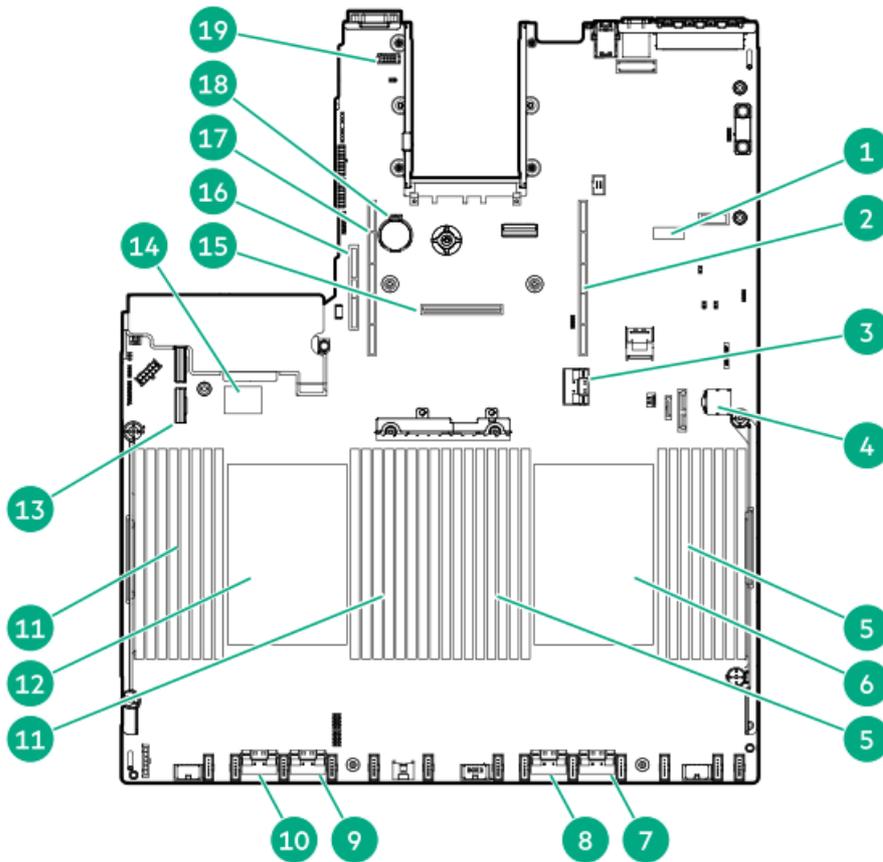

Item	Description
1	<u>System maintenance switch</u>
2	Primary (processor 1) x16 PCIe riser connector
3	x16 primary PCIe riser/PCIe jumper B connector
4	Front power connector
5	Processor 1 DIMMs
6	Processor 1
7	x8 NVMe Slim SAS connector
8	x8 NVMe Slim SAS connector

Item	Description
9	x8 NVMe Slim SAS connector
10	x8 NVMe Slim SAS connector
11	Processor 2 DIMMs
12	Processor 2
13	Embedded SATA connector
14	Dual USB port
15	Type-a storage controller slot
16	Tertiary (processor 2) x16 PCIe riser connector
17	Secondary (processor 2) x16 PCIe riser connector
18	System battery
19	Rear serial port connector

## System maintenance switch descriptions

Position	Default	Function
S1 <sup>1</sup>	Off	Off = iLO 5 security is enabled. On = iLO 5 security is disabled.
S2	Off	Reserved
S3	Off	Reserved
S4	Off	Reserved
S5 <sup>1</sup>	Off	Off = Power-on password is enabled. On = Power-on password is disabled.
S6 <sup>1, 2, 3</sup>	Off	Off = No function On = Restore default manufacturing settings
S7	Off	Reserved
S8	—	Reserved
S9	—	Reserved
S10	—	Reserved
S11	—	Reserved
S12	—	Reserved

<sup>1</sup> To access the redundant ROM, set S1, S5, and S6 to On.


<sup>2</sup> When the system maintenance switch position 6 is set to the On position, the system is prepared to restore all configuration settings to their manufacturing defaults.

<sup>3</sup> When the system maintenance switch position 6 is set to the On position and Secure Boot is enabled, some configurations cannot be

restored.  
 For more information, see [Secure Boot](#).

## DIMM label identification

To determine DIMM characteristics, see the label attached to the DIMM. The information in this section helps you to use the label to locate specific information about the DIMM.

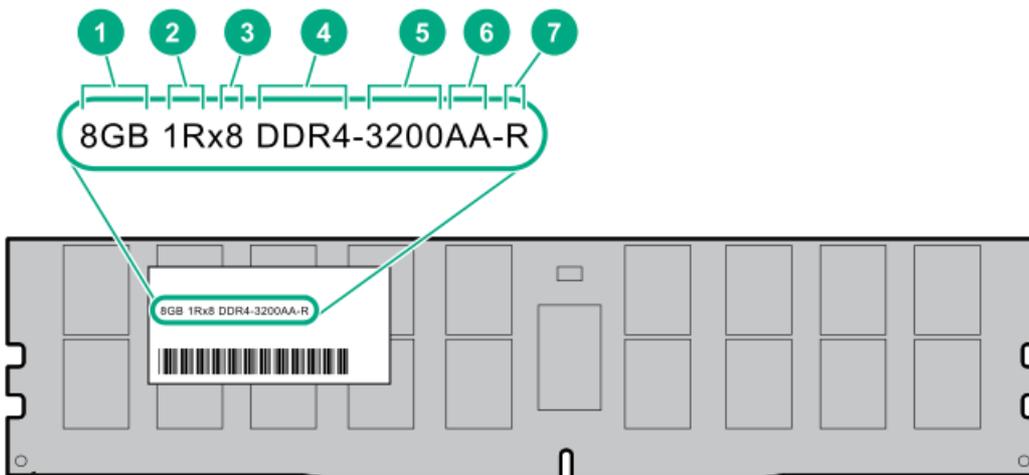

Item	Description	Example
1	Capacity	8 GB 16 GB 32 GB 64 GB 128 GB 256 GB
2	Rank	1R = Single rank 2R = Dual rank 4R = Quad rank 8R = Octal rank
3	Data width on DRAM	x4 = 4-bit x8 = 8-bit
4	Memory generation	PC4 = DDR4
5	Maximum memory speed	3200 MT/s
6	CAS latency	AA = CAS 22-22-22 AA = CAS 26-22-22 (for 3DS LRDIMM)

Item	Description	Example
7	DIMM type	R = RDIMM (registered) L = LRDIMM (load reduced)


For more information about product features, specifications, options, configurations, and compatibility, see the HPE DDR4 SmartMemory QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/support/DDR4SmartMemoryQS>).

## DIMM slot locations

DIMM slots are numbered sequentially (1 through 16) for each processor. The supported AMP modes use the letter assignments for population guidelines.




## Processor and socket components

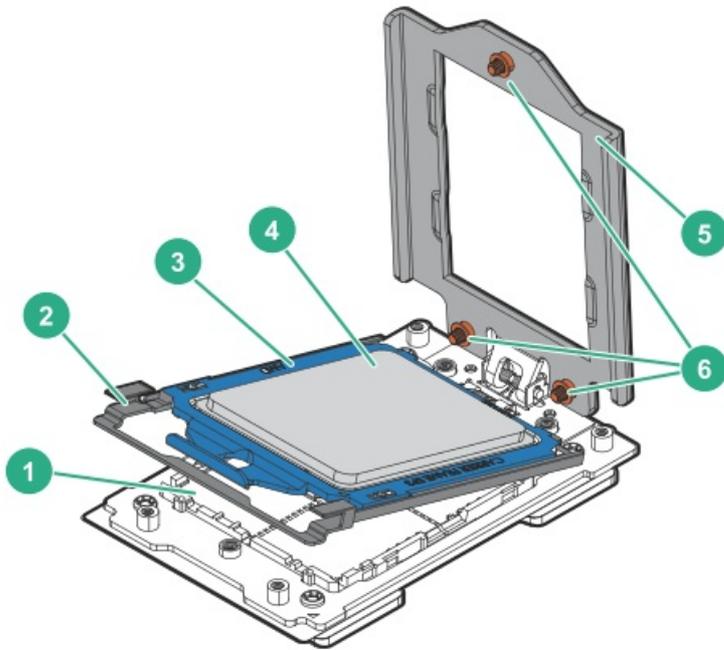

Item	Description
1	Pin field
2	Rail frame
3	Carrier frame
4	Processor
5	Force frame
6	Captive screws (Torx T-20)


## PCIe switch board components

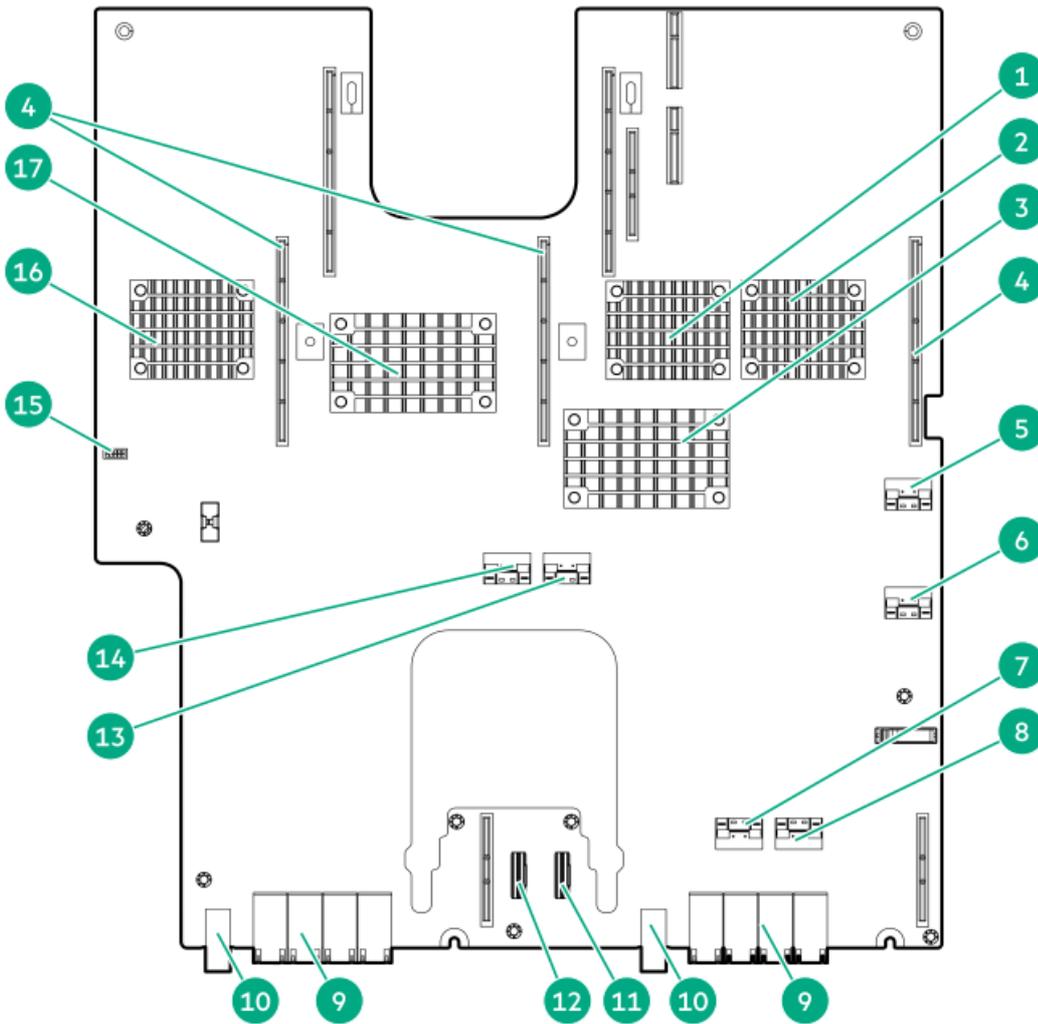

Item	Description
1	PCIe switch 3
2	PCIe switch 5
3	PCIe switch 4
4	PCIe riser board connectors
5	Slim SAS 4A connector
6	Slim SAS 3A connector
7	Slim SAS 3B connector
8	Slim SAS 4B connector
9	PCIe connectors to midplane
10	Midplane 12 V power connectors for system board
11	NVMe Slim SAS 2B connector
12	NVMe Slim SAS 1B connector
13	NVMe Slim SAS 2A connector
14	NVMe Slim SAS 1A connector

Item	Description
15	Smart Storage Battery connector
16	PCIe switch 1
17	PCIe switch 2


## System board storage interposer components

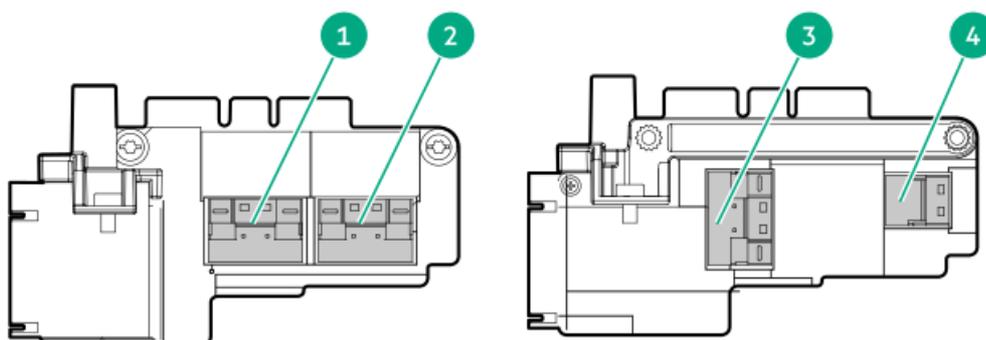

Item	Description
1	NVMe Slim SAS connector 2
2	NVMe Slim SAS connector 1
3	Slim SAS SAS/SATA connector
4	Front panel I/O connector

## SXM4 GPU tray components



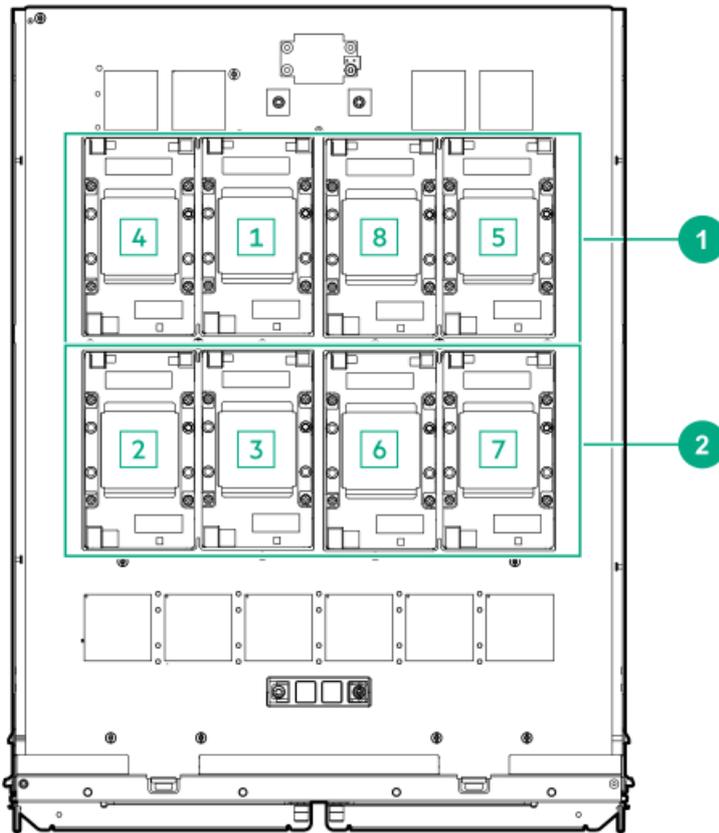


Item	Description
1	SXM4 GPU slots 4, 1, 8, and 5
2	SXM4 GPU slots 2, 3, 6, and 7

## PCIe GPU tray components

The brown GPU slots support single-width and double-width PCIe GPUs while the gray slots support only single-width GPUs.


### 16 single-width GPU configuration

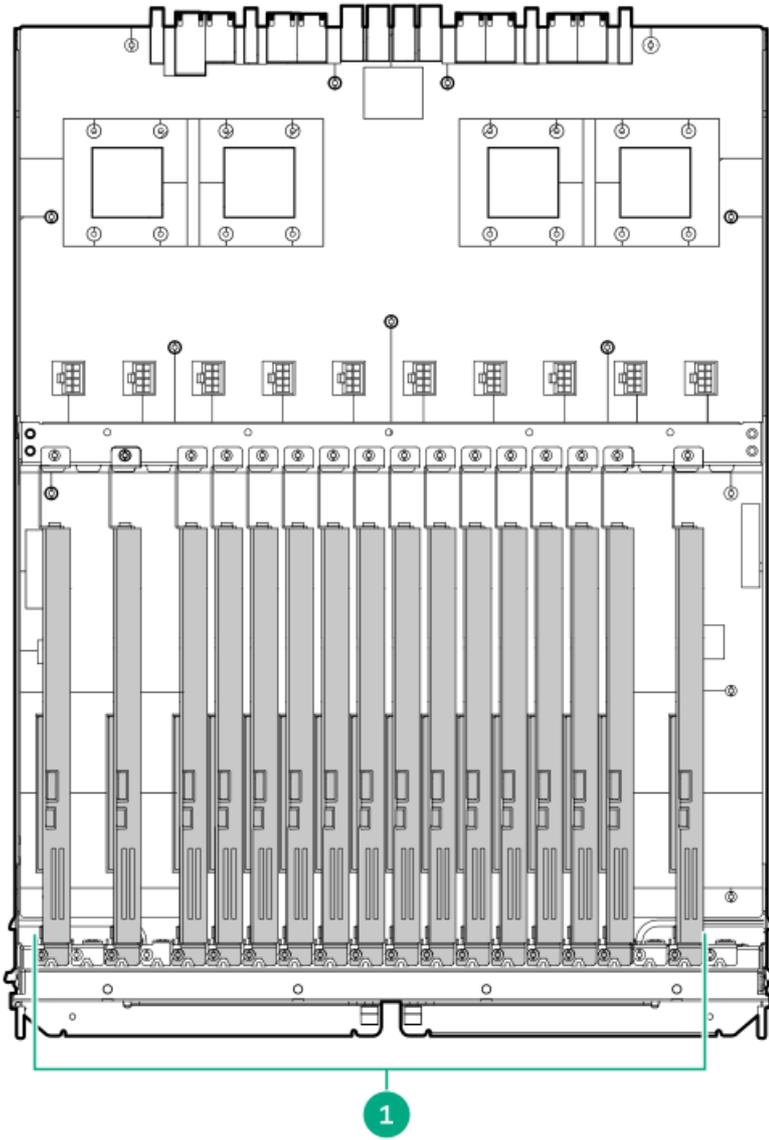

Item	Description
1	PCIe single-width GPU slots 1-16

**10 double-width GPU configuration**




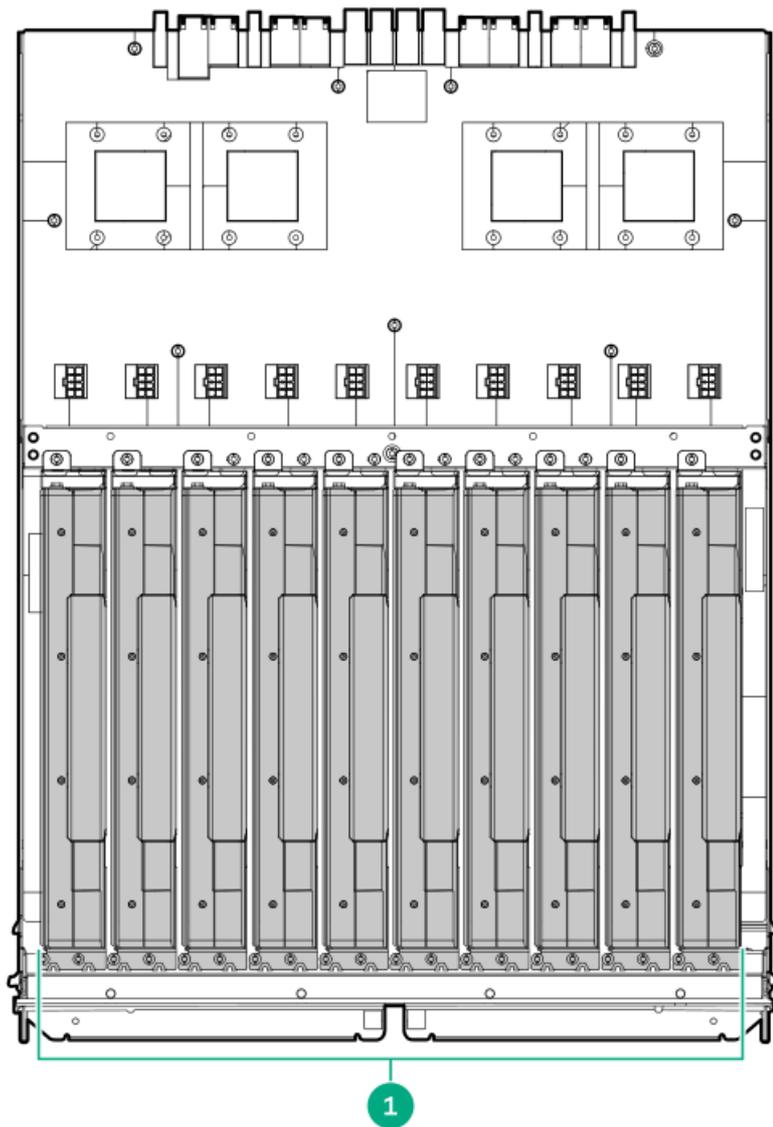

Item	Description
1	PCIe double-width GPU slots 1-10

## Power supply LED




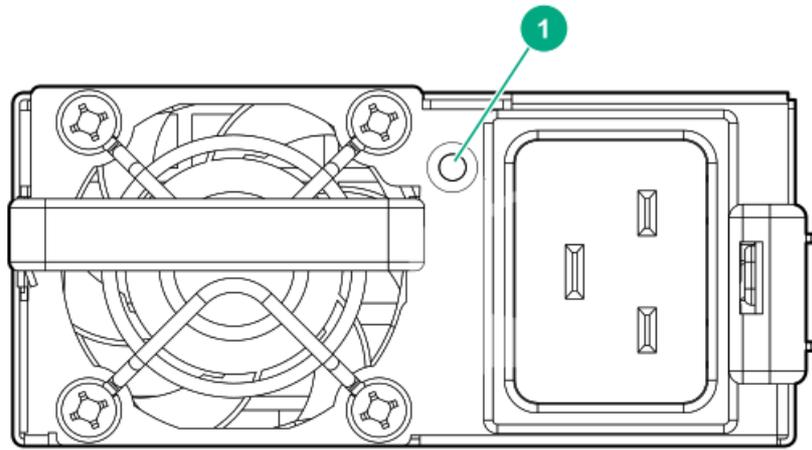

Status	Description
Solid green	Power supply is on and is operating normally.
Flashing green (0.5 Hz)	12 V standby power present (Power supply off)
Flashing green (2 Hz)	Power supply is in Smart redundant state or offline mode.
Solid amber	12 V fault caused a shutdown; power supply failed (overvoltage/undervoltage, overtemperature, overcurrent, short-circuit), fan failed, or input overvoltage protection
Off	No power present or standby power failed (overvoltage/undervoltage, overtemperature, overcurrent, short-circuit, fan lock)

## Fan module numbering

The system supports 15 fan modules. If the system has one fan lesser than the recommended (15) number during boot, the system will boot in the Nonredundant Mode. If the missing fan is installed, the system will begin functioning in Redundant Mode. If more than one fan is missing during power up, the user will be allowed to boot, but will be using an unsupported configuration.

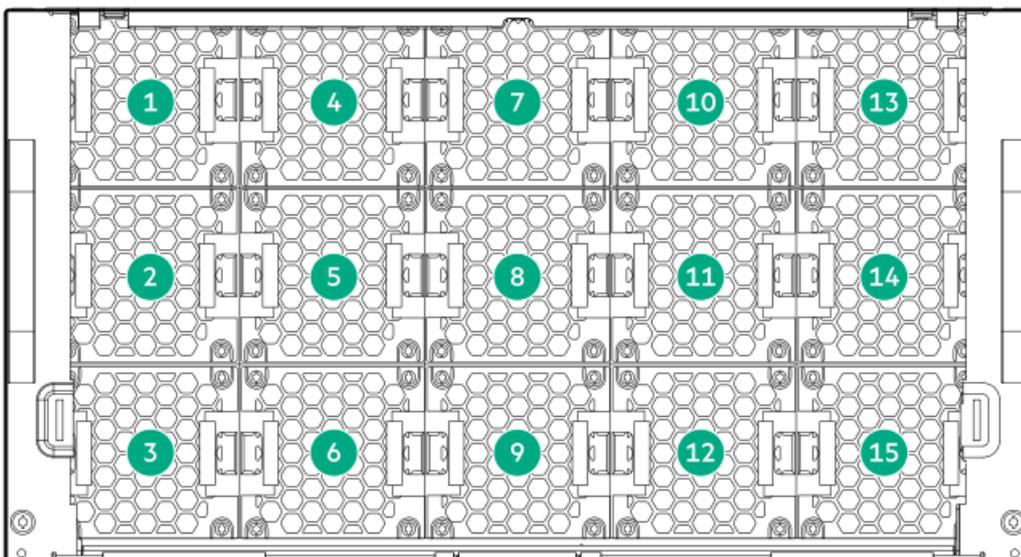

## Drives


### Supported drives

- Gen10 Plus 8 SFF SAS/SATA Standard backplane supports 6Gbps SATA/12Gbps SAS drives
- Gen10 Plus 8 SFF NVMe U.3 Premium backplane supports x4 NVMe drives

### HPE Smart Drive

This HPE Smart Drive carrier supports SAS, SATA, and NVMe drives.


### Drive LEDs

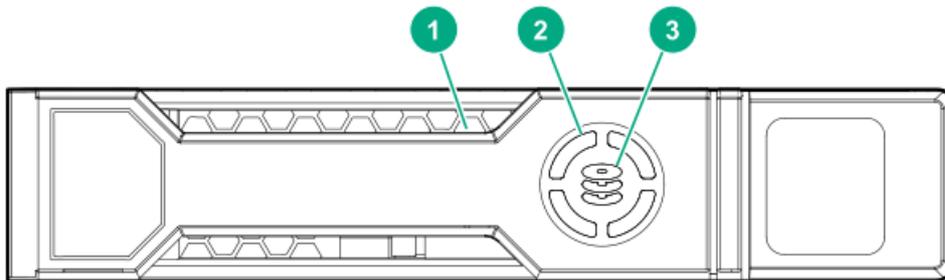

Item	Description	Status
1	Locate	<ul style="list-style-type: none"><li>• Solid blue = The drive is being identified by a host application.</li><li>• Flashing blue = The drive carrier firmware is being updated or requires an update.</li></ul>
2	Activity ring	<ul style="list-style-type: none"><li>• Rotating green = Drive activity.</li><li>• Off = No drive activity.</li></ul>

Item	Description	Status
3	Drive status	<ul style="list-style-type: none"> <li>• Solid green = The drive is a member of one or more logical drives.</li> <li>• Flashing green = The drive is doing one of the following: <ul style="list-style-type: none"> <li>◦ Rebuilding or performing a RAID migration</li> <li>◦ Performing a strip size migration</li> <li>◦ Performing a capacity expansion</li> <li>◦ Performing a logical drive extension</li> <li>◦ Erasing</li> </ul> </li> <li>• Flashing amber/green = The drive is a member of one or more logical drives and predicts the drive will fail.</li> <li>• Flashing amber = The drive is not configured and predicts the drive will fail.</li> <li>• Solid amber = The drive has failed, is unsupported, or is invalid.</li> <li>• Off = The drive is not configured by a RAID controller or a spare drive.</li> </ul>

## Components

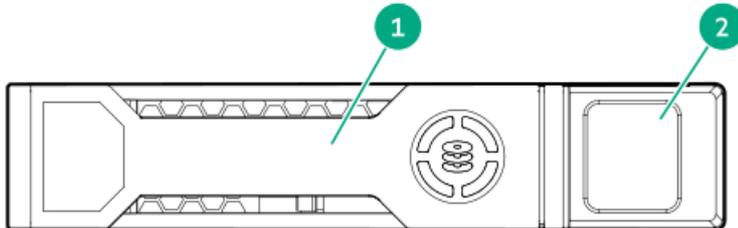


Item	Description	Definition
1	Drive handle	<ul style="list-style-type: none"> <li>• Pull the open handle to remove a drive.</li> <li>• Close the handle to fully seat and lock a drive into place.</li> </ul>
2	Handle release button	Releases the drive handle for removal and insertion.

## Drive bay numbering


For information on supported drive configurations, see [Supported configurations](#).

For drive cabling information, see [Drive-controller-backplane configuration cabling](#).

## 8 embedded SATA configuration

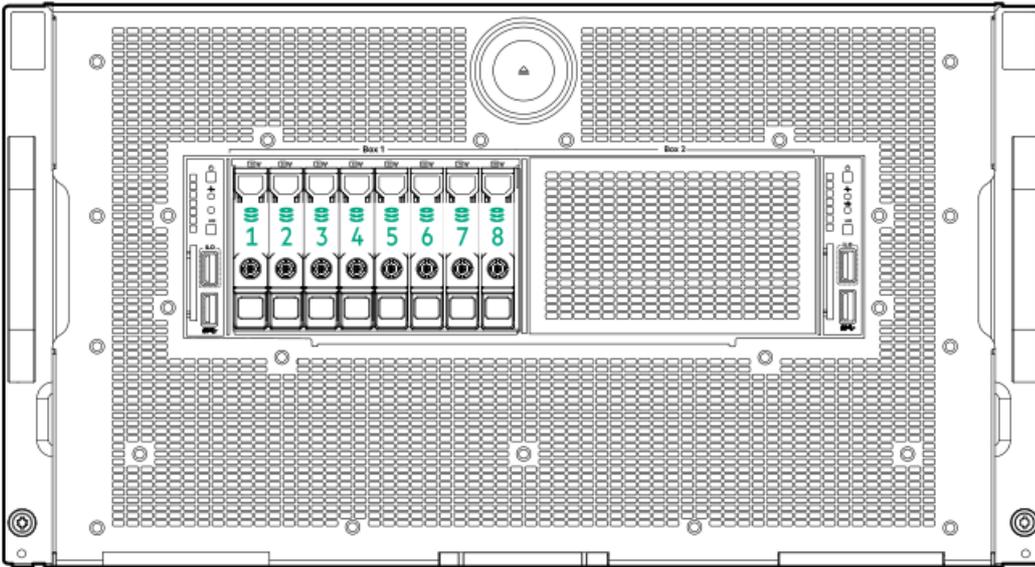


## 8 SAS/SATA with E208i-a/E408i-a controller configuration

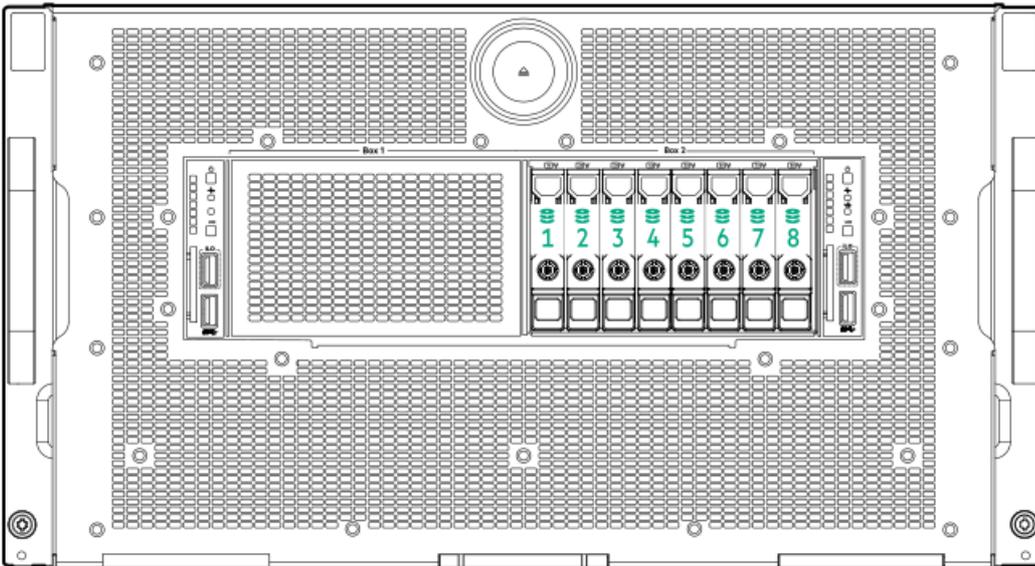


## 8 + 8 SAS/SATA with P816i-a controller configuration



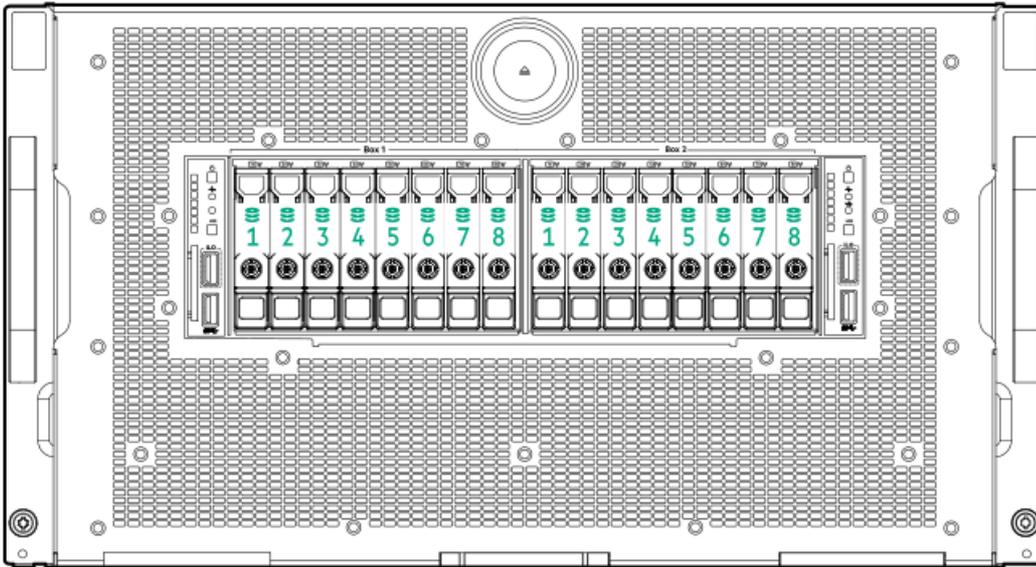


**7 4xNVMe with embedded x32 PCIe Gen4 on system board with E208i-a or P408i-a controller configuration**

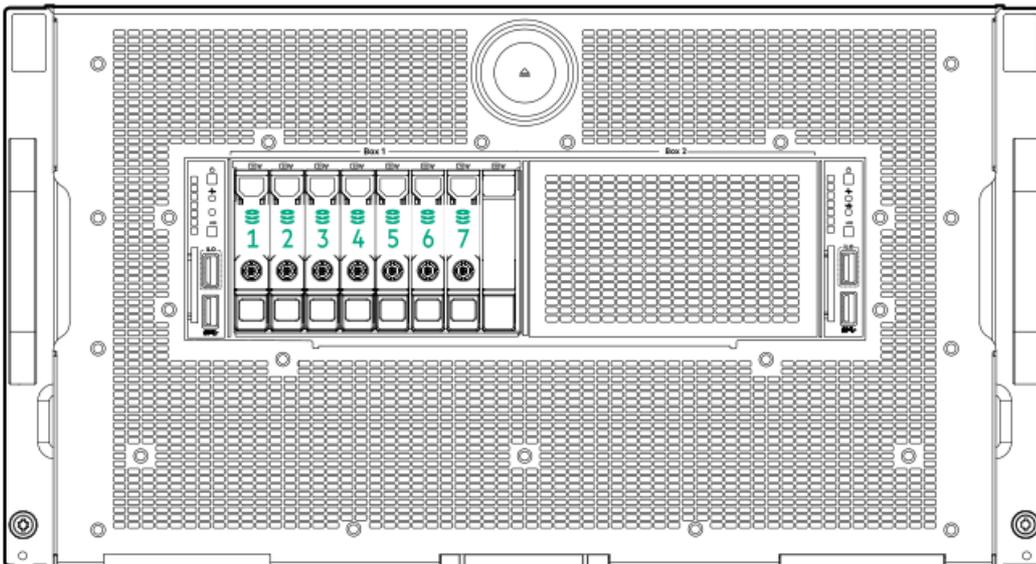


Drive bay 8 is not supported for drive installation and no drive must be installed in it.

**2 embedded SATA + 6 4xNVMe with embedded x32 PCIe Gen4 from switch output on PCIe switch board configuration**



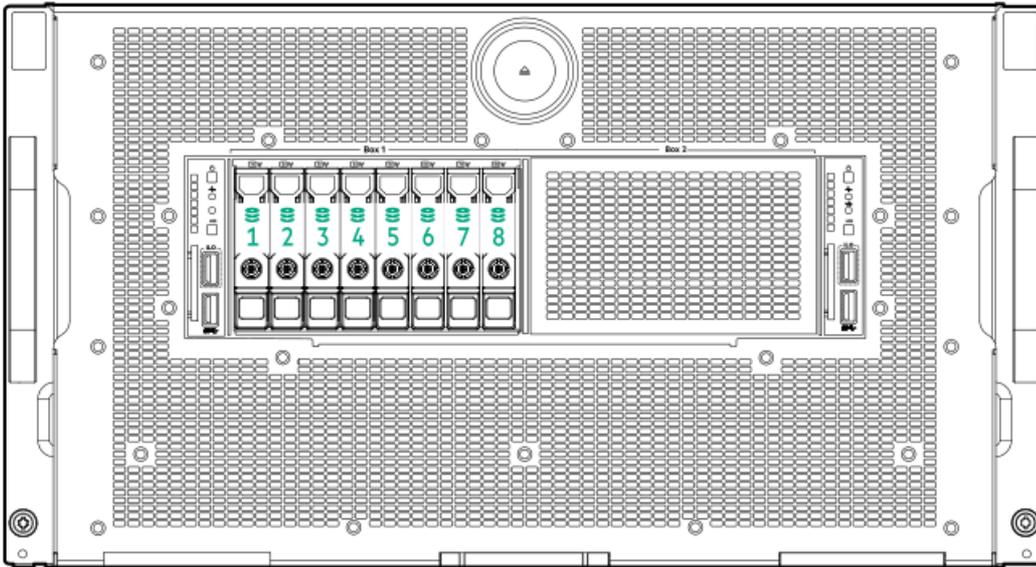

2 SAS/SATA + 6 4xNVMe with embedded x32 PCIe Gen4 from switch output on PCIe switch board with E208i-a or P408i-a controller configuration

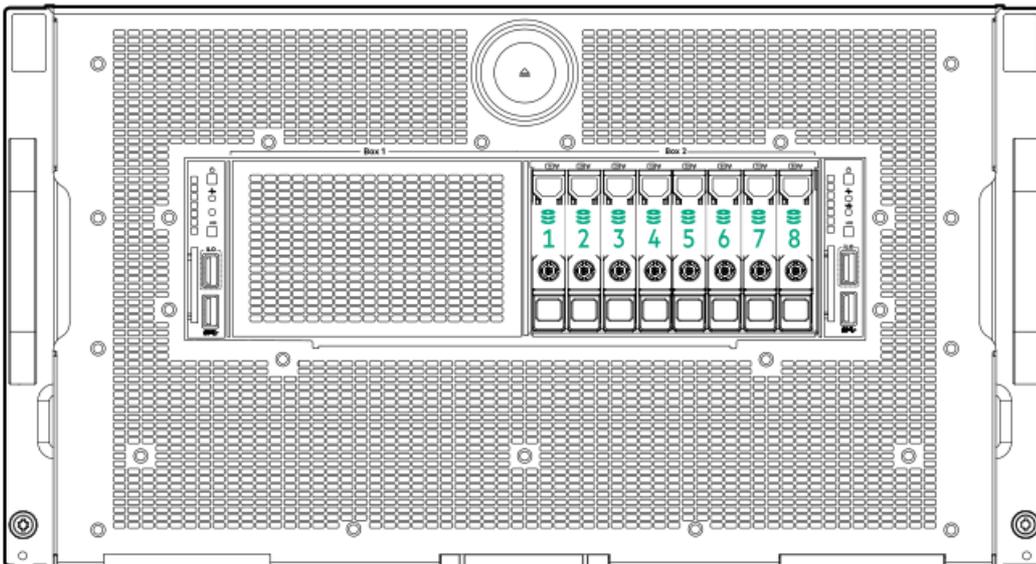


## Storage controller components

For component and LED identification, see the user guide for your storage controller series on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/smartstorage-docs>).


For a complete list of supported storage controller models, see the server QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/qs>).

## HPE NS204i-p NVMe OS Boot Device components

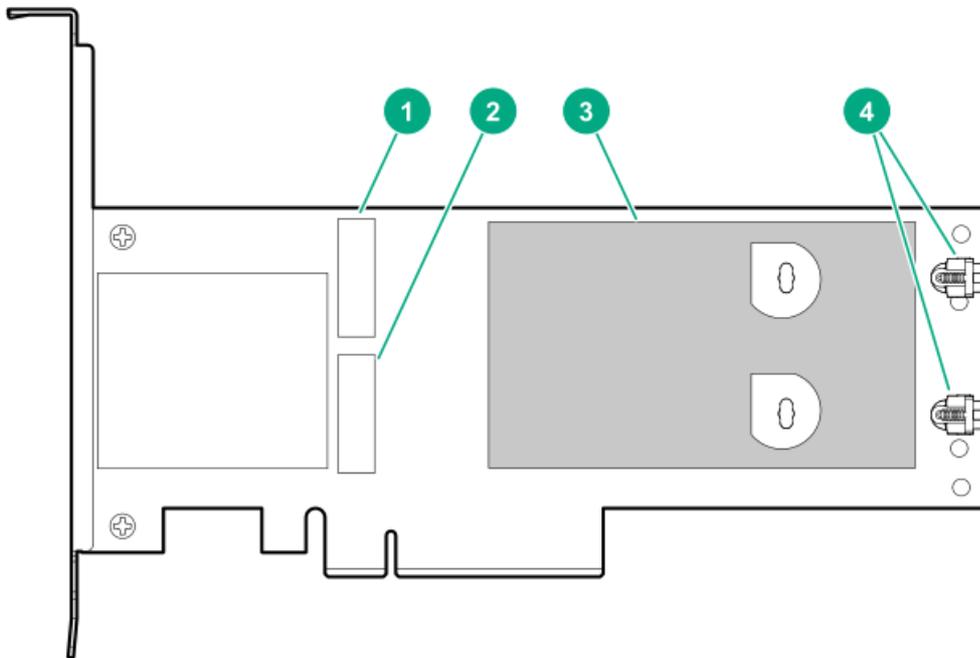

Item	Description
1	Drive bay 1
2	Drive bay 2
3	Thermal interface pad with removable liner
4	M.2 drive retaining latches

### HPE NS204i-p NVMe OS Boot Device LED definitions

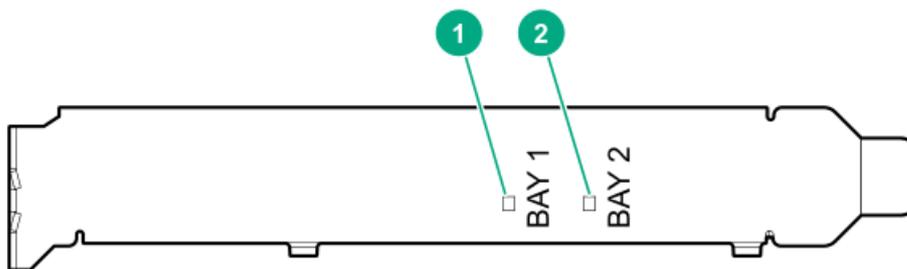

Item	Description	Fault LED status
1	Bay 1 LED	Off: Normal
2	Bay 2 LED	Flashing 1Hz: Drive predictive failure Amber: Drive failure

### Power up the server

To power up the server, use one of the following methods:

- Press the Power On/Standby button.
- Use the virtual power button through iLO.

### Power down the server

Before powering down the server for any upgrade or maintenance procedures, perform a backup of critical server data and programs.

---

**i IMPORTANT:**

When the server is in standby mode, auxiliary power is still being provided to the system.

---

To power down the server, use one of the following methods:

- Press and release the Power On/Standby button.  
This method initiates a controlled shutdown of applications and the OS before the server enters standby mode.
- Press and hold the Power On/Standby button for more than 4 seconds to force the server to enter standby mode.  
This method forces the server to enter standby mode without properly exiting applications and the OS. If an application stops responding, you can use this method to force a shutdown.
- Use a virtual power button selection through iLO 5.  
This method initiates a controlled remote shutdown of applications and the OS before the server enters standby mode.

Before proceeding, verify that the server is in standby mode by observing that the system power LED is amber.

### Power capping

Server power capping is useful when you want to hold the actual used system power to a specific amount. This amount might be lower than what the system configuration might maximally use. The power capping feature in this operates at the server enclosure (chassis) level.

To configure power capping, use one of the following tools:

#### HPE Apollo Platform Manager (HPE APM)

HPE Apollo Platform Manager is a rack-level device that can control power caps for all enclosures installed in a rack. Power capping functionality is configured using the APM GUI and the Redfish API-conformant APM RESTful API.

For more information, see the following:

- [Power capping using HPE Apollo Platform Manager](#)
- HPE Apollo Platform Manager User Guide ([https://www.hpe.com/support/APM\\_UG\\_en](https://www.hpe.com/support/APM_UG_en))

#### HPE iLO

HPE iLO is a remote server management processor embedded on the system boards of supported HPE servers and compute modules. HPE iLO enables the monitoring and controlling of servers from remote locations. Use the HPE iLO web interface to configure power capping on supported servers.

For more information, see the following:

- [Power capping using the HPE iLO web interface](#)

- HPE iLO 5 User Guide (<https://www.hpe.com/support/ilo-docs>)

## iLO RESTful API

iLO includes the iLO RESTful API, which is Redfish API conformant. The iLO RESTful API is a programming interface that is used to perform server configuration, inventory, and monitoring tasks. These tasks are done by sending basic HTTPS operations to the iLO web server. Use the iLO RESTful API to configure power capping on supported servers.

For more information, see the iLO RESTful API documentation (<https://hewlettpackard.github.io/ilo-rest-api-docs/>).

## HPE Performance Cluster Manager

HPE Performance Cluster Manager provides complete provisioning, management, and monitoring for Linux-based high performance computing (HPC) clusters. Power capping from GPU to cluster level is available through the HPE Cluster Manager power management software.

For more information, see the following:

- [Power capping with HPE Performance Cluster Manager](#)
- HPE Performance Cluster Manager Power Management Guide (<https://www.hpe.com/support/hpcm-power-009>)

Table 1: Power capping features by tool

Feature	iLO web interface <sup>1</sup>	iLO RESTful API <sup>1</sup>	HPE Apollo Platform Manager	HPE Performance Cluster Manager
Server/node-level power capping	X	X	—	X
Chassis-level power capping	X	X	X	X
Rack-level power capping	—	—	X	X
Cluster/system-level power capping	—	—	—	X
Server-level GPU power capping <sup>2</sup>	—	—	—	X
Group GPU power capping <sup>2</sup>	—	—	—	X

<sup>1</sup> An iLO Advanced License is required to use User Configurable Mode.


<sup>2</sup> Support for NVIDIA GPUs only

## Extend the chassis from the rack

### Procedure

Loosen the thumbscrews on either side of the chassis, and then extend the chassis from the rack.



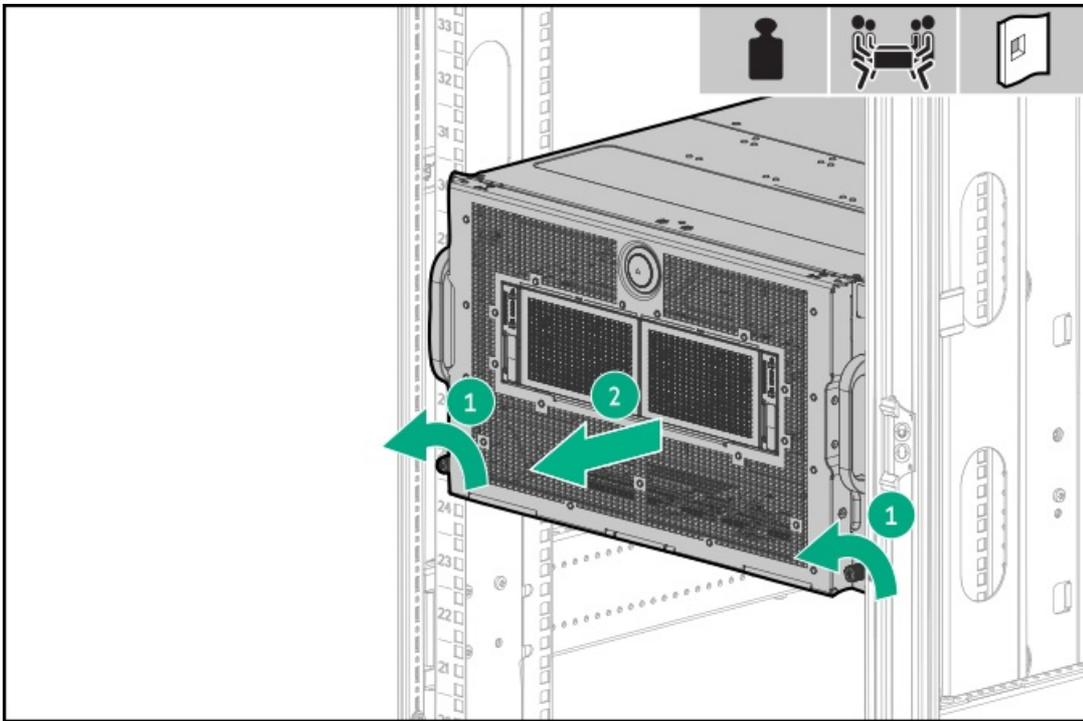


## Open the chassis front door

**CAUTION:** For proper cooling, do not exceed two minutes with the chassis front door open. Exceeding two minutes can lead to thermal damage or system shutdown.

### Procedure

Open the chassis front door.

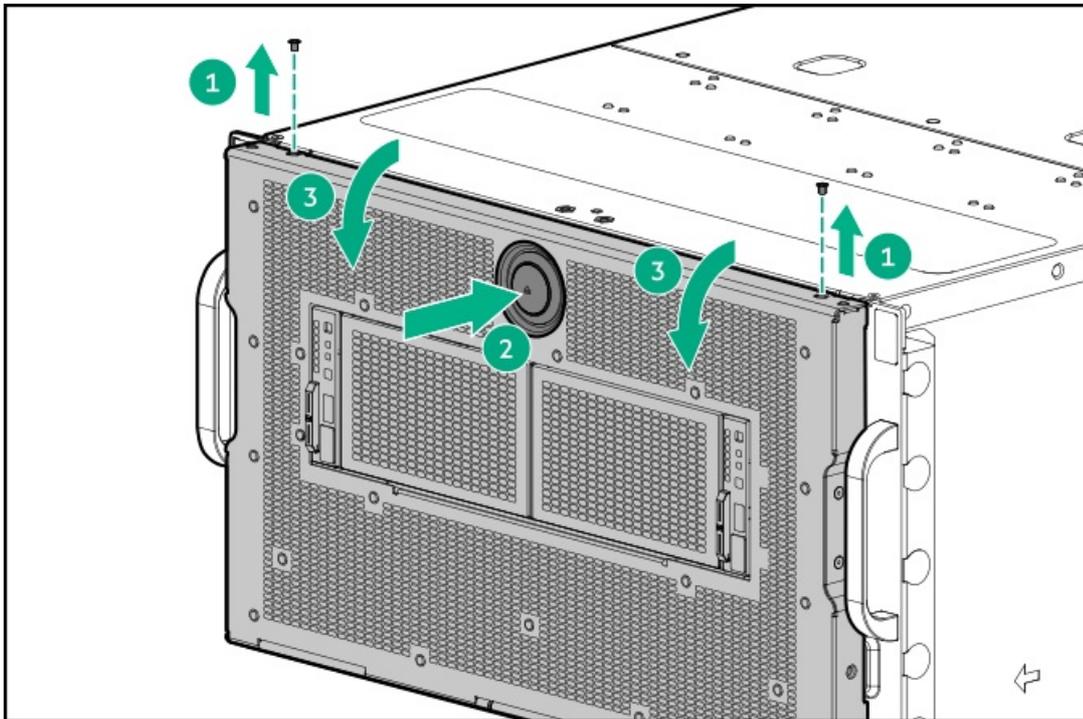


## Close the chassis front door

**CAUTION:** For proper cooling, do not exceed two minutes with the chassis front door open. Exceeding two minutes can lead to thermal damage or system shutdown.

#### Procedure


Close the chassis front door.

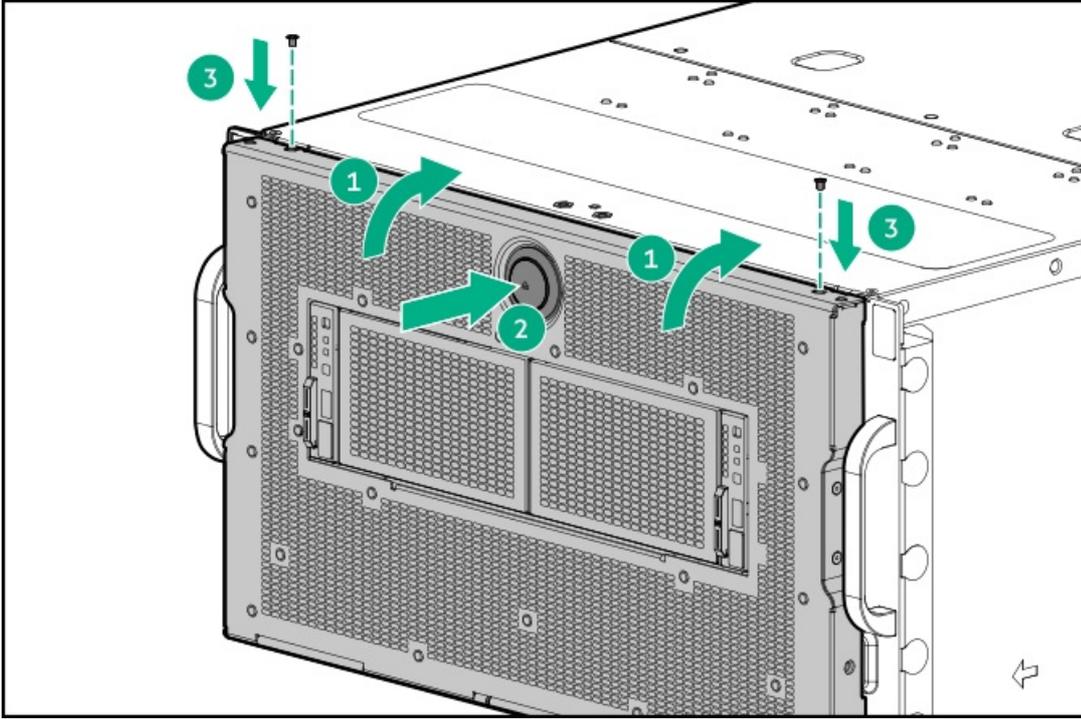

## Remove the midplane panel

#### Procedure


1. Power down the server.
2. #GUID-85644E99-BD05-440A-B88B-04E186EF77CC.
3. Remove the midplane panel.

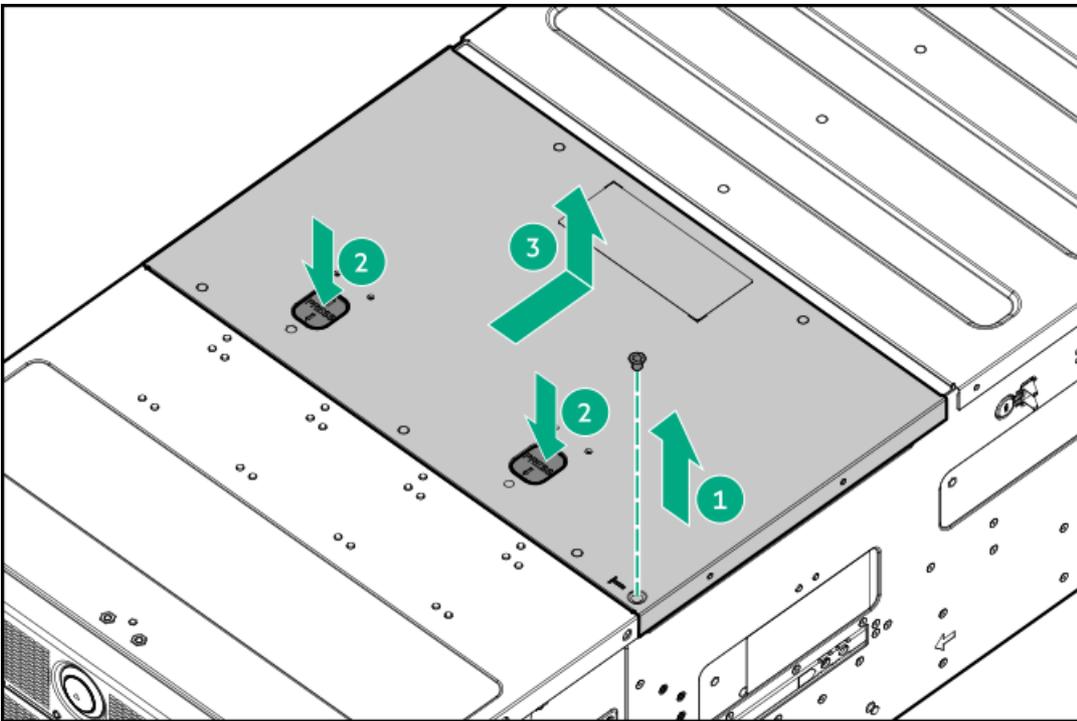

## Remove the GPU tray from the chassis

### Procedure

1. Power down the server.
2. Remove the GPU tray from the chassis.

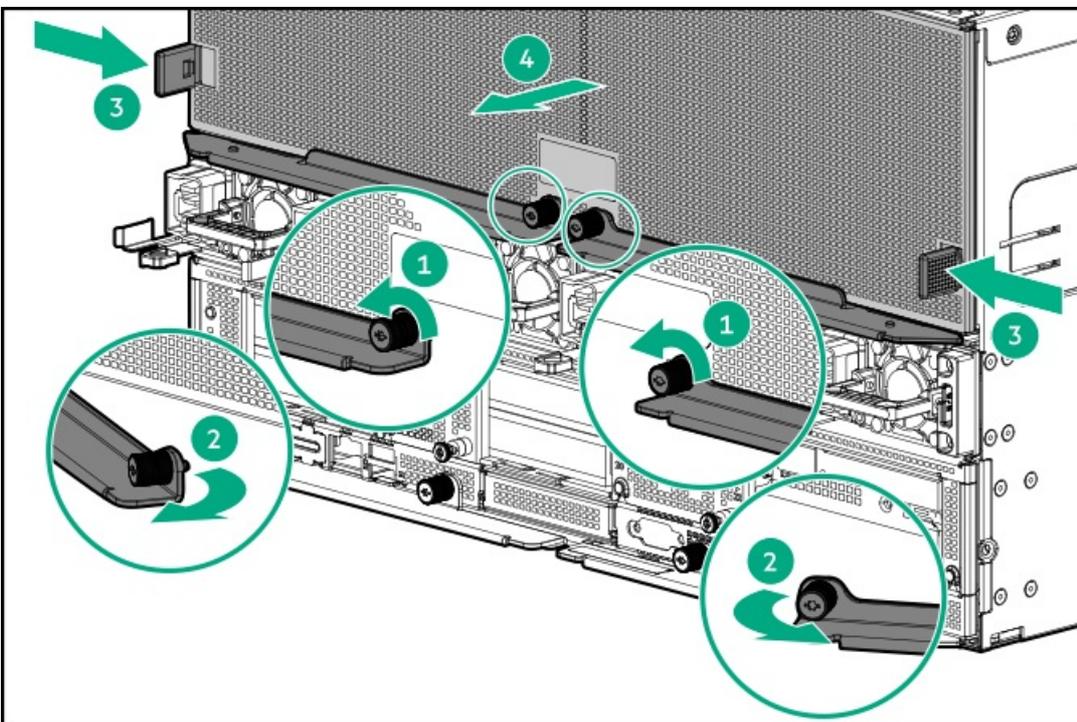


Depending on the chassis configuration, your GPU tray might look different.

## Remove the system board module from the chassis



## Procedure

1. Back up all server data.
2. Power down the server.
3. Disconnect all peripheral cables from the server.
4. Remove the system board module from the chassis.

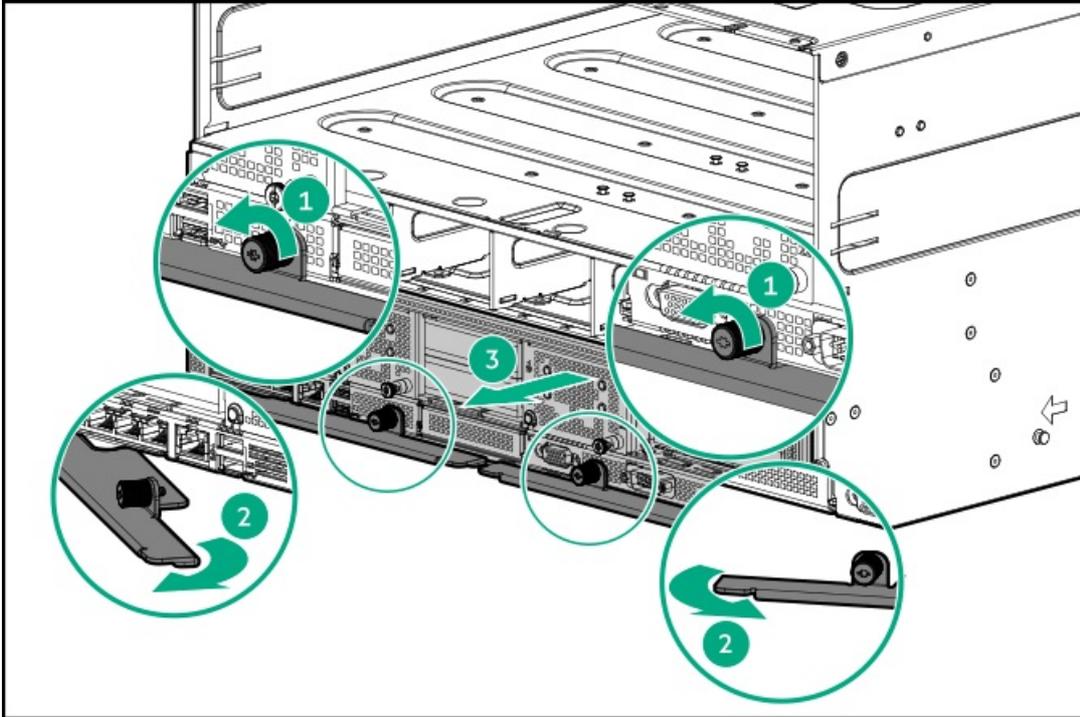


5. Place the module on a flat, level work surface.

## Install the system board module from the chassis

### Procedure

Install the system board module into the chassis.

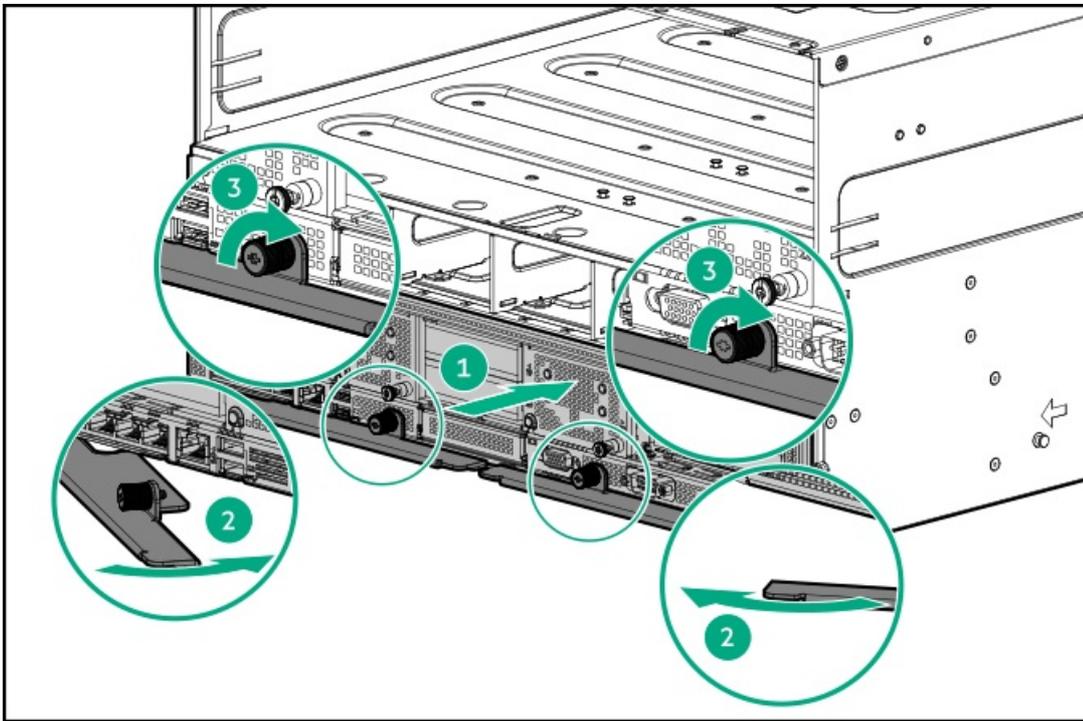

## Remove the system board module access panel

### Procedure


1. Back up all server data.
2. Power down the server.
3. Disconnect all peripheral cables from the server.
4. Remove the system board module from the chassis.
5. Place the module on a flat, level work surface.
6. Open both the access panel latches together, and remove the module access panel.

---

**⚠ WARNING:**

Both the access panel latches must be opened at the same time. Failing to do so can damage the PCIe switch board connectors.

---

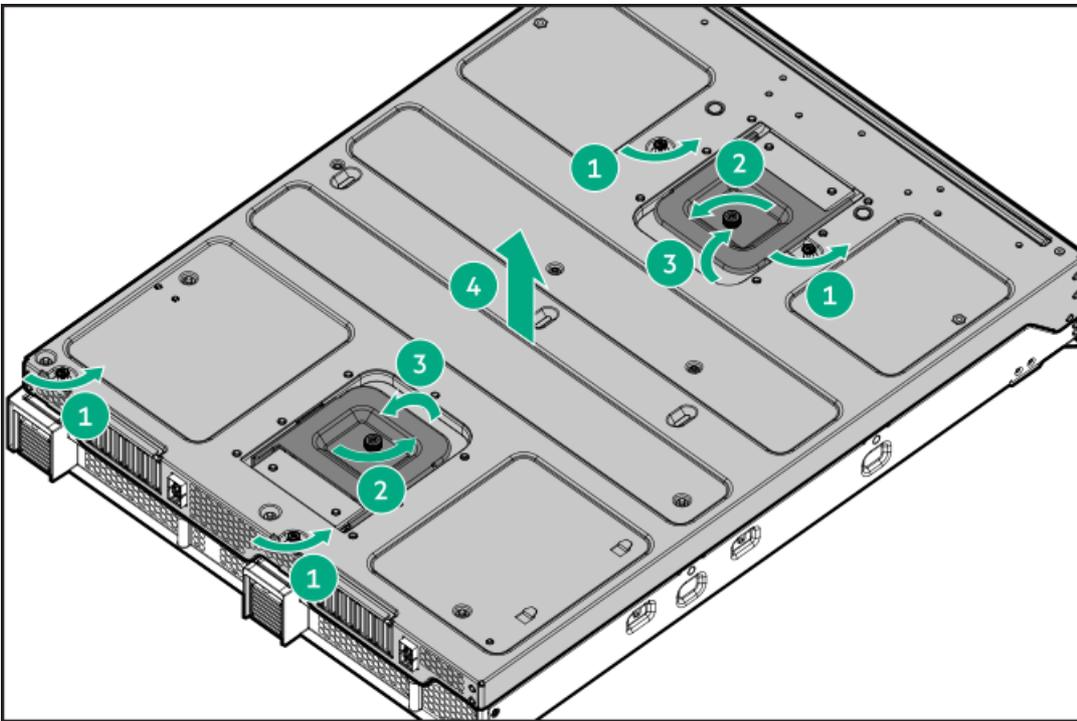

**More information**

Remove the system board module from the chassis

**Install the system board module access panel**


**Procedure**

Close both the access panel latches together, and install the system board module access panel.



**WARNING:**


Both the access panel latches must be closed at the same time. Failing to do so can damage the PCIe switch board connectors.

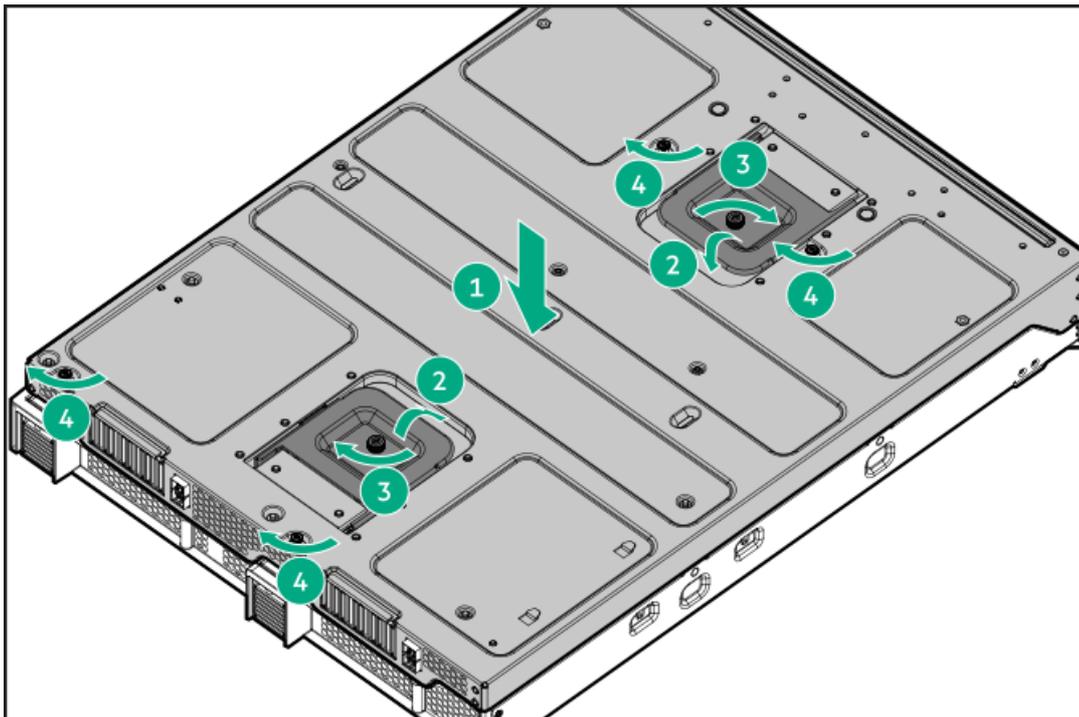

## Remove the PCIe switch board

### Procedure

1. Back up all server data.
2. [Power down the server.](#)
3. Disconnect all peripheral cables from the server.
4. Remove the system board module from the chassis.
5. Place the module on a flat, level work surface.
6. Remove the system board module access panel.
7. Disconnect all cables connected to the PCIe switch board.
8. Remove the PCIe switch board from the access panel.

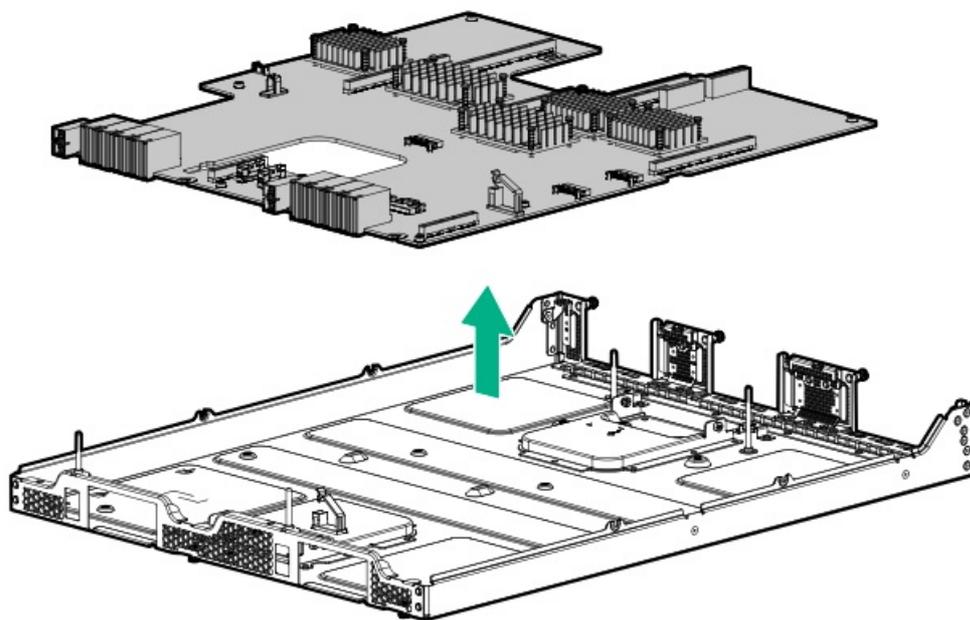

### More information

[Remove the system board module from the chassis](#)


[Remove the system board module access panel](#)

## Install the PCIe switch board

### Procedure

Install the PCIe switch board.




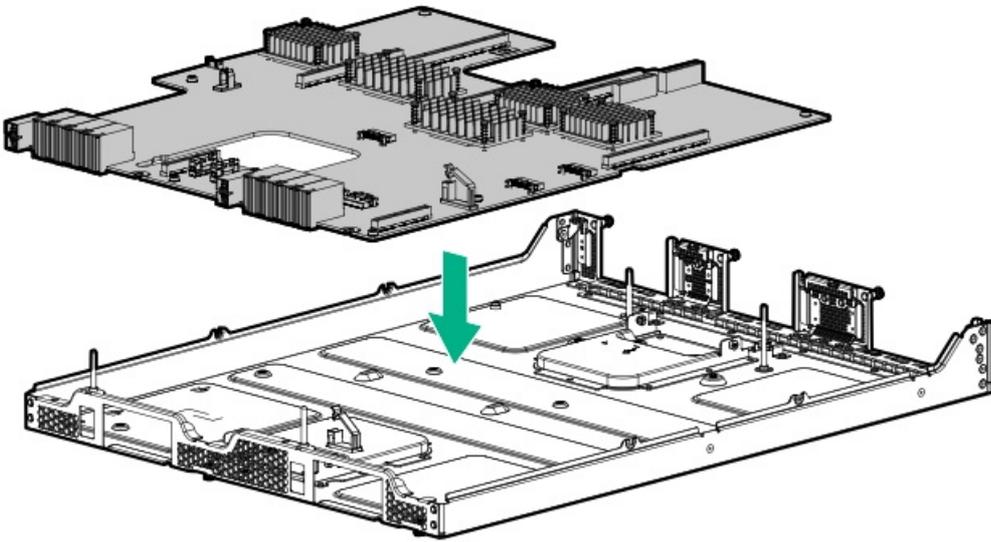


## Remove the enclosure midplane

### Procedure


1. Power down the server.
2. #GUID-85644E99-BD05-440A-B88B-04E186EF77CC.
3. Disconnect all peripheral cables from the server.
4. Remove the system board module from the chassis.
5. Remove the GPU tray.
6. Remove the power supplies.

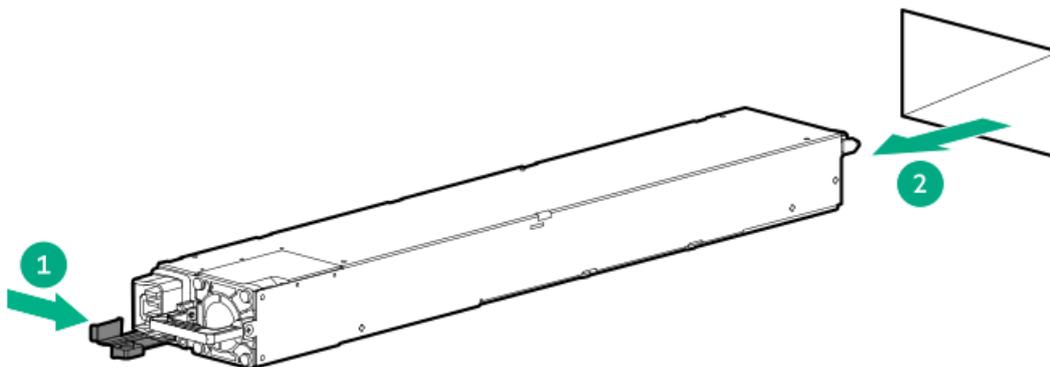

7. Remove the midplane panel.
8. Disconnect the display port cable.

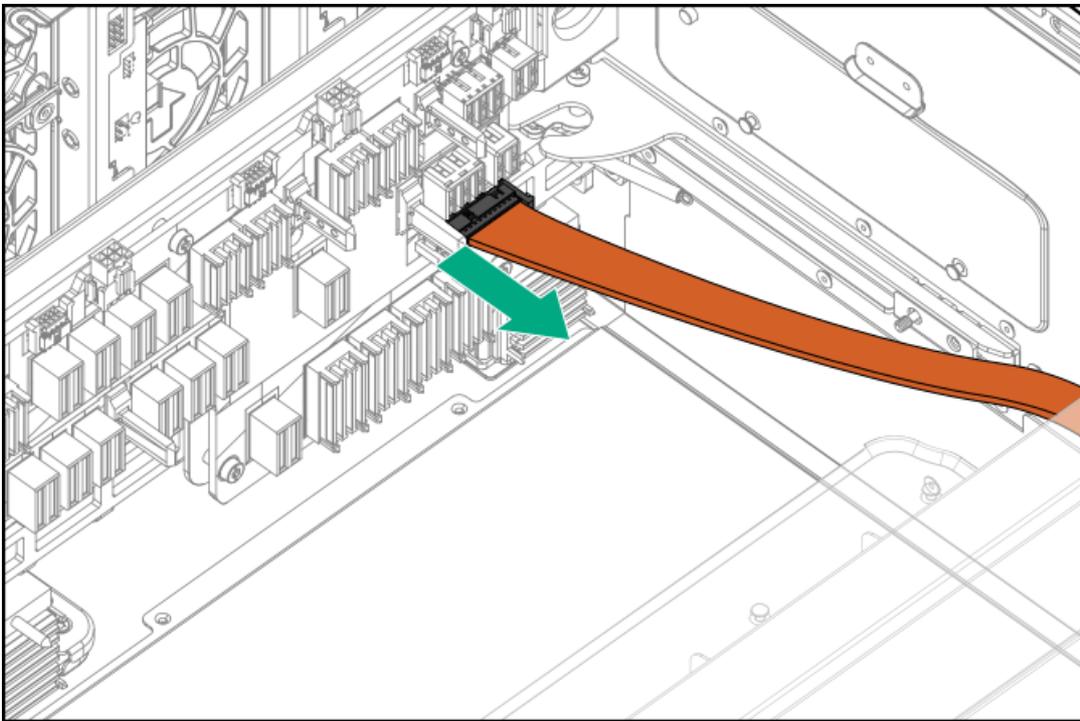

9. Remove the enclosure midplane assembly.

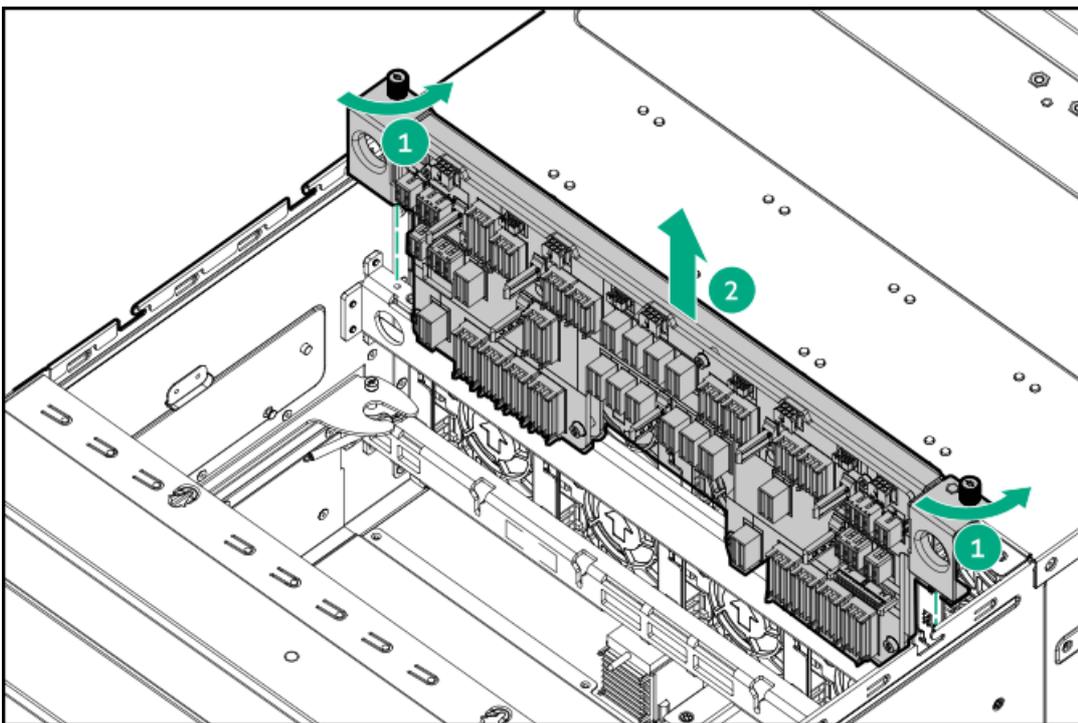

#### More information

[Remove the midplane panel](#)

[Remove the system board module from the chassis](#)

[Remove the GPU tray from the chassis](#)


[Display port cabling](#)

## Remove the riser cage


**WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

#### Procedure


1. Back up all server data.
2. Power down the server.
3. Disconnect all peripheral cables from the server.
4. Remove the system board module from the chassis.
5. Place the module on a flat, level work surface.
6. Remove the system board module access panel.
7. Remove the riser cage:
  - Primary riser cage

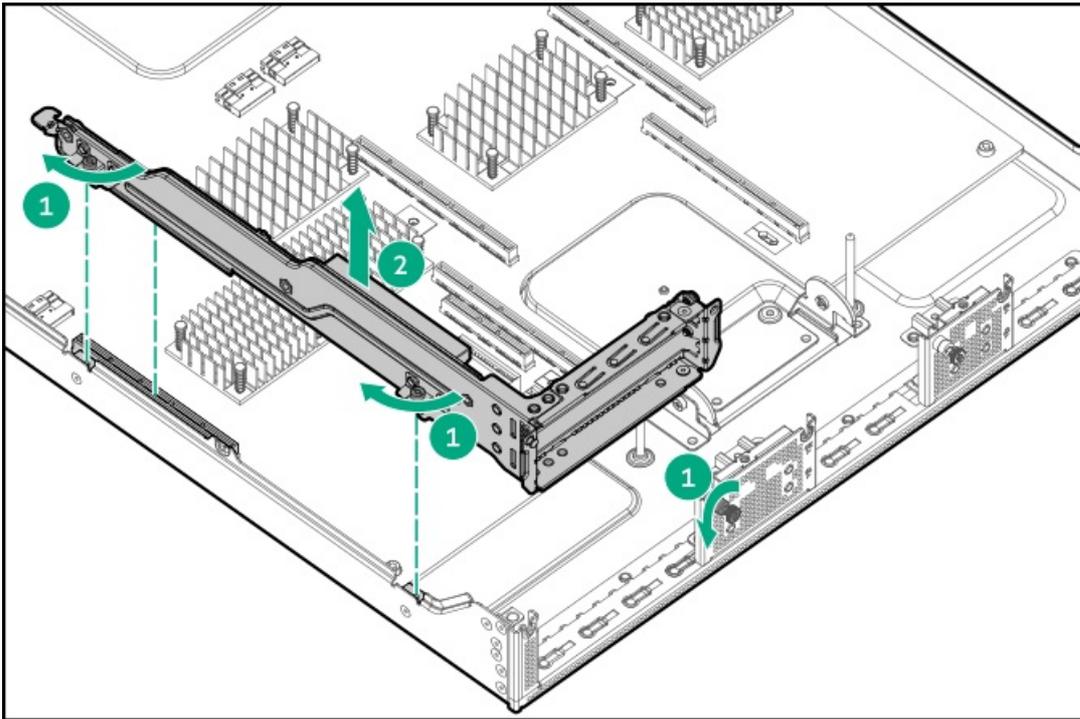

- Secondary riser cage

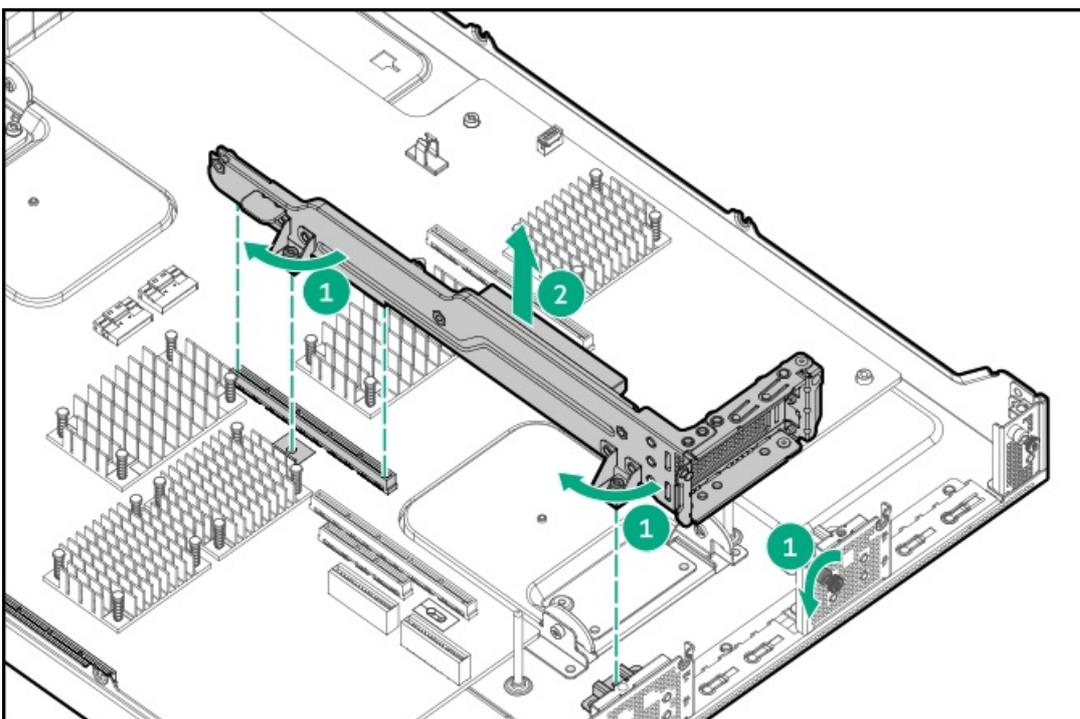

- Tertiary riser cage

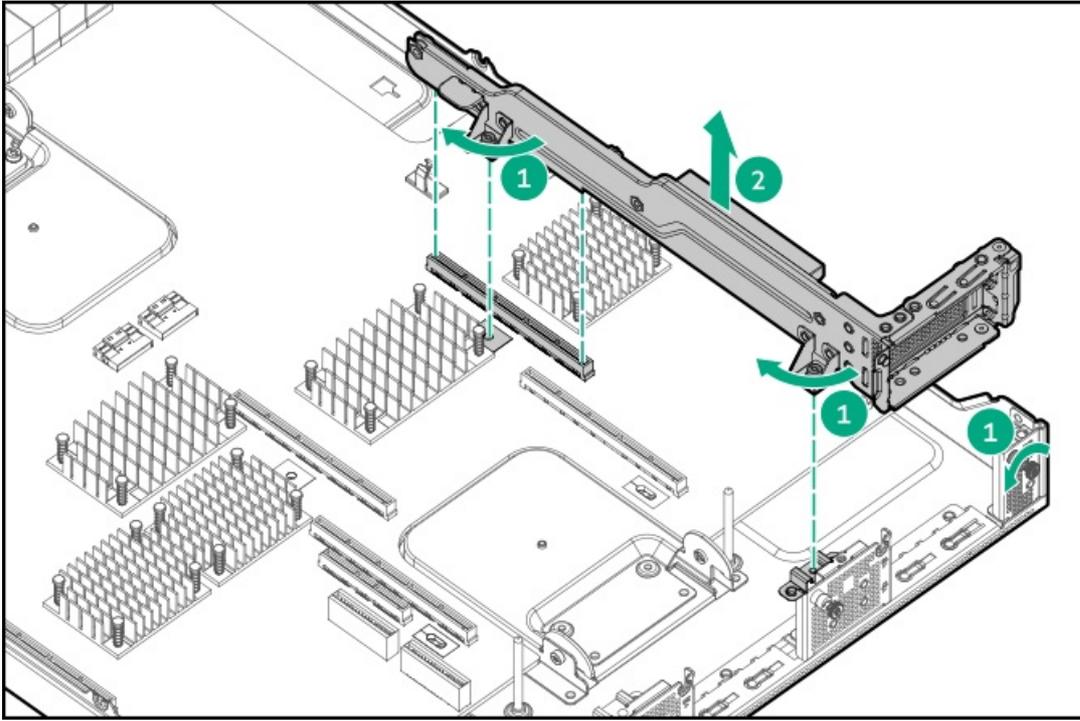

#### More information

- [Remove the system board module from the chassis](#)
- [Install the system board module access panel](#)
- [Install the system board module from the chassis](#)

## Setup

### HPE support services

Delivered by experienced, certified engineers, HPE support services help you keep your servers up and running with support packages tailored specifically for HPE ProLiant systems. HPE support services let you integrate both hardware and software support into a single package. A number of service level options are available to meet your business and IT needs.

HPE support services offer upgraded service levels to expand the standard product warranty with easy-to-buy, easy-to-use support packages that will help you make the most of your server investments. Some of the HPE support services for hardware, software or both are:

- Foundation Care – Keep systems running.
  - 6-Hour Call-to-Repair
  - 4-Hour 24x7
  - Next Business Day
- Proactive Care – Help prevent service incidents and get you to technical experts when there is one.
  - 6-Hour Call-to-Repair
  - 4-Hour 24x7
  - Next Business Day
- Startup and implementation services for both hardware and software
- HPE Education Services – Help train your IT staff.

For more information on HPE support services, see the [Hewlett Packard Enterprise website](#).

## Compiling the documentation

The documentation, while delivered individually and in various formats, works as a system. Consult these documents before attempting installation. These documents provide the required important safety information and decision-making steps for the configuration. To access these documents, see the Hewlett Packard Enterprise website (<https://www.hpe.com/info/apollo6500gen10plus-docs>).

## Initial system installation

Depending on your technical expertise and the complexity of the product, for the initial system installation, select one of the following options:

- [Ordering the HPE Installation Service](#)
- [Setting up the server](#)

## HPE Installation Service

HPE Installation Service provides basic installation of Hewlett Packard Enterprise branded equipment, software products, as well as HPE-supported products from other vendors that are sold by HPE or by HPE authorized resellers. The Installation Service is part of a suite of HPE deployment services that are designed to give users the peace of mind that comes from knowing that their HPE and HPE-supported products have been installed by an HPE specialist.

The HPE Installation Service provides the following benefits:

- Installation by an HPE authorized technical specialist.
- Verification prior to installation that all service prerequisites are met.
- Delivery of the service at a mutually scheduled time convenient to your organization.
- Allows your IT resources to stay focused on their core tasks and priorities.
- Full coverage during the warranty period for products that require installation by an HPE authorized technical specialist.

For more information on the features, limitations, provisions, and ordering information of the HPE Installation Service, see this Hewlett Packard Enterprise website:

<https://www.hpe.com/support/installation-service>

## Setting up the server

### Prerequisites

Before setting up the server:

- Download the latest SPP:  
<http://www.hpe.com/servers/spp/download>

Support validation required

- Verify that your OS or virtualization software is supported:  
<http://www.hpe.com/info/ossupport>
- Read the operational requirements for the server:  
[Operational requirements](#)

- Read the safety and compliance information on the Hewlett Packard Enterprise website: <http://www.hpe.com/support/safety-compliance-enterpriseproducts>
- Obtain the storage driver if needed:
  - Download it from the HPE support center website.
  - Extract it from the SPP.

#### Procedure

##### 1. Unbox the server and verify the contents.

##### 2. (Optional) Install hardware options.

For installation instructions, see [Hardware options installation](#).

##### 3. Install the chassis in a rack.

##### 4. Connect all peripheral cables to the chassis.

##### 5. Decide how to manage the server:

- Locally: Use a KVM switch or a connect a keyboard, monitor, and mouse.
- Remotely: Connect to the iLO web interface and run a remote console:

###### a. Verify the following:

- iLO is licensed to use the remote console feature.  
If iLO is not licensed, visit <http://www.hpe.com/info/ilo>.
- The iLO management port is connected to a secure network.

###### b. Using a browser, navigate to the iLO web interface, and then log in.

```
https://<iLO hostname or IP address>
```

###### Note the following:

- The hostname is on the serial pull tab.
  - If a DHCP server assigns the IP address, the IP address appears on the boot screen.
  - If a static IP address is assigned, use that IP address.
  - The default login credentials are on the serial label pull tab.
- c. In the side navigation, click the Remote Console & Media link, and then launch a remote console.

##### 6. Press the Power On/Standby button.

For remote management, use the iLO virtual power button.

##### 7. Using the SPP, update the following:

- System ROM
- Storage controller
- Network adapters
- Intelligent Provisioning

##### 8. To set up storage, do one of the following:

- To configure the server to boot from a SAN, see the [HPE Boot from SAN Configuration Guide](https://www.hpe.com/info/boot-from-san-config-guide) guide at <https://www.hpe.com/info/boot-from-san-config-guide>.
- If an SR controller is installed, use HPE Smart Storage Administrator to create arrays:
  - a. From the boot screen, press F10 to run Intelligent Provisioning.
  - b. From Intelligent Provisioning, run HPE Smart Storage Administrator.

For more information, see the HPE Smart Array SR Gen10 Configuration Guide at <https://www.hpe.com/support/SSC-config>.

- If no controller is installed, do one of the following:

- AHCI is enabled by default. Proceed with deploying an OS or virtualization software.
- Disable AHCI, enable software RAID, and then create an array:

---

**ⓘ IMPORTANT:**

HPE Smart Array S100i SR Gen10 SW RAID is only supported on Windows. For more information on Linux and VMware support, see the product QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/qs>).

---

- a. From the boot screen, press F9 to run UEFI System Utilities.
- b. Select System Configurations > BIOS/Platform Configuration (RBSU) > Storage Options > SATA Controller Options > Embedded SATA configuration > Smart Array SW RAID Support .
- c. Enable SW RAID.
- d. Save the configuration and reboot the server.
- e. Create an array using either the UEFI System Utilities or HPE Smart Storage Administrator . To use the UEFI System Utilities:
  - i. From the boot screen, press F9 to run UEFI System Utilities.
  - ii. Select System Configuration > Embedded Storage: HPE Smart Storage S100i SR Gen10 > Array Configuration > Create Array .

For more information on creating arrays using the HPE Smart Storage Administrator , see the HPE Smart Array SR Gen10 Configuration Guide at <https://www.hpe.com/support/SSC-config>.

9. Set the server [power supply requirements](#).
10. To deploy an OS or virtualization software, do one of the following:
  - To deploy an OS, run Intelligent Provisioning.

Press F10 at the boot screen.

---

**ⓘ IMPORTANT:**

Smart array MR controllers are not supported by Intelligent Provisioning or Smart Storage Administrator.

---

- Manually deploy an OS.
  - a. Insert the installation media.

For remote management, click Virtual Drives in the iLO remote console to mount images, drivers, or files to a virtual folder. If a storage driver is required to install the OS, use the virtual folder to store the driver.
  - b. To select the boot device, press F11 at the boot screen.
  - c. After the OS is installed, [update the drivers](#).

11. Register the server (<http://www.hpe.com/info/register>).

## General site planning

Before you begin installing the HPE Apollo 6500 Gen10 Plus System, Hewlett Packard Enterprise recommends that you plan and coordinate the installation process with an authorized HPE representative or partner. Proper planning provides a more efficient installation process and leads to greater availability, reliability, and serviceability of the system.

## Operational requirements

## Site requirements

The server must be located in a computer room or server room. The room must:

- Be only accessible to authorized technicians trained the room restriction reasons and precautions.
- Be within an area that is ideally locked or at minimum not accessible to unauthorized personnel.

## Space and airflow requirements

To allow for servicing and adequate airflow, observe the following space and airflow requirements when deciding where to install a rack:

- Leave a minimum clearance of 63.5 cm (25 in) in front of the rack.
- Leave a minimum clearance of 76.2 cm (30 in) behind the rack.
- Leave a minimum clearance of 121.9 cm (48 in) from the back of the rack to the back of another rack or row of racks.

Hewlett Packard Enterprise servers draw in cool air through the front door and expel warm air through the rear door. Therefore, the front and rear rack doors must be adequately ventilated to allow ambient room air to enter the cabinet, and the rear door must be adequately ventilated to allow the warm air to escape from the cabinet.

---

**△ CAUTION:** To prevent improper cooling and damage to the equipment, do not block the ventilation openings.

---

When vertical space in the rack is not filled by a server or rack component, the gaps between the components cause changes in airflow through the rack and across the servers. Cover all gaps with blanking panels to maintain proper airflow.

---

**△ CAUTION:** Always use blanking panels to fill empty vertical spaces in the rack. This arrangement ensures proper airflow. Using a rack without blanking panels results in improper cooling that can lead to thermal damage.

---

The 9000 and 10000 Series Racks provide proper server cooling from flow-through perforations in the front and rear doors that provide 64 percent open area for ventilation.

---

**△ CAUTION:** When using a Compaq branded 7000 series rack, install the high airflow rack door insert (PN 327281-B21 for 42U rack, PN 157847-B21 for 22U rack) to provide proper front-to-back airflow and cooling.

---

---

**△ CAUTION:**

If a third-party rack is used, observe the following additional requirements to ensure adequate airflow and to prevent damage to the equipment:

- Front and rear doors—If the 42U rack includes closing front and rear doors, you must allow 5,350 sq cm (830 sq in) of holes evenly distributed from top to bottom to permit adequate airflow (equivalent to the required 64 percent open area for ventilation).
  - Side—The clearance between the installed rack component and the side panels of the rack must be a minimum of 7 cm (2.75 in).
- 

## Temperature requirements

To ensure continued safe and reliable equipment operation, install or position the system in a well-ventilated, climate-controlled environment.

The maximum recommended ambient operating temperature (TMRA) for most server products is 35°C (95°F). The temperature in the room where the rack is located must not exceed 35°C (95°F).

---

**△ CAUTION:** To reduce the risk of damage to the equipment when installing third-party options:

- Do not permit optional equipment to impede airflow around the server or to increase the internal rack temperature beyond the maximum allowable limits.

- Do not exceed the manufacturer's TMRA.
- 

## Power requirements

Installation of this equipment must comply with local and regional electrical regulations governing the installation of IT equipment by licensed electricians. This equipment is designed to operate in installations covered by NFPA 70, 1999 Edition (National Electric Code) and NFPA-75, 1992 (code for Protection of Electronic Computer/Data Processing Equipment). For electrical power ratings on options, refer to the product rating label or the user documentation supplied with that option.

---

### **WARNING:**

To reduce the risk of personal injury, fire, or damage to the equipment, do not overload the AC supply branch circuit that provides power to the rack. Consult the electrical authority having jurisdiction over wiring and installation requirements of your facility.

---

### **CAUTION:**

Protect the system board module from power fluctuations and temporary interruptions with a regulating UPS. This device protects the hardware from damage caused by power surges and voltage spikes and keeps the system board module in operation during a power failure.

---

## Electrical grounding requirements

The server must be grounded properly for proper operation and safety. In the United States, you must install the equipment in accordance with NFPA 70, 1999 Edition (National Electric Code), Article 250, as well as any local and regional building codes. In Canada, you must install the equipment in accordance with Canadian Standards Association, CSA C22.1, Canadian Electrical Code. In all other countries, you must install the equipment in accordance with any regional or national electrical wiring codes, such as the International Electrotechnical Commission (IEC) Code 364, parts 1 through 7. Furthermore, you must be sure that all power distribution devices used in the installation, such as branch wiring and receptacles, are listed or certified grounding-type devices.

Because of the high ground-leakage currents associated with multiple servers connected to the same power source, Hewlett Packard Enterprise recommends the use of a PDU that is either permanently wired to the building's branch circuit or includes a nondetachable cord that is wired to an industrial-style plug. NEMA locking-style plugs or those complying with IEC 60309 are considered suitable for this purpose. Using common power outlet strips for the server is not recommended.

## Server warnings and cautions

---

### **WARNING:**

To reduce the risk of personal injury, electric shock, or damage to the equipment, disconnect the power cord to remove power from the server. Pressing the Power On/Standby button does not shut off system power completely. Portions of the power supply and some internal circuitry remain active until AC power is removed.

---

 **WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

---

 **WARNING:** To reduce the risk of electric shock or damage to the equipment:

- Never reach inside the chassis while the system is powered up.
  - Perform service on system components only as instructed in the user documentation.
- 

### **WARNING:**

To reduce the risk of fire or burns after removing the energy pack:

- Do not disassemble, crush, or puncture the energy pack.
-

- Do not short external contacts.
- Do not dispose of the energy pack in fire or water.

After power is disconnected, battery voltage might still be present for 1s to 160s.

**AVERTISSEMENT:** Pour réduire les risques d'incendie ou de brûlures après le retrait du module batterie :

- N'essayez pas de démonter, d'écraser ou de percer le module batterie.
- Ne court-circuitiez pas ses contacts externes.
- Ne jetez pas le module batterie dans le feu ou dans l'eau.

Après avoir déconnecté l'alimentation, une tension peut subsister dans la batterie durant 1 à 160 secondes.

---

**△ CAUTION:**

Protect the system board module from power fluctuations and temporary interruptions with a regulating UPS. This device protects the hardware from damage caused by power surges and voltage spikes and keeps the system board module in operation during a power failure.

---

**△ CAUTION:**

To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge. For more information, refer to "[Electrostatic discharge.](#)"

---

**△ CAUTION:**

To avoid data loss, Hewlett Packard Enterprise recommends that you back up all server data before installing or removing a hardware option, or performing a server maintenance or troubleshooting procedure.

---

**△ CAUTION:**

To prevent improper airflow and insufficient cooling that can lead to thermal damage, observe the following:

- Do not operate the chassis without the access panel, baffles, or blanks installed.
- Do not operate the server without the baffles, expansion slot covers, or blanks installed.

---

**△ CAUTION:**

When performing non-hot-plug operations, you must power down the system board module and/or the system. However, it may be necessary to leave the system board module powered up when performing other operations, such as hot-plug installations or troubleshooting.

---

**△ CAUTION:**

Do not operate the server for long periods with the access panel open or removed. Operating the server in this manner results in improper airflow and improper cooling that can lead to thermal damage.

---

## Safety and regulatory compliance

For important safety, environmental, and regulatory information, see [Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products](#), available at the Hewlett Packard Enterprise website ( <http://www.hpe.com/support/Safety-Compliance-EnterpriseProducts> ).

## Determining power and cooling configurations

Validate power and cooling requirements based on location and installed components.

## Power requirements

Installation of this equipment must comply with local and regional electrical regulations governing the installation of IT equipment by licensed electricians. This equipment is designed to operate in installations covered by NFPA 70, 1999 Edition (National Electric Code) and NFPA-75, 1992 (code for Protection of Electronic Computer/Data Processing Equipment). For electrical power ratings on options, refer to the product rating label or the user documentation supplied with that option.

---

**⚠ WARNING:**

To reduce the risk of personal injury, fire, or damage to the equipment, do not overload the AC supply branch circuit that provides power to the rack. Consult the electrical authority having jurisdiction over wiring and installation requirements of your facility.

---

**⚠ CAUTION:**

Protect the system board module from power fluctuations and temporary interruptions with a regulating UPS. This device protects the hardware from damage caused by power surges and voltage spikes and keeps the system board module in operation during a power failure.

---

## Hot-plug power supply calculations

For more information on the hot-plug power supply and calculators to determine server power consumption in various system configurations, see the Hewlett Packard Enterprise Power Advisor website (<https://www.hpe.com/info/poweradvisor/online>).

## Electrostatic discharge

Be aware of the precautions you must follow when setting up the system or handling components. A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the system or component.

To prevent electrostatic damage:

- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:
  - Use a wrist strap connected by a ground cord to a grounded workstation or computer chassis. Wrist straps are flexible straps with a minimum of 1 megohm  $\pm$ 10 percent resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
  - Use heel straps, toe straps, or boot straps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
  - Use conductive field service tools.
  - Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, have an authorized reseller install the part.

For more information on static electricity or assistance with product installation, contact an authorized reseller.

## Identifying the contents of the shipping carton

Unpack the shipping carton and locate the materials and documentation necessary for installing the chassis . All the rack mounting hardware necessary for installing the chassis into the rack is included with the rack or the chassis.

The contents of the shipping carton include:

- Chassis
- Power cord
- Hardware documentation and software products
- Rack-mounting hardware and documentation

You might also need the following items:

- Operating system or application software
- Hardware options
- Screwdrivers
  - T-10 Torx
  - T-15 Torx
  - T-30 Torx

## Installation overview

Installation of a server requires the following steps:

### Procedure

1. [Installing the chassis into the rack.](#)
2. [Install any server options.](#)
3. [Install the operating system.](#)
4. Install system software.
5. [Register the server.](#)

## Installing the chassis into the rack

---

### CAUTION:

Always plan the rack installation so that the heaviest item is on the bottom of the rack. Install the heaviest item first, and continue to populate the rack from the bottom to the top.

---

### Prerequisites

Before installing the chassis, observe all necessary [warnings and cautions](#).

### Procedure

1. Unpack the system and remove all components from the chassis.
2. Install the chassis into the rack. For more information, see the installation instructions that ship with the selected rail system.
3. Install options in the chassis.
4. Install all components in their original locations in the chassis.
5. Connect the power cords to the rear of the chassis.

6. Connect the system to the power source.

---

**⚠ WARNING:**

To reduce the risk of electric shock or damage to the equipment:

- Do not disable the power cord grounding plug. The grounding plug is an important safety feature.
  - Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.
  - Unplug the power cord from the power supply to disconnect power to the equipment.
  - Do not route the power cord where it can be walked on or pinched by items placed against it. Pay particular attention to the plug, electrical outlet, and the point where the cord extends from the server.
- 

## Installing the product in the rack

---

**⚠ WARNING:**

To reduce the risk of personal injury or equipment damage, be sure that the rack is adequately stabilized before installing the chassis.

---

**⚠ WARNING:**

To reduce the risk of personal injury or equipment damage, do one the following:

- If the chassis is empty, use at least 2 people to lift and stabilize the product pieces during assembly.
  - If the chassis is fully loaded, use at least 4 people to lift and stabilize the product pieces during assembly.
  - Use a lift that can handle the load of the product.
- 

**⚠ CAUTION:**

Be sure to keep the product parallel to the floor when installing the chassis. Tilting the product up or down could result in damage to the slides.

---


### Procedure

---

**⚠ WARNING:**

On both sides, align the three alignment pins on the chassis with the channel in the rails. Otherwise, the chassis can fall if the rack is moved or shipped.

---

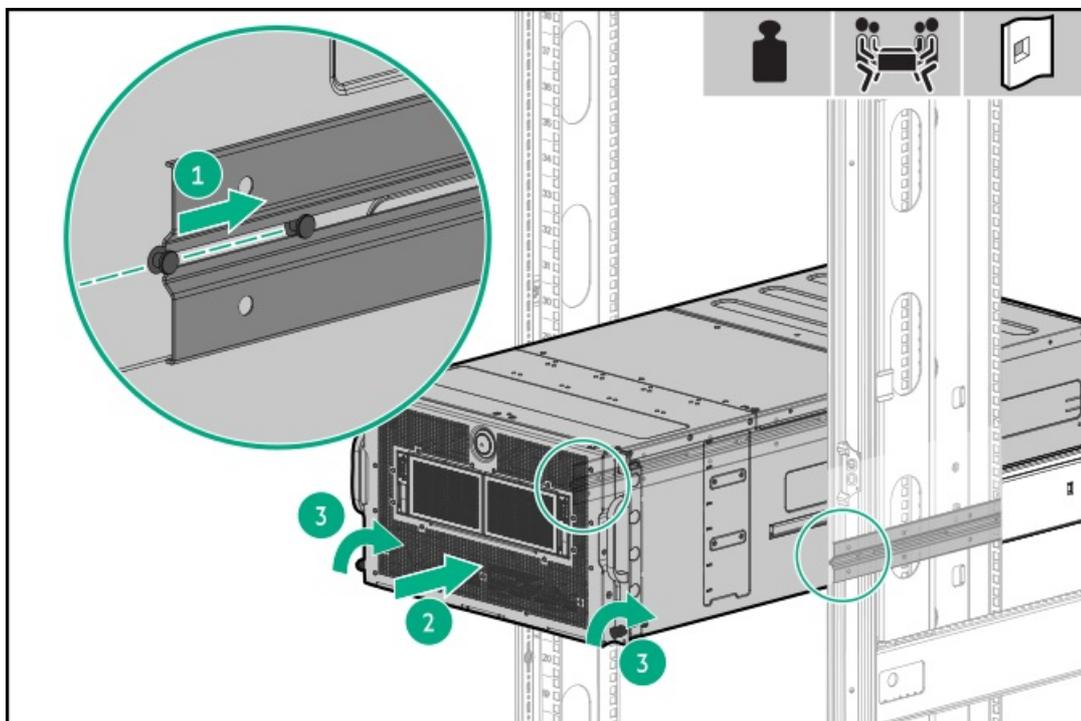

## Installing hardware options

Install any hardware options before initializing the server. For options installation information, refer to the option documentation. For server-specific information, refer to "[Hardware options installation](#)."

## Operating system

This ProLiant server does not ship with provisioning media. Everything required to manage and install the system software and firmware is preloaded on the server.

To operate properly, the server must have a supported operating system. Attempting to run an unsupported operating system can cause serious and unpredictable results. For the latest information on operating system support, see the [Hewlett Packard Enterprise website](#).

Failure to observe UEFI requirements for ProLiant Gen10 servers can result in errors installing the operating system, failure to recognize boot media, and other boot failures. For more information on these requirements, see the HPE UEFI Requirements on the [Hewlett Packard Enterprise website](#).

To install an operating system on the server, use one of the following methods:

- Intelligent Provisioning—For single-server deployment, updating, and provisioning capabilities. For more information, see [Installing the operating system with Intelligent Provisioning](#).
- Insight Control server provisioning—For multiserver remote OS deployment, use Insight Control server provisioning for an automated solution. For more information, see the Insight Control documentation on the [Hewlett Packard Enterprise website](#).

For additional system software and firmware updates, download the Service Pack for ProLiant from the [Hewlett Packard Enterprise website](#). Software and firmware must be updated before using the server for the first time, unless any installed software or components require an older version.

For more information, see [Keeping the system current](#).

For more information on using these installation methods, see the [Hewlett Packard Enterprise website](#).

## Installing the operating system with Intelligent Provisioning

## Procedure

1. Connect the Ethernet cable between the network connector on the server and a network jack.
2. Press the Power On/Standby button.
3. During server POST, press F10.
4. Complete the initial Preferences and Registration portion of [Intelligent Provisioning](#).
5. At the Start screen, click **Configure and Install**.
6. To finish the installation, follow the onscreen prompts. An Internet connection is required to update the firmware and systems software.

## POST screen options

When the server is powered on, the POST screen is displayed. The following options are displayed:

- [System Utilities \(F9\)](#)  
Use this option to configure the system BIOS.
- [Intelligent Provisioning \(F10\)](#)  
Use this option to deploy an operating system or configure storage.
- [Boot menu \(F11\)](#)  
Use this option to make a one-time boot selection.
- [Network boot \(F12\)](#)  
Use this option to boot the server from the network.

## Registering the server

To experience quicker service and more efficient support, register the product at the [Hewlett Packard Enterprise Product Registration website](#).

## Hardware options installation

### Hewlett Packard Enterprise product QuickSpecs

For more information about product features, specifications, options, configurations, and compatibility, see the product QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/qs>).

## Hardware option installation guidelines

---

**⚠ WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

---

**⚠ CAUTION:** To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

---

- Install any hardware options before initializing the system.
- If multiple options are being installed, read the installation instructions for all the hardware options to identify similar steps and streamline the installation process.
- If the hardware option installation involves internal cabling, review the [Cabling guidelines](#).

## Installing a power supply


The PCIe GPU configuration requires four 12 V power supplies. The SXM GPU configuration requires four 54 V power supplies and two 12 V power supplies.

### Prerequisites


Before installing this option, be sure that you have the components included with the hardware option kit.

### Procedure

1. Remove the power supply blank.

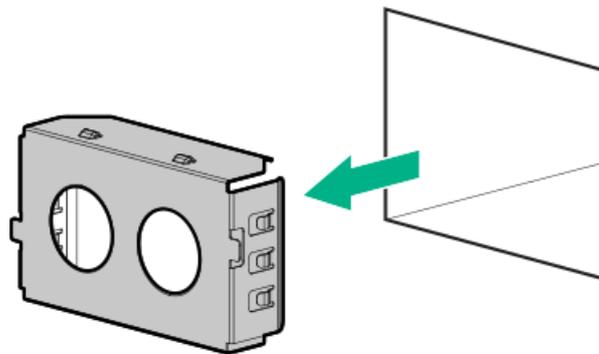

2. Install the power supply.

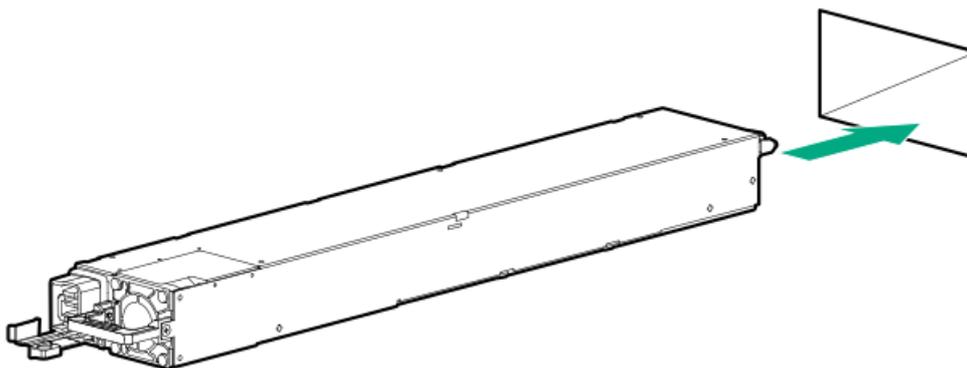

3. Connect the power cord to the power supply.
4. [Power up the server](#).

## Installing a fan module

**⚠ WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

The system supports 15 fan modules. If the system has one fan lesser than 15 during boot, the system will boot in the Nonredundant Mode. If the missing fan is installed, the system will begin functioning in Redundant Mode. If any fans are missing during power up, the system will be allowed to boot, but will be using an unsupported configuration.

---

**CAUTION:** For proper cooling, do not exceed two minutes with the chassis front door open. Exceeding two minutes can lead to thermal damage or system shutdown.

---

If installing a hot-plug fan without powering down the system, the chassis front door must be closed within two minutes.


For fan module numbering, see [Fan module numbering](#).

#### Prerequisites

Before installing this option, be sure that you have the components included with the hardware option kit.

#### Procedure

1. [Power down the server](#).
2. Open the chassis front door.
3. Install the fan module.

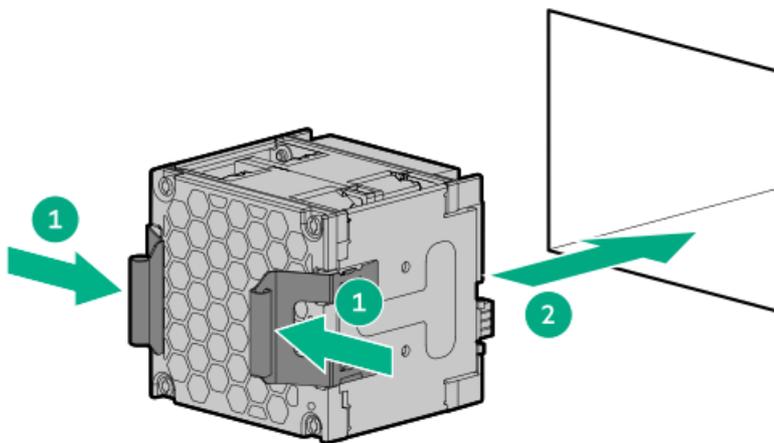

4. Close the chassis front door.
5. [Power up the server](#).

#### More information

[Open the chassis front door](#)  
[Close the chassis front door](#)

## Transceiver option

### Transceiver warnings and cautions

---

**WARNING:**  
Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes. To avoid eye injuries, avoid direct eye exposure to the beam from the fiber-optic transceiver or into the ends of fiber-optic cables when they are powered-up.

---

**CAUTION:**  
The presence of dust in transceiver ports can cause poor cable connectivity. To prevent dust from entering, install a dust plug in an unused transceiver port.

---

**CAUTION:**

Supported transceivers can be hot-swapped—removed and installed while the server is powered-on. However, to prevent potential damage to the transceiver or the fiber-optic cable, disconnect the cable from the transceiver before hot-swapping it.

---

**⚠ CAUTION:**

Do not remove and install transceivers more often than is necessary. Doing so can shorten the useful life of the transceiver.

---

**ⓘ IMPORTANT:**

When you replace a transceiver with another of a different type, the server might retain selected port-specific configuration settings that were configured for the replaced transceiver. Be sure to validate or reconfigure port settings as required.

---

## Installing a transceiver

### Prerequisites


Before installing a transceiver option:

- Make sure that a compatible network adapter is installed in the node. Determine if installing the transceiver in the network adapter requires a specific system operating temperature. For more information, see the HPE website (<https://www.hpe.com/support/xl675dgen10plus-thermal>).
- Review the following:
  - [Transceiver warnings and cautions](#)
  - Transceiver documentation for specific operational and cabling requirements

### Procedure

1. Hold the transceiver by its sides and gently insert it into the network adapter port until it clicks into place.

Transceivers are keyed so that they can only be inserted in the correct orientation. If the transceiver does not fit easily into the port, you might have positioned it incorrectly. Reverse the orientation of the transceiver and insert it again.

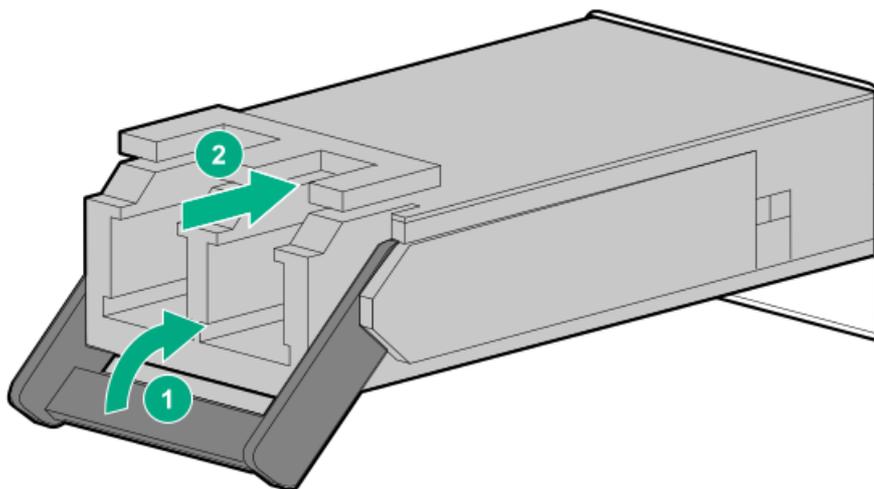

2. Remove the dust plug or protective cover from the transceiver.
3. Connect a compatible LAN segment cable to the transceiver.
4. Make sure that the NIC link LED on the port is solid green.

For more information on the port LED behavior, see the documentation that ships with the transceiver.

5. If needed, see the transceiver documentation for the model-specific fastening mechanism applicable to the transceiver.

The installation is complete.

## Drive options

### Supported configurations

#### Gen10 Plus 8 SFF SAS/SATA Standard backplane configurations

For drive bay numbering information, see [Supported drives](#).

For drive cabling information, see [Drive-controller-backplane configuration cabling](#).

Drives	Controllers	No. of backplanes required	Drive box to install backplane	Compatible options
8 embedded SATA	Embedded SATA	1	Drive box 1	7 4xNVMe
8 SAS/SATA	E208i-a or P408i-a	1	Drive box 2	
8 + 8 SAS/SATA	P816i-a	2	Drive boxes 1 and 2	None

#### Gen10 Plus 8 SFF NVMe U.3 Premium backplane configurations

Table 2: NVMe drive configurations

Drives	Controllers	No. of backplanes required	Drive box to install backplane	Compatible options
7 4xNVMe <sup>1</sup>	Embedded x32 PCIe Gen4 on system board with E208i-a or P408i-a	1	Drive box 1	<ul style="list-style-type: none"> <li>8 embedded SATA</li> <li>8 SAS/SATA</li> </ul>

<sup>1</sup> Drive bay 8 is not supported for drive installation and no drive must be installed in it.

Table 3: SAS/SATA + NVMe drive configurations

Drives	Controllers	No. of backplanes required	Drive box to install backplane	Compatible options
2 embedded SATA + 6 4xNVMe	Embedded PCIe Gen4 from switch output on PCIe switch board	1	Drive box 1	7 4xNVMe with embedded PCIe Gen4 from switch output on PCIe switch board

Drives	Controllers	No. of backplanes required	Drive box to install backplane	Compatible options
2 SAS/SATA + 6 4xNVMe	Embedded PCIe Gen4 from switch output on PCIe switch board with E208i-a or P408i-a	1	Drive box 2	None

## M.2 SSD configurations

The system supports up to two B204i NVMe M.2 SSDs on the HPE NS204i-p Gen10 Plus Boot Device, irrespective of the backplane installed. The Boot Device is a full-length, type -p PCIe card that installs on either of the slots (slots 21 and 22) in the tertiary PCIe riser cage. You can install only one Boot Device in the server as the server network card also needs to be installed on slot 21 or 22. For installation procedure of the HPE NS204i-p Gen10 Plus Boot Device, see [Installing the HPE NS204i-p NVMe OS Boot Device option](#).

## Installing a hot-plug drive


The server supports SFF SAS, SATA, and NVMe drives.

### Prerequisites


Before installing this option, be sure that you have the components included with the hardware option kit.

### Procedure


1. Remove the drive blank.

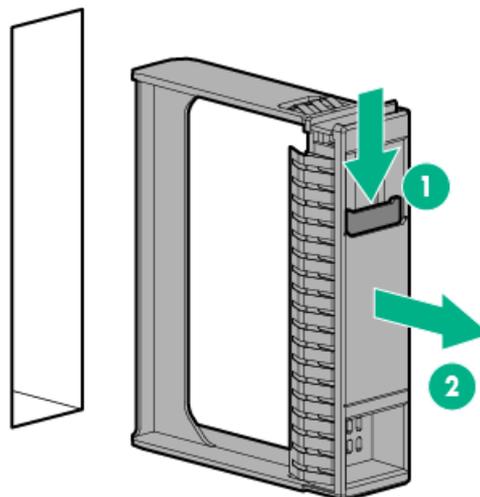

2. Prepare the drive.

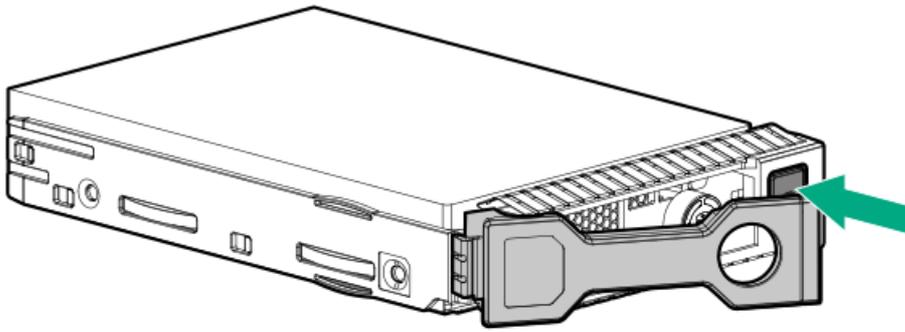

3. Install the drive.

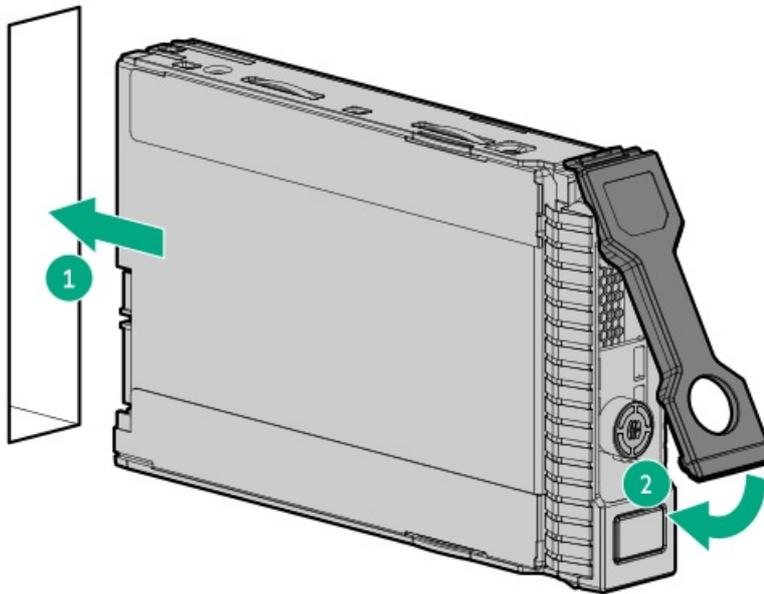

4. Determine the status of the drive from the drive LED definitions ( [HPE Smart Drive](#)).

## Installing a drive backplane option

The server supports the following backplanes:

- Gen10 Plus 8 SFF SAS/SATA Standard backplane
- Gen10 Plus 8 SFF NVMe U.3 Premium backplane

For information on supported drive-backplane configurations, see [Supported configurations](#).

### Prerequisites

Before installing this option, be sure that you have the following:

- The components included with the hardware option kit
- T-15 screwdriver

### Procedure

1. Observe the following alerts:

---

**⚠ WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.


---

---

**⚠ CAUTION:** To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

---

2. Power down the server.
3. Support the drive cage from the door end to keep the drive cage from sliding off.
4. Open the chassis front door.
5. Install the backplane and tighten the two screws using a T-15 screwdriver.

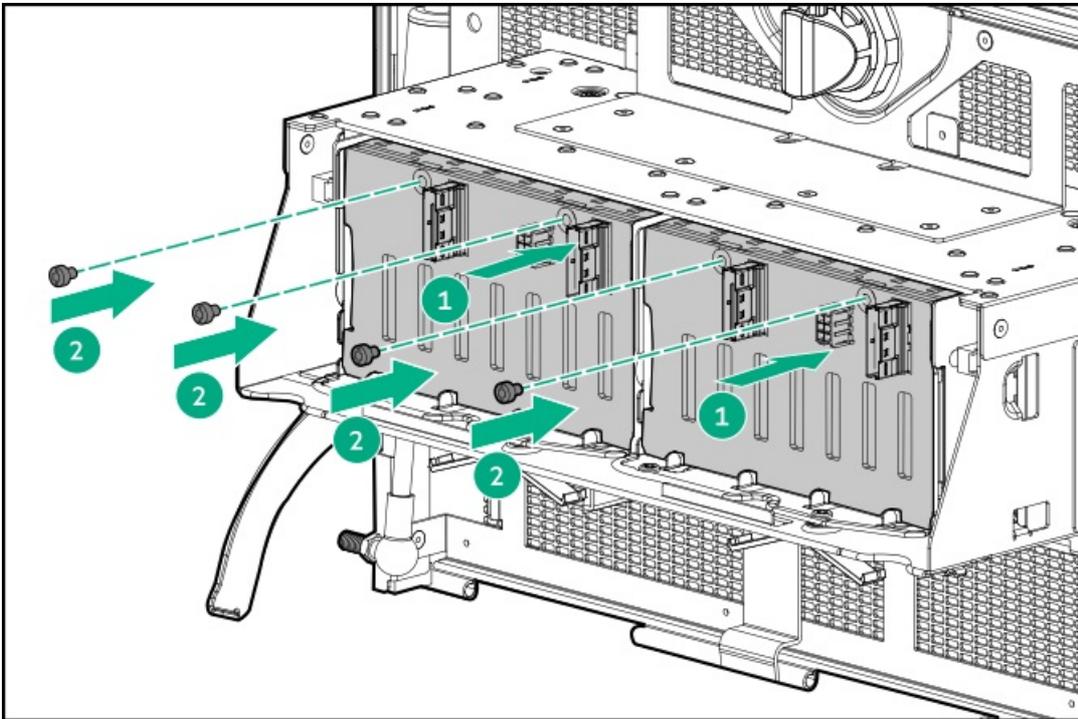

6. Connect the drive data and power cables from the front panel pass-thru boards to the backplane.  
For cabling information, see [Drive-controller-backplane configuration cabling](#).
7. Close the chassis front door.
8. Power up the server.

The installation is complete.

#### More information

[Open the chassis front door](#)

[Close the chassis front door](#)

## Memory options

---

**i IMPORTANT:** This server does not support mixing LRDIMMs and RDIMMs. Attempting to mix any combination of these DIMMs can cause the server to halt during BIOS initialization. All memory installed in the server must be of the same type.

---

## DIMM population information

For specific DIMM population information, see the DIMM population guidelines on the Hewlett Packard Enterprise website (<https://www.hpe.com/docs/amd-population-rules-Gen10Plus>).

## DIMM-processor compatibility

The installed processor determines the type of DIMM that is supported in the server:

AMD EPYC processors support DDR4-3200 DIMMS.

Mixing DIMM types is not supported. Install only the supported DDR4-3200 DIMMs in the server.

## Memory speed tables

For specific DDR4 server memory speeds, for HPE servers using AMD processors, see the Hewlett Packard Enterprise website (<https://www.hpe.com/docs/amd-speed-table-Gen10Plus>).

## Installing a DIMM

### Prerequisites

Before installing this option, be sure that you have the following:

The components included with the hardware option kit

### Procedure

1. Observe the following alerts:

---


**⚠ WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

---

**⚠ CAUTION:** To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

---

2. Power down the server.
3. Disconnect all peripheral cables from the server.
4. Remove the system board module from the chassis.
5. Place the system board module on a flat, level work surface.
6. Remove the system board module access panel.
7. Remove the air baffle.
8. Install the DIMM:
  - a. Open the DIMM slot latches.
  - b. Align the notch on the bottom edge of the DIMM with the keyed surface of the DIMM slot, and then fully press the DIMM into the slot until the latches snap back into place.

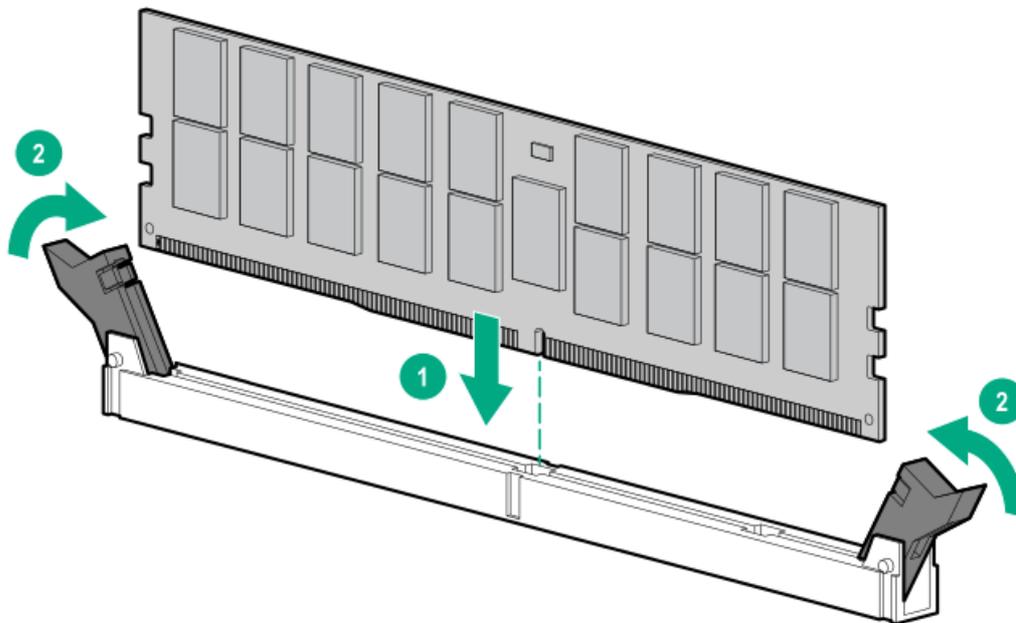

The DIMM slots are structured to ensure proper installation. If you try to insert a DIMM but it does not fit easily into the slot, you might have positioned it incorrectly. Reverse the orientation of the DIMM and insert it again.

9. Install the air baffle.
10. Install the system board module access panel.
11. Install the system board module into the chassis.
12. Connect all peripheral cables to the server.
13. Power up the server.

#### More information

[Remove the system board module from the chassis](#)

[Remove the system board module access panel](#)

[Install the system board module access panel](#)

[Install the system board module from the chassis](#)


## Riser and riser cage options

### Supported PCIe form factors

The system has two x16 PCIe riser cages that support two low-profile PCIe cards each and one x16 riser cage that supports two full-height PCIe cards.

Use the following information to find supported lengths for each slot.

### Slot description example

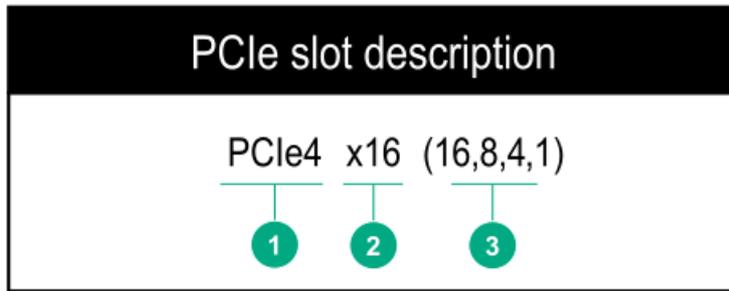

Item	Description
1	Gen4 signaling rate
2	Physical connector link width
3	Negotiable link widths

PCIe slot	Card length	Physical connector link width
Slots 17, and 18 (primary riser cage)	Half height, half length (low profile)	PCIe4 x16 (32, 16, 8, 4, 2, 1)
Slots 19, and 20 (secondary riser cage)	Half height, half length (low profile)	PCIe4 x16 (32, 16, 8, 4, 2, 1)
Slots 21 and 22 (tertiary riser cage)	Half length/full height (HL/FH)	PCIe4 x16 (8, 4, 2, 1)

## Installing a PCIe riser cage


### Prerequisites

Before you perform this procedure, make sure that you have the following items available:


- The components included with the hardware option kit
- T-15 screwdriver

### Procedure


1. Power down the server.
2. Disconnect all peripheral cables from the server.
3. Remove the system board module from the chassis.
4. Place the module on a flat, level work surface.
5. Remove the system board module access panel.
6. Remove the PCIe switch board.
7. Install the riser cage:
  - Primary riser cage

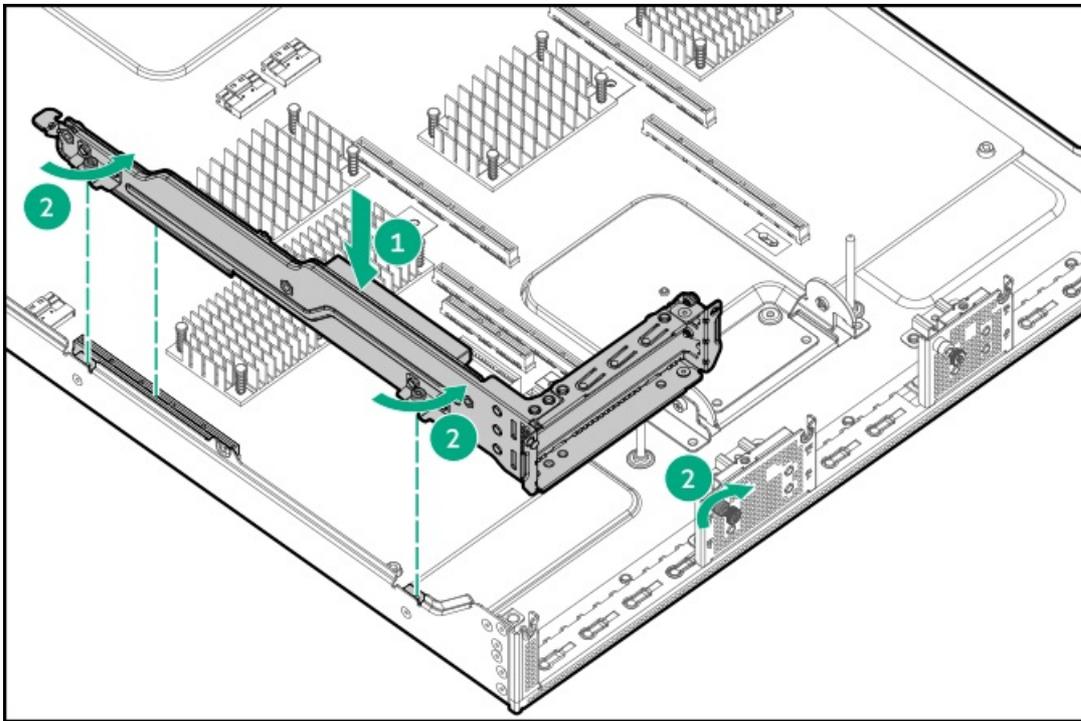

- Secondary riser cage

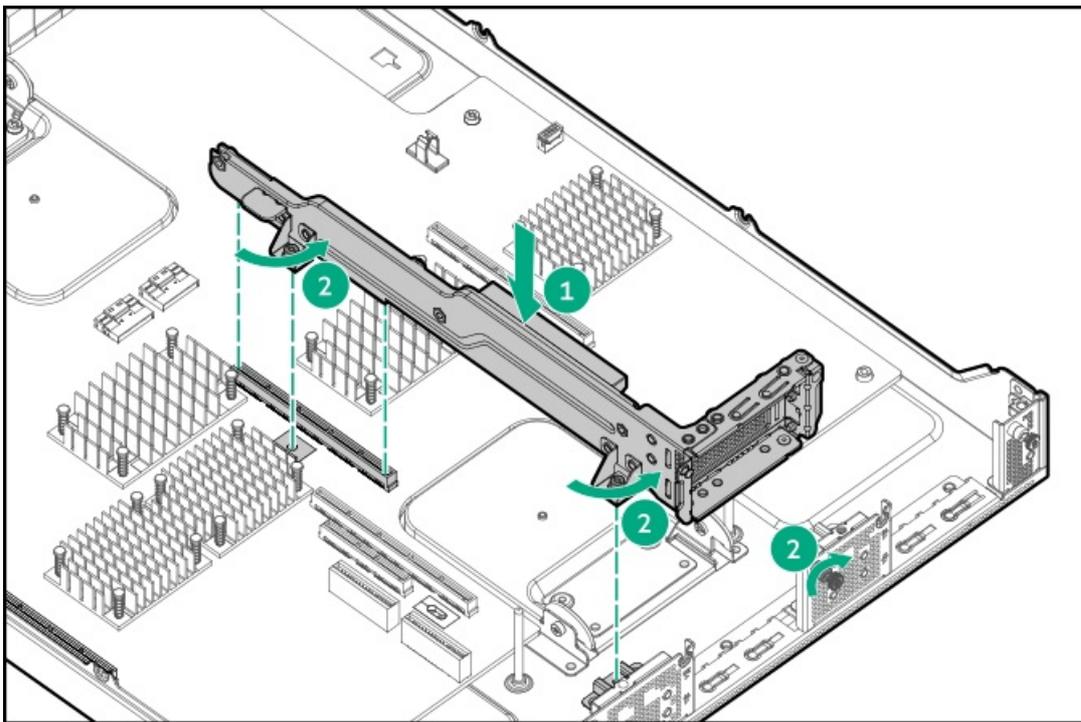

- Tertiary riser cage

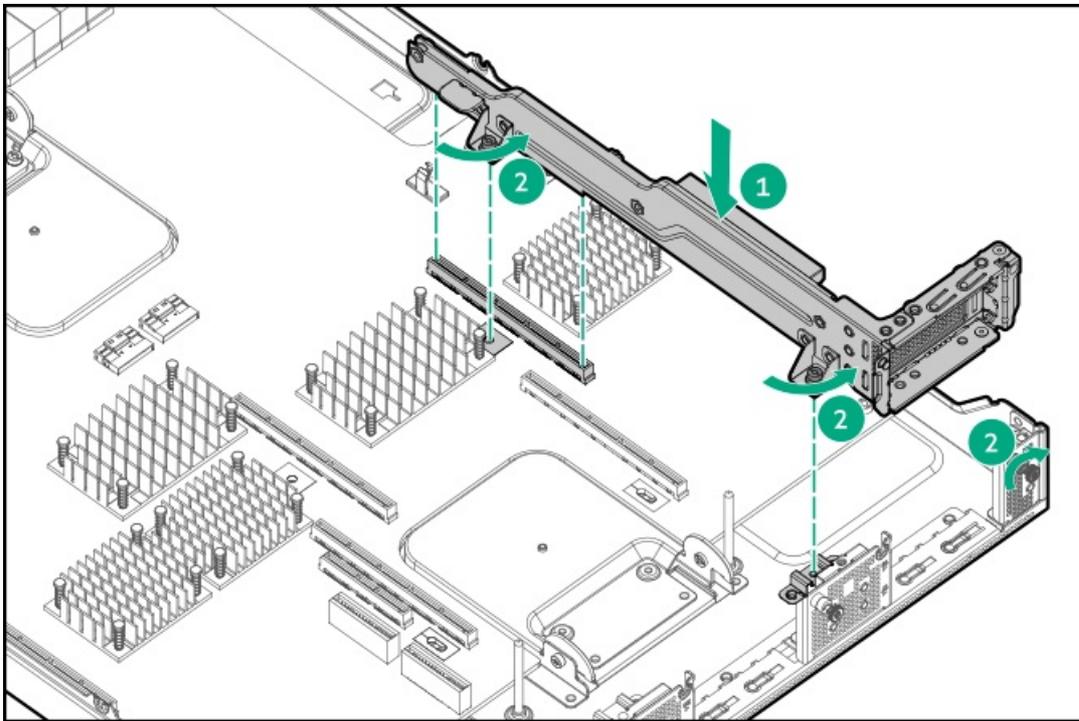

8. Install the PCIe switch board.
9. Install the system board module access panel.
10. Install the system board module into the chassis.
11. Connect all peripheral cables to the server.
12. Power up the server.

#### More information

[Remove the system board module from the chassis](#)

[Remove the PCIe switch board](#)

[Install the system board module access panel](#)

[Install the system board module from the chassis](#)

[Install the PCIe switch board](#)

[Remove the system board module access panel](#)

## Installing a PCIe riser board


### Prerequisites

Before you perform this procedure, make sure that you have the following items available:

- The components included with the hardware option kit
- T-10 screwdriver

### Procedure

1. Power down the server.
2. Disconnect all peripheral cables from the server.
3. Remove the system board module from the chassis.
4. Place the system board module on a flat, level work surface.
5. Remove the system board module access panel.
6. Remove the PCIe switch board.
7. Remove the riser cage.
8. Install the riser board.

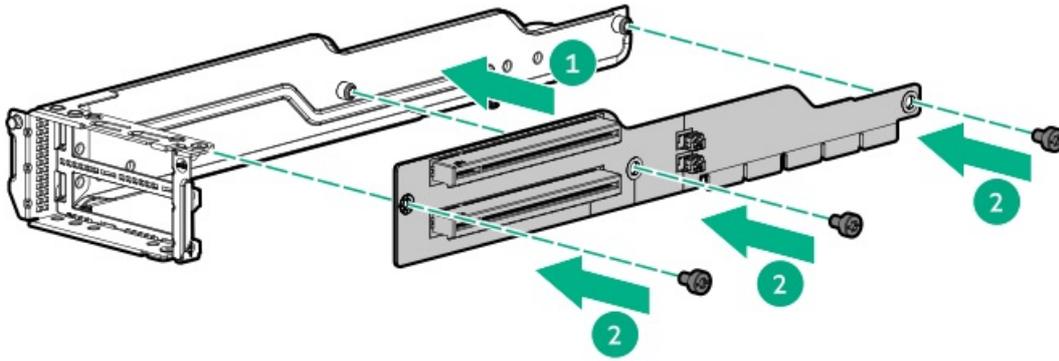

9. Install the PCIe switch board.
10. Install the system board module access panel.
11. Install the system board module into the chassis.
12. Connect all peripheral cables to the server.
13. Power up the server.

#### More information

[Remove the system board module from the chassis](#)

[Remove the PCIe switch board](#)

[Remove the riser cage](#)

[Install the system board module access panel](#)

[Install the system board module from the chassis](#)

[Install the PCIe switch board](#)

[Remove the system board module access panel](#)

## Storage controller options

The server supports the following storage controllers:

- Embedded controllers  
Enabled through UEFI System Utilities and configured using either System Utilities or the HPE Smart Storage Administrator (Intelligent Provisioning).
- Type-a controllers  
Type-a controllers install in the type-a storage controller slot.
- Type-p controllers  
Type-p controllers install in a PCIe expansion slot.

For a complete list of supported storage controller models, see the server QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/qs>).

## Installing a type -a storage controller

### Prerequisites

Before installing this option, be sure that you have the following:

- The components included with the hardware option kit
- T-15 Torx screwdriver

### Procedure

1. Observe the following alerts:

---


**⚠ WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

---

**⚠ CAUTION:** To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

---

2. Back up all server data.
3. Power down the server.
4. Disconnect all peripheral cables from the server.
5. Remove the system board module from the chassis.
6. Place the module on a flat, level work surface.
7. Remove the system board module access panel.
8. Install the controller.

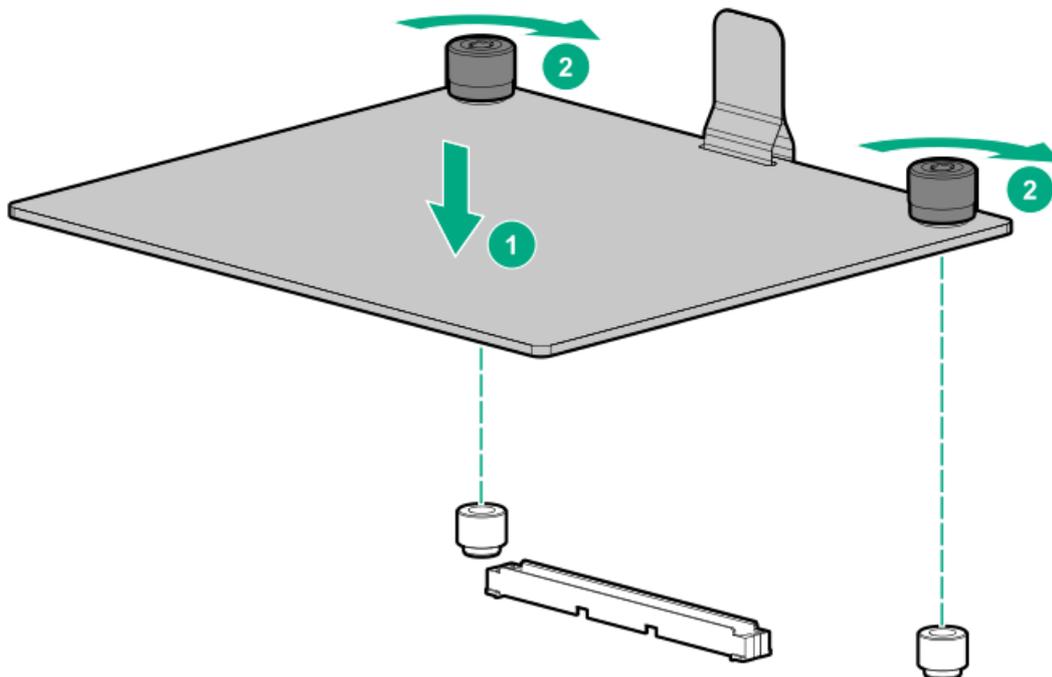

9. Connect the controller cables.
10. Install the system board module access panel.
11. Install the system board module into the chassis.
12. Connect all peripheral cables to the server.
13. Power up the server.
14. Configure the new storage controller.

For more information, see the user guide for your controller series on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/smartstorage-docs>).

#### More information

[Drive-controller-backplane configuration cabling](#)  
[Remove the system board module from the chassis](#)  
[Installing the system board module into the chassis](#)  
[Install the system board module access panel](#)  
[Remove the system board module access panel](#)

## Installing an expansion board or a type -p storage controller


## Prerequisites

Before installing this option, be sure that you have the following:


- The components included with the hardware option kit
- T-15 Torx screwdriver

## Procedure

1. Power down the server.
2. Disconnect all peripheral cables from the server.
3. Remove the system board module from the chassis.
4. Place the module on a flat, level work surface.
5. Remove the system board module access panel.
6. Remove the PCIe switch board.
7. Remove the tertiary PCIe riser cage from the system board.
8. Remove the PCIe slot cover.

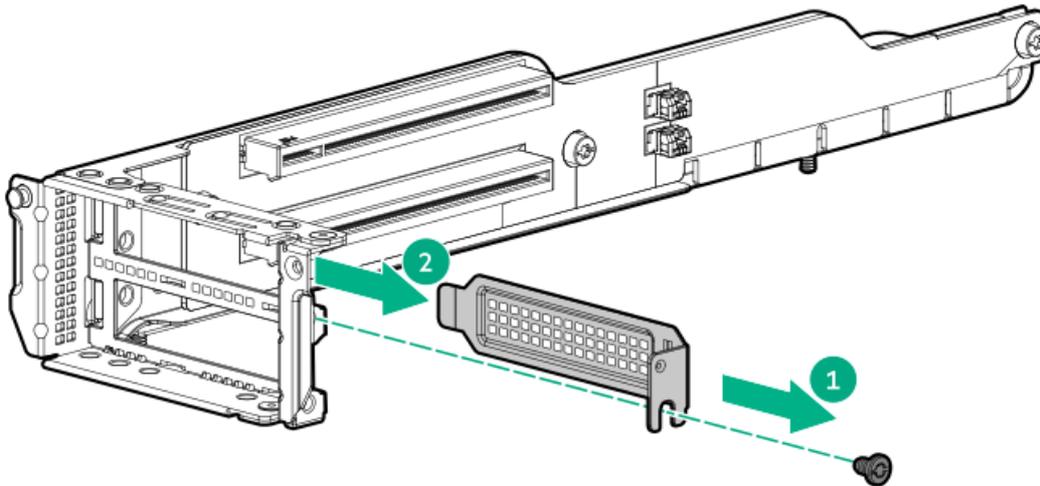

9. Install the expansion board or the storage controller into the PCIe slot.

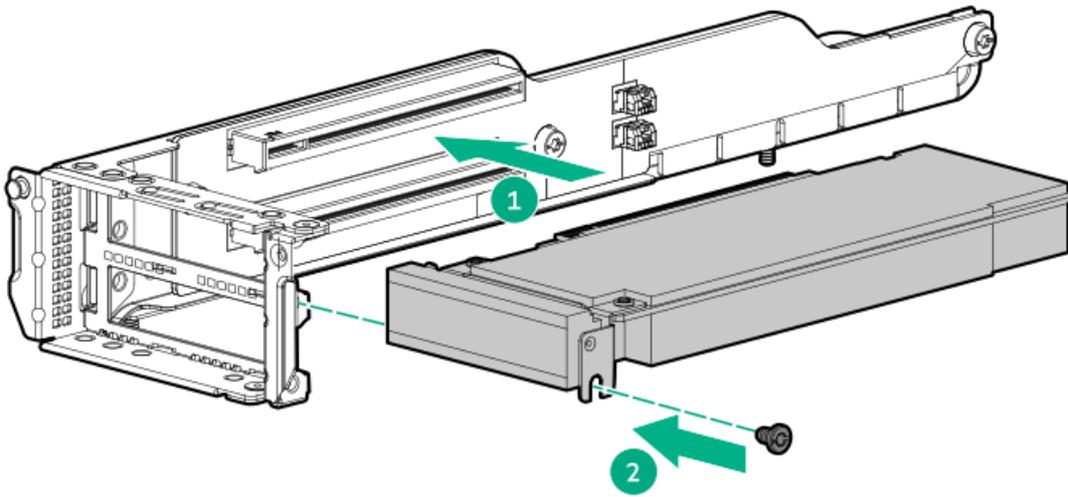

10. If internal cables are required for the expansion board or the storage controller, connect the cables.
11. Install the PCIe riser cage into the system board.
12. Install the PCIe switch board.
13. Install the system board module access panel.
14. Install the system board module into the chassis.
15. Connect all peripheral cables to the server.
16. Power up the server.
17. Configure the new storage controller.

For more information, see the user guide for your controller series on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/smartstorage-docs>).

#### More information

- [Drive-controller-backplane configuration cabling](#)
- [Remove the system board module from the chassis](#)
- [Remove the riser cage](#)
- [Remove the PCIe switch board](#)
- [Installing the system board module into the chassis](#)
- [Remove the system board module access panel](#)
- [Install the PCIe switch board](#)
- [Install the system board module access panel](#)
- [Installing a PCIe riser cage](#)

## Installing the HPE NS204i-p NVMe OS Boot Device option

The Boot Device can be installed on either of the PCIe slots (slot 21 or 22) in the tertiary PCIe riser cage.

#### Prerequisites

Before beginning installation, ensure that the server is updated with the latest operating system firmware and drivers.


Before installing this option, be sure that you have the following:

- The components included with the hardware option kit
- T-15 Torx screwdriver


#### Procedure

##### Installing drives onto the boot device

1. Remove the liner from the thermal interface pad.

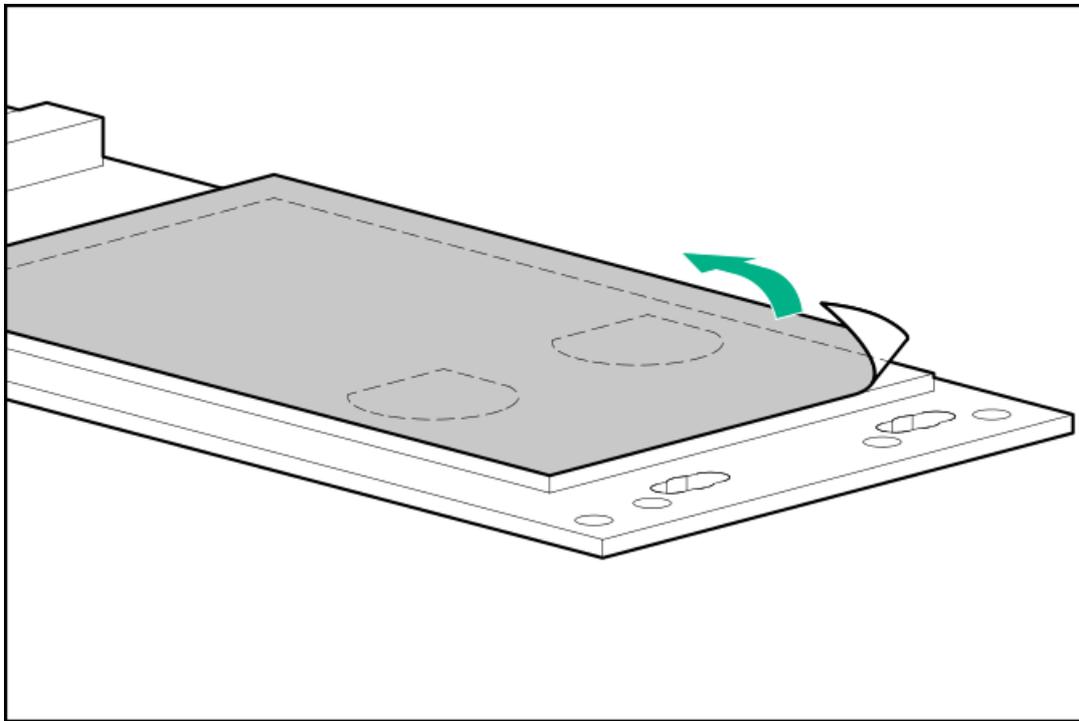

2. Install the drives.

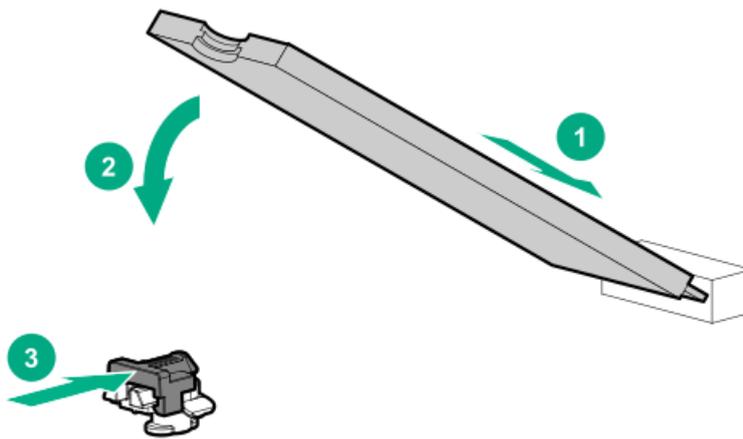


### Installing the boot device


3. Power down the server.
4. Disconnect all peripheral cables from the server.
5. Remove the system board module from the chassis.
6. Place the module on a flat, level work surface.
7. Remove the system board module access panel.
8. Remove the PCIe switch board.
9. Remove the tertiary PCIe riser cage from the system board.
10. Remove the PCIe slot cover.

Save the retaining screw.



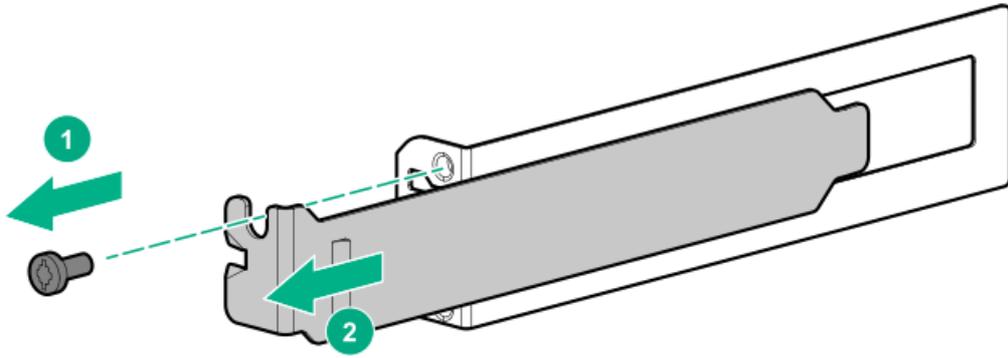

11. Install the boot device.

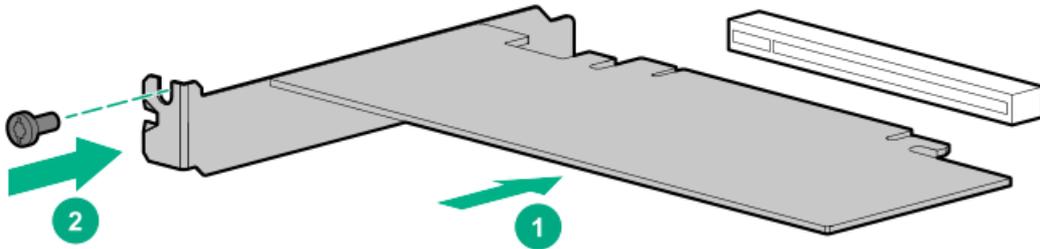

12. Install any components that were removed to access the PCIe slot.
13. Install the tertiary PCIe riser cage into the system board.
14. Install the PCIe switch board.
15. Install the system board module access panel.
16. Install the system board module into the chassis.
17. Connect all peripheral cables to the server.
18. Power up the server.

#### Deploying an operating system

19. Deploy a supported operating system to the controller drive.

For more information, see the product QuickSpecs (<https://www.hpe.com/info/qs>).

After the OS installation completes, the system automatically copies the operating system to the second, mirrored drive on the controller.

20. Proceed with normal system setup and operation.

#### More information

[Remove the system board module from the chassis](#)

[Remove the PCIe switch board](#)

[Remove the riser cage](#)

[Installing the system board module into the chassis](#)

[Remove the system board module access panel](#)

[Install the PCIe switch board](#)

[Install the system board module access panel](#)

[Installing a PCIe riser cage](#)

## GPU options

The server supports a maximum of 8 SXM4 GPUs in the SXM GPU tray option, or 10 double-width PCIe GPUs or 16 single-width PCIe GPUs in the PCIe GPU tray option. The GPU slots can be mapped in a 2:1 GPU to PCIe riser board ratio.

## Installing a GPU tray


### Prerequisites

Before installing this option, be sure that you have the following:

- The components included with the hardware option kit
- Four 12 V power supplies installed in the chassis, if installing a PCIe GPU tray
- Four 54 V power supplies and two 12 V power supplies installed in the chassis, if installing an SXM4 GPU tray

### Procedure

1. Power down the server.
2. Install the GPU tray into the chassis.

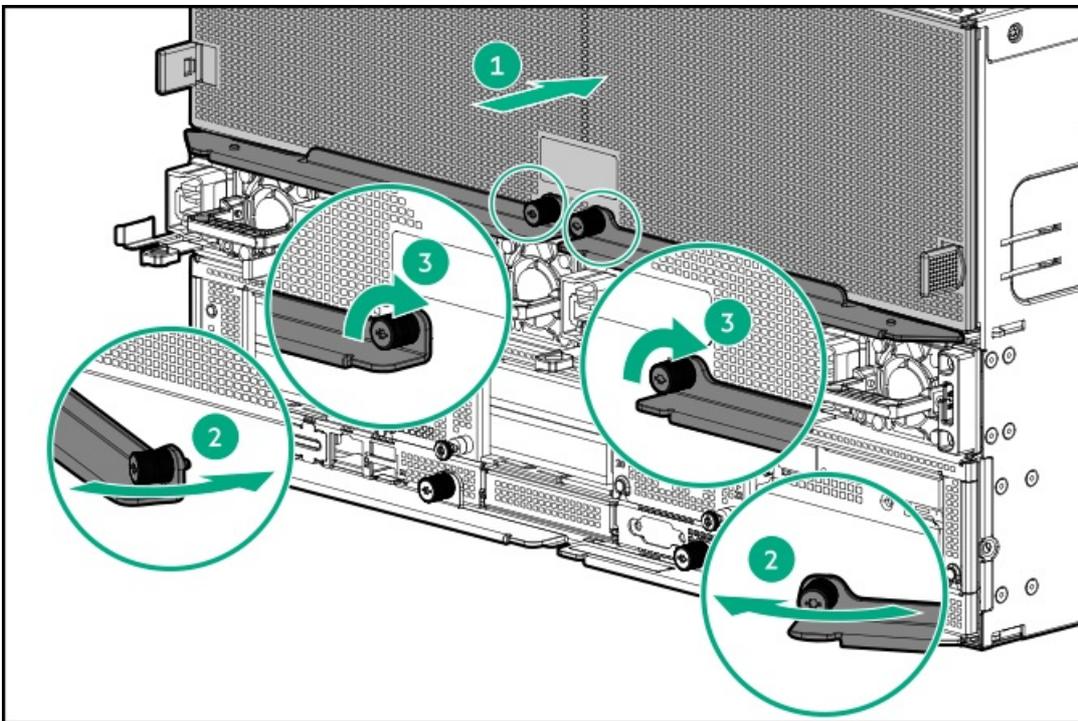

Depending on the chassis configuration, your GPU tray might look different.

3. Power up the server.

## SXM4 GPU options

The SXM4 GPU tray has eight x16 PCIe 4.0 slots and one x4 PCIe 3.0 slot for the NVLINK fabric.

The SXM4 GPU tray needs four 12 V power supplies and two 54 V power supplies to work.

Each PCIe slot on this SXM4 GPU PCA is capable of supporting up to 500 W per GPU.

## Installing an SXM4 GPU

The SXM4 GPUs come pre-installed in the SXM4 GPU tray. Customer installation of the SXM4 GPU is not supported.

## PCIe GPU options

The PCIe GPU tray has ten x16 PCIe 4.0 slots. Each double-wide PCIe slot is capable of supporting up to 300 W per GPU.

The PCIe GPU tray has 16 single-wide x16 PCIe 4.0 slots. Each single-wide PCIe slot is capable of supporting up to 150 W per GPU.

The brown GPU slots support single-width and double-width PCIe GPUs while the gray slots support only single-width GPUs.

The PCIe GPU tray needs a minimum of two and maximum of four 12 V power supplies to work.

Mixing of GPUs is not allowed.

## Installing a PCIe GPU

### Prerequisites

Before installing this option, be sure that you have the following:

- The components included with the hardware option kit
- T-10 Torx screwdriver

### Procedure

1. Observe the following alerts:

---


**⚠ WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

---


**⚠ CAUTION:** To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

---

2. Power down the server.
3. Disconnect all peripheral cables from the server.
4. Remove the GPU tray from the chassis.
5. Place the GPU tray on a flat, level work surface.
6. Install the bracket included in the GPU option kit using the T-10 Torx screwdriver. The location of the bracket and the number of screws used will vary depending on GPU model.
  - double-wide GPU

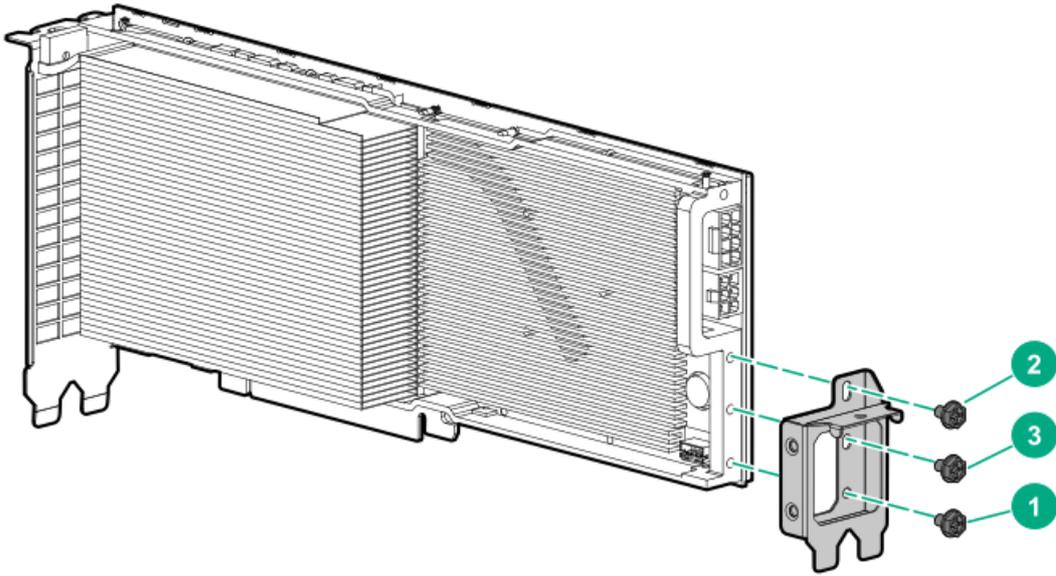


- single-wide GPU

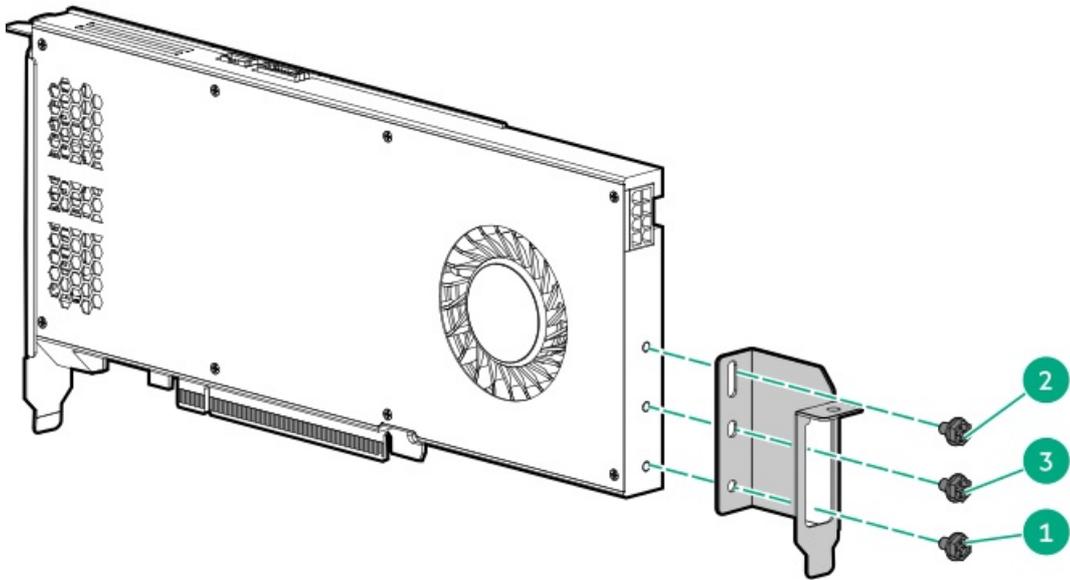

7. Remove the blank from a GPU slot.


Remove a single slot blank to install a single-wide GPU and two slot blanks to install a double-wide GPU.



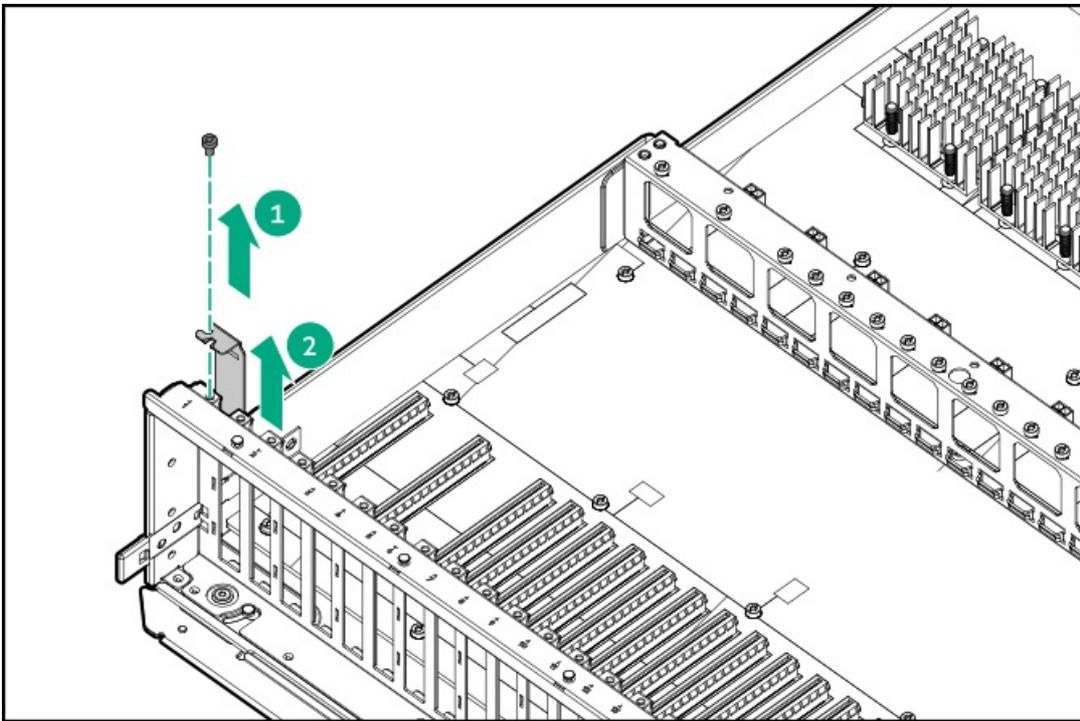

8. Align and install the GPU.

A double-wide GPU is shown. The installation for a single-wide GPU is similar.

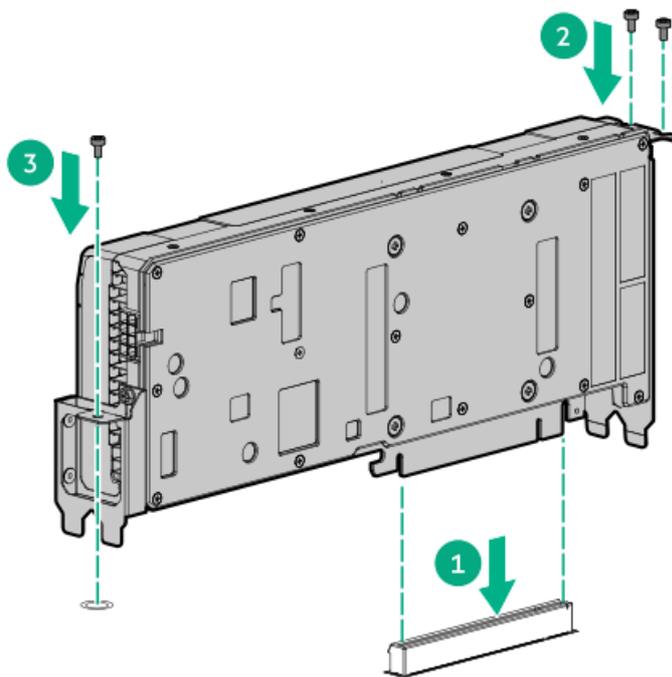

9. Connect the power cable from the GPU to the GPU module.

For cabling information, see [GPU power cabling](#).

10. Connect all peripheral cables to the server.

11. Install the GPU tray.

12. [Power up the server](#).

13. [Configure the PCIe GPU slots](#).


**More information**

[Remove the GPU tray from the chassis](#)

## Configuring PCIe GPU slots

### Procedure

1. Access System Utilities. During POST, press F9.
2. Select System Configuration > BIOS/Platform Configuration (RBSU) > PCIe Device Configuration > Advanced PCIe Configuration.
3. Select the preferred option from the PCIe Slot to Processor Mapping drop-down list.

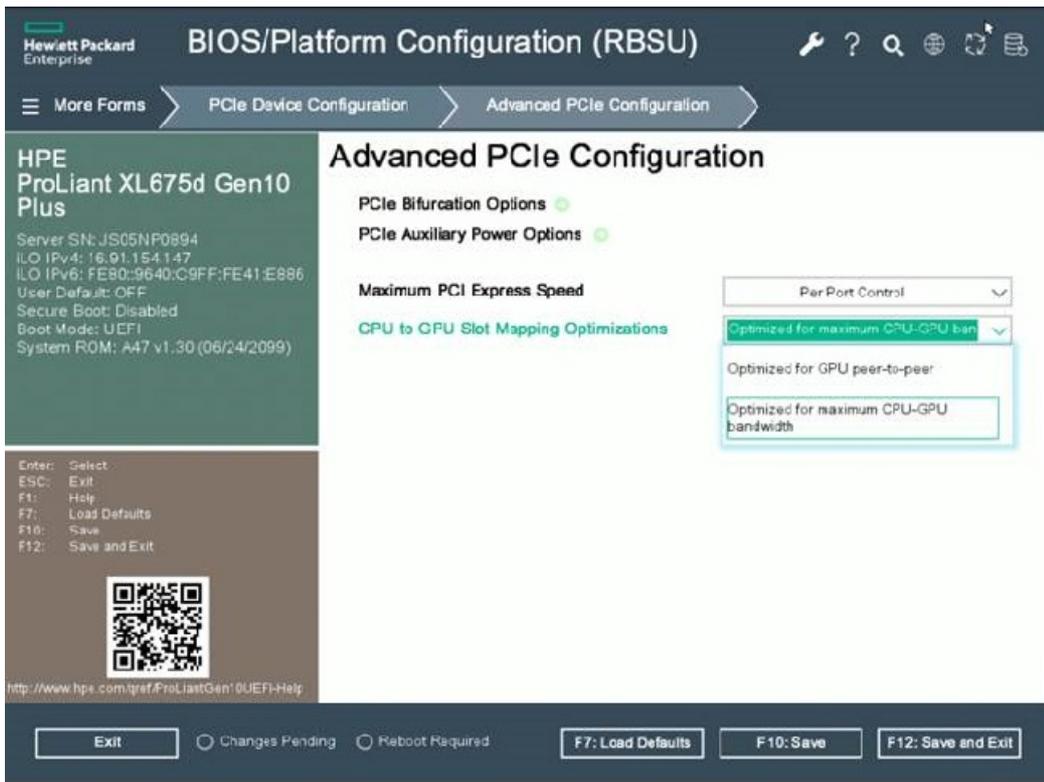

## Installing a GPU bridge

You can install GPU bridges for a double-width AMD MI100 or NVIDIA A100 GPU configuration. A GPU bridge is a high-bandwidth channel for GPU-to-GPU communication. A bridge allows GPUs to communicate with each other without using precious bandwidth on the PCIe slots. Using a bridge scales both memory and capacity of the GPU, enabling it to perform to its full capacity.

A single bridge can connect 4 AMD MI100 GPUs. If you have installed a 10 GPU configuration, you will need 2 bridge cards. One bridge card will connect 4 GPUs while the second card will connect 4 more GPUs to connect a total of 8 GPUs. The two remaining GPUs, if installed, cannot be connected.

### Prerequisites

Before installing this option, be sure that you have the following:

- The components included with the hardware option kit
- T-10 Torx screwdriver

### Procedure

1. Observe the following alerts:

---

**⚠ WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system


components to cool before touching them.

---

⚠ **CAUTION:** To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

---

2. Power down the server.
3. Disconnect all peripheral cables from the server.
4. Remove the GPU tray from the chassis.
5. Place the GPU tray on a flat, level work surface.
6. With a T-10 Torx screwdriver, install the GPU bridge on the GPUs using the screws supplied with the kit.

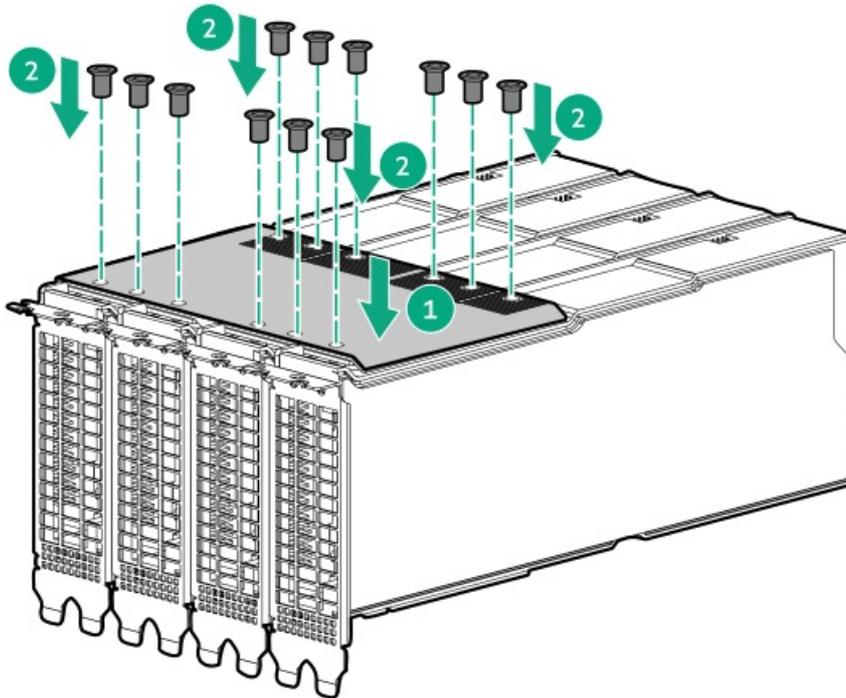

7. Connect all peripheral cables to the server.
8. Install the GPU tray.
9. Power up the server.

## Installing the system board module into the chassis


### Prerequisites

Before installing this option, be sure that you have the following:

- The components included with the hardware option kit

### Procedure

1. Power down the server.
2. Install the system board module into the chassis.

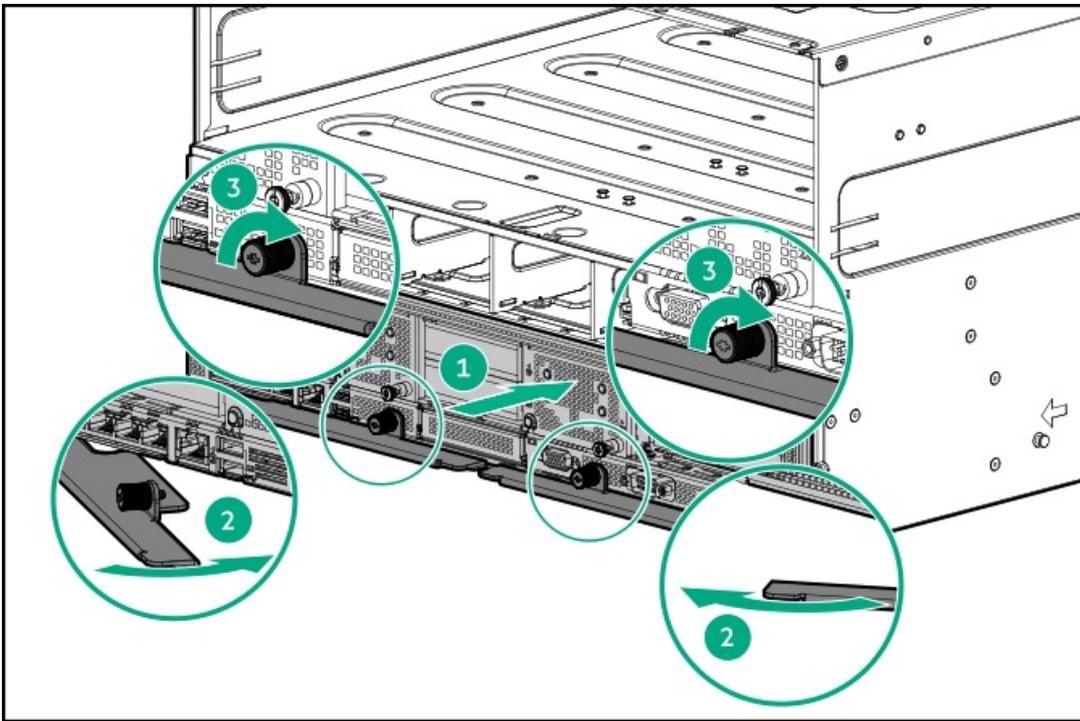

3. Power up the server.

## Installing a rear serial port interface


### Prerequisites

Before installing this option, be sure that you have the following:


- The components included with the hardware option kit
- T-10 Torx screwdriver

### Procedure

1. Power down the server.
2. Disconnect all peripheral cables from the server.
3. Remove the system board module from the chassis.
4. Place the module on a flat, level work surface.
5. Remove the system board module access panel.
6. Remove the serial port blank.

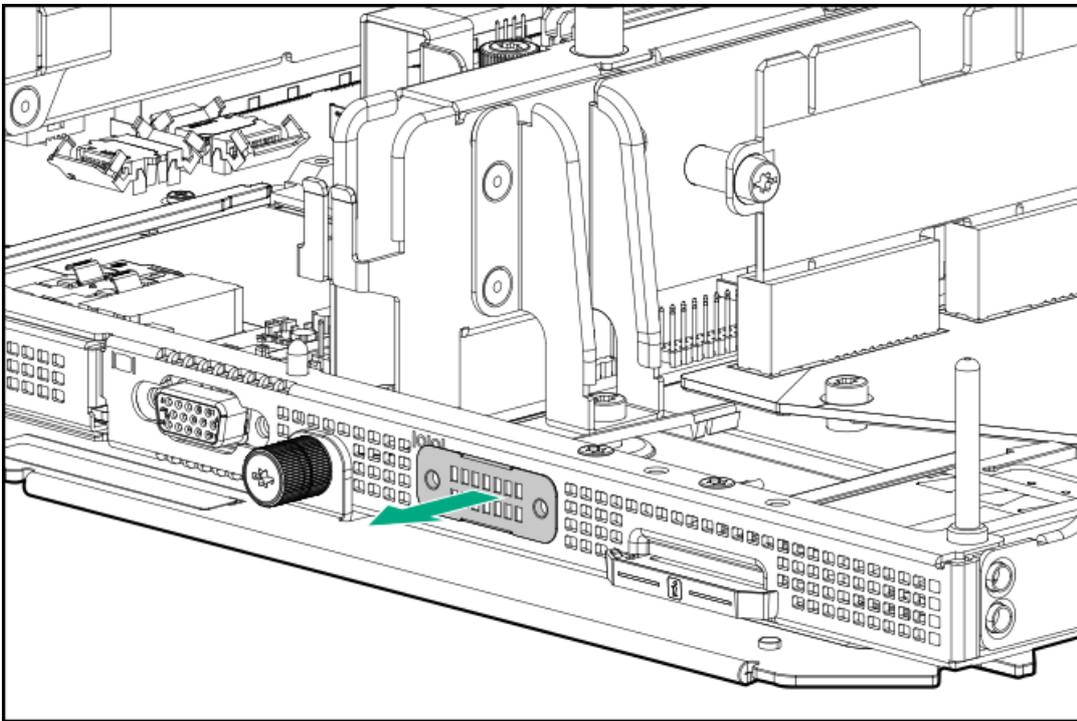

7. Install the serial port interface and cable.

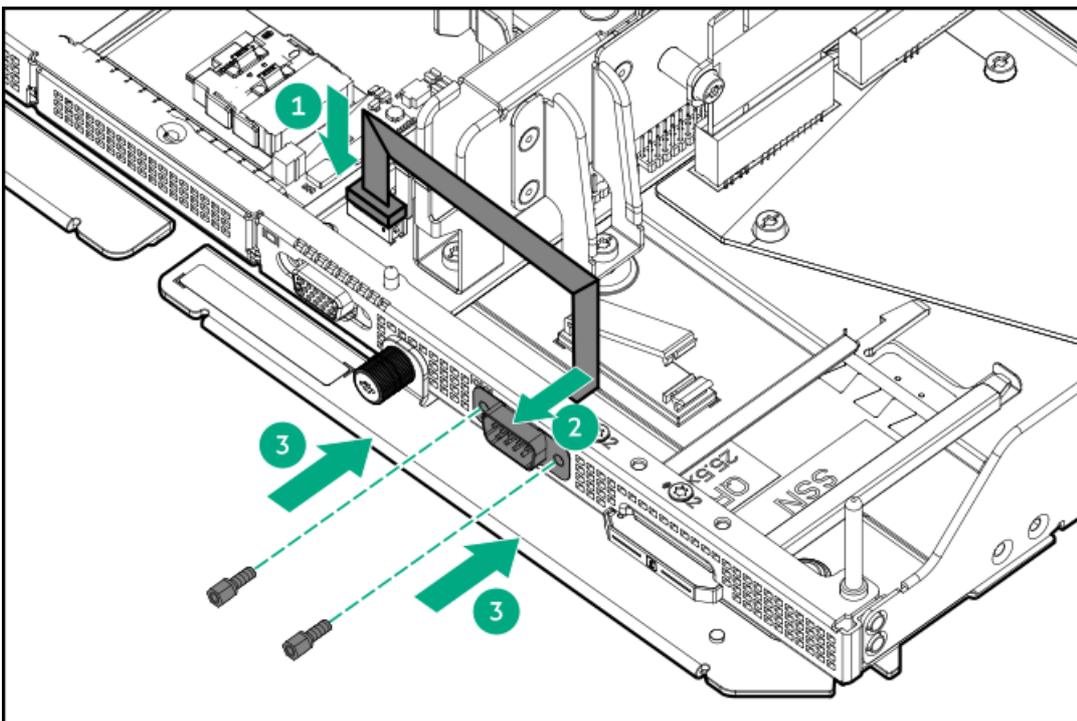

8. Install the system board module access panel.

9. Install the system board module into the chassis.

10. Connect all peripheral cables to the server.

11. Power up the server.

The installation is complete.

#### More information

[Remove the system board module from the chassis](#)

[Remove the system board module access panel](#)

[Install the system board module access panel](#)

[Installing the system board module into the chassis](#)

## Installing a processor and heatsink option

Hewlett Packard Enterprise recommends [identifying the processor and socket components](#) before performing this procedure.

### Prerequisites

Before you perform this procedure, make sure that you have the following items available:

- The components included with the hardware option kit
- T-20 Torx screwdriver
- 1.0 gm (0.5 ml) or two 0.5 gm (0.25 ml) of thermal grease in syringes
- Alcohol wipe

### Procedure

1. Observe the following alerts:

---

**⚠ WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

---

**⚠ CAUTION:** To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

---

**⚠ CAUTION:** When handling the heatsink, always hold it along the top and bottom of the fins. Holding it from the sides can damage the fins.

---

**⚠ CAUTION:** To avoid damage to the processor or system board, only authorized personnel should attempt to replace or install the processor in this server.

---

**⚠ CAUTION:** To prevent possible server malfunction and damage to the equipment, multiprocessor configurations must contain processors with the same part number.

---


**⚠ CAUTION:** If installing a processor with a faster speed, update the system ROM before installing the processor. To download firmware and view installation instructions, see the [Hewlett Packard Enterprise Support Center website](#).

---

**⚠ CAUTION:** THE CONTACTS ARE VERY FRAGILE AND EASILY DAMAGED. To avoid damage to the socket or processor, do not touch the contacts.

---


2. Back up all server data.
3. [Power down the server](#).
4. Disconnect all peripheral cables from the server.
5. Remove the system board module from the chassis.
6. Place the system board module on a flat, level work surface.
7. Remove the system board module access panel.
8. Remove any components or cables that may prevent access to the processor socket.
9. Remove the dust cover from the processor socket you intend to upgrade.
10. Use a T-20 Torx screwdriver to loosen the three captive screws in the sequence shown in the following image, and then pivot the force frame upward.

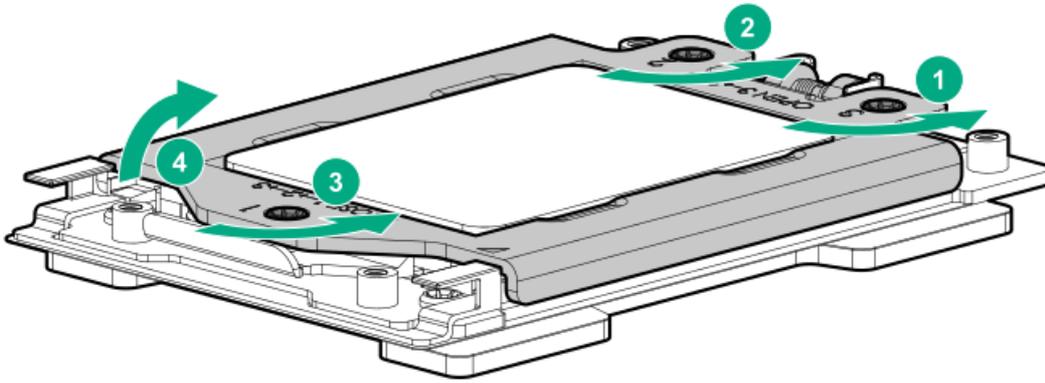

11. Remove the external cap:

- a. Hold the lift tabs near the front end of the rail frame, and then pivot the rail frame to the vertical position.
- b. Slide the external cap out of the rail frame.

Retain the external cap for future use.

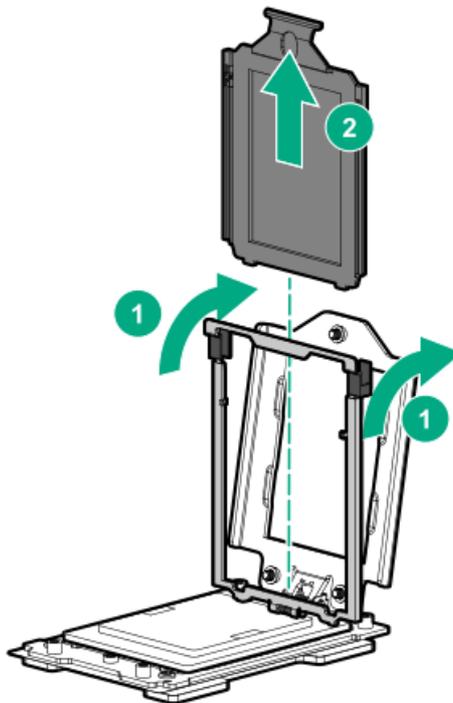

12. Install the processor:

- a. Hold the processor by its carrier handle and slide the processor into the rail frame until it engages with a click sound.
- b. Remove the pin field cover cap.

---


**CAUTION:**

To prevent the risk of damaging the pins in the processor socket, do not reinstall the pin field cover cap after removing it.

---

- c. Hold the lift tabs near the front end of the rail frame, and then pivot the rail frame to the closed position.

A click sound indicates that the rail frame is properly engaged.

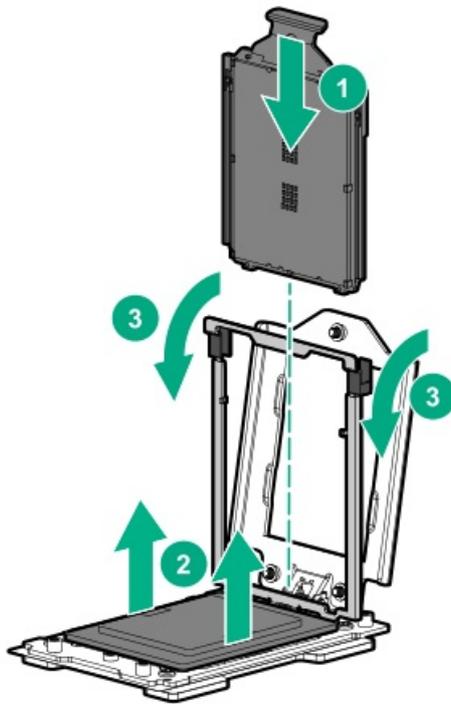


13. Close the force frame:

**△ CAUTION:**

Do not overtighten the screws as this might damage the system board or the processor socket.

- a. Pivot the spring loaded force frame downward and hold it down (callout 1).
- b. Use a T-20 Torx screwdriver to tighten the captive screws in the sequence shown in the following image (callouts 2-4).

When using a torque wrench to tighten the screws, apply a torque of 1.58 N·m (14 lbf-in).

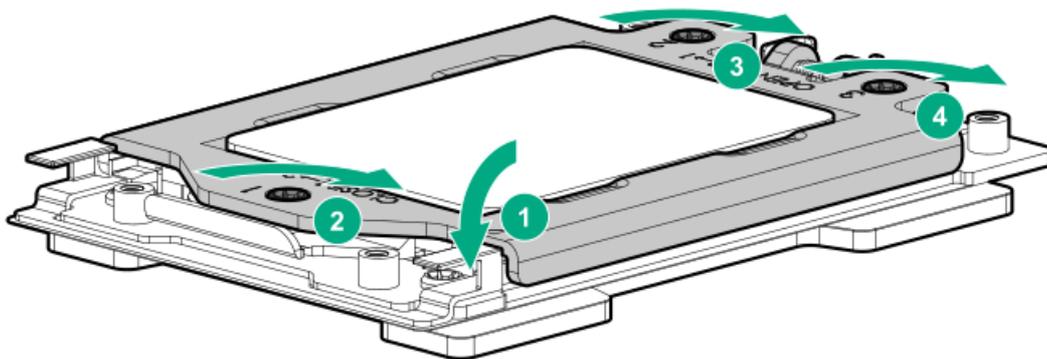

14. Remove the thermal interface protective cover from the new heatsink.

15. Install the heatsink:

**△ CAUTION:**

To prevent mechanical damage or depositing oil on your hands or other contaminant to the heatsink contact surface, hold the heatsink only by the edge of its base plate. Do not touch the heatsink fins.

**△ CAUTION:**

To prevent thermal failure or component damage, do not move the heatsink once the bottom of its base plate touches the top of the processor. Excessive heatsink movement can cause the thermal grease to smear and become uneven. Voids in the compound can adversely impact the transfer of heat away from the processor.

---


**△ CAUTION:**

Heatsink screws must be tightened and loosened in alternating sequence. Do not overtighten the screws as this might damage the system board or the processor socket.

---

- a. Position the heatsink on top of the processor, ensuring that it is properly seated before securing the screws.
- b. Use a T-20 Torx screwdriver to tighten the captive screws in the sequence specified on the heatsink label.

When using a torque wrench to tighten the screws, apply a torque of 1.58 N-m (14 lbf-in).

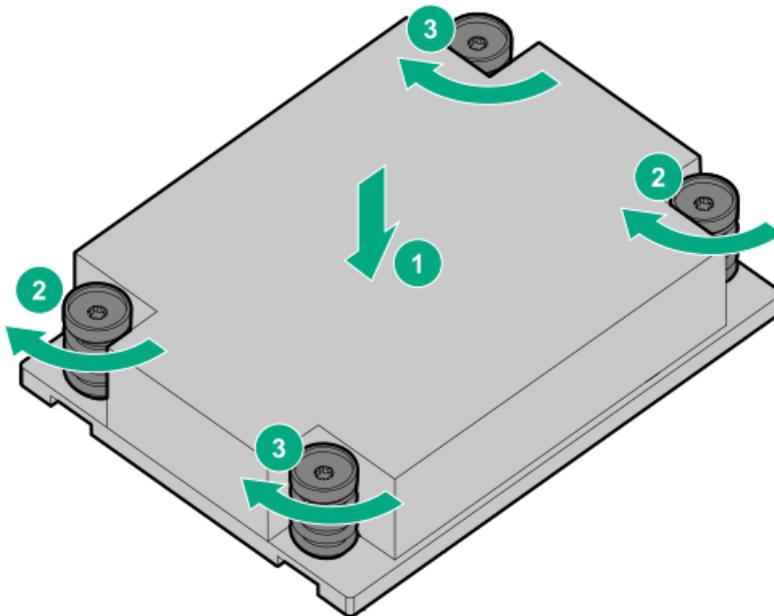

16. Install any components or cables previously removed to access the processor socket.
17. Install the system board module access panel.
18. Install the system board module into the chassis.
19. Connect all peripheral cables to the server.
20. Power up the server.

The installation is complete.

#### More information

[Remove the system board module from the chassis](#)  
[Installing the system board module into the chassis](#)  
[Install the system board module access panel](#)  
[Remove the system board module access panel](#)

## HPE Smart Storage Battery

The HPE Smart Storage Battery supports the following devices:

- HPE Smart Array SR controllers

After the battery is installed, it might take up to two hours to charge. Controller features requiring backup power are not re-enabled until the battery is capable of supporting the backup power.

This server supports the 12W HPE Smart Storage Battery with the 230mm cable.

## Installing an HPE Smart Storage Battery

---

**NOTE:** System ROM and firmware messages might display "energy pack" in place of "Smart Storage Battery." Energy pack refers to both HPE Smart Storage batteries and HPE Smart Storage Hybrid capacitors.

---

### Prerequisites

Before you perform this procedure, make sure that you have the following items available:

- T-10 Torx screwdriver
- The components included with the hardware option kit
- Storage controller backup power cable (ships with the storage controller)

Make sure that a supported Smart Array P-class Gen10 controller is installed.

### Procedure

1. Observe the following alerts:

---

**WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.


---

---


**CAUTION:** To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

---

2. Back up all server data.
3. Power down the server.
4. Disconnect all peripheral cables from the server.
5. Remove the system board module from the chassis.
6. Install the HPE Smart Storage Battery.

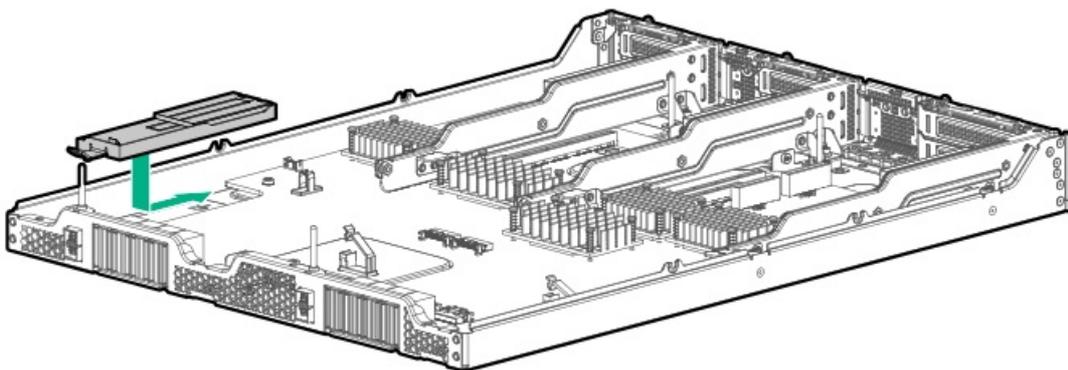

7. Connect the HPE Smart Storage Battery cable.

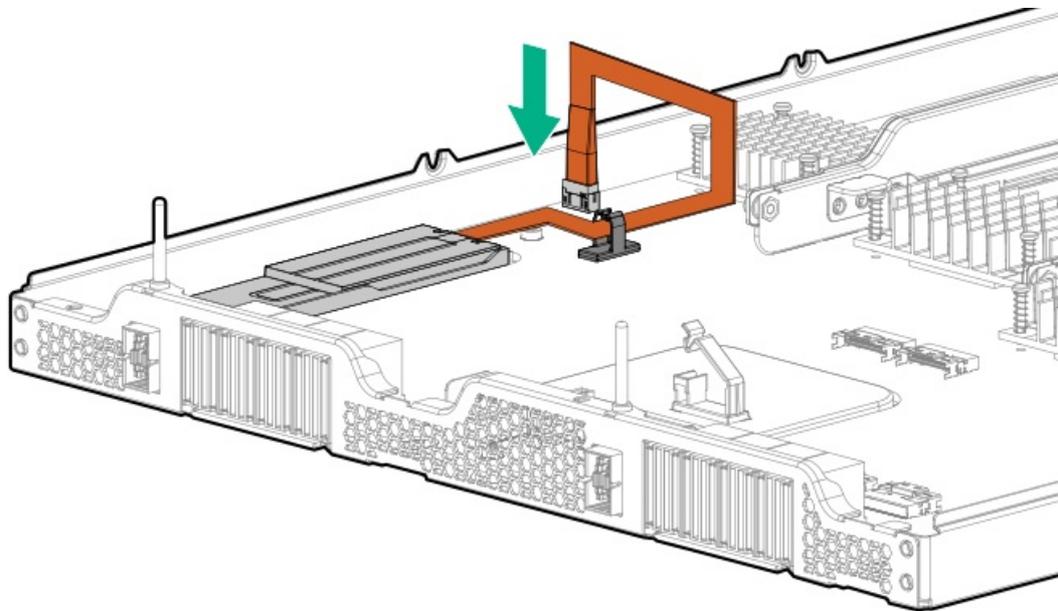

8. Connect the storage controller backup power cable.
9. Install the system board module into the chassis.
10. Connect any peripheral cables that were disconnected.
11. Power up the server.

The installation is complete.

#### More information

[System board components](#)

## HPE Trusted Platform Module 2.0 Gen10 Plus option

### Overview

Use these instructions to install and enable an HPE TPM 2.0 Gen10 Plus Kit in a supported server. This option is not supported on Gen10 and earlier servers.

This procedure includes three sections:

1. Installing the Trusted Platform Module board.
2. Enabling the Trusted Platform Module.
3. Retaining the recovery key/password.

HPE TPM 2.0 installation is supported with specific operating system support such as Microsoft Windows Server 2012 R2 and later. For more information about operating system support, see the product QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/qs>). For more information about Microsoft Windows BitLocker Drive Encryption feature, see the Microsoft website (<https://www.microsoft.com>).

---

**CAUTION:** If the TPM is removed from the original server and powered up on a different server, data stored in the TPM including keys will be erased.

---

**IMPORTANT:** In UEFI Boot Mode, the HPE Apollo 6500 System can be configured to operate as TPM 2.0 (default) or TPM 1.2 on a supported server. In Legacy Boot Mode, the configuration can be changed between TPM 1.2 and TPM 2.0, but only TPM 1.2 operation is supported.

---

## HPE Trusted Platform Module 2.0 guidelines

---

**⚠ CAUTION:** Always observe the guidelines in this document. Failure to follow these guidelines can cause hardware damage or halt data access.

---

**Hewlett Packard Enterprise SPECIAL REMINDER:** Before enabling TPM functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable.

For any compliance issues arising from your operation/usage of TPM which violates the above mentioned requirement, you shall bear all the liabilities wholly and solely. Hewlett Packard Enterprise will not be responsible for any related liabilities.

慧与特别提醒：在您启用系统中的TPM功能前，请务必确认您对TPM的使用遵守当地相关法律、法规及政策，并已事先获得所需的一切批准及许可（如适用），因您未获得相应的操作/使用许可而导致的违规问题，皆由您自行承担全部责任，与慧与无涉。

When installing or replacing a TPM, observe the following guidelines:

- Do not remove an installed TPM. Once installed, the TPM becomes a permanent part of the system board.
- When installing or replacing hardware, Hewlett Packard Enterprise service providers cannot enable the TPM or the encryption technology. For security reasons, only the customer can enable these features.
- When returning a system board for service replacement, do not remove the TPM from the system board. When requested, Hewlett Packard Enterprise Service provides a TPM with the spare system board.
- Any attempt to remove the cover of an installed TPM from the system board can damage the TPM cover, the TPM, and the system board.
- If the TPM is removed from the original server and powered up on a different server, all data stored in the TPM including keys will be erased.
- When using BitLocker, always retain the recovery key/password. The recovery key/password is required to complete Recovery Mode after BitLocker detects a possible compromise of system integrity.
- Hewlett Packard Enterprise is not liable for blocked data access caused by improper TPM use. For operating instructions, see the TPM documentation or the encryption technology feature documentation provided by the operating system.

## Installing and enabling the HPE TPM 2.0 Gen10 Plus option

### Installing the Trusted Platform Module board

### Preparing the server for installation

#### Procedure

1. Observe the following warnings:

---

**⚠ WARNING:** The front panel Power On/Standby button does not shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.

To reduce the risk of personal injury, electric shock, or damage to the equipment, remove power from the server:

- For rack and tower servers, remove the power cord.
  - For server blades and compute modules, remove the server blade or compute module from the chassis.
-



---

**WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

---

2. Update the system ROM.

Locate and download the latest ROM version from the Hewlett Packard Enterprise Support Center website (<https://www.hpe.com/support/hpesc>). To update the system ROM, follow the instructions on the website.

3. Power down the server:

- a. Shut down the OS as directed by the OS documentation.
- b. To place the server in standby mode, press the Power On/Standby button. When the server enters standby power mode, the system power LED changes to amber.
- c. Disconnect the power cords (rack and tower servers).

4. Remove the system board module from the chassis.

5. Place the system board module on a flat, level work surface.

6. Remove the system board module access panel.

7. Remove any options or cables that might prevent access to the TPM connector.

8. Proceed to "Installing the TPM board and cover."

**More information**

[Power down the server](#)

[Remove the system board module from the chassis](#)

## Installing the TPM board and cover

### Procedure

1. Observe the following alerts:



**CAUTION:** If the TPM is removed from the original server and powered up on a different server, data stored in the TPM including keys will be erased.

---




**CAUTION:** The TPM is keyed to install only in the orientation shown. Any attempt to install the TPM in a different orientation might result in damage to the TPM or system board.

---


2. Install the TPM board:

- a. Locate the TPM connector on the system board. See the server hood label for the exact location.
- b. Align the TPM board with the key on the connector, and then install the TPM board. To seat the board, press the TPM board firmly into the connector.

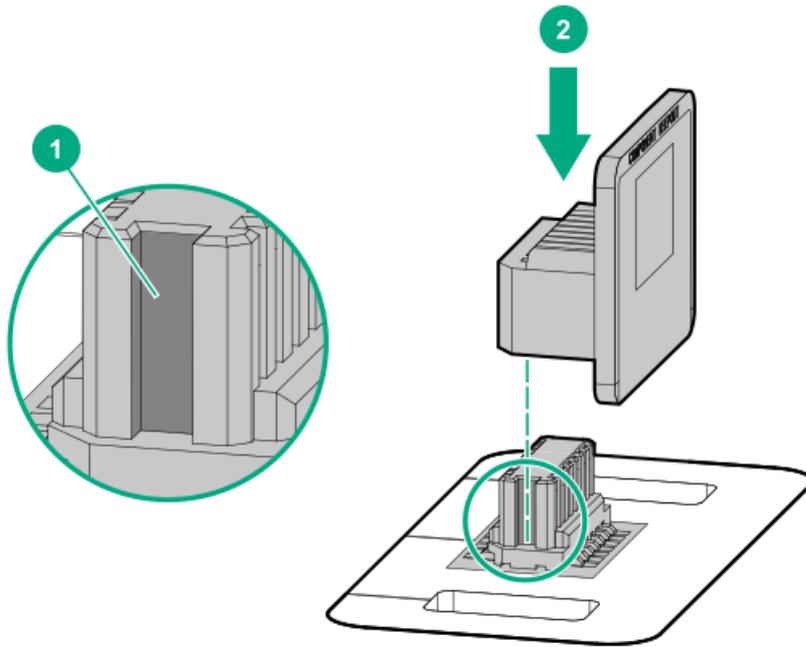


3. Install the TPM cover:

- a. Align the pins on the cover with the openings on the system board.
- b. Press straight down on the middle of the cover until the alignment pins are seated into the holes.

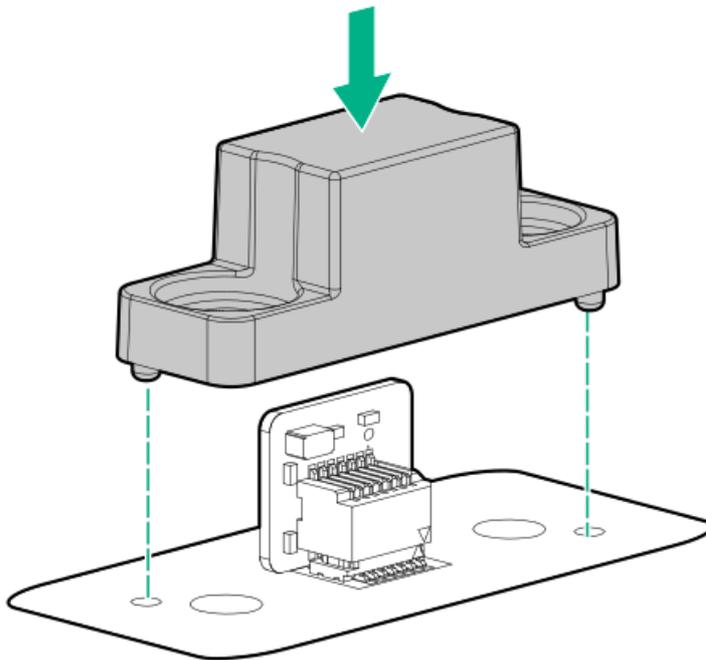

4. Secure the rivets into place by pushing them firmly through the holes in the TPM cover.



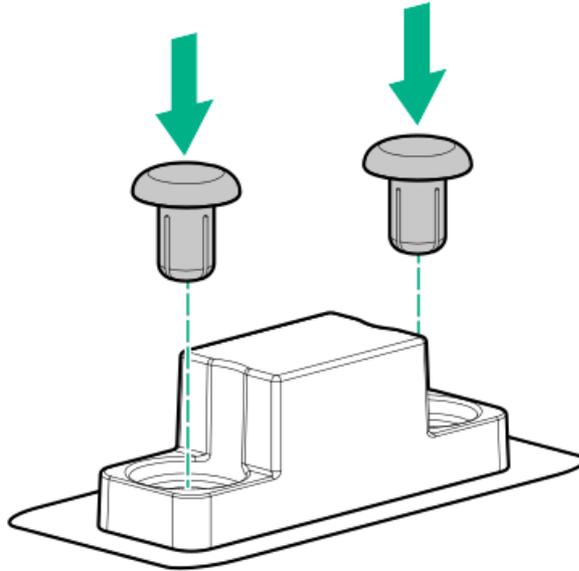

5. Proceed to "Preparing the server for operation."

## Preparing the server for operation

### Procedure

1. Install any options or cables previously removed to access the TPM connector.
2. Install the system board module access panel.
3. Install the system board module into the chassis.
4. Connect the power cords to the server.
5. Power up the server.

### More information

[Power up the server](#)

## Enabling the Trusted Platform Module

When enabling the Trusted Platform module, observe the following guidelines:

- By default, the Trusted Platform Module is enabled as TPM 2.0 when the server is powered on after installing it.
- In UEFI Boot Mode, the Trusted Platform Module can be configured to operate as TPM 2.0 (default) or TPM 1.2.
- In Legacy Boot Mode, the Trusted Platform Module configuration can be changed between TPM 1.2 and TPM 2.0 (default), but only TPM 1.2 operation is supported.

## Enabling the Trusted Platform Module as TPM 2.0

### Procedure

1. During the server startup sequence, press the F9 key to access System Utilities.
2. From the System Utilities screen, select System Configuration > BIOS/Platform Configuration (RBSU) > Server Security > Trusted Platform Module options.
3. Verify the following:
  - "Current TPM Type" is set to TPM 2.0.
  - "Current TPM State" is set to Present and Enabled.
  - "TPM Visibility" is set to Visible.
4. If changes were made in the previous step, press the F10 key to save your selection.
5. If F10 was pressed in the previous step, do one of the following:
  - If in graphical mode, click Yes.
  - If in text mode, press the Y key.
6. Press the ESC key to exit System Utilities.
7. If changes were made and saved, the server prompts for reboot request. Press the Enter key to confirm reboot.

If the following actions were performed, the server reboots a second time without user input. During this reboot, the TPM setting becomes effective.

- Changing from TPM 1.2 and TPM 2.0
  - Changing TPM bus from FIFO to CRB
  - Enabling or disabling TPM
  - Clearing the TPM
8. Enable TPM functionality in the OS, such as Microsoft Windows BitLocker or measured boot.

For more information, see the [Microsoft website](#).

## Enabling the Trusted Platform Module as TPM 1.2

### Procedure

1. During the server startup sequence, press the F9 key to access System Utilities.
2. From the System Utilities screen select System Configuration > BIOS/Platform Configuration (RBSU) > Server Security > Trusted Platform Module options.
3. Change the "TPM Mode Switch Operation" to TPM 1.2.
4. Verify that "TPM Visibility" is set to Visible.
5. Press the F10 key to save your selection.
6. When prompted to save the change in System Utilities, do one of the following:
  - If in graphical mode, click Yes.
  - If in text mode, press the Y key.
7. Press the ESC key to exit System Utilities.

The server reboots a second time without user input. During this reboot, the TPM setting becomes effective.

8. Enable TPM functionality in the OS, such as Microsoft Windows BitLocker or measured boot.

For more information, see the [Microsoft website](#).

## Retaining the BitLocker recovery key/password

The recovery key/password is generated during BitLocker setup, and can be saved and printed after BitLocker is enabled. When using BitLocker, always retain the recovery key/password. The recovery key/password is required to enter Recovery Mode after BitLocker detects a possible compromise of system integrity.

To help ensure maximum security, observe the following guidelines when retaining the recovery key/password:

- Always store the recovery key/password in multiple locations.
- Always store copies of the recovery key/password away from the server.
- Do not save the recovery key/password on the encrypted hard drive.

## Cabling

### Cabling guidelines

The cable colors in the cabling diagrams used in this chapter are for illustration purposes only. Most of the system cables are black.

Observe the following guidelines when working with system cables.

#### Before connecting cables


- Note the port labels on the PCA components. Not all of these components are used by all systems:
  - System board ports
  - Drive and power supply backplane ports
  - Expansion card ports (controllers, adapters, expanders, risers, and similar boards)
- Note the label near each cable connector. This label indicates the destination port for the cable connector.
- Some data cables are pre-bent. Do not unbend or manipulate the cables.
- To prevent mechanical damage or depositing oil that is present on your hands, and other contamination, do not touch the ends of the connectors.

#### When connecting cables

- Before connecting a cable to a port, lay the cable in place to verify the length of the cable.
- Use the internal cable management features to properly route and secure the cables.
- When routing cables, be sure that the cables are not in a position where they can be pinched or crimped.
- Avoid tight bend radii to prevent damaging the internal wires of a power cord or a server cable. Never bend power cords and server cables tight enough to cause a crease in the sheathing.
- Make sure that the excess length of cables are properly secured to avoid excess bends, interference issues, and airflow restriction.
- To prevent component damage and potential signal interference, make sure that all cables are in their appropriate routing position before installing a new component and before closing up the system after hardware installation/maintenance.

## When disconnecting cables


- Grip the body of the cable connector. Do not pull on the cable itself because this action can damage the internal wires of the cable or the pins on the port.
- If a cable does not disconnect easily, check for any release latch that must be pressed to disconnect the cable.

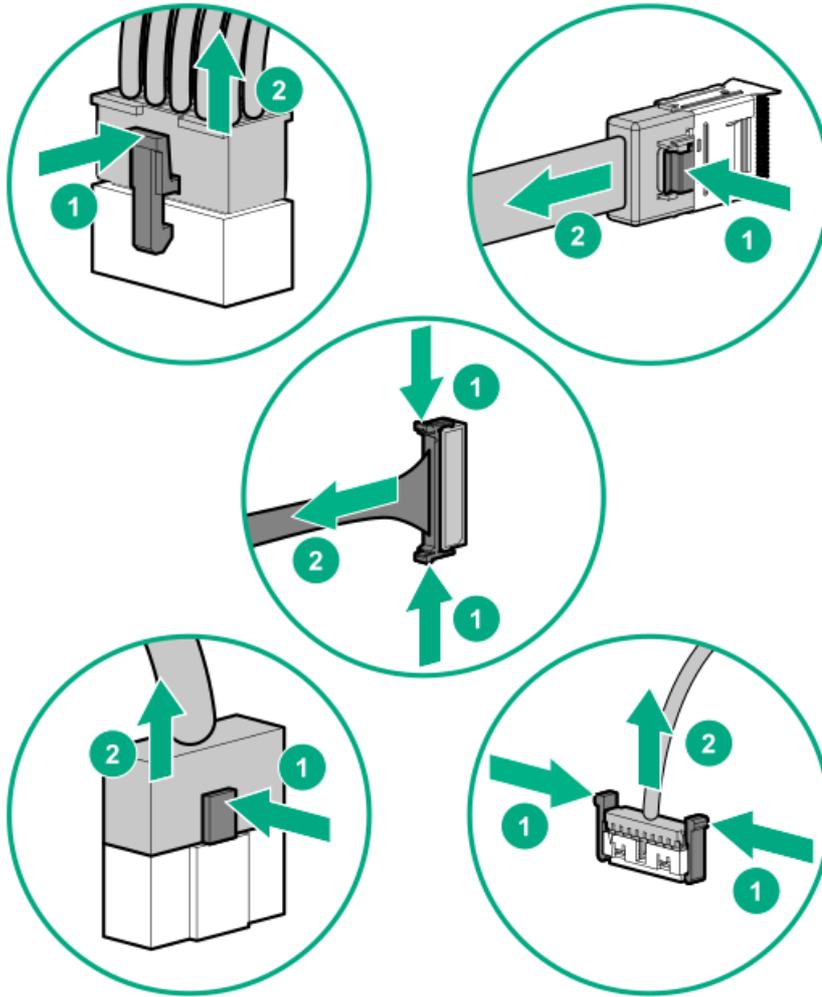

- Remove cables that are no longer being used. Retaining them inside the system can restrict airflow. If you intend to use the removed cables later, label and store them for future use.

## Front I/O cabling




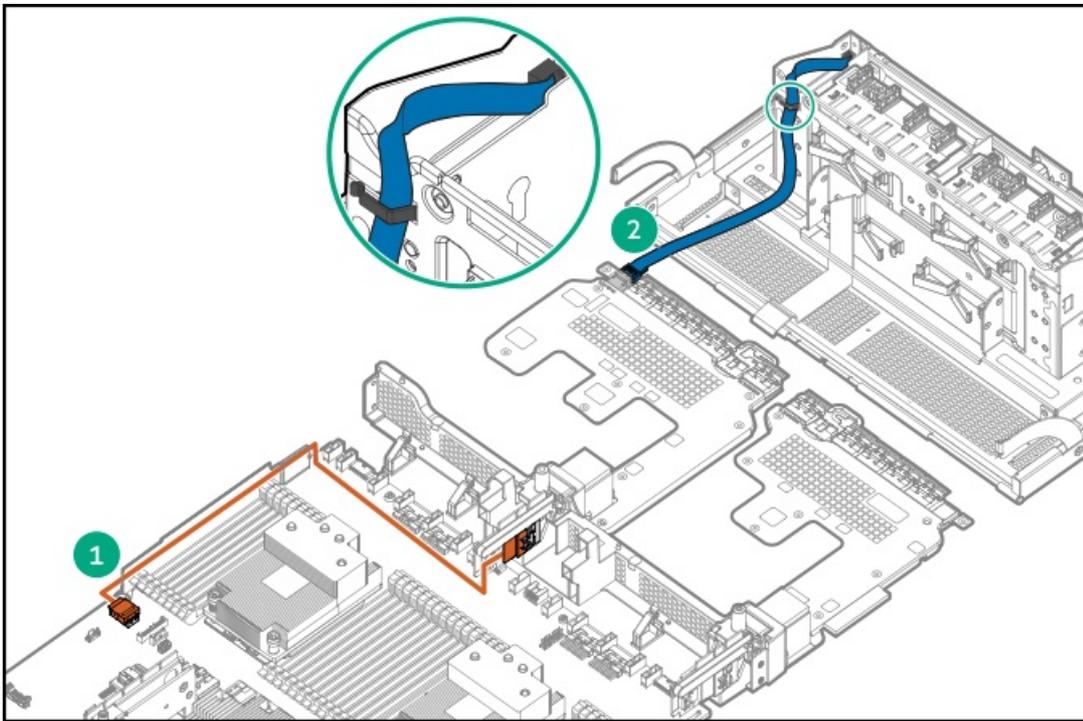

Item	Description
1	Front I/O System Board to System Board Storage Interposer 1 cabling
2	Front I/O Front Panel Pass-Thru Board 1 to Front Panel cabling


The front I/O cabling for system board storage interposer 1 and front panel pass-thru board 1 are the same.

## Display port cabling

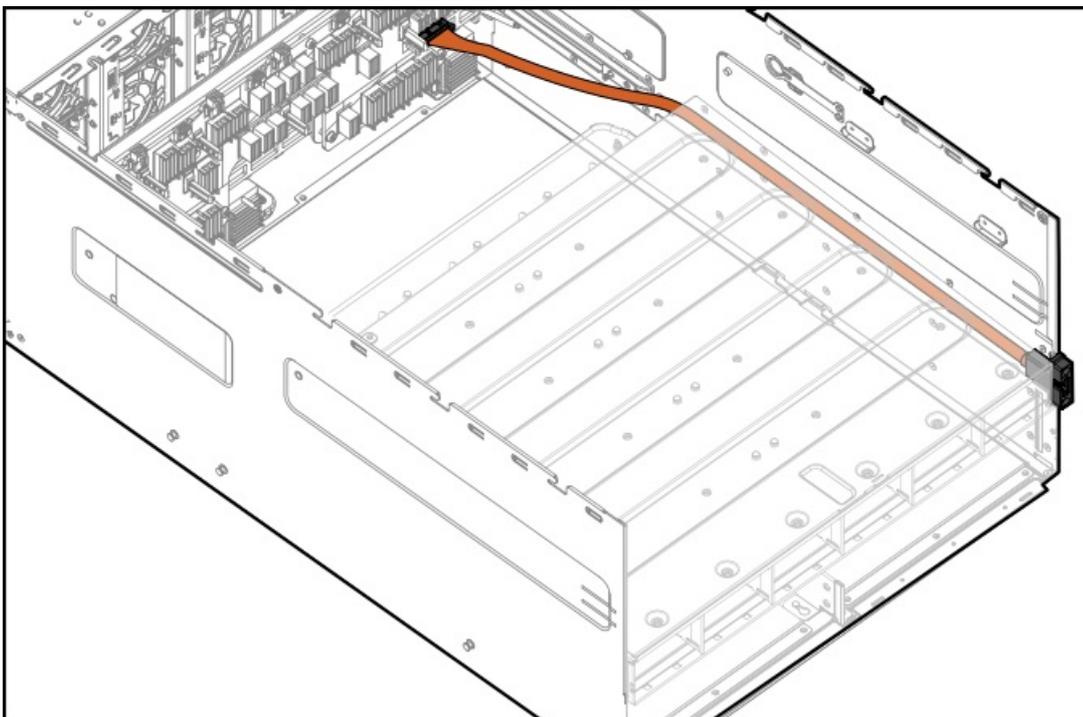

Uses the Midplane to Chassis Rear Wall Display Port cable.


## Rear serial port interface cabling

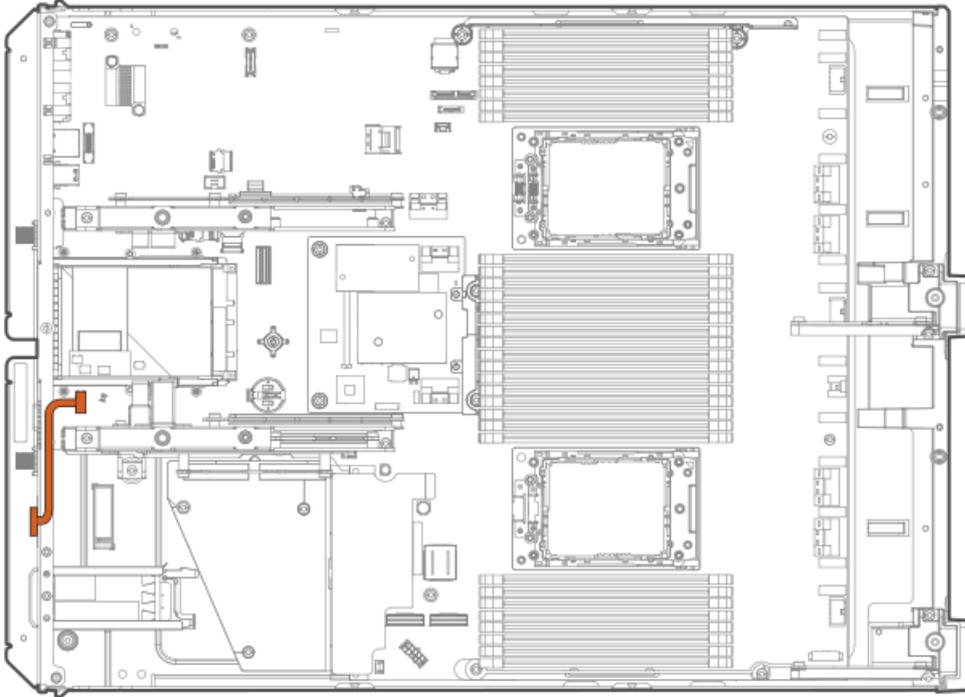

Uses the Rear Serial Port cable.


## Fan cabling



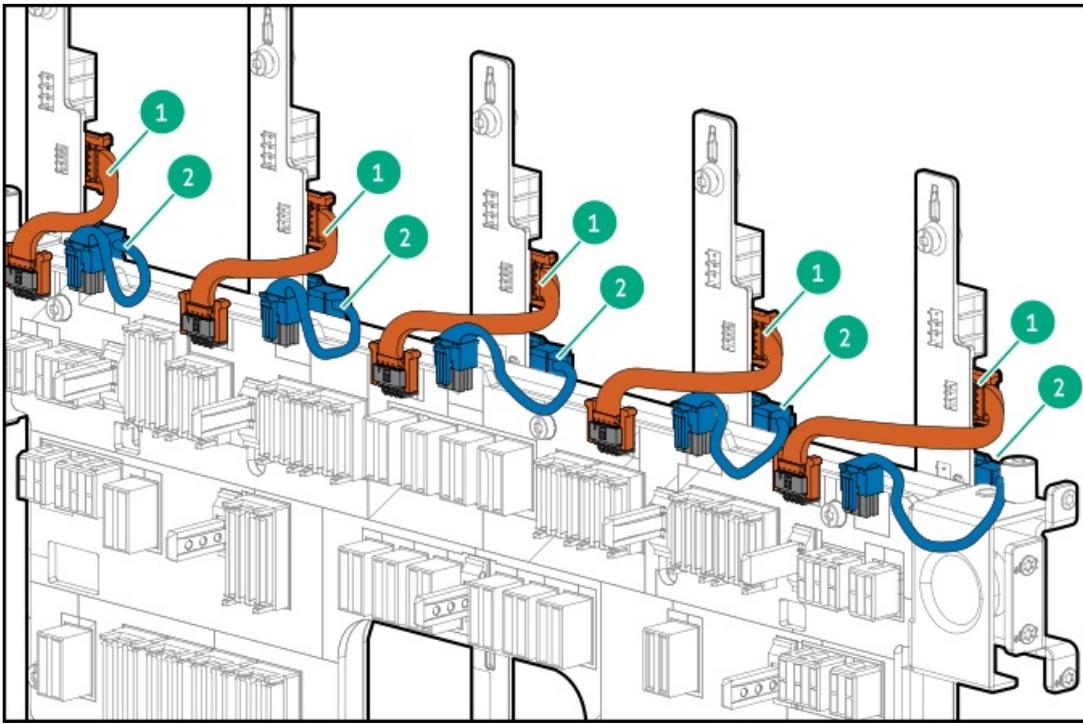

Item	Description
1	Fan Midplane to Fan Control cabling
2	Fan Midplane to Fan Power cabling

### PCIe pass-thru board cabling

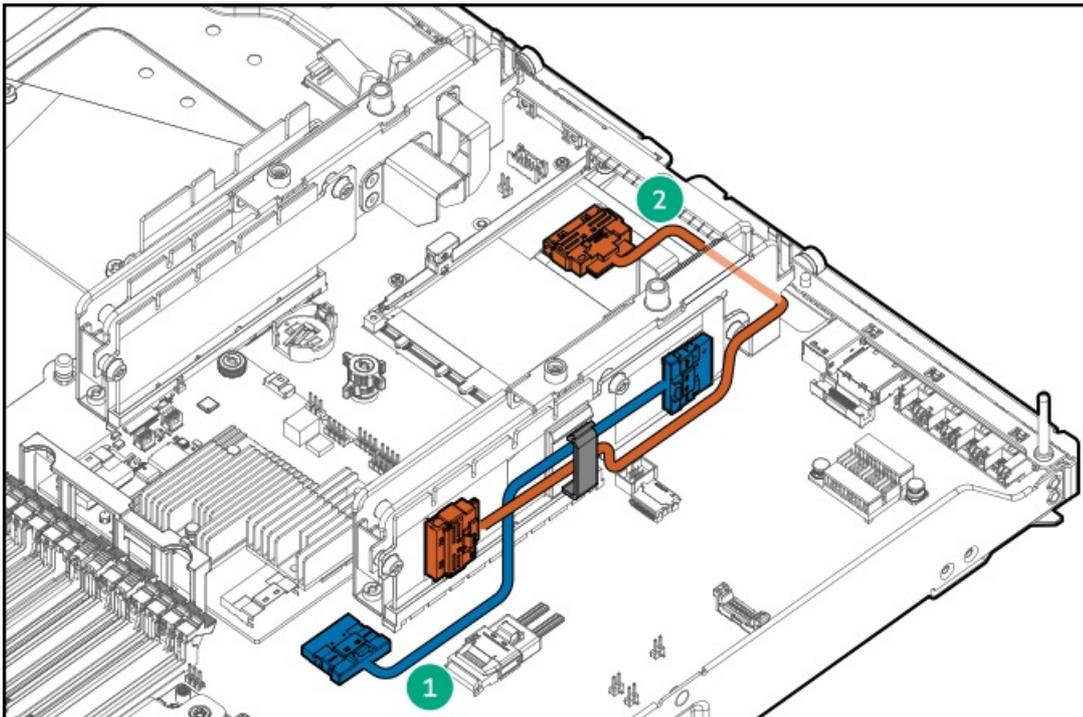


Item	Description
------	-------------

Item	Description
1	PCIe x32 Riser to System Board Slim SAS cable for PCIe Pass-Thru Board cabling
2	PCIe Pass-Thru Board to PCIe x32 Riser cabling

## Drive-controller-backplane configuration cabling


### Gen10 Plus 8 SFF SAS/SATA Standard backplane cabling

#### 8 embedded SATA configuration cabling

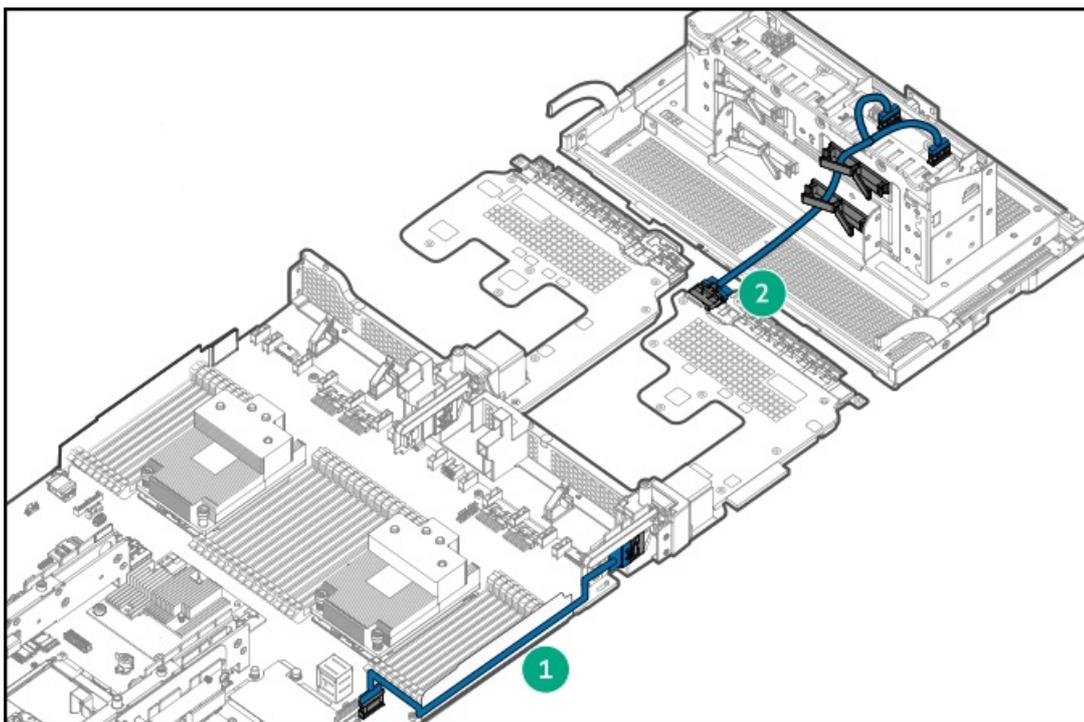


Item	Description
1	Embedded 8 port SATA System Board Storage Interposer 2 cabling
2	Front Panel Pass-Thru Board to SAS/SATA Standard Backplane Slim SAS 12G cabling

## 8 SAS/SATA with E208i-a/E408i-a controller configuration cabling

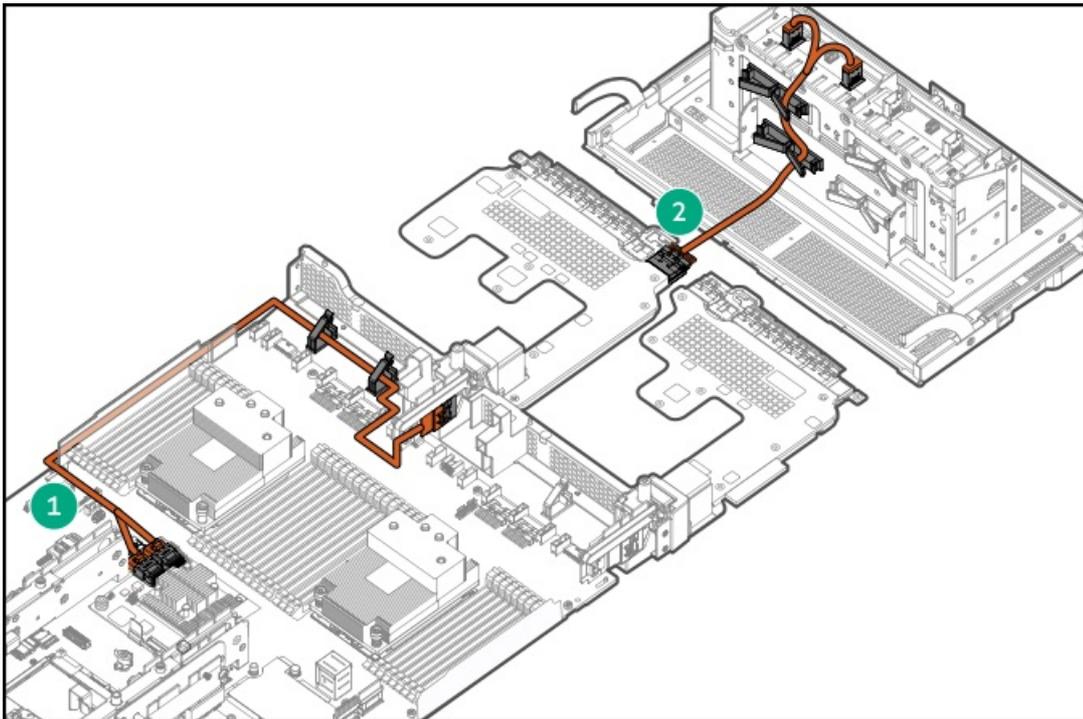

Item	Description
1	Controller to System Board Storage Interposer 1 Slim SAS 12G cabling
2	Front Panel Pass-Thru Board to SAS/SATA Standard Backplane Slim SAS 12G cabling


## 8 + 8 SAS/SATA with P816i-a controller configuration cabling

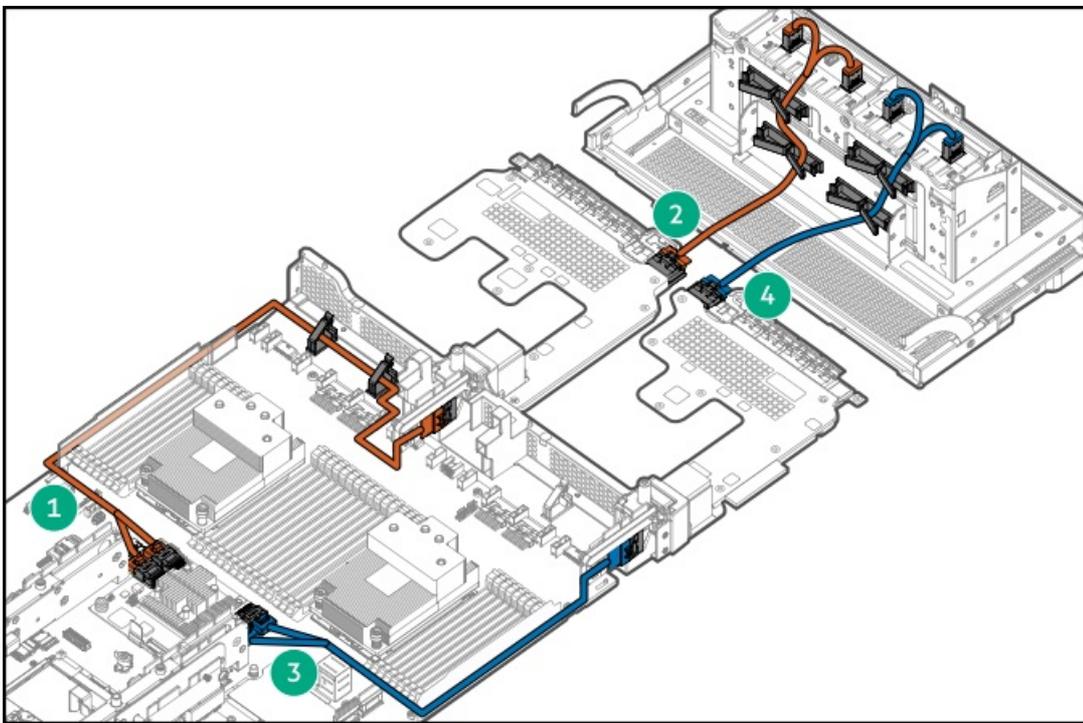

Item	Description
1	Controller to System Board Storage Interposer 1 Slim SAS 12G cabling
2	Front Panel Pass-Thru Board 1 to SAS/SATA Standard Backplane Slim SAS 12G cabling
3	Controller to System Board Storage Interposer 2 Slim SAS 12G cabling
4	Front Panel Pass-Thru Board 2 to SAS/SATA Standard Backplane Slim SAS 12G cabling

## Gen10 Plus 8 SFF NVMe U.3 Premium backplane cabling


7 4xNVMe with embedded x32 PCIe Gen4 on system board with E208i-a or P408i-a controller configuration cabling

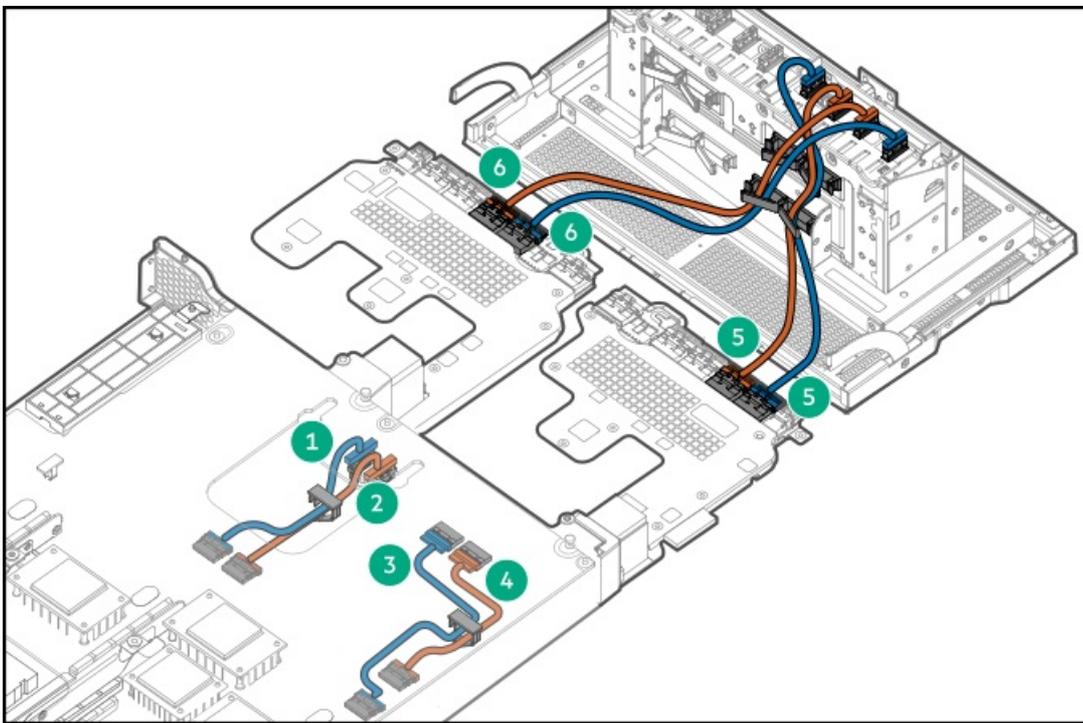

Item	Description
1	PCIe Switch to PCIe Switch Board Slim SAS 24G cabling for switch 1
2	PCIe Switch to PCIe Switch Board Slim SAS 24G cabling for switch 2
3	PCIe Switch to PCIe Switch Board Slim SAS 24G cabling for switch 4
4	PCIe Switch to PCIe Switch Board Slim SAS 24G cabling for switch 3
5	Front Panel Pass-Thru Board to NVMe U.3 Premium Backplane Slim SAS 24G Short cabling
6	Front Panel Pass-Thru Board to NVMe U.3 Premium Backplane Slim SAS 24G Long cabling


Drive bay 8 is not supported for drive installation and no drive must be installed in it.

## 2 embedded SATA + 6 4xNVMe with embedded x32 PCIe Gen4 from switch output on PCIe switch board configuration cabling

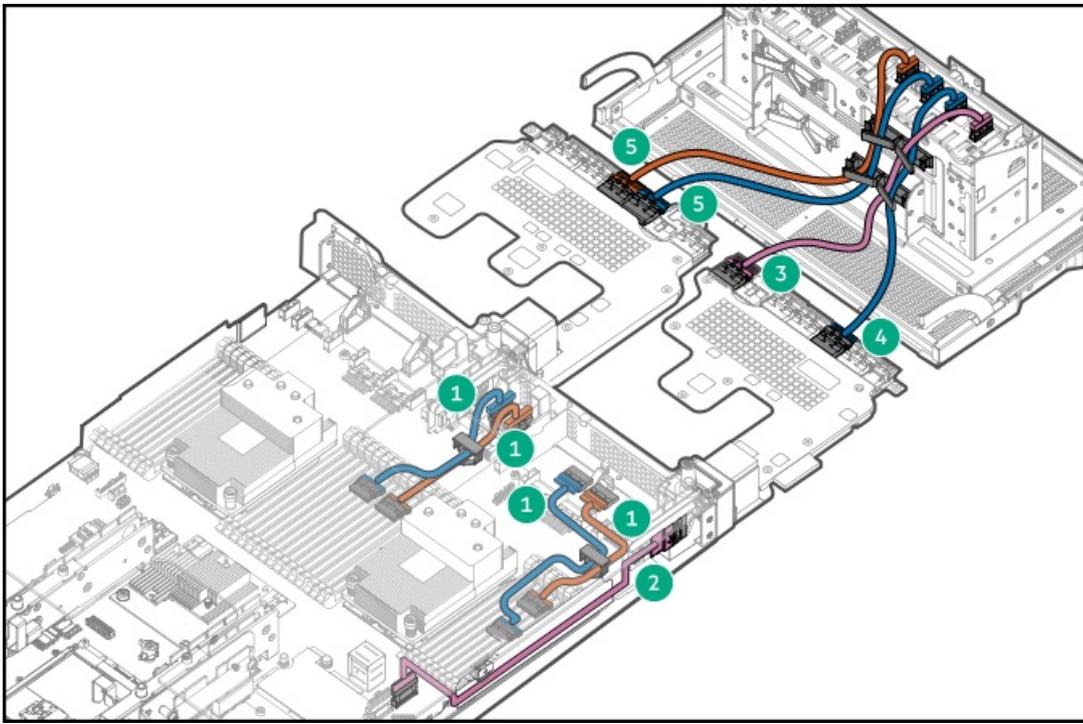


Item	Description
1	PCIe Switch to PCIe Switch Board Slim SAS 24G cabling
2	System Board to System Board Storage Interposer 2 Slim SAS 24G cabling
3	Front Panel Pass-Thru Board to U.3 Premium Backplane SAS/SATA NVMe cabling
4	Front Panel Pass-Thru Board to NVMe U.3 Premium Backplane Slim SAS 24G Short cabling
5	Front Panel Pass-Thru Board to NVMe U.3 Premium Backplane drive box 1 Slim SAS 24G Long cabling

**2 SAS/SATA + 6 4xNVMe with embedded x32 PCIe Gen4 from switch output on PCIe switch board with E208i-a or P408i-a controller configuration cabling**

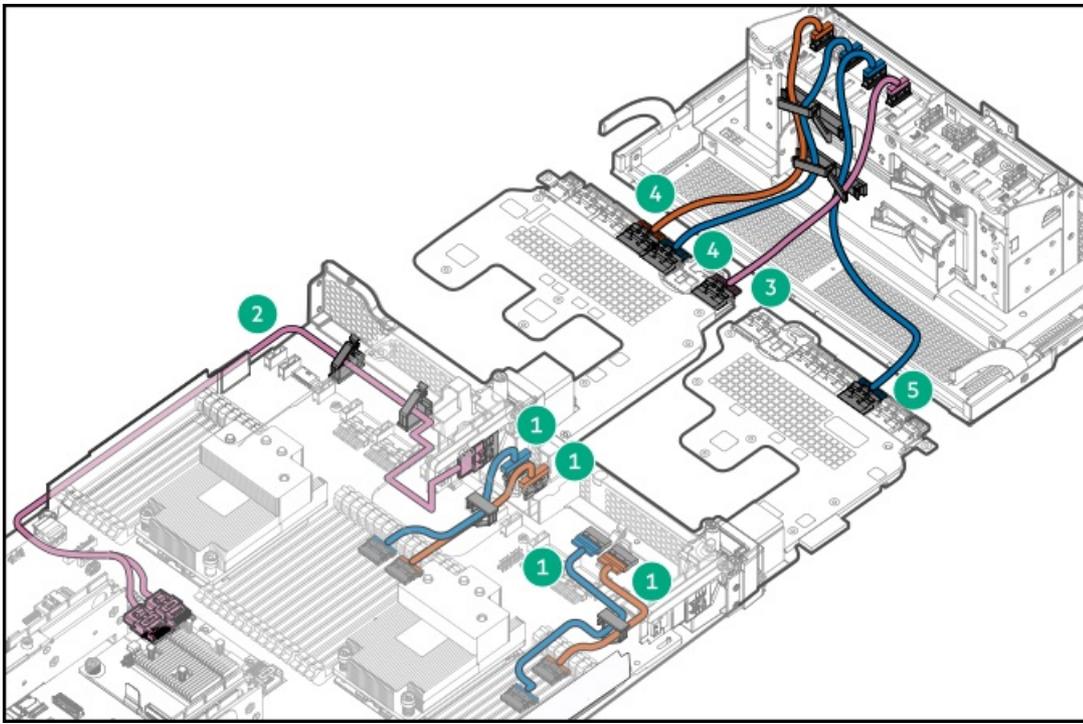


Item	Description
1	PCIe Switch to PCIe Switch Board Slim SAS 24G cabling
2	Controller to System Board Storage Interposer 1 Slim SAS 24G cabling
3	Front Panel Pass-Thru Board to U.3 Premium Backplane SAS/SATA NVMe cabling
4	Front Panel Pass-Thru Board to NVMe U.3 Premium Backplane Slim SAS 24G Long cabling
5	Front Panel Pass-Thru Board to NVMe U.3 Premium Backplane Slim SAS 24G Short cabling

## HPE Smart Storage Battery cabling

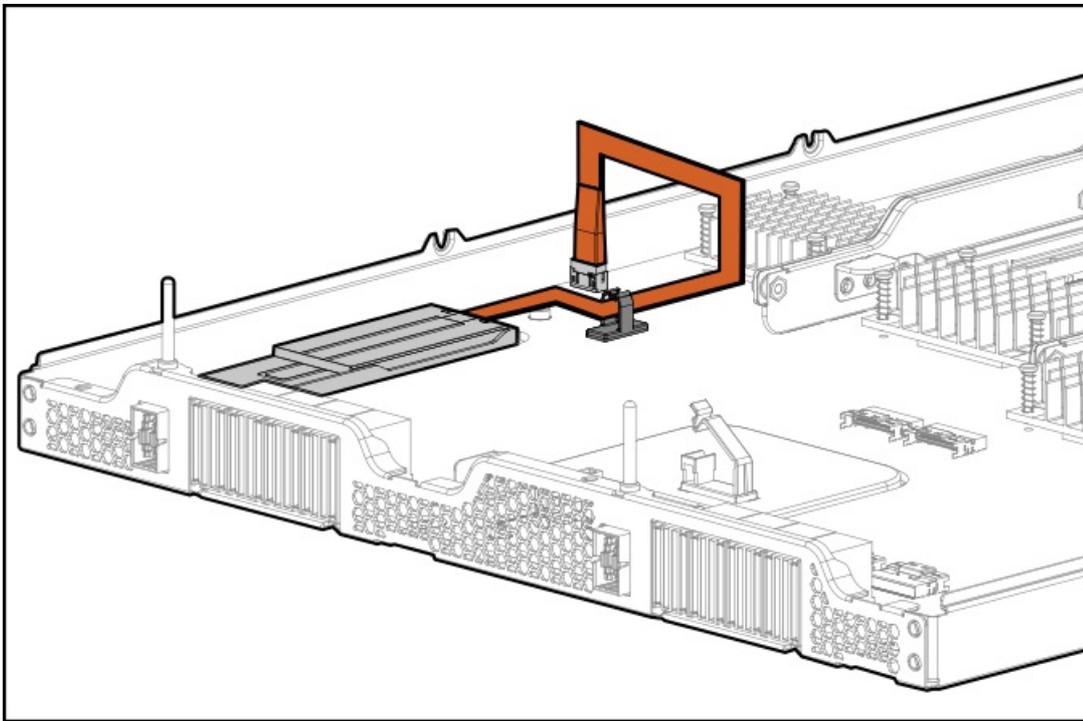


## Drive backplane power cabling

### Gen10 Plus 8 SFF SAS/SATA Standard backplane power cabling

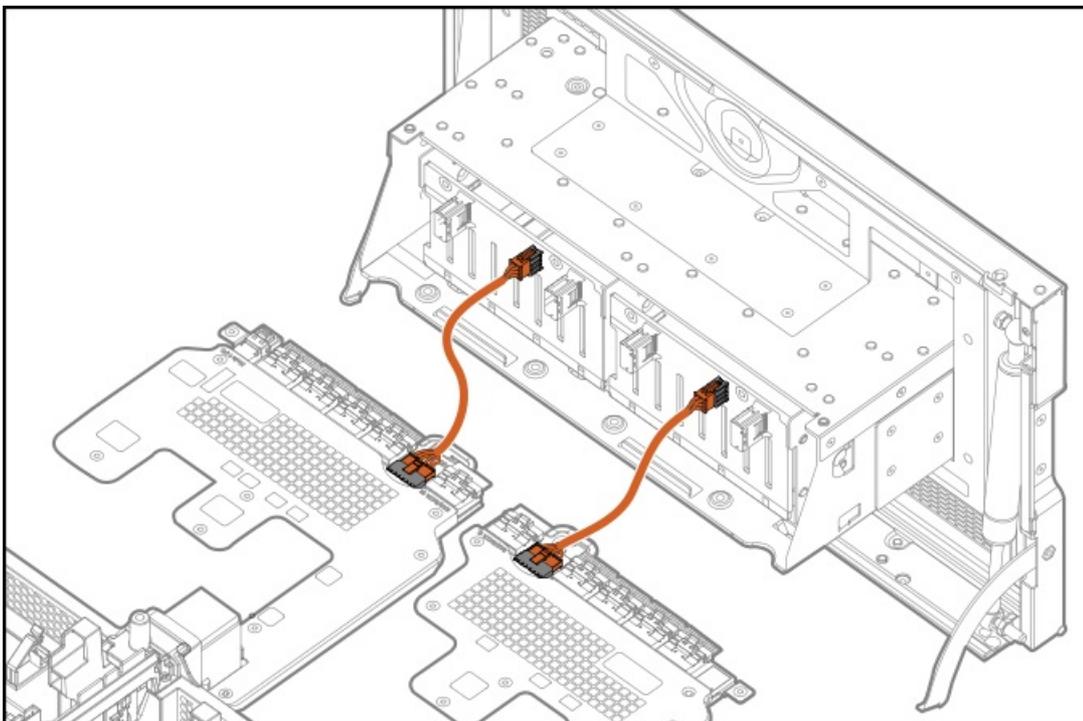

Uses the Front Panel Pass-Thru Board to Drive Backplane Power cable.


## Gen10 Plus 8 SFF NVMe U.3 Premium backplane power cabling

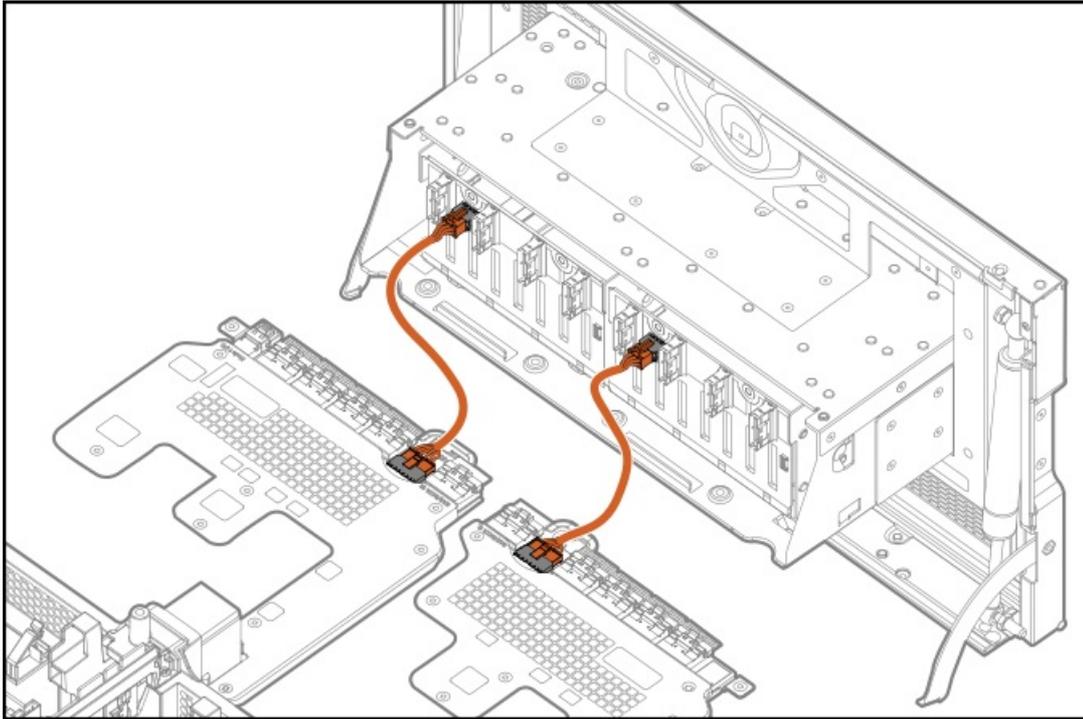

Uses the Front Panel Pass-Thru Board to Drive Backplane Power cable


## GPU power cabling

### 10 double-width NVIDIA A100 PCIe GPU to PCIe GPU board power cabling

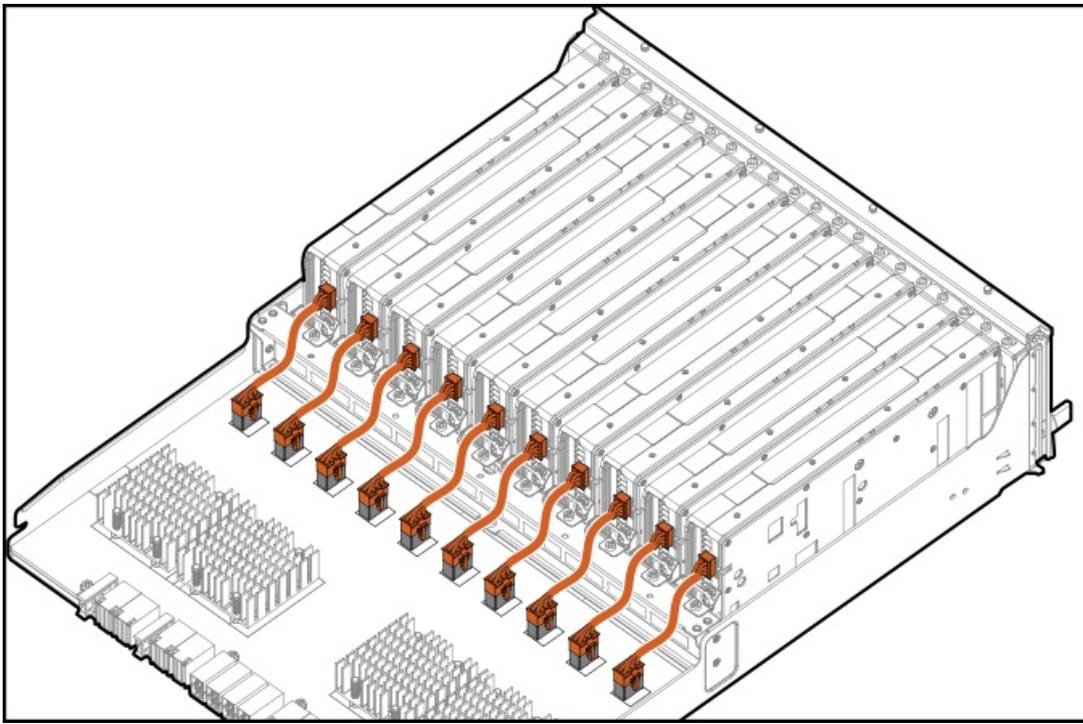

One GPU requires one Processor 8 pin to Processor 8 pin Power cable.

### 10 double-width AMD MI100 PCIe GPU to PCIe GPU board power cabling

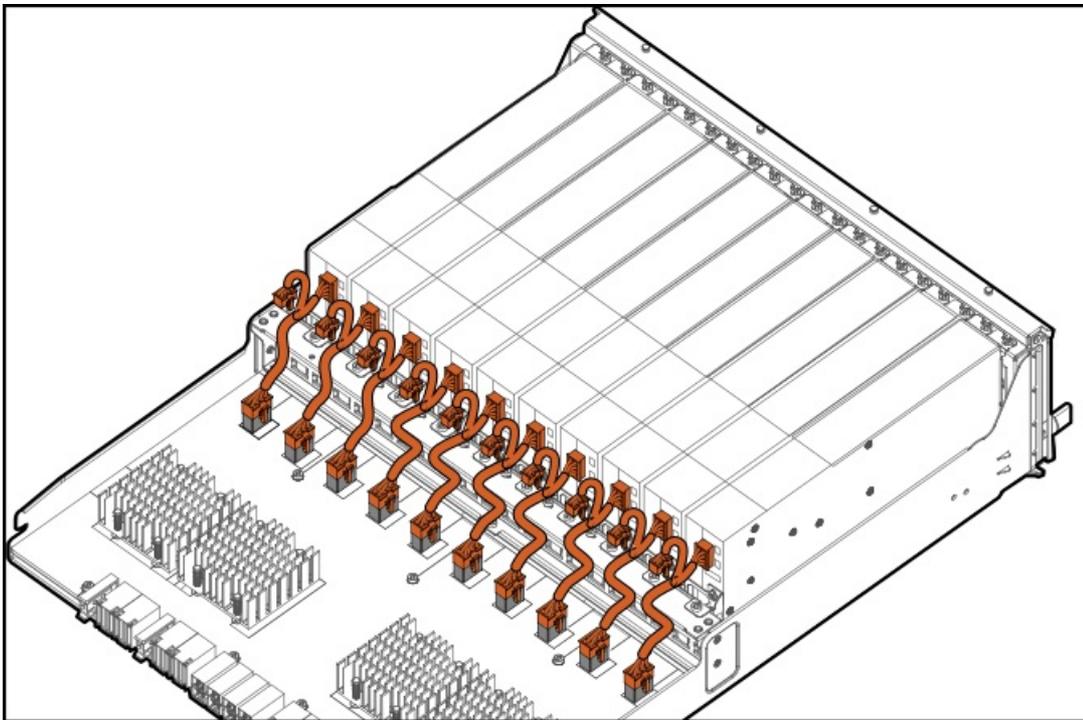


One GPU requires one Processor 8 pin to x2 PCIe 8 pin Power cable.


### System block diagrams



## SXM GPU configuration

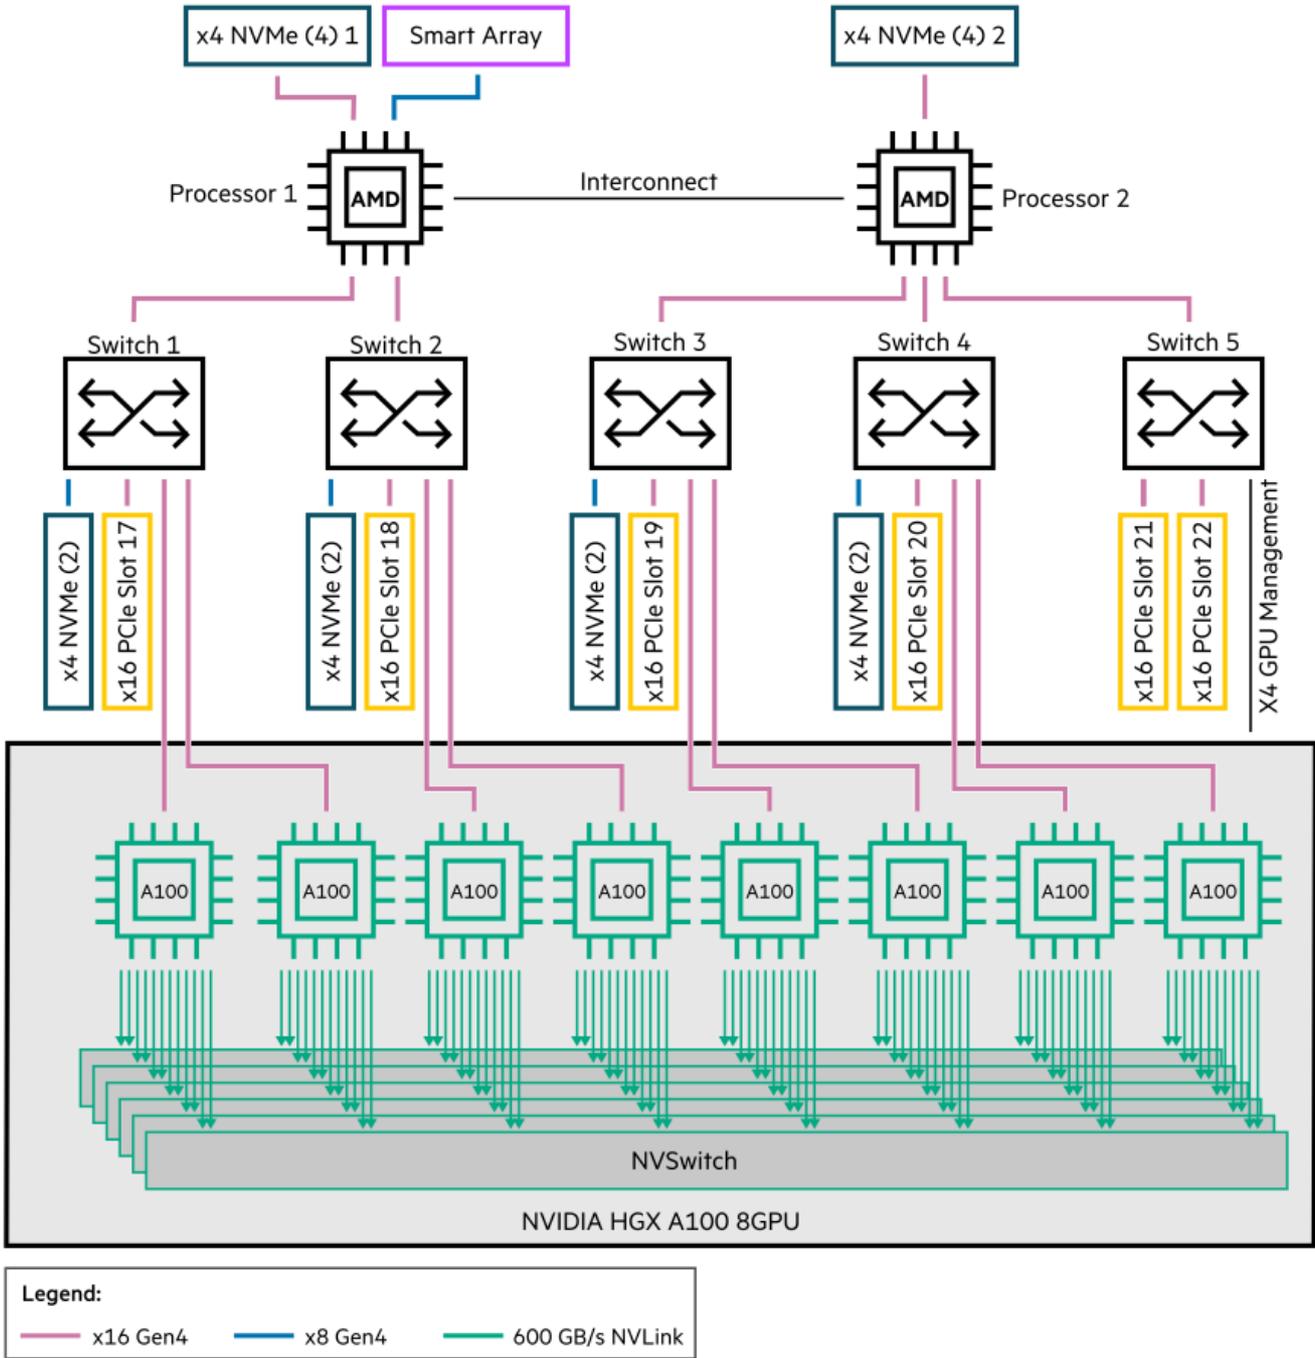

## PCIe GPU configuration

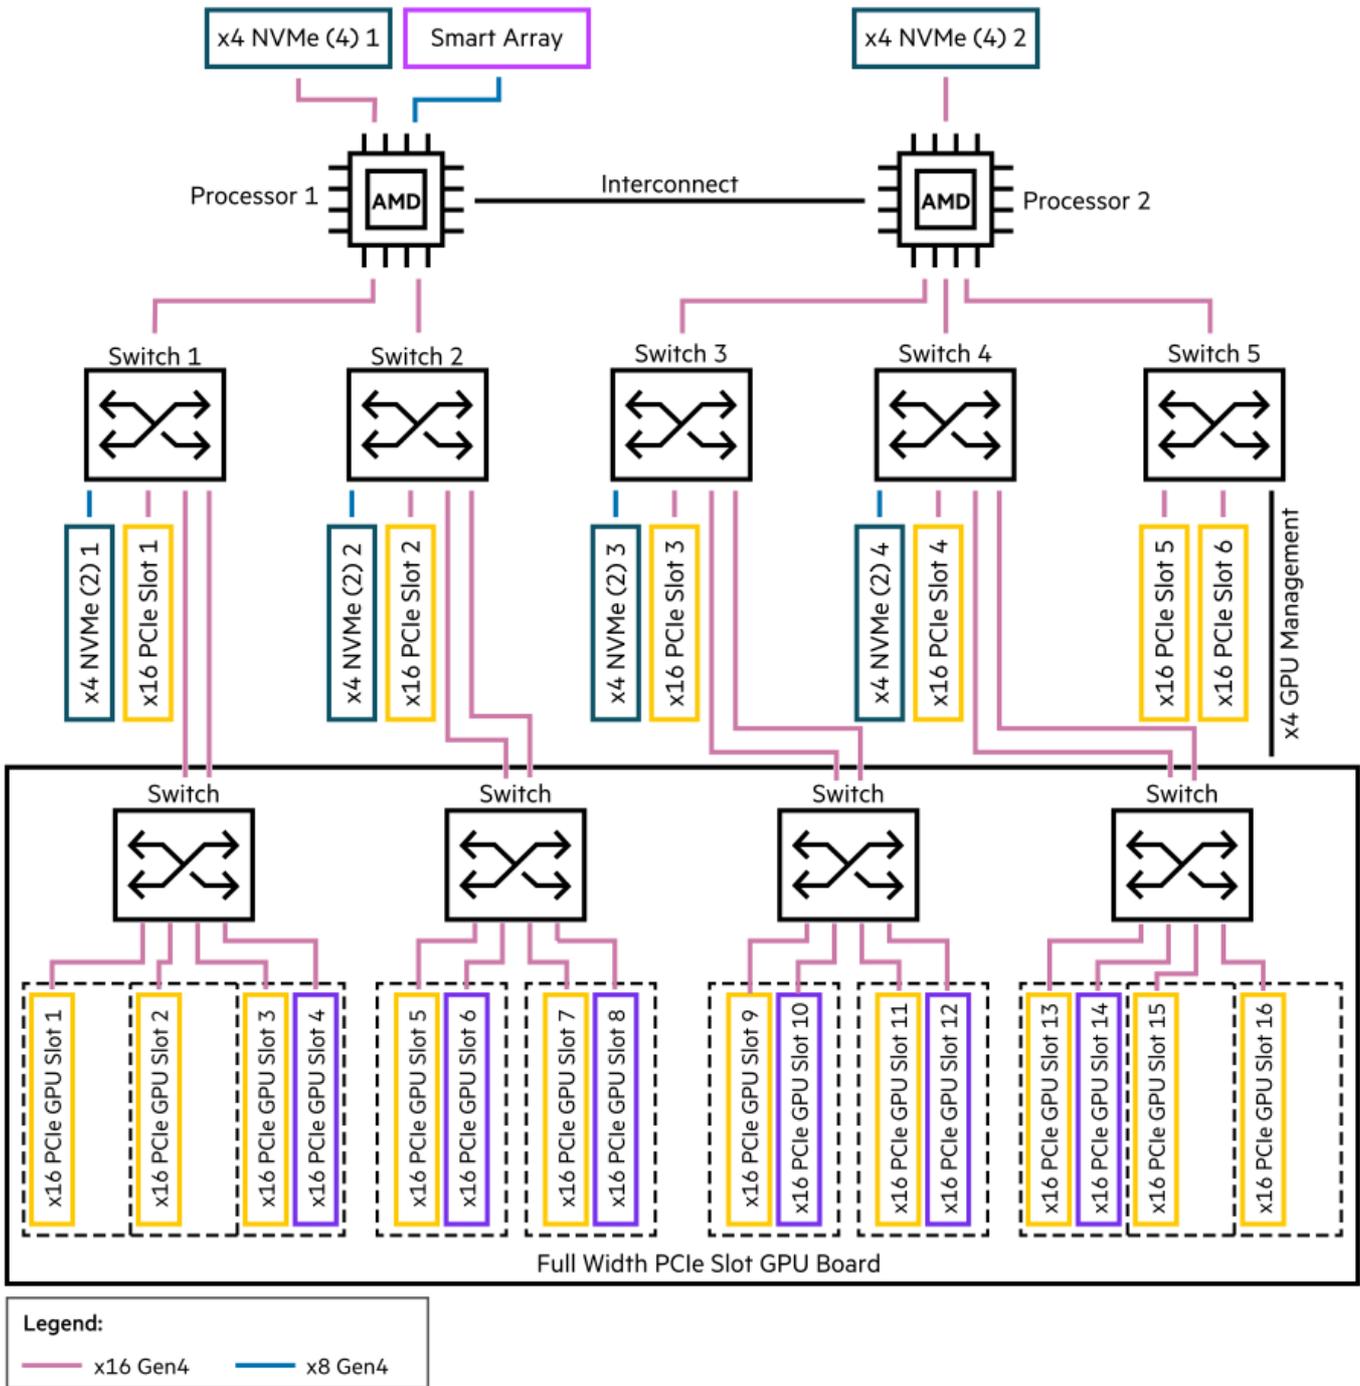

## Software and configuration utilities

### Server mode

The software and configuration utilities presented in this section operate in online mode, offline mode, or in both modes.

Software or configuration utility

Server mode

Software or configuration utility	Server mode
<a href="#">Active Health System</a>	Online and Offline
<a href="#">HPE iLO 5</a>	Online and Offline
<a href="#">HPE Smart Storage Administrator</a>	Online and Offline
<a href="#">iLO RESTful API</a>	Online and Offline
<a href="#">Intelligent Provisioning</a>	Online and Offline
<a href="#">Scripting Toolkit for Windows and Linux</a>	Online
<a href="#">Service Pack for ProLiant</a>	Online and Offline
<a href="#">Smart Update Manager</a>	Online and Offline
<a href="#">UEFI System Utilities</a>	Offline

## Product QuickSpecs

For more information about product features, specifications, options, configurations, and compatibility, see the product QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/qs>).

## Active Health System Viewer

Active Health System Viewer (AHSV) is an online tool used to read, diagnose, and resolve server issues quickly using AHS uploaded data. AHSV provides Hewlett Packard Enterprise recommended repair actions based on experience and best practices. AHSV provides the ability to:

- Read server configuration information
- View Driver/Firmware inventory
- Review Event Logs
- Respond to Fault Detection Analytics alerts
- Open new and update existing support cases

## Active Health System

The Active Health System monitors and records changes in the server hardware and system configuration.

The Active Health System provides:

- Continuous health monitoring of over 1600 system parameters
- Logging of all configuration changes
- Consolidated health and service alerts with precise time stamps
- Agentless monitoring that does not affect application performance

For more information about the Active Health System, see the iLO user guide at the following website:

## Active Health System data collection

The Active Health System does not collect information about your operations, finances, customers, employees, or partners.

Examples of information that is collected:

- Server model and serial number
- Processor model and speed
- Storage capacity and speed
- Memory capacity and speed
- Firmware/BIOS and driver versions and settings

The Active Health System does not parse or change OS data from third-party error event log activities (for example, content created or passed through the OS).

## Active Health System Log

The data collected by the Active Health System is stored in the Active Health System Log. The data is logged securely, isolated from the operating system, and separate from customer data. Host resources are not consumed in the collection and logging of Active Health System data.

When the Active Health System Log is full, new data overwrites the oldest data in the log.

It takes less than 5 minutes to download the Active Health System Log and send it to a support professional to help you resolve an issue.

When you download and send Active Health System data to Hewlett Packard Enterprise, you agree to have the data used for analysis, technical resolution, and quality improvements. The data that is collected is managed according to the privacy statement, available at <https://www.hpe.com/info/privacy>.

You can also upload the log to the Active Health System Viewer. For more information, see the Active Health System Viewer documentation at the following website: <https://www.hpe.com/support/ahsv-docs>.

## HPE iLO 5

iLO 5 is a remote server management processor embedded on the system boards of HPE ProLiant servers and Synergy compute modules. iLO enables the monitoring and controlling of servers from remote locations. iLO management is a powerful tool that provides multiple ways to configure, update, monitor, and repair servers remotely. iLO (Standard) comes preconfigured on Hewlett Packard Enterprise servers without an additional cost or license.

Features that enhance server administrator productivity and additional new security features are licensed. For more information, see the iLO licensing guide at the following website: <https://www.hpe.com/support/ilo-docs>.

For more information about iLO, see the iLO user guide at the following website: <https://www.hpe.com/support/ilo-docs>.

## iLO Federation

iLO Federation enables you to manage multiple servers from one system using the iLO web interface.

When configured for iLO Federation, iLO uses multicast discovery and peer-to-peer communication to enable communication between the systems in iLO Federation groups.

When you navigate to one of the iLO Federation pages, a data request is sent from the iLO system running the web interface to its peers, and from those peers to other peers until all data for the selected iLO Federation group is retrieved.

iLO supports the following features:

- Group health status—View server health and model information.
- Group virtual media—Connect URL-based media for access by a group of servers.
- Group power control—Manage the power status of a group of servers.
- Group power capping—Set dynamic power caps for a group of servers.
- Group firmware update—Update the firmware of a group of servers.
- Group license installation—Enter a license key to activate iLO licensed features on a group of servers.
- Group configuration—Add iLO Federation group memberships for multiple iLO systems.

Any user can view information on iLO Federation pages, but a license is required for using the following features: Group virtual media, Group power control, Group power capping, Group configuration, and Group firmware update.

For more information about iLO Federation, see the iLO user guide at the following website: <https://www.hpe.com/support/ilo-docs>.

## iLO Service Port

The Service Port is a USB port with the label **iLO** on supported servers and compute modules.

To find out if your server or compute module supports this feature, see the server specifications document at the following website: <https://www.hpe.com/info/qs>.

When you have physical access to a server, you can use the Service Port to do the following:

- Download the Active Health System Log to a supported USB flash drive.  
When you use this feature, the connected USB flash drive is not accessible by the host operating system.
- Connect a client (such as a laptop) with a supported USB to Ethernet adapter to access the following:
  - iLO web interface
  - Remote console
  - iLO RESTful API
  - CLI

Hewlett Packard Enterprise recommends the HPE USB to Ethernet Adapter (part number Q7Y55A).

Some servers, such as the XL170r, require an adapter to connect a USB to Ethernet adapter to the iLO Service Port.

Hewlett Packard Enterprise recommends the HPE Micro USB to USB Adapter (part number 789904-B21).

When you use the iLO Service Port:

- Actions are logged in the iLO event log.
- The server UID flashes to indicate the Service Port status.  
You can also retrieve the Service Port status by using a REST client and the iLO RESTful API.
- You cannot use the Service Port to boot any device within the server, or the server itself.
- You cannot access the server by connecting to the Service Port.
- You cannot access the connected device from the server.

For more information about the iLO Service Port, see the iLO user guide at the following website: <https://www.hpe.com/support/ilo-docs>.

## iLO RESTful API

iLO includes the iLO RESTful API, which is Redfish API conformant. The iLO RESTful API is a management interface that server management tools can use to perform configuration, inventory, and monitoring tasks by sending basic HTTPS operations (GET, PUT, POST, DELETE, and PATCH) to the iLO web server.

To learn more about the iLO RESTful API, see the Hewlett Packard Enterprise website (<https://www.hpe.com/support/restfulinterface/docs>).

For specific information about automating tasks using the iLO RESTful API, see libraries and sample code at <https://www.hpe.com/info/redfish>.



For more information, watch the [Redfish & How it works with HPE Server Management](#) video.

## RESTful Interface Tool

The RESTful Interface Tool (iLOREST) is a scripting tool that allows you to automate HPE server management tasks. It provides a set of simplified commands that take advantage of the iLO RESTful API. You can install the tool on your computer for remote use or install it locally on a server with a Windows or Linux Operating System. The RESTful Interface Tool offers an interactive mode, a scriptable mode, and a file-based mode similar to CONREP to help decrease automation times.

For more information, see the following website: <https://www.hpe.com/info/resttool>.

## iLO Amplifier Pack

iLO Amplifier Pack is an advanced server inventory, firmware and driver update solution that enables rapid discovery, detailed inventory reporting, firmware, and driver updates by leveraging iLO advanced functionality. iLO Amplifier Pack performs rapid server discovery and inventory for thousands of supported servers for the purpose of updating firmware and drivers at scale.

For more information about iLO Amplifier Pack, see the iLO Amplifier Pack User Guide at the following website: <https://www.hpe.com/support/ilo-ap-ug-en>.

## Integrated Management Log

The IML records hundreds of events and stores them in an easy-to-view form. The IML timestamps each event with one-minute granularity.

You can view recorded events in the IML in several ways, including the following:

- From within HPE SIM
- From within the UEFI System Utilities
- From within the Embedded UEFI shell
- From within the iLO web interface

## Intelligent Provisioning

Intelligent Provisioning is a single-server deployment tool embedded in ProLiant servers and HPE Synergy compute modules. Intelligent Provisioning simplifies server setup, providing a reliable and consistent way to deploy servers.

Intelligent Provisioning 3.30 and later includes HPE Rapid Setup Software. When you launch F10 mode from the POST screen, you are prompted to select whether you want to enter the Intelligent Provisioning or HPE Rapid Setup Software mode.



**NOTE:**

After you have selected a mode, you must re provision the server to change the mode that launches when you boot to F10.

Intelligent Provisioning prepares the system for installing original, licensed vendor media and Hewlett Packard Enterprise-branded versions of OS software. Intelligent Provisioning also prepares the system to integrate optimized server support software from the Service Pack for ProLiant (SPP). SPP is a comprehensive systems software and firmware solution for ProLiant servers, server blades, their enclosures, and HPE Synergy compute modules. These components are preloaded with a basic set of firmware and OS components that are installed along with Intelligent Provisioning.

**IMPORTANT:**

HPE ProLiant DX/XL servers do not support operating system installation with Intelligent Provisioning, but they do support the maintenance features. For more information, see "Performing Maintenance" in the Intelligent Provisioning user guide and online help.

After the server is running, you can update the firmware to install additional components. You can also update any components that have been outdated since the server was manufactured.

To access Intelligent Provisioning:

- Press F10 from the POST screen and enter either Intelligent Provisioning or HPE Rapid Setup Software.
- From the iLO web interface using Always On. Always On allows you to access Intelligent Provisioning without rebooting your server.

## Intelligent Provisioning operation

**NOTE:**

Intelligent Provisioning 3.40 and later requires iLO firmware version 2.10.

Intelligent Provisioning includes the following components:

- Critical boot drivers
- Active Health System (AHS)
- Erase Utility
- Deployment Settings

**IMPORTANT:**

- Although your server is preloaded with firmware and drivers, Hewlett Packard Enterprise recommends updating the firmware upon initial setup. Also, downloading and updating the latest version of Intelligent Provisioning ensures the latest supported features are available.
- For ProLiant servers, firmware is updated using the Intelligent Provisioning Firmware Update utility.
- Do not update firmware if the version you are currently running is required for compatibility.

**NOTE:**

Intelligent Provisioning does not function within multihomed configurations. A multihomed host is one that is connected to two or more networks or has two or more IP addresses.

Intelligent Provisioning provides installation help for the following operating systems:

- Microsoft Windows Server
- Red Hat Enterprise Linux
- SUSE Linux Enterprise Server
- VMware ESXi/vSphere Custom Image
- ClearOS

Not all versions of an OS are supported. For information about specific versions of a supported operating system, see the OS Support Matrix on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/ossupport>).

## Management security

HPE ProLiant Gen10, HPE ProLiant Gen10 Plus, and HPE Apollo servers are built with some of the industry's most advanced security capabilities, out of the box, with a foundation of secure embedded management applications and firmware. The management security provided by HPE embedded management products enables secure support of modern workloads, protecting your components from unauthorized access and unapproved use. The range of embedded management and optional software and firmware available with the iLO Advanced license provides security features that help ensure protection, detection, and recovery from advanced cyber attacks. For more information, see the HPE Gen10 and Gen10 Plus Security Reference Guide on the Hewlett Packard Enterprise Information Library at <https://www.hpe.com/support/gen10-security-ref-en>.

## Scripting Toolkit for Windows and Linux

The STK for Windows and Linux is a server deployment product that delivers an unattended automated installation for high-volume server deployments. The STK is designed to support ProLiant servers. The toolkit includes a modular set of utilities and important documentation that describes how to apply these tools to build an automated server deployment process.

The STK provides a flexible way to create standard server configuration scripts. These scripts are used to automate many of the manual steps in the server configuration process. This automated server configuration process cuts time from each deployment, making it possible to scale rapid, high-volume server deployments.

For more information or to download the STK, see the [Hewlett Packard Enterprise website](#).

## UEFI System Utilities

The UEFI System Utilities is embedded in the system ROM. Its features enable you to perform a wide range of configuration activities, including:

- Configuring system devices and installed options.
- Enabling and disabling system features.
- Displaying system information.
- Selecting the primary boot controller or partition.
- Configuring memory options.
- Launching other preboot environments.

HPE servers with UEFI can provide:

- Support for boot partitions larger than 2.2 TB. Such configurations could previously only be used for boot drives when using RAID solutions.
- Secure Boot that enables the system firmware, option card firmware, operating systems, and software collaborate to enhance platform security.
- UEFI Graphical User Interface (GUI)
- An Embedded UEFI Shell that provides a preboot environment for running scripts and tools.
- Boot support for option cards that only support a UEFI option ROM.

## Secure Boot

Secure Boot is a server security feature that is implemented in the BIOS and does not require special hardware. Secure Boot ensures that each component launched during the boot process is digitally signed and that the signature is validated against a set of trusted certificates embedded in the UEFI BIOS. Secure Boot validates the software identity of the following components in the boot process:

- UEFI drivers loaded from PCIe cards
- UEFI drivers loaded from mass storage devices
- Preboot UEFI Shell applications
- OS UEFI boot loaders

When Secure Boot is enabled:

- Firmware components and operating systems with boot loaders must have an appropriate digital signature to execute during the boot process.
- Operating systems must support Secure Boot and have an EFI boot loader signed with one of the authorized keys to boot. For more information about supported operating systems, see <https://www.hpe.com/servers/ossupport>.

You can customize the certificates embedded in the UEFI BIOS by adding or removing your own certificates, either from a management console directly attached to the server, or by remotely connecting to the server using the iLO Remote Console.

You can configure Secure Boot:

- Using the System Utilities options described in the following sections.
- Using the iLO RESTful API to clear and restore certificates. For more information, see the Hewlett Packard Enterprise website (<https://www.hpe.com/info/redfish>).
- Using the `secboot` command in the Embedded UEFI Shell to display Secure Boot databases, keys, and security reports.

## Launching the Embedded UEFI Shell

Use the Embedded UEFI Shell option to launch the Embedded UEFI Shell. The Embedded UEFI Shell is a preboot command-line environment for scripting and running UEFI applications, including UEFI boot loaders. The Shell also provides CLI-based commands you can use to obtain system information, and to configure and update the system BIOS.

### Prerequisites

- Embedded UEFI Shell is set to Enabled.

### Procedure

1. From the System Utilities screen, select Embedded Applications > Embedded UEFI Shell.

The Embedded UEFI Shell screen appears.

2. Press any key to acknowledge that you are physically present.

This step ensures that certain features, such as disabling Secure Boot or managing the Secure Boot certificates using third-party UEFI tools, are not restricted.

3. If an administrator password is set, enter it at the prompt and press Enter.

The `Shell>` prompt appears.

4. Enter the commands required to complete your task.
5. Enter the `exit` command to exit the Shell.

## HPE Smart Storage Administrator

HPE SSA is the main tool for configuring arrays on HPE Smart Array SR controllers. It exists in three interface formats: the HPE SSA GUI, the HPE SSA CLI, and HPE SSA Scripting. All formats provide support for configuration tasks. Some of the advanced tasks are available in only one format.

The diagnostic features in HPE SSA are also available in the standalone software HPE Smart Storage Administrator Diagnostics Utility CLI.

During the initial provisioning of the server or compute module, an array is required to be configured before the operating system can be installed. You can configure the array using SSA.

HPE SSA is accessible both offline (either through HPE Intelligent Provisioning or as a standalone bootable ISO image) and online:

- Accessing HPE SSA in the offline environment

---

**i** **IMPORTANT:** If you are updating an existing server in an offline environment, obtain the latest version of HPE SSA through Service Pack for ProLiant before performing configuration procedures.

---

Using one of multiple methods, you can run HPE SSA before launching the host operating system. In offline mode, users can configure or maintain detected and supported devices, such as optional Smart Array controllers and integrated Smart Array controllers. Some HPE SSA features are only available in the offline environment, such as setting the boot controller and boot volume.

- Accessing HPE SSA in the online environment

This method requires an administrator to download the HPE SSA executables and install them. You can run HPE SSA online after launching the host operating system.

For more information, see HPE Smart Array SR Gen10 Configuration Guide at the [Hewlett Packard Enterprise website](#).

## HPE InfoSight for servers

The HPE InfoSight portal is a secure web interface hosted by HPE that allows you to monitor supported devices through a graphical interface.

HPE InfoSight for servers:

- Combines the machine learning and predictive analytics of HPE InfoSight with the health and performance monitoring of Active Health System (AHS) and HPE iLO to optimize performance and predict and prevent problems
- Provides automatic collection and analysis of the sensor and telemetry data from AHS to derive insights from the behaviors of the install base to provide recommendations to resolve problems and improve performance

For more information on getting started and using HPE InfoSight for servers, go to: <https://www.hpe.com/info/infosight-servers-docs>.

## USB support

Hewlett Packard Enterprise Gen10 and Gen10 Plus servers support all USB operating speeds depending on the device that is connected to the server.

## External USB functionality

Hewlett Packard Enterprise provides external USB support to enable local connection of USB devices for server administration, configuration, and diagnostic procedures.

For additional security, external USB functionality can be disabled through USB options in UEFI System Utilities.

## Redundant ROM support

The server enables you to upgrade or configure the ROM safely with redundant ROM support. The server has a single ROM that acts as two separate ROM images. In the standard implementation, one side of the ROM contains the current ROM program version, while the other side of the ROM contains a backup version.

---

 **NOTE:** The server ships with the same version programmed on each side of the ROM.

---

## Safety and security benefits

When you flash the system ROM, the flashing mechanism writes over the backup ROM and saves the current ROM as a backup, enabling you to switch easily to the alternate ROM version if the new ROM becomes corrupted for any reason. This feature protects the existing ROM version, even if you experience a power failure while flashing the ROM.

## Keeping the system current

## Updating firmware or system ROM

To update firmware or system ROM, use one of the following methods:

- The Firmware Update option in the System Utilities.
- The `fwupdate` command in the Embedded UEFI Shell.
- Service Pack for ProLiant (SPP)
- HPE online flash components
- Moonshot Component Pack

## Service Pack for ProLiant

SPP is a systems software and firmware solution delivered as a single ISO file download. This solution uses SUM as the deployment tool and is tested and supports HPE ProLiant, HPE BladeSystem, HPE Synergy, and HPE Apollo servers and infrastructure.

SPP, along with SUM and iSUT, provides Smart Update system maintenance tools that systematically update HPE ProLiant, HPE BladeSystem, HPE Synergy, and HPE Apollo servers and infrastructure.

SPP can be used in an online mode on a server running Windows, Linux, or VMware vSphere ESXi, or in an offline mode where the server is booted to an operating system included in the ISO file.

The preferred method for downloading an SPP is using the SPP Custom Download at <https://www.hpe.com/servers/spp/custom>.

The SPP is also available for download from the SPP download page at <https://www.hpe.com/servers/spp/download>.

## Smart Update Manager

SUM is an innovative tool for maintaining and updating the firmware, drivers, and system software of HPE ProLiant, HPE BladeSystem,

HPE Synergy, and HPE Apollo servers, infrastructure, and associated options.

SUM identifies associated nodes you can update at the same time to avoid interdependency issues.

Key features of SUM include:

- Discovery engine that finds installed versions of hardware, firmware, and software on nodes.
- SUM deploys updates in the correct order and ensures that all dependencies are met before deploying an update.
- Interdependency checking.
- Automatic and step-by-step Localhost Guided Update process.
- Web browser-based user interface.
- Ability to create custom baselines and ISOs.
- Support for iLO Repository (Gen10 or later iLO 5 nodes only).
- Simultaneous firmware and software deployment for multiple remote nodes.
- Local offline firmware deployments with SPP deliverables.
- Extensive logging in all modes.



**NOTE:**

SUM does not support third-party controllers, including flashing hard drives behind the controllers.

---

## Updating firmware from the System Utilities

Use the Firmware Updates option to update firmware components in the system, including the system BIOS, NICs, and storage cards.

### Procedure

1. Access the System ROM Flash Binary component for your server from the Hewlett Packard Enterprise Support Center.
2. Copy the binary file to a USB media or iLO virtual media.
3. Attach the media to the server.
4. Launch the System Utilities, and select Embedded Applications > Firmware Update.
5. Select a device.

The Firmware Updates screen lists details about your selected device, including the current firmware version in use.

6. Select Select Firmware File.
7. Select the flash file in the File Explorer list.

The firmware file is loaded and the Firmware Updates screen lists details of the file in the Selected firmware file field.

8. Select Image Description, and then select a firmware image.

A device can have multiple firmware images.

9. Select Start firmware update.

## Integrated Smart Update Tools

Integrated Smart Update Tools (iSUT) is the smart update solution for performing online firmware and driver updates. iSUT is used with iLO 4, iLO 5, and with update solutions (management appliances such as iLO Amplifier Pack or HPE OneView and Smart Update Manager (SUM) to stage, install, and activate firmware and driver updates.

The solution must be installed on the operating system, where it updates results through Rich Infrastructure Services (RIS) communication.

- **iSUT:** Polls iLO to check for requests from SUM or iLO Amplifier Pack for updates through the management network and orchestrates staging, deploying, and activating updates. You can adjust the polling interval by issuing the appropriate command-line option provided by iSUT. Performs inventory on target servers, stages deployment, deploys updates, and then reboots the servers.
- **iLO 5 with integrated Smart Update** (Gen10 or later servers only): Performs iLO Repository-based updates by downloading the components from iLO Repository when iLO Installation Queue has the components which can be updated by iSUT.
- **iLO Amplifier Pack and HPE OneView:** Displays available updates for servers. Communicates with iSUT (or SUT 1.x) to initiate updates using the iLO Redfish interface. iSUT reports the status of updates to iLO Amplifier Pack through iLO Restful Interface.
- **SUM:** A tool for firmware and driver maintenance for HPE ProLiant servers and associated options.



**NOTE:**

SUM and iLO Amplifier Pack should not manage the same nodes.

---

## Updating the firmware from the UEFI Embedded Shell

### Procedure

1. Access the System ROM Flash Binary component for your server from the Hewlett Packard Enterprise Support Center (<https://www.hpe.com/support/hpesc>).
2. Copy the binary file to a USB media or iLO virtual media.
3. Attach the media to the server.
4. Boot to the UEFI Embedded Shell.
5. To obtain the assigned file system volume for the USB key, enter `map -r`.
6. Change to the file system that contains the System ROM Flash Binary component for your server. Enter one of the `fsx` file systems available, such as `fs0:` or `fs1:`, and press **Enter**.
7. Use the `cd` command to change from the current directory to the directory that contains the binary file.
8. Flash the system ROM by entering `fwupdate -d BIOS -f filename`.
9. Reboot the server. A reboot is required after the firmware update in order for the updates to take effect and for hardware stability to be maintained.

## Online Flash components

This component provides updated system firmware that can be installed directly on supported operating systems. Additionally, when used in conjunction with SUM, this Smart Component allows the user to update firmware on remote servers from a central location. This remote deployment capability eliminates the need for the user to be physically present at the server to perform a firmware update.

## Drivers



**IMPORTANT:** Always perform a backup before installing or updating device drivers.

---

Update drivers using any of the following [Smart Update Solutions](#):

- Download the latest Service Pack for ProLiant (includes Smart Update Manager)
  - Create a custom SPP download
  - Download Smart Update Manager for Linux
  - Download specific drivers
- To locate the drivers for a server, go to the [Hewlett Packard Enterprise Support Center website](#), and then search for the product name/number.

## Software and firmware

Update software and firmware before using the server for the first time, unless any installed software or components require an older version.

For system software and firmware updates, use one of the following sources:

- Download the SPP from the Hewlett Packard Enterprise website (<https://www.hpe.com/servers/spp/download>).
- Download individual drivers, firmware, or other system software components from the server product page in the Hewlett Packard Enterprise Support Center website (<https://www.hpe.com/support/hpesc>).

## Operating system version support

For information about specific versions of a supported operating system, refer to the [operating system support matrix](#).

## HPE Pointnext Portfolio

HPE Pointnext delivers confidence, reduces risk, and helps customers realize agility and stability. Hewlett Packard Enterprise helps customers succeed through Hybrid IT by simplifying and enriching the on-premise experience, informed by public cloud qualities and attributes.

Operational Support Services enable you to choose the right service level, length of coverage, and response time to fit your business needs. For more information, see the Hewlett Packard Enterprise website:

<https://www.hpe.com/us/en/services/operational.html>

Utilize the Advisory and Transformation Services in the following areas:

- Private or hybrid cloud computing
- Big data and mobility requirements
- Improving data center infrastructure
- Better use of server, storage, and networking technology

For more information, see the Hewlett Packard Enterprise website:

<https://www.hpe.com/services/consulting>

## Proactive notifications

30 to 60 days in advance, Hewlett Packard Enterprise sends notifications to subscribed customers on upcoming:

- Hardware, firmware, and software changes
- Bulletins
- Patches
- Security alerts

You can subscribe to proactive notifications on the [Hewlett Packard Enterprise website](#).

## Troubleshooting

### NMI functionality

An NMI crash dump enables administrators to create crash dump files when a system is hung and not responding to traditional debugging methods.

An analysis of the crash dump log is an essential part of diagnosing reliability problems, such as hanging operating systems, device drivers, and applications. Many crashes freeze a system, and the only available action for administrators is to cycle the system power. Resetting the system erases any information that could support problem analysis, but the NMI feature preserves that information by performing a memory dump before a hard reset.

To force the OS to initiate the NMI handler and generate a crash dump log, the administrator can use the iLO Generate NMI feature.

### Troubleshooting resources

Troubleshooting resources are available for HPE Gen10 and Gen10 Plus server products in the following documents:

- [Troubleshooting Guide for HPE ProLiant Gen10 and Gen10 Plus servers](#) provides procedures for resolving common problems and comprehensive courses of action for fault isolation and identification, issue resolution, and software maintenance.
- [Error Message Guide for HPE ProLiant Gen10 servers and HPE Synergy](#) provides a list of error messages and information to assist with interpreting and resolving error messages.
- [Error Message Guide for HPE ProLiant Gen10 Plus servers and HPE Synergy](#) provides a list of error messages and information to assist with interpreting and resolving error messages.
- [Integrated Management Log Messages and Troubleshooting Guide for HPE ProLiant Gen10 and Gen10 Plus servers and HPE Synergy](#) provides IML messages and associated troubleshooting information to resolve critical and cautionary IML events.

To access troubleshooting resources for your product, see the Hewlett Packard Enterprise Information Library:

- For Gen10 servers, see <https://www.hpe.com/info/gen10-troubleshooting>.
- For Gen10 Plus servers, see <https://www.hpe.com/info/gen10plus-troubleshooting>.

## System battery replacement

### System battery information


The server contains an internal lithium manganese dioxide, a vanadium pentoxide, or an alkaline battery that provides power to the real-time clock. If this battery is not properly handled, a risk of the fire and burns exists. To reduce the risk of personal injury:

- Do not attempt to recharge the battery.
- Do not expose the battery to temperatures higher than 60°C (140°F).
- Do not expose the battery to extremely low air pressure as it might lead to explosion or leakage of flammable liquid or gas.
- Do not disassemble, crush, puncture, short external contacts, or dispose the battery in fire or water.
- If the server no longer automatically displays the correct date and time, then replace the battery that provides power to the real-time clock. Under normal use, battery life is 5 to 10 years.


## Removing and replacing the system battery

### Procedure


1. Back up all server data.
2. Power down the server.
3. Disconnect all peripheral cables from the server.
4. Remove the system board module from the chassis.
5. Place the module on a flat, level work surface.
6. Remove the system board module access panel.
7. Remove the tertiary riser cage.

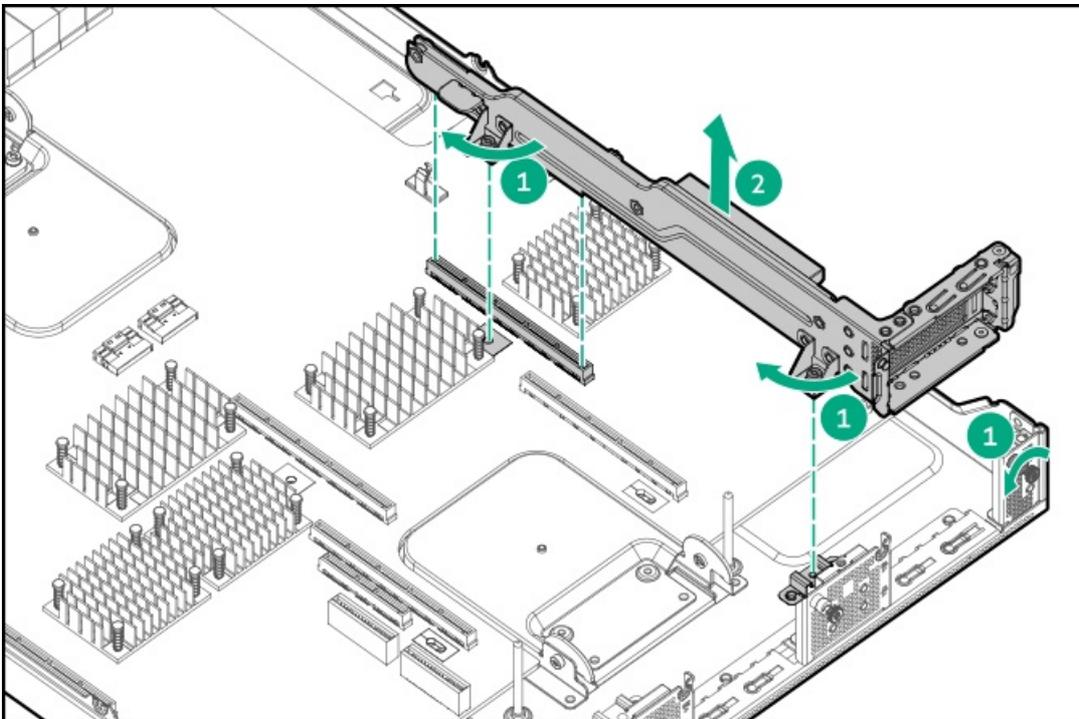

8. Locate the battery on the system board.
9. Use a small flat-bladed, nonconductive tool to carefully lift the front of the battery from the socket.
10. Remove the battery.

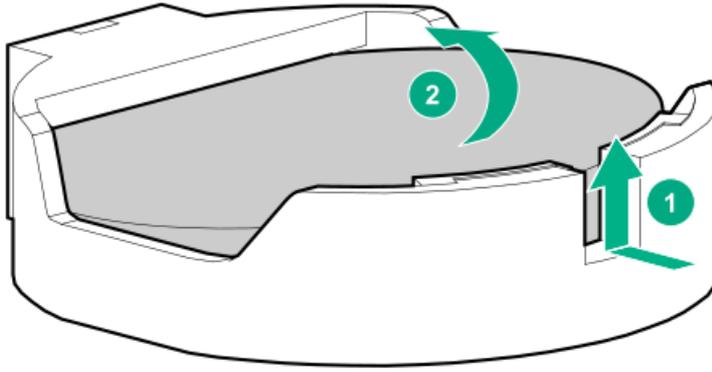

11. Install the new system battery.

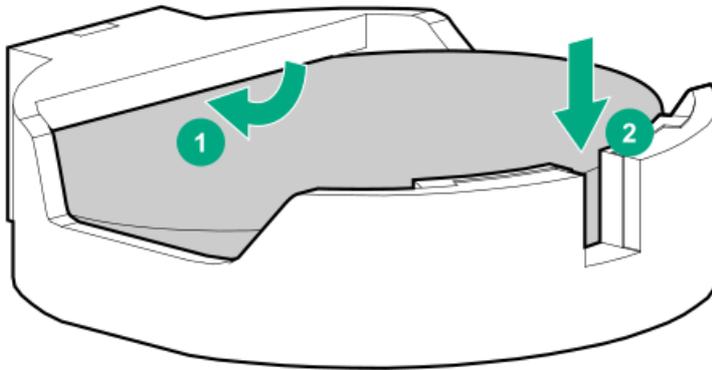

For more information about battery replacement or proper disposal, contact an authorized reseller or an authorized service provider.

**More information**

[Remove the system board module from the chassis](#)

[Remove the riser cage](#)

[Installing a PCIe riser cage](#)

[System board components](#)

## Specifications

### Server mechanical specifications

Specification	Value
Height	265 mm (10.43 in)
Depth	850 mm (33.46 in)
Width	439 mm (17.28 in)
Maximum system weight	96.27 kg (212.24 lbs)



## Power supply specifications

### HPE 3000 W 200–277 VAC Platinum Hot-plug Power Supply

Specification	Value
<b>Input requirements</b>	—
Input voltage range	200 VAC to 277 VAC
Nominal frequency range	50 Hz to 60 Hz
Nominal input current	15.8 A at 200 VAC 11.7 A at 277 VAC
Maximum rated input wattage rating	3127 W at 200 VAC 3210 W at 277 VAC
BTUs per hour	10,671 at 200 VAC 10,951 at 277 VAC
<b>Power supply output</b>	—
Rated steady-state power	2900 W at 200 VAC input 3000 W at 208 VAC to 277 VAC input
Maximum peak power	3900 W for 4 ms max at 200 VAC to 277 VAC input
Maximum inrush current duration	0.2 ms at 200 VAC to 277 VAC input

### HPE 54 V Out 3000 W 200–277 VAC Hot-plug Power Supply

Specification	Value
<b>Input requirements</b>	—
Input voltage range	200 VAC to 277 VAC
Nominal frequency range	50 Hz to 60 Hz
Nominal input current	16 A at 200 VAC 11.6 A at 277 VAC
Maximum rated input wattage rating	3200 W at 200 VAC 3171 W at 277 VAC
BTUs per hour	10,918 at 200 VAC 10,820 at 277 VAC

Specification	Value
Power supply output	—
Rated steady-state power	3000 W at 200 VAC to 277 VAC input
Maximum peak power	3900 W for 4ms at 200 VAC to 277 VAC input
Maximum inrush current duration	0.2 ms at 200 VAC to 277 VAC input

## Websites

### General websites

Hewlett Packard Enterprise Information Library

<https://www.hpe.com/info/EIL>

Single Point of Connectivity Knowledge (SPOCK) Storage compatibility matrix

<https://www.hpe.com/storage/spock>

Storage white papers and analyst reports

<https://www.hpe.com/storage/whitepapers>

For additional websites, see [Support and other resources](#).

## Support and other resources

### Accessing Hewlett Packard Enterprise Support

- For live assistance, go to the Contact Hewlett Packard Enterprise Worldwide website:

<https://www.hpe.com/info/assistance>

- To access documentation and support services, go to the Hewlett Packard Enterprise Support Center website:

<https://www.hpe.com/support/hpesc>

### Information to collect

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs
- Add-on products or components

- Third-party products or components

## Accessing updates

- Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.

- To download product updates:

Hewlett Packard Enterprise Support Center

<https://www.hpe.com/support/hpesc>

Hewlett Packard Enterprise Support Center: Software downloads

<https://www.hpe.com/support/downloads>

Software Depot

<https://www.hpe.com/support/softwaredepot>

- To subscribe to eNewsletters and alerts:

<https://www.hpe.com/support/e-updates>

- To view and update your entitlements, and to link your contracts and warranties with your profile, go to the Hewlett Packard Enterprise Support Center More Information on Access to Support Materials page:

<https://www.hpe.com/support/AccessToSupportMaterials>

---

**ⓘ IMPORTANT:**

Access to some updates might require product entitlement when accessed through the Hewlett Packard Enterprise Support Center. You must have an HPE Passport set up with relevant entitlements.

---

## Customer self repair

Hewlett Packard Enterprise customer self repair (CSR) programs allow you to repair your product. If a CSR part needs to be replaced, it will be shipped directly to you so that you can install it at your convenience. Some parts do not qualify for CSR. Your Hewlett Packard Enterprise authorized service provider will determine whether a repair can be accomplished by CSR.

For more information about CSR, contact your local service provider.

## Remote support

Remote support is available with supported devices as part of your warranty or contractual support agreement. It provides intelligent event diagnosis, and automatic, secure submission of hardware event notifications to Hewlett Packard Enterprise, which will initiate a fast and accurate resolution based on your product's service level. Hewlett Packard Enterprise strongly recommends that you register your device for remote support.

If your product includes additional remote support details, use search to locate that information.

## Remote support and Proactive Care information

HPE Get Connected

<https://www.hpe.com/services/getconnected>

HPE Proactive Care services

<https://www.hpe.com/services/proactivecare>

HPE Datacenter Care services

<https://www.hpe.com/services/datacentercare>

HPE Proactive Care service: Supported products list

<https://www.hpe.com/services/proactivecaresupportedproducts>

HPE Proactive Care advanced service: Supported products list

<https://www.hpe.com/services/proactivecareadvancedsupportedproducts>

## Proactive Care customer information

Proactive Care central

<https://www.hpe.com/services/proactivecarecentral>

Proactive Care service activation

<https://www.hpe.com/services/proactivecarecentralgetstarted>

## Warranty information

To view the warranty information for your product, see the links provided below:

HPE ProLiant and IA-32 Servers and Options

<https://www.hpe.com/support/ProLiantServers-Warranties>

HPE Enterprise and Cloudline Servers

<https://www.hpe.com/support/EnterpriseServers-Warranties>

HPE Storage Products

<https://www.hpe.com/support/Storage-Warranties>

HPE Networking Products

<https://www.hpe.com/support/Networking-Warranties>

## Regulatory information

To view the regulatory information for your product, view the Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products, available at the Hewlett Packard Enterprise Support Center:

<https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts>

## Additional regulatory information

Hewlett Packard Enterprise is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements such as REACH (Regulation EC No 1907/2006 of the European Parliament and the Council). A chemical information report for this product can be found at:

<https://www.hpe.com/info/reach>

For Hewlett Packard Enterprise product environmental and safety information and compliance data, including RoHS and REACH, see:

<https://www.hpe.com/info/ecodata>

For Hewlett Packard Enterprise environmental information, including company programs, product recycling, and energy efficiency, see:

## Documentation feedback

Hewlett Packard Enterprise is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback ([docsfeedback@hpe.com](mailto:docsfeedback@hpe.com)). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.

