

makes a difference

SP 5 Dirt Operating Instructions

Please read the operating instructions carefully before using the unit.



Tedister and Will




English


العربية

5

18



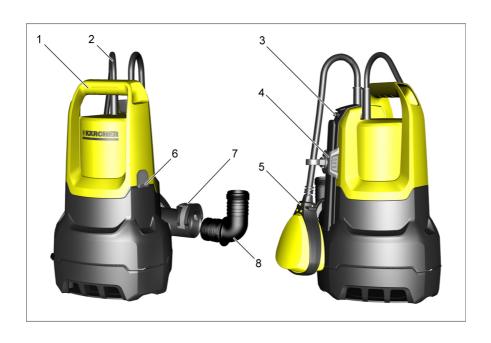

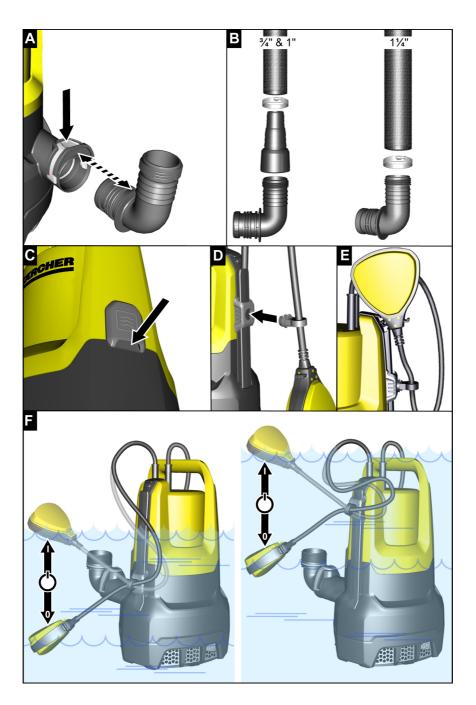

Please read and comply with these original operating instructions and the enclosed safety instructions. Proceed ac-

cordingly. Keep both booklets for future reference or subsequent owners.

Contents		
Warranty	EN	4
Environmental protection	EN	4
Description of the Appliance	EN	4
Proper use	EN	4
Approved feed fluids	EN	4
Start up	EN	4
Operation	EN	5
Automatic venting device	EN	5
Automatic operation	EN	5
Manual operation	EN	5
Finish operation	EN	5
Maintenance	EN	5
Transport	EN	5
Storage	EN	5
Storing the pump	EN	5
Special accessories	EN	6
Troubleshooting	EN	6
Specifications	EN	7

Safety instructions for immersion pumps

- Please read the operating instructions for your machine before using it, and pay particular attention to the following safety instructions.
- Warning and information plates on the machine provide important directions for safe operation.
- Apart from the notes contained herein the general safety provisions and rules for the prevention of accidents of the legislator must be observed.
- Keep packaging films away from children, there is a risk of suffocation!

Hazard levels

△ DANGER

Pointer to immediate danger, which leads to severe injuries or death.

△ WARNING

Pointer to a possibly dangerous situation, which can lead to severe injuries or death.

△ CAUTION

Pointer to a possibly dangerous situation, which can lead to minor injuries.

ATTENTION

Pointer to a possibly dangerous situation, which can lead to property damage.

Electric components

△ DANGER

Risk of electric shock.

- Check the power cord with mains plug for damage before every use. If the power cord is damaged, please arrange immediately for the exchange by an authorized customer service or a skilled electrician.
- Install all electrical plug connections in a flood-proof area.
- Unsuitable electrical extension cables can be hazardous. Only use electrical extension cables that have been approved and labelled for this purpose and have an adequate cable cross-section outdoors.

- The mains plug and the coupling of an extension cable must be watertight and must never lie in water. Moreover, the coupling may never lie on the ground. The use of cable reels that ensure that the sockets are at least 60 mm above the ground is recommended.
- Do not use the power cord to carry/ transport the machine.
- To separate the machine from the mains, pull the plug and not the power cord.
- Do not scrape the power cord across sharp edges and ensure that it does not get pressed.
- The voltage indicated on the type plate must correspond to the voltage of the electrical source.
- To avoid risks, all repairs and replacement of spare parts may only be carried out by the authorised customer service personnel.
- Operate pumps only on sockets that are equipped with a fault current protection switch with a nominal fault current of max. 30 mA and a protective-earth contact (earthing).
- Check the fault current protection switch and the protective earth contact (earthing) for proper function at regular intervals.

- Never operate the pumps while there are persons in the pool or garden pond.
- In Austria pumps to be used in swimming pools and garden ponds should be equipped with a fixed connection line according to ÖVE B/EN 60555 Part 1 to 3; power supply should be via a ÖVE-tested isolating transformer whereby the secondary nominal voltage should not exceed 230V.
- The electrical connection of the system may only be performed by a qualified electrician. Please follow the respective national regulations!

Safe handling

△ WARNING

- This appliance is not intended for use by persons with limited physical, sensory or mental capacities or lacking experience and/or skills, unless such persons are accompanied and supervised by a person in charge of their safety or they have received precise instructions on the use of this appliance and have understood the resulting risks.
- Children may only use this appliance if they are over the age of 8 and supervised by a person in charge of their safety, or if they have received instructions on the use of this appliance and have understood the resulting risks.

- Children must not play with this appliance.
- Supervise children to prevent them from playing with the appliance.
- Cleaning and user maintenance must not be performed by children without supervision.
- Turn off the appliance and remove the mains plug prior to any care and maintenance works.

△ CAUTION

- Create stability for the appliance prior to any work on or with the appliance to prevent accidents or damage.
- In order to prevent accidents or injuries, mind the weight of the appliance during transport (see technical data).
- In order to prevent accidents or injuries, mind the weight of the appliance when choosing the storage location (see technical data).

Other risks

△ DANGER

Danger of explosion

- → Do not pump corrosive, highly combustible or explosive fluids (e.g. petroleum, petrol, acids or nitro thinner).
- → Do not operate the device in fire or explosion-endangered surroundings.

△ CAUTION

→ Water that has been delivered with this appliance is no drinking water!

ATTENTION

This can cause damage to the appliance.

- → Do not pump greases, oils and salt water.
- → Do not pump waste water from sanitary facilities and silty water with a lower flowability than clear water.
- → Do not pump water that has a higher temperature than 35°C.

EN – 3 7

Warranty

The warranty terms published by the relevant sales company are applicable in each country. We will repair potential failures of your appliance within the warranty period free of charge, provided that such failure is caused by faulty material or defects in manufacturing. In the event of a warranty claim please contact your dealer or the nearest authorized Customer Service centre. Please submit the proof of purchase. The adhesive type label must not be removed from the

device. Warranty is no longer granted if the label is removed.

Environmental protection



The packaging material can be recycled. Please do not place the packaging into the ordinary refuse for disposal, but arrange for the proper recycling.



Old appliances contain valuable materials that can be recycled. Please arrange for the proper recycling of old appliances. Please dispose your old appliances using appropriate collection systems.

Notes about the ingredients (REACH)

You will find current information about the ingredients at: www.kaercher.com/REACH

Description of the Appliance

- Carrying handle
- Power cord with plug
- Lock (float switch)
- Height adjustment (float switch)
- Swimmer switch
- Automatic venting device 6
- Quick-Connect
- Connection nozzle

Proper use

This appliance has been designed for use in private households and is not intended for commercial use.

The manufacturer is not responsible for any damages that may occur on account of improper use or wrong operations.

The device is mainly intended for draining building parts in case of flooding, but also for pumping over or out containers, for water removal from wells and shafts as well as for draining water from boats and yachts, provided that it is fresh water

NOTICE

The device is not suitable for continuous pump operation (e.g. continuous circulation in a pond) or as a stationary installations (e.g. lifting device, fountain pump).

Approved feed fluids

- Fresh water up to a certain degree of soiling Water from swimming pool (provided the dosing of additives is proper)
- Washing lye
- Water with a degree of contamination up to a grain size of 20 mm

DANGER

Risk of injury, risk of damage! Caustic, slightly inflammable and other explosive substances (such as petrol, petroleum, diluted nitrogen), greases, oils, salt water and waste water from toilets as well as sludgy water that has a slower flow capacity than water, must not be transported with this pump. The temperature of the delivered fluid must be between 5 °C and 35 °C.

Start up

NOTICE

The shorter the hose length and the larger the hose diameter, the higher the pump capacity.

To prevent clogging of the pump, use a prefilter with hose diameters of less than 1¼ ".

The pump connection is equipped with a plug system (Quick-Connect).

The unmounted connection nozzle is enclosed in the device

Illustration A

To remove the connection nozzle, press the Quick-Connect (grey button). Illustration B

→ Slide the hose clamp onto the hose. If a ¾" or 1" hose is used:

- Screw pump connecting piece (see special accessory) onto the connection nozzle.
- Slide the hose onto the pump connecting piece and secure it by means of a hose clamp.
- Slide the connection nozzle into the Quick-Connect.

NOTICE

To increase the flow volume, the pump connecting piece can be shortened according to the hose used. If a 1¼ " hose is used:

- Slide the hose onto the connection nozzle and se-
- cure by means of a hose clamp. Slide the connection nozzle into the Quick-Connect.
- Snap the float switch into the height adjustment.
- Safely place the pump on a stable surface in the feed fluid or immerse it using a rope tied to the carrying handle. **NOTICE**

The suction area must not be blocked by soiling. In case of muddy ground, place the pump on a brick or the like.

Ensure that the pump is level.

Do not carry the pump on the cable or the hose.

Operation

DANGER

Risk of mortal danger on account of electric shock! Do not touch feed fluids, the rope attached to the carrying handle as well as objects that are in contact with the feed fluid (e.g. pipelines extending into the water, railings, etc.).

Automatic venting device

Illustration C

With a low fluid level, possibly drawn air or air that is present in the pump escapes via the automatic venting device. In addition, fluid may leak at this spot.

If the pump has suction problems with a low fluid level, unplug and plug in the mains plug repeatedly in order to support the suction process.

Automatic operation

Illustration E

Adjust the float switch via the height adjustment and the cable length between float switch and

NOTICE

In the automatic mode, the float switch controls the pumping operations automatically

The pump switches on as soon as the float switch has reached the switch-on height due to the rising fluid level. The pump switches off as soon as the float switch has reached the switch-off height due to the falling fluid level. Ensure that the float switch is not obstructed in any way. The cable between the float switch and the lock must be

at least 2.5 cm long. Switch-on height / switch-off height (float switch in the lowest position):

Min / Max	SP 5 Dirt	
Switch-on height cm*	18 / 21 cm	
Switch-off height cm*	4 / 12 cm	

Switch-on height / switch-off height (float switch in the upmost position):

Min / Max	SP 5 Dirt	
Switch-on height cm*	28 / 31 cm	
Switch-off height cm*	14 / 22 cm	

^{*}The switching height can vary depending on the position of the float switch.

Likewise, the cable length between the float switch and the lock can influence the switching heights. We recommend retaining the preset cable length.

→ Insert the mains plug into the socket

Manual operation

Illustration ■Secure the nose on the float switch into the opening of the lock pointing up.

NOTICE

In manual operation the pump remains switched on continuously.

The fluid level must be at least 60mm for the pump to draw independently in the manual mode

The pump can pump up to a residual fluid height of

The stated residual fluid height is only achieved in manual operation.
→ Insert the mains plug into the socket.

ATTENTION

Risk of damage! Dry running leads to increased wear: never leave the pump unattended during manual operation. Switch off immediately in case of dry running.

Finish operation

NOTICE

Soiling can deposit and lead to malfunctions.

- Pump clear water or thoroughly rinse the pump after every use. This especially applies after pumping chlorinated
- water or other liquids that leave residue. Disconnect the main plug from the socket

Maintenance

The pump is maintenace-free

Transport

CAUTION Λ

In order to prevent accidents or injuries, keep in mind the weight of the appliance during transport (see Specifications).

- Lift and carry the pump on the carrying handle
- If you want to transport the appliance on a vehicle secure it from slipping.

Storage

CAUTION Δ

In order to prevent accidents or injuries, keep in mind the weight of the appliance when selecting a storage location for it (see Specifications).

Storing the pump

- Completely drain the pump and allow it to dry.
- Store the pump in a frost-free place.

Special accessories		
2.997-100.0	Braided hose set	Flexible 1 1/4" braided hose with hose clamp (30 - 40 mm) with wing screw for a connection without tools. Especially recommendable for the immersion pumps when removing large water quantities. Max. operating pressure: 5 bar
2.997-201.0	Prefilter for immersion pump, small	The robust prefilter is easy to attach and protects your immersion pump, which increases the functional reliability. (SP 5 Dirt)
6.997-359.0	Pump connection G1 (33.3 mm) incl. Check valve	For pumps with G1 (33.3 mm) connection thread and 3/4" as well as 1" hoses, including union nut, hose clamp, flat packing and check valve. (SP 5 Dirt)
6.997-347.0	Spiral hose, by the meter, 25 m, 3/4"	By the meter for cutting hoses to individual lengths. (SP 5 Dirt)
6.997-346.0	Spiral hose, by the meter, 25 m, 1"	By the meter for cutting hoses to individual lengths.
2.645-142.0	Hose PrimoFlex, 25 m, 3/4"	Phthalate-free 3/4" garden hose for draining away the water. (SP 5 Dirt)
2.645-247.0	Hose PrimoFlex, 50 m, 1"	Phthalate-free 1" garden hose for draining away the water.

Troubleshooting

⚠ DANGER

Risk of mortal danger on account of electric shock!


To avoid risks, all repairs and replacement of spare parts may only be carried out by the authorised customer service personnel.

Fault	Cause	Remedy
Pump runs but does not transport	Air in the pump	Unplug and plug in the mains plug of the pump repeatedly until the fluid is drawn
	Suction area blocked	Pull out the mains plug and clean the suction area
	Water level below the minimum fluid level (only in manual operation)	Immerse, whenever possible, the pump deeper into the feed fluid or proceed as described in Chapter Operation.
Pump does not run or suddenly comes to a standstill during operations	Power supply interrupted	Check fuses and electrical connections
	Thermal protection switch has switched off the pump due to overheating	Pull out the mains plug, let the pump cool down, clean the suction area, prevent dry running
	Dirt particles have got jammed into the suction area	Pull out the mains plug and clean the suction area
Pumping capacity is reducing	Suction area blocked	Pull out the mains plug and clean the suction area
Pumping capacity too low	The pumping capacity depends on the flow height, hose diameter and hose length.	Observe the maximum delivery height, see technical data. If necessary, use a larger hose diameter or a shorter hose length.
Quick-Connect cannot be opened or closed.	Soiling in the plug system.	Remove and clean clip.

10 EN - 6

Specifications		
		SP 5 Dirt
Mains voltage	V	230 - 240 V
Mains frequency	Hz	50
Output P _{nom}	W	500
Max. flow rate	l/h	9500
Max. pressure	bar	0,7
Max. flow height	m	7
Max. immersion depth	m	7
Max. grain size of the dirt particles that can be transported	mm	20
Minimum fluid height (manual mode)	mm	60
Residual fluid height	mm	25
Weight (without accessories)	kg	4,6

Subject to technical modifications!

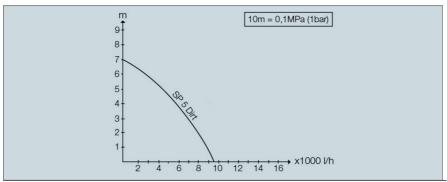

- The possible delivery rate is even larger:

 the lower the delivery height

 the larger the diameter of the hose used

 the shorter the hose used


 the lower the pressure loss caused by the connected accessories

EN - 7 11

البيانات الفنية

SP 5 Dirt		
۲۲۰ – ۲۴۰ فولت	فولت	جهد الشبكة
٥,	هيرتز	تردد الشبكة
٥,,	واط	القدرة الاسمية
90	لتر/ساعة	أقصى كمية ضخ
٠,٧	بار	الحد الأقصى للضغط
٧	متر	أقصىي ارتفاع ضخ
٧	متر	أقصىي مستوى للغمر في السائل
۲٠	مم	أقصى حجم حبيبي لجسيمات القاذورات بالسائل المراد ضخه
٦٠	مم	الحد الأدنى لارتفاع السوائل (الوضع اليدوي)
70	مم	ارتفاع السوائل المتبقية
٤,٦	كجم	الوزن (بدون الملحقات التكميلية)

مع الاحتفاظ بحق إدخال تعديلات فنية!

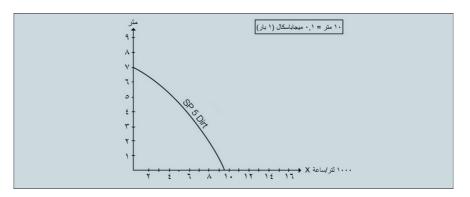

ملحقات تكميلية خاصة

خرطوم مضغر مرن مقاس ١,٢٥ بوصة مع مشبك الخرطوم (٣٠ - ٤٠ مم) ويرغي مجنح للتوصيل بدون أدوات. يوصى باستخدامه بصفة خاصة للمضخات الغاطسة أثناء التخلص من كميات المياه الكبيرة. أقصى ضغط تشغيل: ٥ بار.		2.997-100.0
يقوم الفلتر الأولى القوي سهل التركيب بحماية مضختك الغاطسة، وبالتالي يزيد من السلامة الوظيفية المضخة. (SP 5 Dirt)	فلنر أولي للمضخات الغاطسة، صغير الحجم	2.997-201.0
للمضخات ذات قلاووظ التوصيل GI (٣٣٣ مم) والخراطيم مقاس ٧٠,٠ بوصة ومقاس ١ بوصة، بما في ذلك صامولة الوصل ومشبك الخرطوم وعنصر إحكام مسطح وصمام لا رجوعي. (SP 5 Dirt)	قطعة توصيل المضخة G1 (٣٣,٣ مم) بما في ذلك صمام لارجوعي	6.997-359.0
يباع بالمتر لقطع أطوال منفصلة من الخراطيم. (SP 5 Dirt)	خرطوم حلزوني، يباع بالمتر، ٢٥ م، ٠,٧٠ بوصة	6.997-347.0
يباع بالمتر لقطع أطوال منفصلة من الخراطيم.	خرطوم حلزوني، يباع بالمتر، ٢٥ م، ١ بوصة	6.997-346.0
خرطوم حدائق خال من القثالات مقاس ۱٬۷۰ بوصة لصرف المياه. (SP 5 Dirt)	خرطوم PrimoFlex، ۲۰ م، ۱٫۷۰ بوصة	2.645-142.0
خرطوم حدائق خال من الفثالات مقاس ١ بوصة لصرف المياه.	خرطوم PrimoFlex، ٥٠ م، ١ بوصة	2.645-247.0

المساعدة في حالة حدوث أعطال

▲ خطر على الحياة بغمل الصدمة الكهربائية!
لتجنب الأخطار لا يسمح بإجراء أعمال الإصلاح وتركيب قطع الغيار في الجهاز إلا من قبل خدمة العملاء المعتمدة.

العطل	السبب	الإصلاح
المضخة تدور ولكنها لا تقوم بالضخ	يوجد هواء في المضخة	قم بخلع قابس المضخة وتوصيله عدة مرات إلى أن يتم شفط السائل.
	نطاق الشفط مسدود	اسحب القابس وقم بتنظيف نطاق الشفط.
	مستوى المياه أقل من الحد الأدنى لمنسوب المياه (مع التشغيل اليدوي فقط)	إن أمكن قم بإنزال المضخة إلى عمق أكبر في السائل أو اتبع التعليمات كما هو موضح في فصل التشغيل.
المضخة لا تدور أو تتوقف فجأة أثناء التشغيل	الإمداد بالتيار الكهربائي منقطع	افحص المصاهر والوصلات الكهربائية.
	قام مفتاح الحماية الحراري بإيقاف تشغيل المضخة نتيجة فرط سخونة المضخة	اسحب القابس واترك المضخة نبرد وقم بنتظيف نطاق الشفط وامنع التشغيل الجاف.
	جسيمات القاذورات منحصرة في نطاق الشفط	اسحب القابس وقم بتنظيف نطاق الشفط.
قدرة الضنخ تقل	نطاق الشفط مسدود	اسحب القابس وقم بتنظيف نطاق الشفط.
قدرة الضنخ منخفضة للغاية	أداء المضغة يعتمد على كل من رأس المضغة وطول الخرطوم وقطر الخرطوم	لحرص على مراعاة أقصى ارتفاع للضخ، انظر البيانات الغنية، وعند اللزوم اختر خرطوم بقطر أكبر أو بطول أقصر .
لا يمكن فتح أو غلق تجهيزة التوصيل السريع.	الاتساخات في نظام القبس.	قم بإزالة المشبك وتتظيفه.

التشغيل

∆ خطر

خطر على الحياة بفعل الصدمة الكهربائية! أثناء التشغيل لا تقع بلمس أي من السائل المراد ضخه، الذي يوجد على الحبل المثبت في مقيض الحمل والأشياء الملامسة للسائل المراد ضخه (على سبيل

المثال وصَّلات المواسير الغاطسة في الماء، والقضَّيان، وما إلى ذلك). التجهيزة الأوتوماتيكية لتصريف الهواء

صنورة 🖸

صعرو على المستورة على الله الله الله الله المستور المستورد في المستورد في الموجود في ال المضخة وذلك عبر التجهيزة الأوتوماتيكية لتصريف الهواء. وأُثناء ذلك قد يتسرب

السائل بهذا الموضع. عند انخفاض مستوى السائل، إذا تعرضت المضخة لمشكلة أثناء الشفط، فقم بنزع القابس وتوصيله عدة مرات لدعم عملية الشفط.

التشغيل الأوتوماتيكي

في حالة التشغيل الأوتومانيكي يقوم المفتاح المزود بعوامة بالتحكم أوتومانيكيا في عملية الضنخ.

عي المضخة بمجرد وصول المفتاح المزود بعوامة إلي ارتفاع التشغيل بفعل مستوى السائل المرتفع.

مستوى المصنحة بمجرد وصول المفتاح المزود بعوامة إلى ارتفاع إيقاف التشغيل بفعل مستوى السائل المنخفض.

بعض مستوى السائل المنحفص. ولهذا الغرض يجب ضمان حرية حركة المفتاح المزود بعوامة. وجب أن يبلغ طول الكابل بين المفتاح المزود بعوامة ووسيلة التثبيت على الأقل ٢٫٥ مسم. ارتفاع التشغيل/ارتفاع إيقاف التشغيل (المفتاح المزود بعوامة في أسفل وضم):

SP 5 Dirt	الحد الأدنى/الحد الأقصى
۱۸ / ۲۱ سم	ارتفاع التشغيل سم*
٤ / ۱۲ سم	ارتفاع إيقاف التشغيل سم*

ارتفاع التشغيل/ارتفاع إيقاف التشغيل (المفتاح المزود بعوامة في أعلى وضع): الحد الأنفى/الحد الأقصى SP 5 Dirt ۲۸ / ۲۱ سم ارتفاع التشغيل سم* ۱۶ / ۲۲ سم ارتفاع إيقاف التشغيل سم*

"هكنّ أن بختلف ارتفاع التحويل وفقاً لوضع المفتاح المزود بعوامة. وبالمثل يمكن أن بؤثر طول الكابل بين المفتاح المزود بعوامة ووسيلة التثبيت على ارتفاعات التحويل. ننصح بالمحافظة على طول الكابل الذي تم ضبطه مسبقا. ﴾ قم بتوصيل الفابس بمقبس التوصيل.

التشغيل اليدوي

صورة]

• قب بتثبيت الحافة الأمامية الموجودة بالمفتاح المزود بعوامة وهي تشير إلى أُعْلَى فَي فَتَحَةً وَسَيْلَةً الْتَثْبِيتُ.

ملحوظة

في حالة التشغيل اليدوي تظل المضخة مشغلة بدون توقف.

لكي تقوم المضخة بالشفط تلقائيا في الوضع اليدوي، يجب ألا يقل مستوى السائل

انتبه

خطر حدوث أضرار ! التشغيل الجاف للمضخة يزيد من معدل البلي، فلا تترك المضخة تعمل في الوضع اليدوي بدون مراقبة. في حالة التشغيل الجاف قم بإيقاف الجهاز على الغور .

إنهاء التشغيل

ملحوظة

- من الممكن أن تتراكم الأوساخ وتسبب في حدوث أعطال وظيفية. → قم بضخ مياه نظيفة بعد كل استعمال أو قم بشطف المضخة جيدا. وِيْتُم مراعاة هذا بشكل خاص بعد ضخ ميّاه تُحتوي على كلور أو أي سوائل أخرى يتخلف عنها رواسب.
 - ◄ اسحب القابس من مقبس التوصيل.

المضخة لا تتطلب صيانة.

النقل

△ احترس

— سروس على مراعاة وزن الجهاز لتجنب وقوع حوانث أو إصابات أثناء النقل (انظر البيانات الفنية). → ارفع المضخة من مقبض الحمل واحملها. → للقل على سيارة، يجب تأمين الجهاز ضد الانزلاق.

التخزين

△ احترس

لحرص على مراعاة وزن الجهاز لتجنب وقوع حوادث أو إصابات عند اختيار مكان التخزين (انظر البيانات الفنية).

حفظ المضخة

- قم بتفريغ المضخة بالكامل واتركها حتى تجف.
 تحفظ المضخة في مكان خال من الصقيع.

الضمان

في كل دولة تسري شروط الضمان التي تضعها شركة التسويق المختصة التابعة لنا. نحن ننولي علاج الأعطال التي قد تطرأ على جهازك بدون مقابل خلال فترة الضمان طالما أن السبب في هذه الأعطال ناجم عن وجود عيب في المواد أو في الصنع. في حال استخفاق الضمان برجاء التوجه ببيان الشراء إلى أفرب موزع أو مركز خدمة عملاً - موتد المحدود

عمدة معمد. غير مسموح بإزالة ملصق لوحة الصنع من على الجهاز . بمجرد إزالة الملصق، لن يتم ضمان المنتج بعد ذلك .

حماية البيئة



تحتوي الأجهزة القديمة على العديد من المواد القيمة القابلة لإعادة القدوير والتي ينبغي الاستفادة منها مرة أخرى. لذا يرجى التخلص من الأجهزة القديمة عن طريق أنظمة تجميع مناسبة.

إرشادات حول المكونات (REACH) بد المعلومات الحالية حول المكونات في موقع الإنترنت: www.kaercher.de/REACH

وصف الجهاز

- مقبض الحمل كابل التوصيل الكهربائي مع قابس
- عبر الموصيل المهرباتي مع دبس وسيلة تثبيت (مفتاح مزود بعوامة) وسيلة ضبط الارتفاع (مفتاح مزود بعوامة)
 - مفتاح مزود بعوامة التجهيزة الأوتوماتيكية لتصريف الهواء
 - تجهيزة توصيل سريع فوهة التوصيل

الاستخدام المطابق للتعليمات

تم تطوير هذا الجهاز من أجل الاستخدام الشخصي، وهو غير مصمم لتلبية متطلبات الاستخدام التجاري. منظلبات الاستخدام التجاري. لن تتحمل الشركة المنتجة المسئولية عن أي أضرار محتملة قد تحدث نتيجة

لل المستفدام غير المطابق للتطبمات أو التشغيل الخاطئ. الجهاز مخصص في الأساس لتصريف المياه بعد الفيضانات في أجزاء من المباني، إلا أنه يستخدم أيضا في تحويل أو تفريغ الحاويات، واستخراج الميا. من الأَّبار ُ والتجاويف، فضلا عن تصريف المياه من القوارب واليخوت، طالما أن المياه عنبة.

ملحوظة

15

الجهاز لا يتتاسب مع المضخات التي تعمل بشكل متواصل (على سبيل المثال، التعوير المستمر للمياه في البرك) أو التركيبات الثابتة (مثل، وحدة الضخ ومضخة النافورة).

السوائل المسموح بضخها

- المياه العنبة حتى الوصول لدرجة اتساح معينة مياه حمامات السياحة (شترط معايرة المواد المضنافة على نحو مطابق التعليمات) محلول سوائل الغمل

 - : مياه درجة اتساخها تصل إلى الحجم الحبيبي ٢٠ مم

∆ خطر

خطر الإصابة، خطر التعرض للضرر! لا يسمح بضخ مواد أكالة أو سهلة الاشتعال حضر المصابحة مطر العلاص معترز ، ثم يسمح بطحة هودا داده ، و تسهدا المسلعات أو المواد المنفجرة (مثل البنزين والبترول ومركبات النيتر وسليلوز المخفة)، وخلك للدهون والزيوت والمياد المالحة ومياد الصرف من المراجيض، والمياه الموحلة التي تكون قدرتها على التنفق أقل من المياه الطبيعية. يجب أن تتراوح درجة حرارة السائل المراد ضخه بين °°م و°۳°م.

بدء التشغيل

ملحوظة

ستعيمة كلما قصر طول الخرطوم وزاد قطره، زائت قدرة الضخ. تتجنب انسدادات المضخة في حالة أقطار الخرطوم الأقل من ١,٢٥ بوصة، قم باستخدام فلتر أولي. ثم تجهيز وصلة المضخة بنظام قيس (تجهيزة التوصيل السريم).

ر ومسه المضخة بنظام قبس (تجهيزة توجه فرقة التوصيل مع الجهاز دون تركيبها. صورة [٨] لنزع فوهة التمارات المحالة على المحالة على المحالة المحال لنزع فوهة التوصيل قم بالضغط على تجهيزة التوصيل السريع (الزر الرمادي).

- صورة 🖪 🛨 ادفع
- فوهة التوصيل.
- ادفع الخرطوم على قطعة توصيل المضخة، وقم بتثبيته باستخدام مشبك + الخرطوم. الخوطوم. الذفع فوهة التوصيل في تجهيزة التوصيل السريع.
 - ملحوظة

لزيادة كمية التدفق، يمكن تقصير قطعة توصيل المضخة بما يتناسب مع الخرطوم

- عند استخدام خرطوم مقاس ١,٢٥ بوصة:
- ◄ ادفع الخرطوم على فوهة التوصيل وقم بتثبيته باستخدام مشبك الخرطوم.
- ... بوصه:
 ... سع الحرطوم على فوهة التوصيل وقم بتثبيته باسد
 الدفع فوهة التوصيل في تجهيزة التوصيل السريع.

 قد بتثبيت المفتا- ال
- سترورت على منتبيت المفتاح المزود بعوامة في وسيلة ضبط الارتفاع. انصب المضخة في وضعية ثابتة على أرضية صلبة في السائل المراد ضخه أو قم بلزالها باستخدام حيل مثبت جيدا في مقبض الحمل.

سعوبه. غير مسمرح بوجود أوساخ تعيق نطاق الشفط. إذا كانت الأرض موحلة قم بإيقاف المضخة على قالب طوب أو ما شابه ذلك. احرص على وضع المضخة بشكل أفقي. لا تحمل المضخة من الكابل أو الخرطوم.

مخاطر أخرى

<u>۸</u> خطر

خطر الانفجار

- ◄ لا ينبغي ضخ مواد سائلة أكالة أو قابل للاشتعال أو الانفجار بسهولة (مثل المواد البترولية، والبنزين، والأحماض، ومركبات النيتروسليلوز المخففة).
- → لا يسمح بتشغيل الجهاز في محيط معرض لخطر اللانفجار والاشتعال.

۩ احترس

← المياه التي يتم ضخها بواسطة هذا الجهاز ليست مياهً صالحة للشرب!

قد يتعرض الجهاز لأضرار.

- ♣لا ينبغي ضخ أي دهون أو زيوت أو مياه
- ♣ينبغي عدم ضخ أي مياه صرف صحي من المراحيض والمياه الموحلة ذات قدرة السيولة المنخفضة عن طبيعة المياه الرائقة الطبيعية.
 - → یجب عدم ضخ میاه تزید درجة حرارتها عن ٣٥ لارجة مئوية.

■ غير مسموح للأطفال باستخدام الجهاز، إلا إذا كانوا فوق سن الثامنة، أو تحت اِشُرافُ شخص يختص بأمنهم وسلامتهم، أو بعد أن يحصلوا من هذا الشخص على تعليمات بشأن كيفية استخدام الجهاز والأخطار الناشئة عن ذلك.

■ لا يسمح للأطفال بالعبث بالجهاز.

■ ينبغي مرآفبة الأطفال لضمان عدم تلاعبهم بالجهاز .

■ لا يجوز أن يقوم الأطفال بعملية التنظيف والصيانة إلا إذا تم الإشراف عليهم.

■ قبل القيام بجميع أعمال العناية والصيانة يجب إيقاف الجهاز وسحب القابس.

🛆 احترس

- قبل إجراء أية أعمال على الجهاز أو باستخدامه احرص على توفير الثبات للجهاز للحيلولة دون تعرضه للحوادث أو الأضرار.
- احرص على مراعاة وزن الجهاز لتجنب وقوع حوادث أو إصابات أثناء النقل (انظر البيانات الفنية).
- احرص على مراعاة وزن الجهاز لتجنب وقوع حوادث أو إصابات عند اختيار مكان التخزين (انظر البيانات الفنية).

- يجب أن يكون كل من القابس وقارنة سلك التمديد مقاوما الماء كما يجب ألا يوضعا في الماء. يجب ألا تكون القارنة على الأرض. يفضل استخدام بكرات الكابلات التي تضمن وجود المقابس على ارتفاع لا يقل عن ٦٠ مم من سطح الأرض.
- لا تستخدم كابل التوصيل الكهربائي في نقل أو تثبيت الجهاز .
- لفصل الجهاز عن الشبكة الكهربائية لا تقم بالسحب من كابل التوصيل الكهربائي، ولكن من القابس.
 - لا تسحب كابل التوصيل الكهربائي على حواف حادة أو تضغط عليه بشدة.
- يجب أن يتطابق الجهد المدون على لوحة الصنع مع جهد مصدر التيار.
- الصنع مع جهد مصدر التيار.
 لتجنب الأخطار لا يسمح بإجراء أعمال الإصلاح وتركيب قطع الغيار في الجهاز إلا من قبل خدمة العملاء المعتمدة.
- لا يسمح بتشغيل المضخات إلا وهي موصلة بمقابس مزودة بمفتاح حماية من تسرب التيار مع تيار خطأ اسمي شدته ٣٠ مللي أمبير بحد أقصى مع توفر ملامس واقي (تأريض).

- تحقق بانتظام من وظيفة مفتاح الحماية من تسرب التبار والملامس الواقي (التأريض).
 - لا يسمح بأي حال من الأحوال بتشغيل المضخة في حالة وجود أشخاص في حوض السباحة أو بركة الحديقة.
- في النمسا يجب عند استخدام المضخات في أحواض سباحة أو برك حدائق مجهزة بسلك توصيل ثابت تغذية المضخات بالتيار الكهربائي من خلال محول فصل مختبر وفقا لتعليمات الجمعية النمساوية لهندسة الكهرباء وذلك طبقا لمواصفة الجمعية النمساوية لهندسة الكهرباء B/EN ليخطئ الجمعية النمساوية لهندسة الكهرباء 30555 الجزء 1 حتى ٣، ولا يجوز أن يتخطى الجهد الاسمي ٢٣٠ فولت.
 - يجب ألا يتم إجراء التوصيل الكهربائي الا عن طريق فني كهرباء متخصص. يجب مراعاة التعليمات المحلية المتعلقة بهذا الشأن!

التعامل الآمن

∆ تحنیر

■ هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص محدودي القدرات البدنية أو الحسية أو العقلية أو من لا تتوافر لديهم الخبرة و/أو المعرفة إلا إذا تم الإشراف عليهم من قبل شخص مختص بأمنهم وسلامتهم أو بعد حصولهم على تعليمات من هذا الشخص بشأن كيفية استخدام هذا الجهاز والأخطار الناشئة عن ذلك.

أو للمالك التالي.

قبل أول استخدام لجهازك، يرجى قراءة دليل التشغيل الأصلي هذا وارشادات السلامة المرققة. والتعامل مع الجهاز وفقا لذلك. احتفظ بكلا الكتيبين للاستخدام اللاحق

فهرس المحتويات		
١	AR	فهرس المحتويات
٤	AR	الضمان
٤	AR	حماية البيئة
٤	AR	وصف الجهاز
٤	AR	الاستخدام المطابق للتعليمات
٤	AR	السوائل المسموح بضخها
٤	AR	بدء التشغيل
٥	AR	التشغيل
٥	AR	التجهيزة الأوتوماتيكية لتصريف الهواء
٥	AR	التشغيل الأوتوماتيكي
٥	AR	التشغيل اليدوي
٥	AR	إنهاء التشغيل
٥	AR	الصيانة
٥	AR	النقل
٥	AR	التخزين
٥	AR	حفظ المضخة
٦	AR	ملحقات تكميلية خاصة
٦	AR	المساعدة في حالة حدوث أعطال
٧	AR	البيانات الفنية

إرشادات السلامة للمضخات الغاطسة

- قم بقراءة دليل تشغيل الجهاز قبل بدء التشغيل، ويرجى بشكل خاص مراعاة ارشادات السلامة.
- تقوم علامات التحذير والإرشاد الملحقة بالجهاز بإعطاء إرشادات هامة للوصول الى تشغيل بدون أخطار.
- علاوة على الإرشادات الواردة في دليل التشغيل يجب عليك مراعاة القواعد العامة للسلامة والوقاية من الحوادث والتي يحددها
 - احفظ رقائق التغليف بعيدا عن متناول الأطفال، فثمة خطر اختناق!

درجات الخطر

▲ خطر الانتباه إلى المخاطر المباشرة وشيكة الحدوث الإنتباه إلى المخاطر المباشرة وشيكة الحدوث التي تؤدي إلى إصابات جسدية بالغة أو تتسبب في آلوفاة.

△ تحنیر

الانتباه إلى مواقف قد تحفها المخاطر وقد تؤدي اللي وقوع اصابات جسدية بالغة أو تتسبب في الوفاة.

🛆 احترس

الانتباه اللي موقف خطير محتمل قد يؤدي الى اصابات بسيطة.

الانتباه اللي موقف خطير محتمل قد يؤدي الى أضرار مادية.

المكونات الكهربائية

<u>۸ خطر</u>

خطر التعرض لصدمة كهربائية.

- يجب التحقق من عدم وجود تلفيات بسلك التوصيل الرئيسي المزود بقابس وذلك قبل التشغيل في كل مرة. يتم استبدال سلك التوصيل التَّالف فورا عن طريق خدمة العملاء المعتمدة/كهربائي مختص.
- يتم تركيب جميع الوصلات المقبسية الكهربائية في المنطقة المحمية من الفيض.
- قد تكون وصلات التمديد الكهربائية غير المناسبة مصدر خطر. في الأماكن المفتوحة لا تستخدم سوى وصلات التمديد الكهربائية المصرح بها والمخصصة لذلك والتي يتوفر بها سلك بمقطع عرضي كافي.







6.997-346.0 6.997-347.0 (SP 5 Dirt)



2.645-142.0 (SP 5 Dirt)



6.997-359.0 (SP 5 Dirt)



2.645-247.0



2.997-100.0



2.997-201.0 (SP 5 Dirt)





http://www.kaercher.com/dealersearch

Alfred Kärcher GmbH & Co. KG

Alfred-Kärcher-Str. 28 - 40 71364 Winnenden (Germany)

Tel.: +49 7195 14-0 Fax: +49 7195 14-2212