


INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service
Email: journey@nemoequipment.com
Phone: 800-997-9301

1 Insert Poles in Corner Grommets

Lay the inner tent on the ground and arrange the hubbed pole so pole color matches corner webbing color. Insert locking pole tips into corner grommets.



2 Attach Inner Tent to Poles

Attach the inner tent canopy to the poles using the pole clips.





3 Secure Rear Ridge Pole

Position the short ridge pole above main poles at the rear of the tent. Secure the ridge pole using grommets at the sides of the inner tent and the plastic clip at the center.



4 Secure Front Ridge Pole

Position the long ridge pole above main poles at the tent entrance. Secure pole intersection points with the Swivel-THL™ clip.

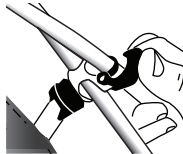



5 Stake in Place

Position your tent as desired and stake the six corner anchors. As you pull at the corners, watch the tension in the floor of the tent to keep it even. If the ground is too hard for stakes, tie anchors to rocks or other heavy objects.




6 Attach Rain Fly

Cover the inner tent with the rain fly. Locate the grommets on the inside of the fly and attach to ridge pole tips. Locate the webbing straps on the corners of the fly and secure their grommets under the main pole end tips. Adjust tension in the fly using the webbing straps.

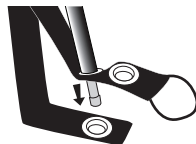


7 Vestibule(s) and Tension

Secure poles to rain fly with internal pole wraps. Stake vestibule(s) and pull firmly on all adjustable corner anchors. Add guylines for additional strength. A properly tensioned tent ensures maximum water shedding and wind resistance.

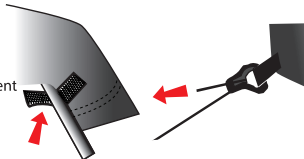

INSTRUCTIONS FOR SETUP

Service à la clientèle de NEMO
Courriel : journey@nemoequipment.com
Téléphone : 800-997-9301




1 Insérer les mâts dans les œillets

Étendre la tente intérieure sur le sol et disposer le mât central de façon à ce que la couleur du mât corresponde à la couleur des sangles situées aux angles. Insérer les embouts de blocage des mâts dans les œillets situés aux angles.




2 Fixer la chambre aux mâts

Fixer la canopée de la tente intérieure aux mâts à l'aide des clips à arceaux.



3 Fixer le mât de faitage

Placer le petit mât de faitage au-dessus des mâts principaux, à l'arrière de la tente. Accrocher le mât de faitage à l'aide des œillets situés sur les côtés de la tente intérieure et du clip central en plastique.




4 Secure Front Ridge Pole

Placer le long mât de faitage au-dessus des mâts principaux, à l'entrée de la tente. Fixer les points d'intersection du mât avec l'attache Swivel-THL™.




5 Fixer la tente au sol

Positionner votre tente à l'endroit souhaité et planter les six arceaux. En tirant sur les coins, prêtez attention à la tension au niveau du sol de la tente. Ce dernier doit rester bien à plat. Si le sol est trop dur pour planter les piquets, lester les attaches avec de gros cailloux ou autres objets pesants.



6 Fixer le double-toit

Couvrir la tente intérieure avec le double-toit. Repérer les œillets situés à l'intérieur du double toit et les fixer aux extrémités du mât de faitage. Repérer les sangles situées aux angles du double-toit et fixer leurs œillets aux extrémités du mât principal. Ajuster la tension du double-toit à l'aide des sangles de fixation.

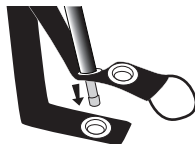

7 Abside(s) et tension

Fixer les mâts au double-toit à l'aide des rabats internes. Fixer la ou les absides et tirer fermement sur toutes les attaches d'angle ajustables. Ajouter des cordes de tension pour plus de résistance. Une tente correctement tendue assure une protection contre l'eau et une résistance au vent maximales.

