MyCrossWave Cordless Max has no power | Support

My CrossWave® Cordless Max has no power | Support

*Verify machine is sufficiently charged, and you are using BISSELL formula

- Press power button

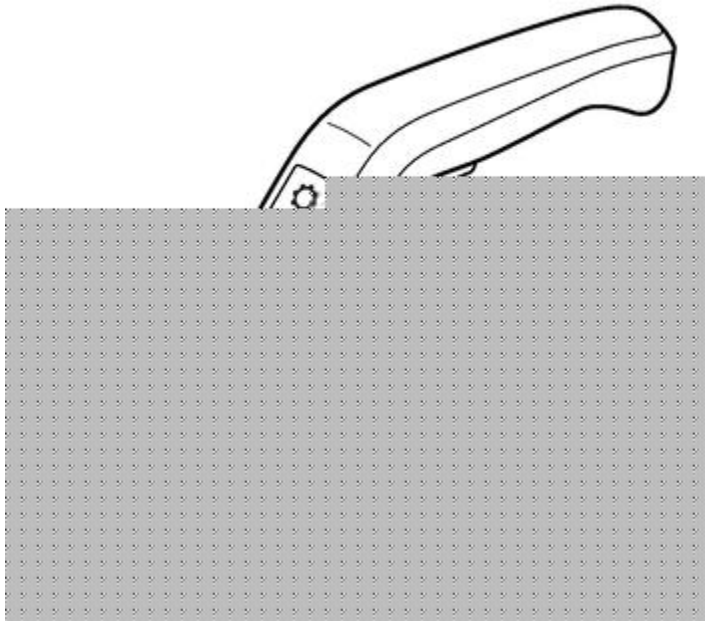

- If machine turns on and then powers off refer to **Shuts off Automatically**
- If there are no visible LED lights on battery display, handle should be reinstalled
  - Insert a blunt tip object (i.e. screwdriver or pen) into small circular area above clean water tank on back of machine
  - Pull up on handle while pushing blunt tip object into small opening to remove
- Once fully removed, reinstall handle until it clicks