

retrospec® APOLLO LIFT-OFF FRONT BASKET

Easy-to-install, no tools required.
Easily removeable basket for off-bike carry.
Rectangular steel mesh 14" length x 10" wide, 9.5" deep, tapers to 12" x 7".
Fits 7/8" (22.2mm) and 1" (25.4mm) diameter handlebars, mounting hooks 4" apart.
Suggested weight limit 15 lbs.

⚠ WARNING!

DO make sure the mounting hooks of mounting frame are securely down against top of handlebar.
DO inspect basket and basket mounting is secure before every ride.
DO NOT overload basket. Overloading basket may cause difficulty with steering and/or loss of control which could result in injury.
DO NOT use on bicycles with carbon fiber handlebar, and/or frame.
DO NOT use on bicycles with a front suspension or springer fork.
NOT designed to carry pets.

ASSEMBLY INSTRUCTIONS

Center and hang the foam padded hooks of the mounting frame over the handlebar – **Fig.1.**

Make sure the foam padded hooks of the mounting frame are securely down over the handlebar.

Secure the hook-and-loop strap of the lower support around the bicycle headtube.

2. Hold the basket with the carry handles up/vertical, with the handle lock hooks and bottom of basket slots facing the mounting frame – **Fig.2.**

Center and insert the two bottom of basket slots onto the two lower hooks of the mounting frame making sure they are fully engaged – **Fig.2.**

Push the handle lock hooks into the upper two mounting frame slots (appearance of "rabbit ears") – **Fig.2.**

Lay the handles flat on the top of the basket to lock – **Fig.3.**

TO REMOVE BASKET FROM MOUNTING FRAME FOR CARRY:

Lift the carry handles up/vertical so the handle lock hooks are pointing down. Pull away the handle lock hooks from the upper lock hooks ("rabbit ears"), and lift basket from the lower hooks of the mounting frame.

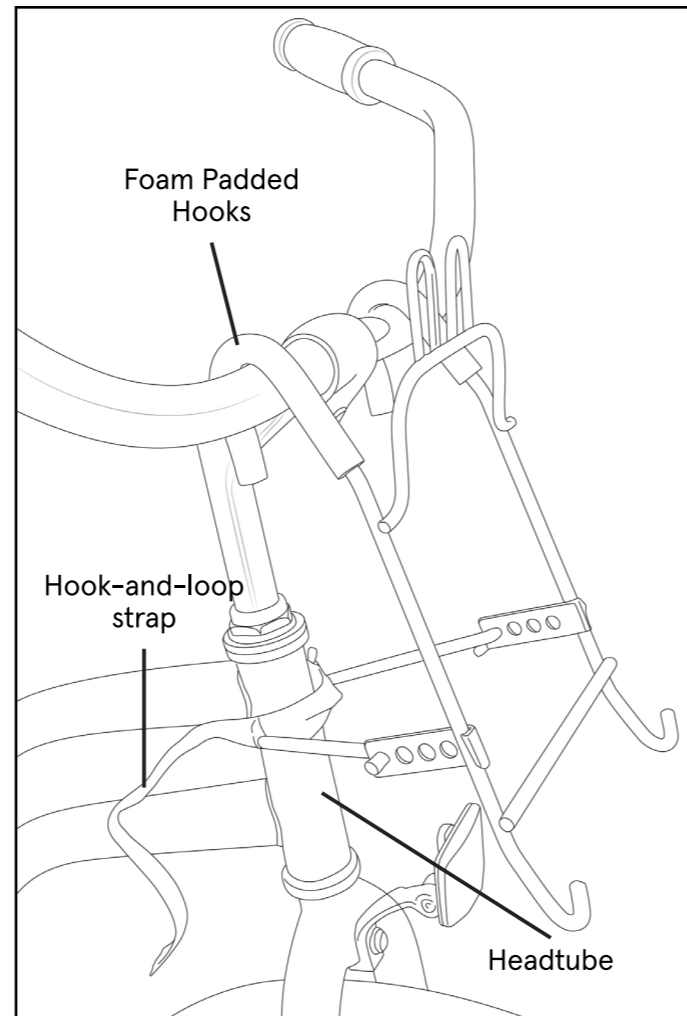


Fig. 1

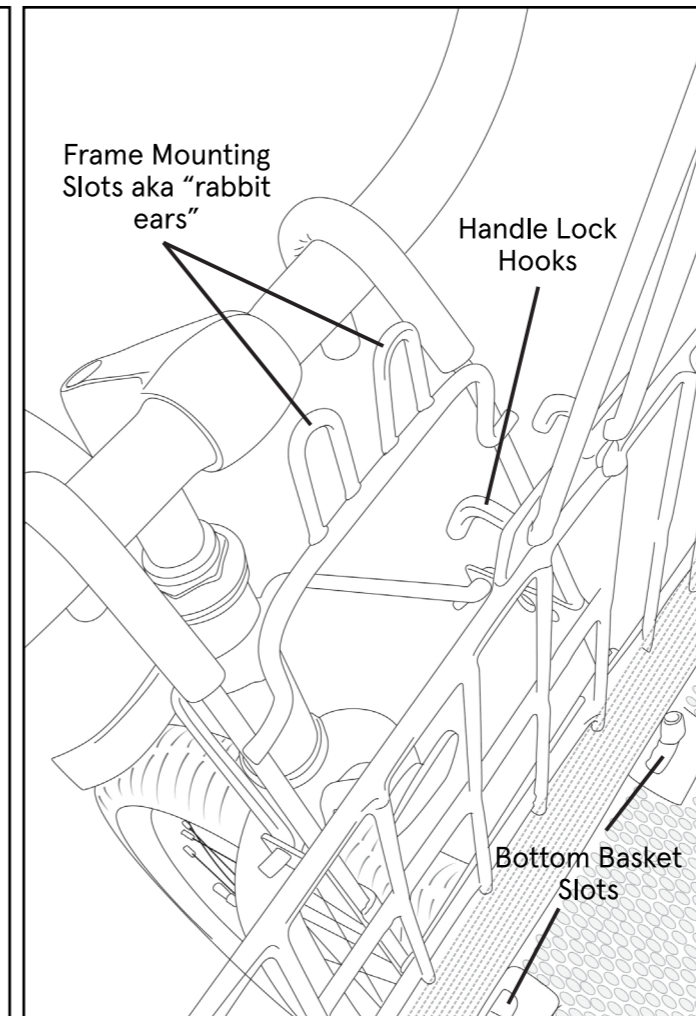


Fig. 2

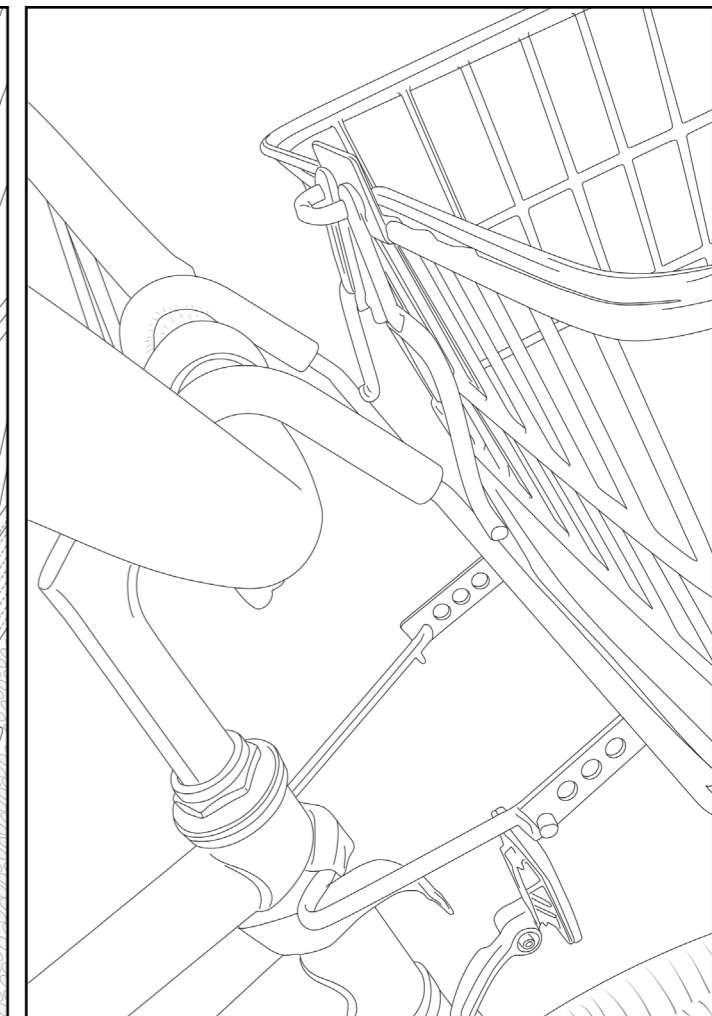


Fig. 3