




# Assembling your zazen Alkaline Water System with optional Glass Bottom Tank

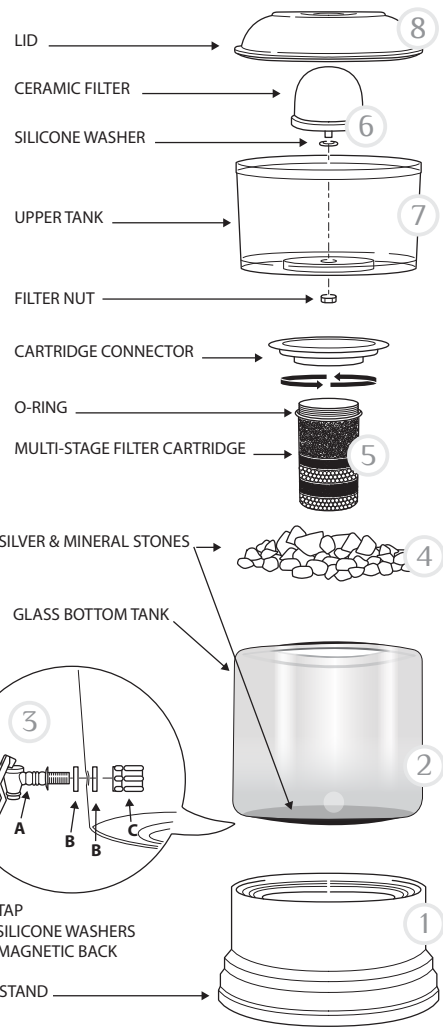

- 1 Place the stand where you will sit your System.
- 2 Place the lower tank onto stand.
- 3 Place the tap "A" through hole in the lower tank with a silicon washer "B" on each side. Screw the magnetic back "C" onto tap inside the bottom tank and tighten.
- 4 Put pre-soaked Silver Stones and Mineral Stones into Glass Bottom Tank carefully. **\*If you have Alkalinity Enhancers (AAE) balls sprinkle amongst the stones away from the back of the magnetic tap so they can't get sucked into the back of the tap.**
- 5 Screw the Multi-Stage Filter Cartridge into cartridge connector and sit in the top of the glass tank (filter will hang in lower tank).
- 6 Place the silicon washer\* onto the Ceramic Filter stem and then insert the Ceramic Filter into the hole inside the upper tank. Fasten on with the filter nut\* and tighten.
- 7 Place the top tank onto the assembled lower tank.
- 8 Fill top tank with 4 litres of tap water and pop on the lid.
- 9 You will have 2 spare parts left over: 1 x BPA Free Bottom Tank & 1 x Middle Rim (not used with the Glass Tank). ♡ When you travel on holiday remember to pack your zazen Water System in your car using the BPA Free bottom tank instead of the Glass Tank.



**Note: It will take 1½ to 2 hours to filter the 4 litre upper tank into the lower tank. Do this twice to fill your system. Once the lower tank is full, you cannot add more water to the upper tank or the system will overflow.**

*\*Washer & nut come with Ceramic filter*