

Stem Raiser Pro


Assembly instructions TD3418

- 1 Ensure you have the correct size. (1 1/ 8").



IMPORTANT SAFETY NOTE
Not for use on carbon steerer tubes!

- 2 Make sure side bolts on Stem Raiser Pro are loose and mount raiser to steerer, pushing down to ensure snug fit.
- 3 Tighten bolt to star-fangled nut to remove play from headset bearings per headset manufacturers recommendations.
- 4 Tighten side bolts to snug fit so that you cannot rotate it. Do not overtighten.
- 5 Attach stem to upper portion of Stem Raiser Pro. Center stem so that bars are in proper alignment and tighten side bolts of the Stem Raise Pro to 10 Nm using a torque wrench. Do not overtighten.
- 6 Screw on dust cover cap and get out and ride!

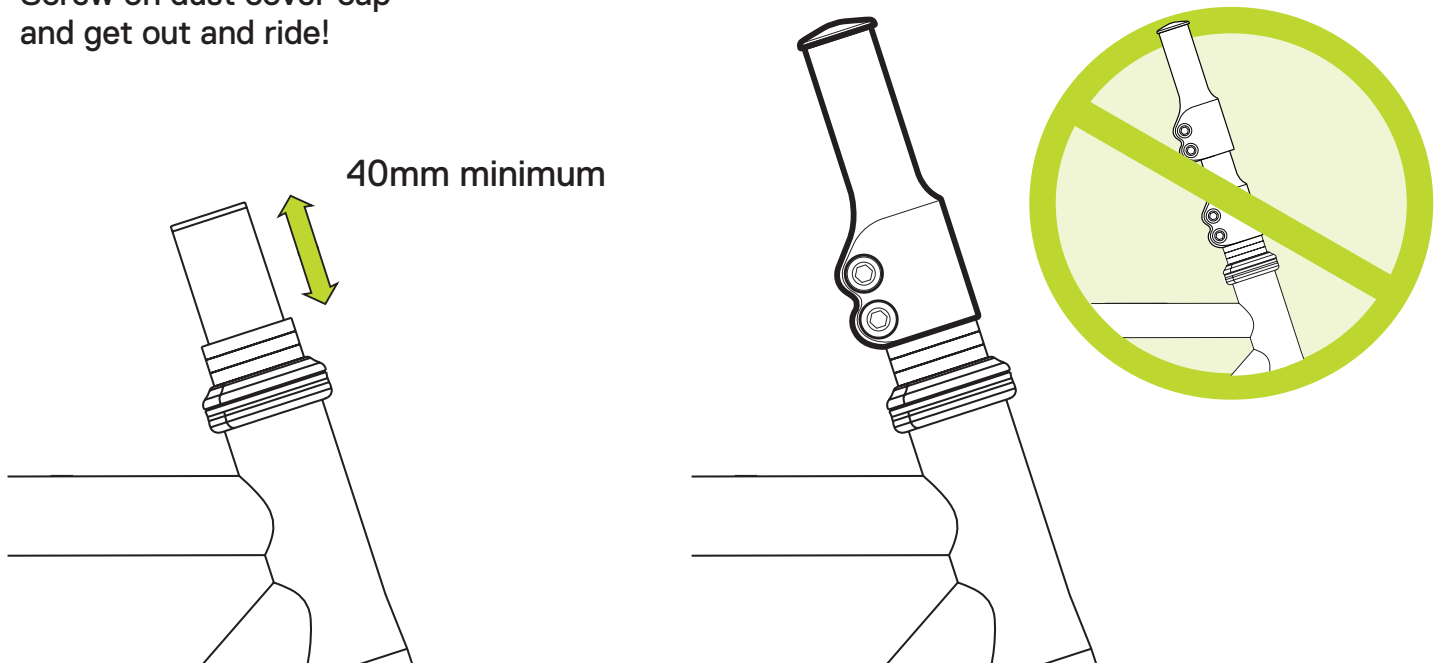

WARNING

Incorrect installation could result in an accident causing serious injury. Installation should only be performed by a properly trained bicycle technician. For ongoing maintenance, periodically check to make sure the stem raiser bolts are tightened to the proper torque specification.