

delta_Δ

Wide Hook Utility Holder

Assembly instructions UH2000

- 1 Position product as desired and use as a template for marking holes to be drilled.
- 2 Drill holes into center of wooden wall stud to accept screws.





IMPORTANT SAFETY NOTE

Mount securely into wall stud or solid wall using appropriate wall anchors. If in doubt, seek expert advice.

Tools Required

Hand Drill 1/8" (3mm)

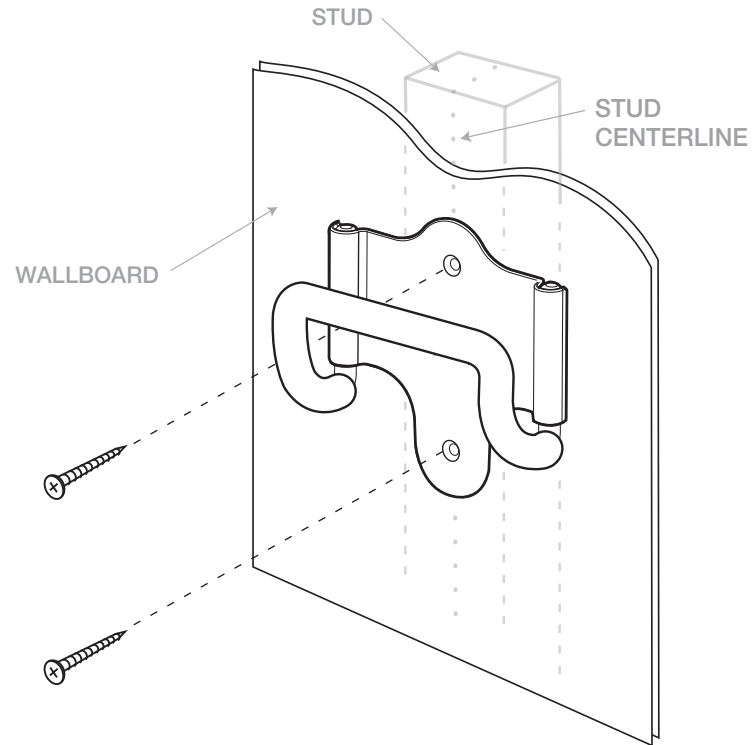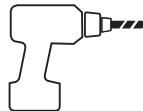

WARNING

Do not exceed maximum total weight limit of 22kg/50lbs. Incorrect wall mounting could result in items falling and injury to persons.