delta

Multi Ball Holder Storage Net

Assembly instructions UH4100

- Assemble unit by inserting pressed wire ends into slots on base.
- Identify where wooden stud lies within wall, drill pilot holes for wood screws.



IMPORTANT SAFETY NOTE


Make sure the plate is level when mounting.

- 3 Secure to wall by tightening both screws.
- Hook net loops on to wire holder (FIGURE 1)

Tools Required

Hand Drill 1/8"(3mm)



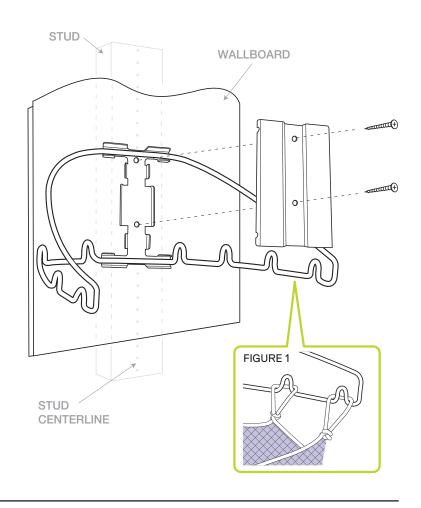



WARNING