

delta_Δ

Jumbo J Hooks


Assembly instructions RS1000W

- 1 Carefully screw into center of suitable ceiling joist at the correct distance so the hooks will line up.



IMPORTANT SAFETY NOTE

Ensure that hook(s) are securely mounted into the joist.
Pre-drilling 1/8" pilot holes will make this job easier.

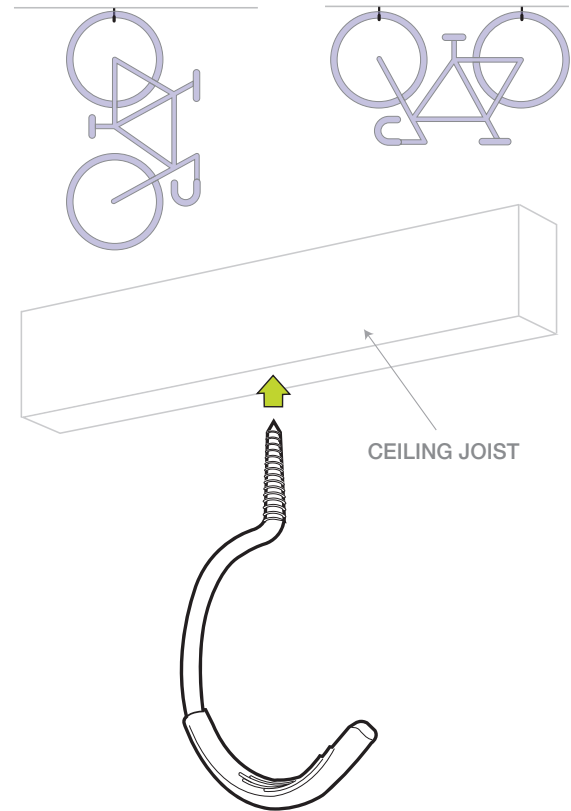

No Tools Required

221003



WARNING

Do not exceed maximum total weight limit of 22kg/50lbs. Incorrect wall mounting could result in items falling and injury to persons. Avoid mounting in a position where personal injury could result from walking into protruding rack.