



# Mobile Storage Systems

Lund Court Farm, Newton, York, North Yorkshire, England YO 62 7TZ  
Tel. & Fax No. 0844 879 4440  
E mail: info@mobilestoragesystems.net

## PUMA GLOVE BOX

### FITTING INSTRUCTIONS

#### Fitting Kit Contents:

2x M4 x 8mm Counter sunk screws  
4 x M4 x 8mm Button head screws  
6 x M4 Flanged nut  
4 x 4 x 13mm self tapping screws

---

Using a T30 Torx key remove the 2 screws fixing the top of dash on the passenger side. Keep these screws as they will be needed later.

Remove the 8mm flat cups (see pic 1.) and remove the polystyrene block. Keep the 2 flat cups as they will be used later

**\*\*Top Tip. \*\*** to remove the flat caps use a small screw driver to prise the prongs open if necessary.

Cut the bottom plastic securing tube so that it is flush. (see pic 2)

Place the hinge panel into position (see pic 3.) Secure into place using both the 8mm flat cups onto the remaining 2 plastic securing tubes and the 2 M4 x 8mm counter sunk screws with the flanged nut on the outside. (see pic 3a.)

#### OPTIONAL

Once secure cut off the excess of the plastic securing tube with a Stanley knife if required


Fix the 2 angled brackets to the base tray using the 4 x M4 x 8mm button head screws and 4 x flanged nuts (pic 4.)

#### OPTIONAL


The 4 plastic fins inside of the dash can be removed with a Stanley knife blade if required. (please note the plastic can scratch easily and care is needed)

Slot the bottom tray into position as shown (pic 5.), drill a 2mm pilot hole and fix using 4 x 4x13mm self tapping screws.

Position the top in place and fix to existing holes using the 2 x torx screws removed at the start.

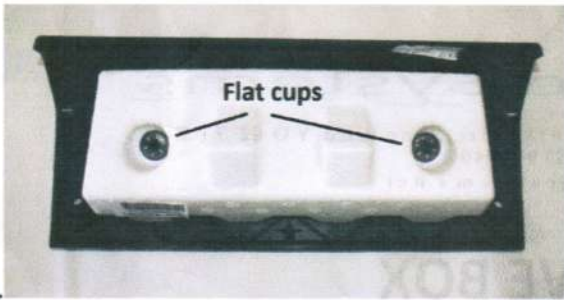


Pic 1.

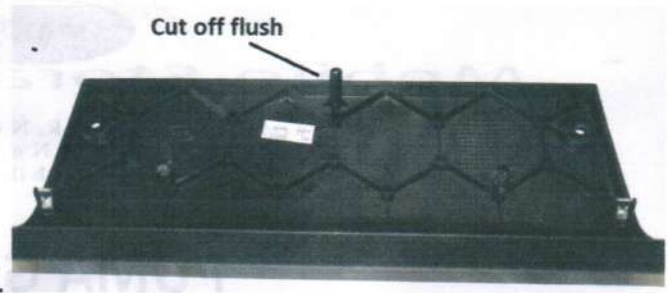


Pic 2.



Pic 3.

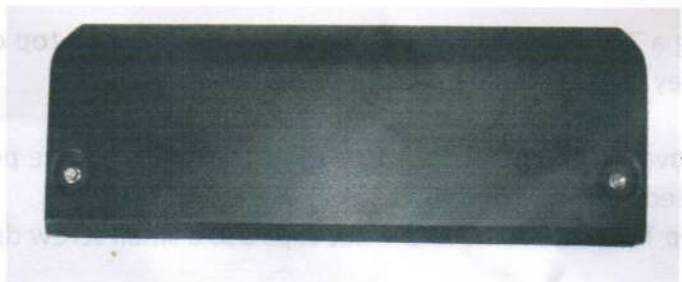

Pic3a

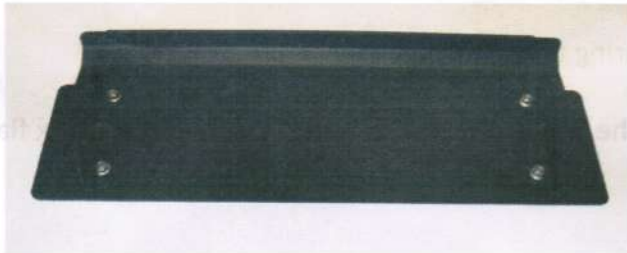

Pic 4



Pic 5.

