



## MUD-UK Flexible Grab Handle Fitting Instructions



Pull back flaps on door handle



Remove handle with Philips screwdriver.  
Retain the two handle screws




Cut the webbing strap to your preferred length. This is optional.



Seal nylon webbing end by warming with a lighter



Insert webbing strap into the end cap

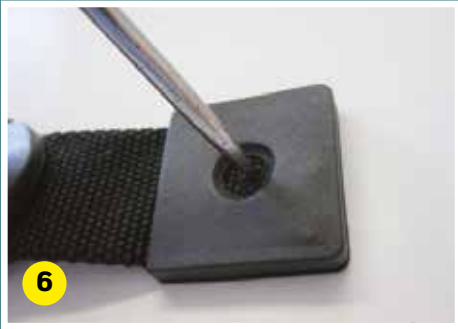

Use a bradawl to make a screw hole in the webbing strap



Insert fixing screws into the hinged screw caps



Insert spacer into fastener holes in the door panel



Screw the fixings into place



Position handle to suit your preference. Tighten fixing screws. Fit screw caps.