


MUD Puma Heater Deflector (PHD) Fitting Instructions

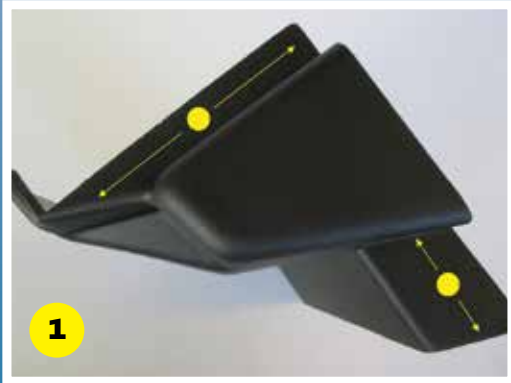

1
Mark the fixing holes for the fir-tree fasteners. The fixing holes should be centered from either end of the moulding as indicated below.



2
Drill out the four fixing positions in the moulding with a 4.5mm drill.



3
Position the MUD PHD in place. Squeeze back the rubber matting/carpet in front of the gear shifters to allow the PHD to drop down into place.



4
Push the MUD PHD upwards as far as it will go ensuring it's tucked behind the lower edge of the central dashboard section.



5
Use a 4.5mm drill to create the fixing holes in the dashboard. Drill SLOWLY and DO NOT press too hard whilst drilling to avoid hitting the heater assembly/pipe work!



6
Secure the MUD PHD in place by pushing the four plastic rivets through the moulding and into the dashboard. The MUD PHD installation is now complete.