


MUD-UK Defender Rear Speaker Panel Fitting Instructions

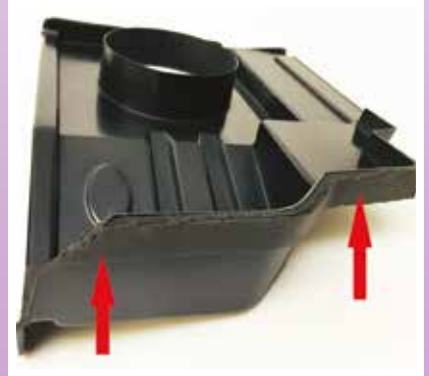

- Remove the metal corner panels (if fitted) from the rear corners of the vehicle.
- Divide the self-adhesive foam strip into two and apply to the outside edges of the panels as illustrated by the red arrows above.



- The panels fix in place using the screws provided. Drill and screw the fixings into the bodywork (bodytub capping & wheelarch) in the locations as illustrated by the arrows above.